

IRON BALTIC


PLASTIC SKID PLATE

YAMAHA

Kodiak 450 (2017-...)

Code 02.21500

Version 17092023

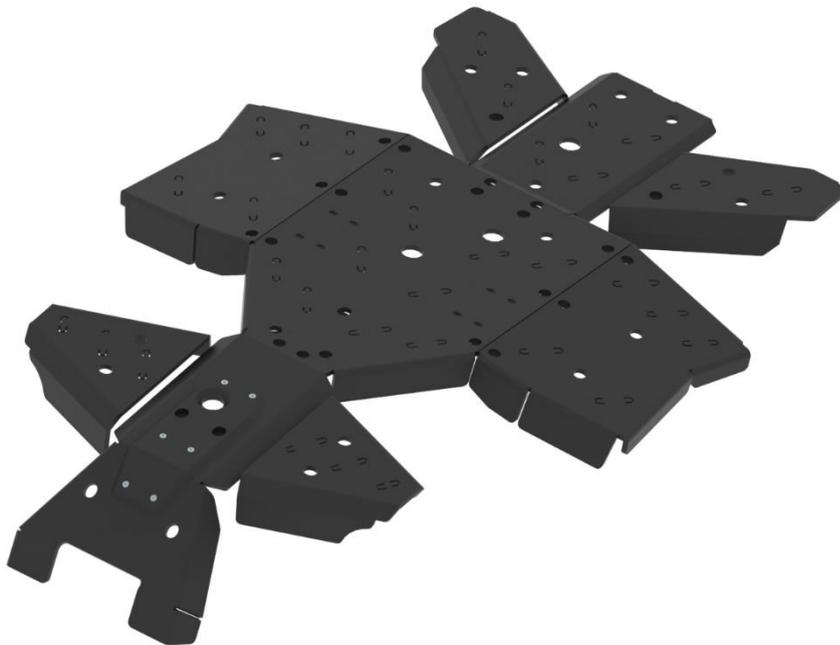

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/vpQevWOq



SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.21501	1
2	Front part	02.21502K	1
3	Rear part	02.21503	1
4	Right side protection	02.21504	1
5	Left side protection	02.21505	1
6	Front right arm protection	02.21506	1
7	Front left arm protection	02.21507	1
8	Rear right arm protection	02.21508	1
9	Rear left arm protection	02.21509	1
10	Plate	02.5006	4
11	Clamp	02.5709	3
12	Plate (10°)	02.8312	6
13	Dished washer	14.503	42
14	Bolt M6x16 DIN 933	OT.02.02.050	23
15	Bolt M6x25 DIN 933	OT.02.02.070	2
16	Bolt M6x30 DIN 933	OT.02.02.080	5
17	Bolt M6x35 DIN 933	OT.02.02.090	4
18	Bolt M8x35 DIN 933	OT.02.02.210	6
19	Bolt M8x50 DIN 933	OT.02.02.240	4
20	Washer Ø6/15 SFS 3738	OT.04.03.020	32
21	Washer Ø8/20 SFS 3738	OT.04.03.030	10
22	Washer Ø6/18 DIN 9021	OT.04.02.020	6
23	Nyloc nut M6 DIN 985	OT.03.02.030	4
24	Nyloc nut M8 DIN 985	OT.03.02.040	10

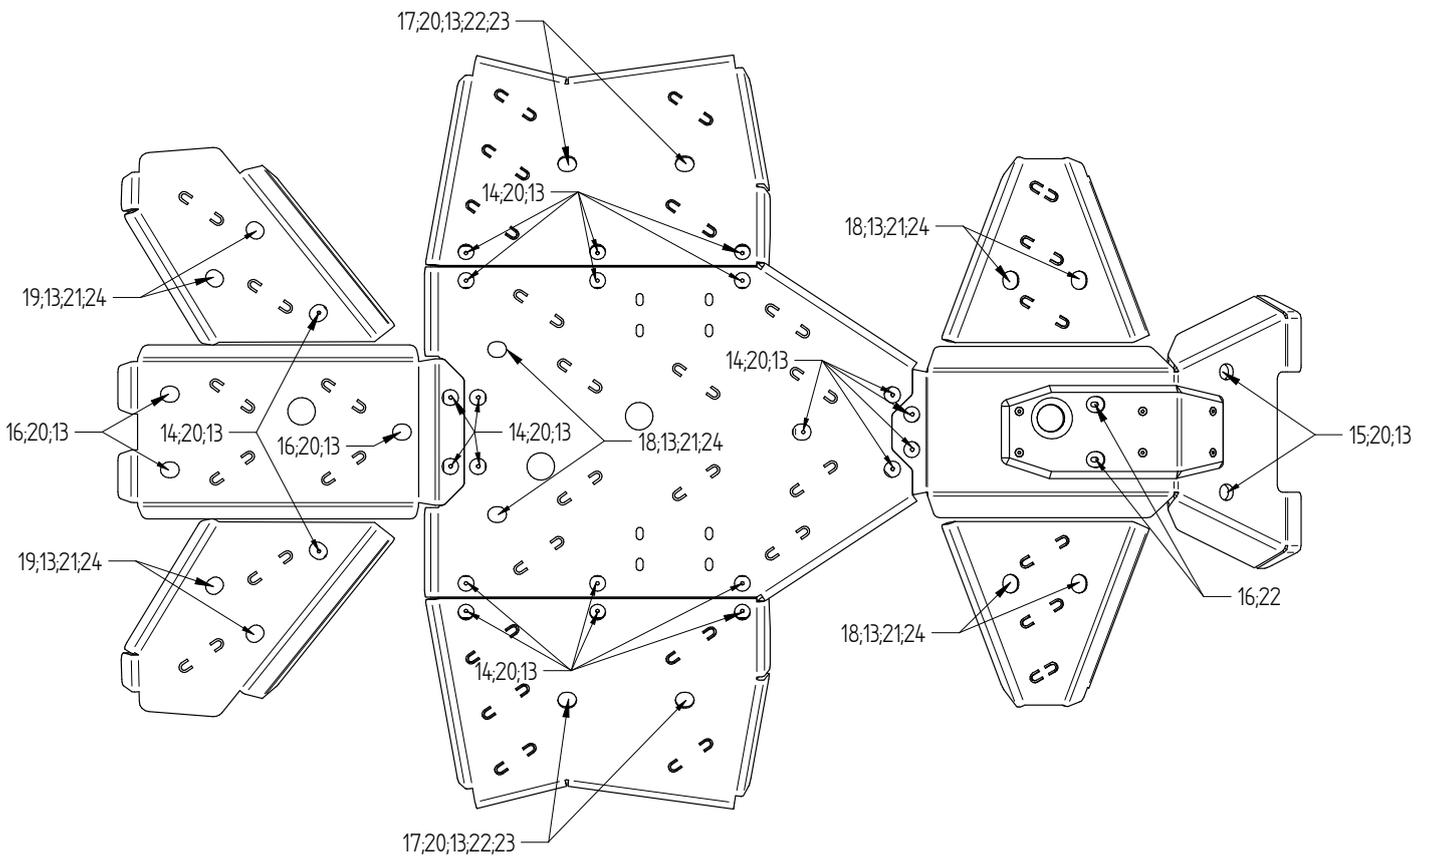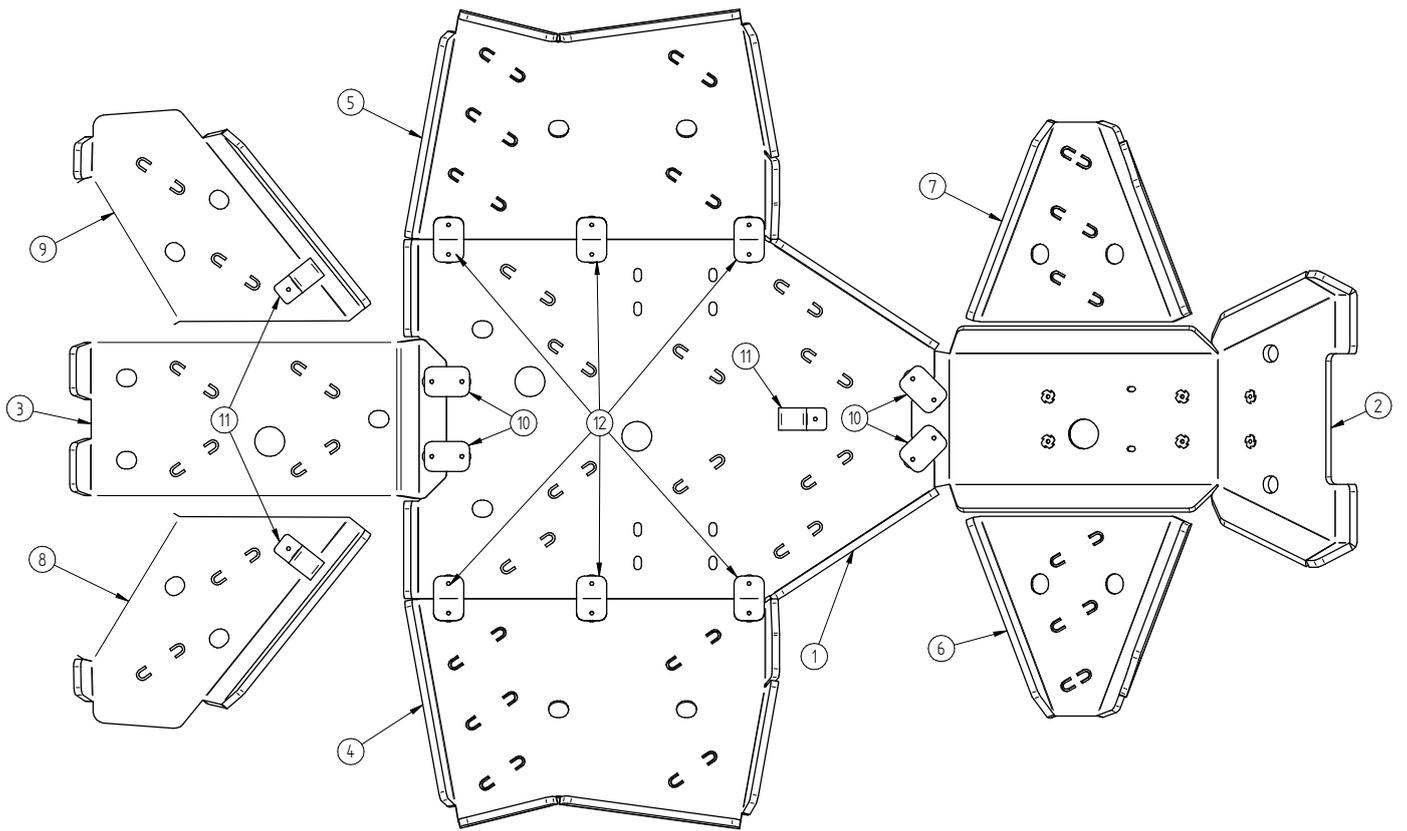


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.

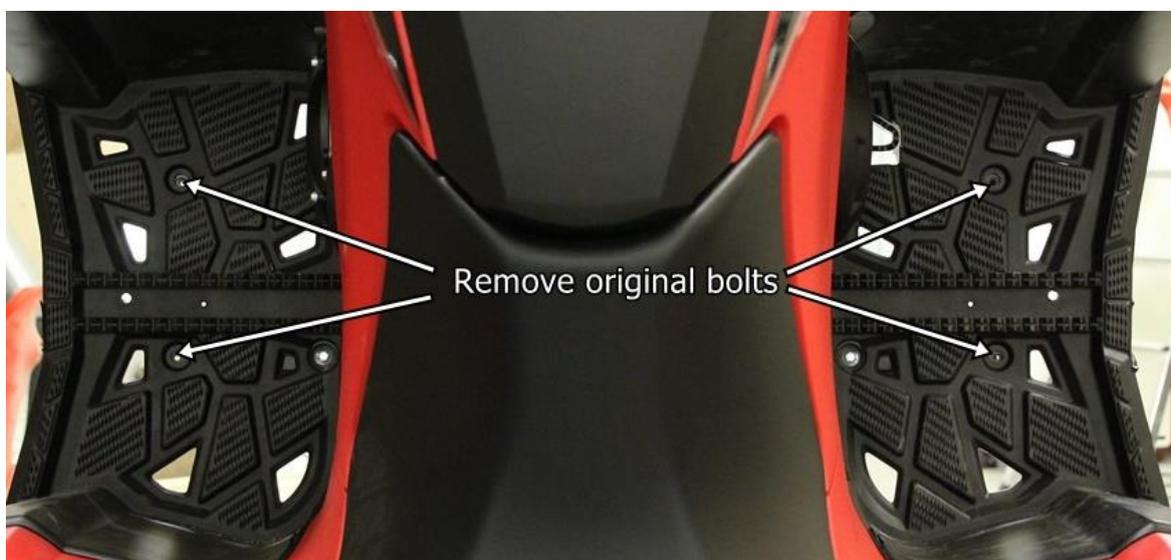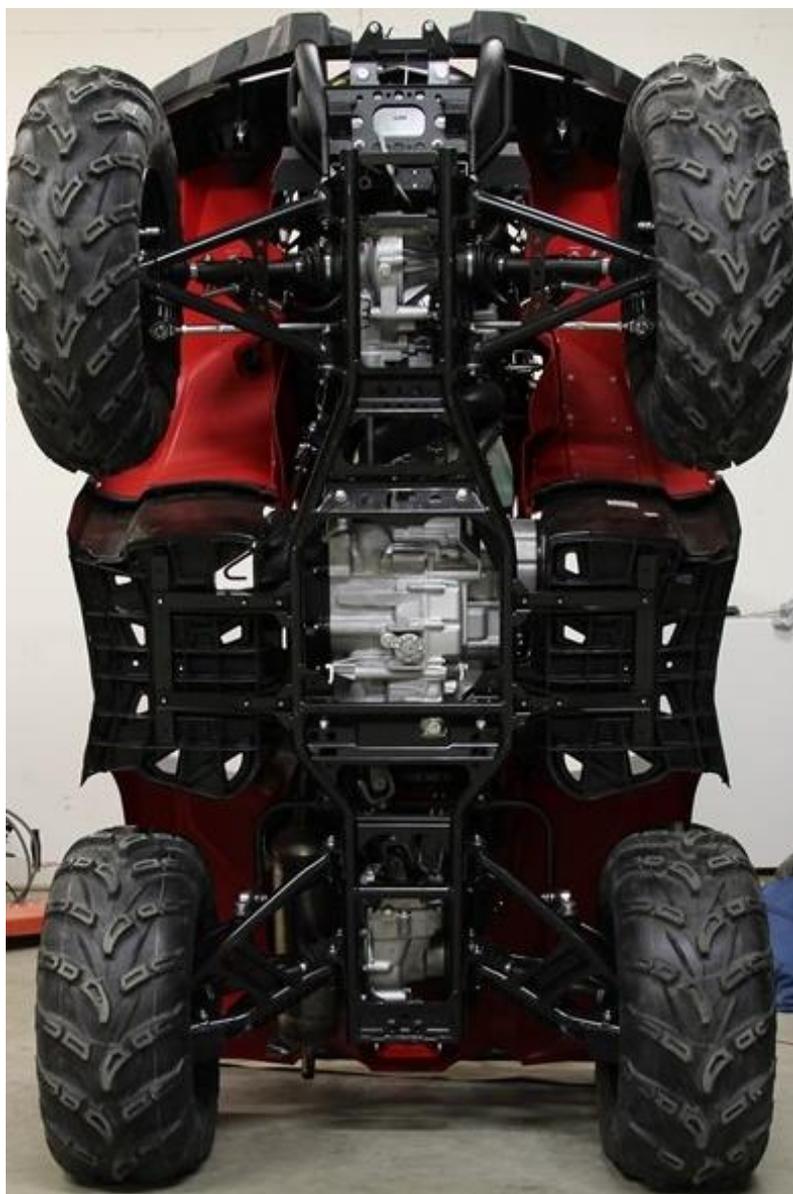


Step 2 Install middle part 02.21401. Install plates 02.5006 and 02.8312.

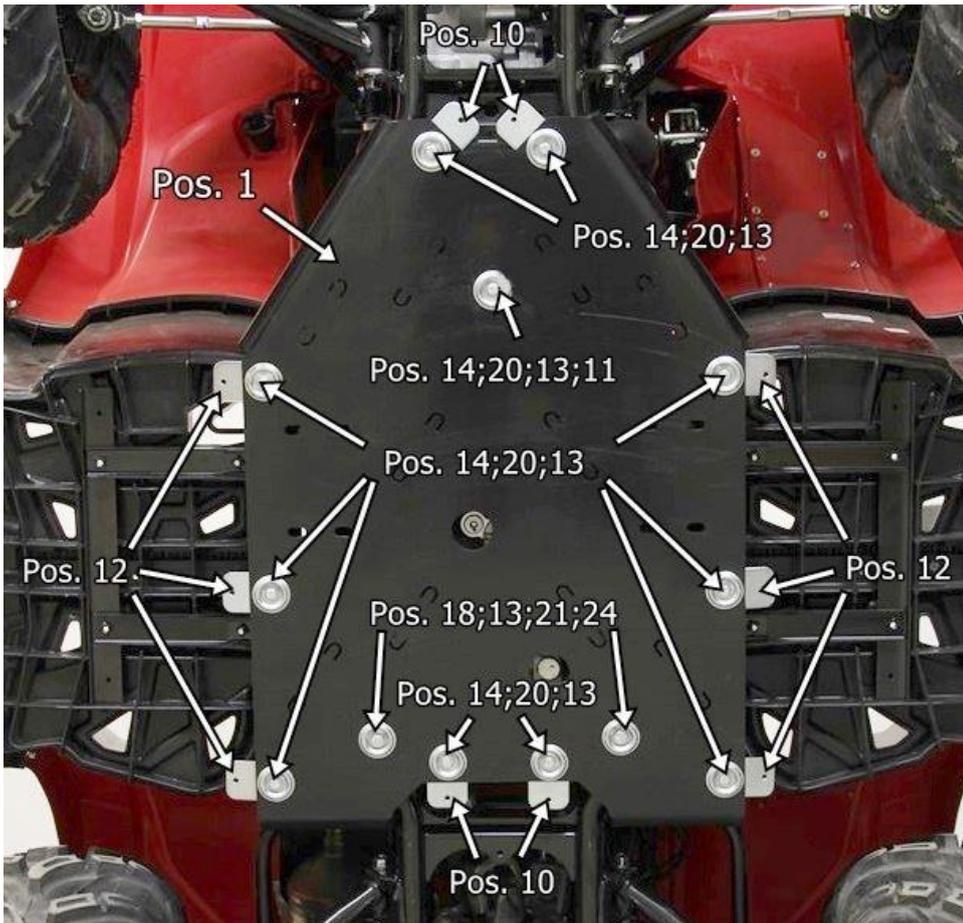


Step 3 Install front part 02.21502K.

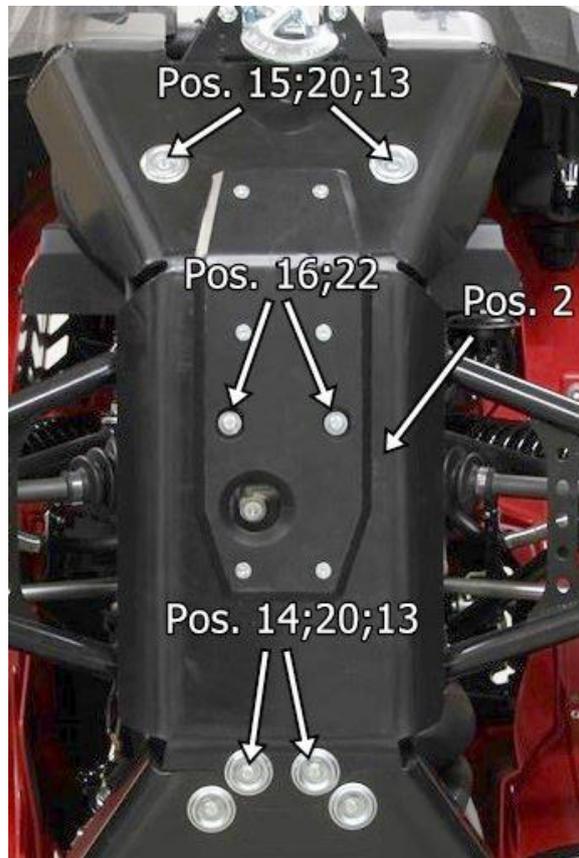

Step 4 Install rear part 02.21503.

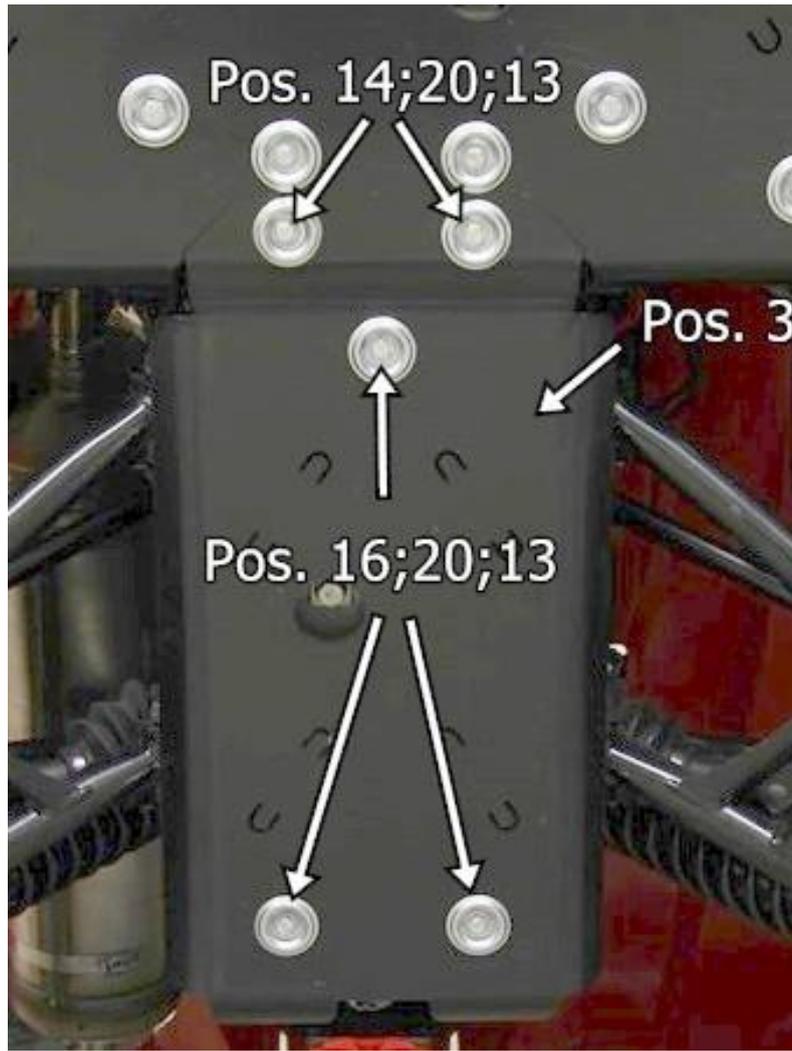


Step 5 Install side protections 02.21504 and 02.21505.

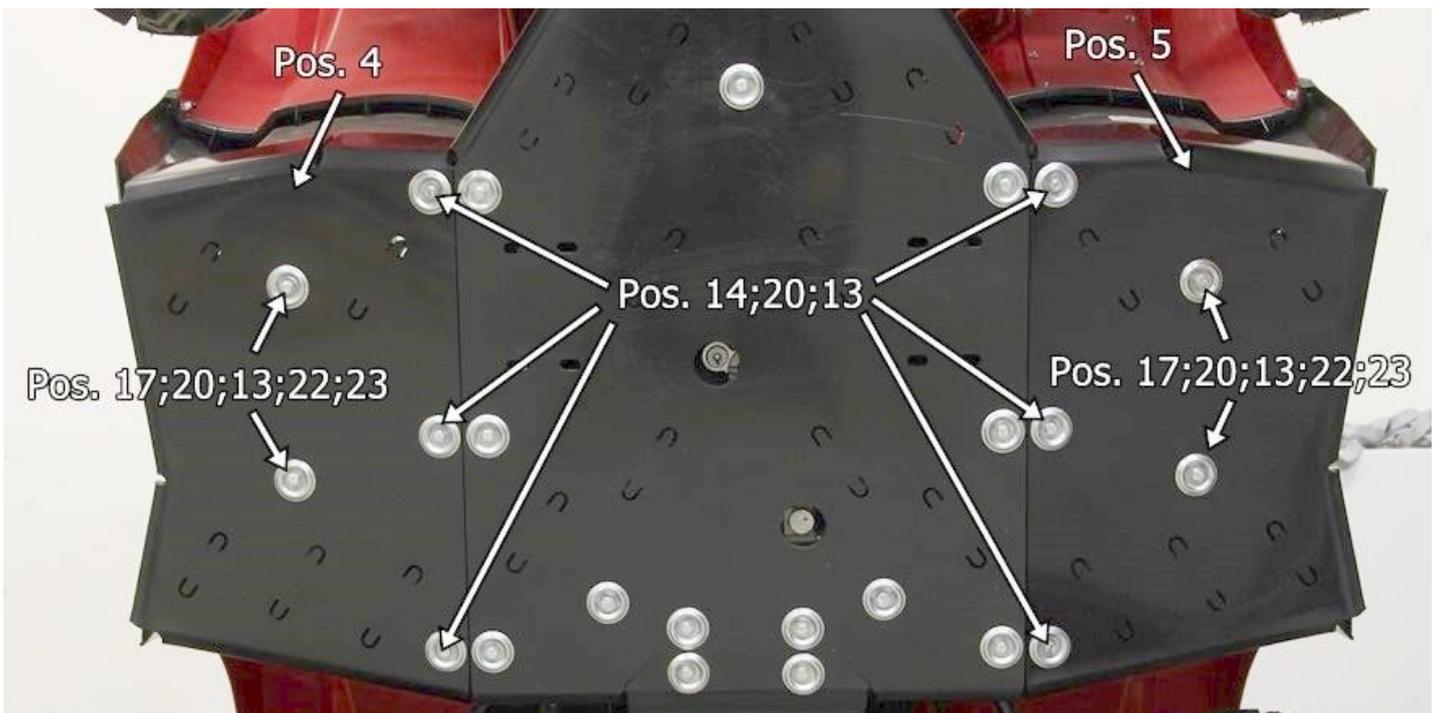




Step 6 Install front arms protections 02.21506 and 02.21507.

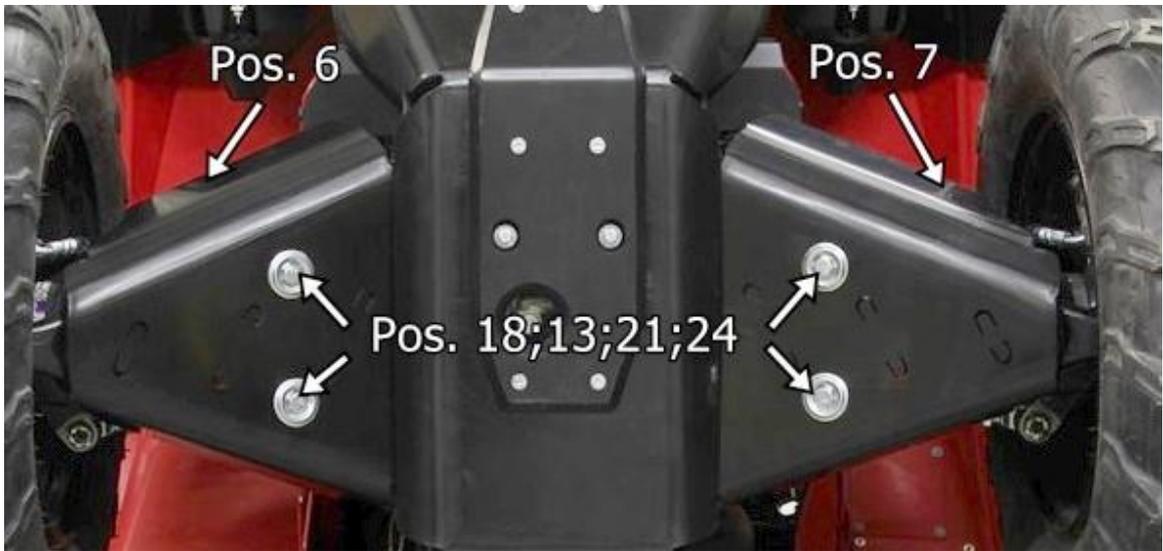

Step 7 Install rear arm protections 02.21508 and 02.21509, use clamps 02.5709.

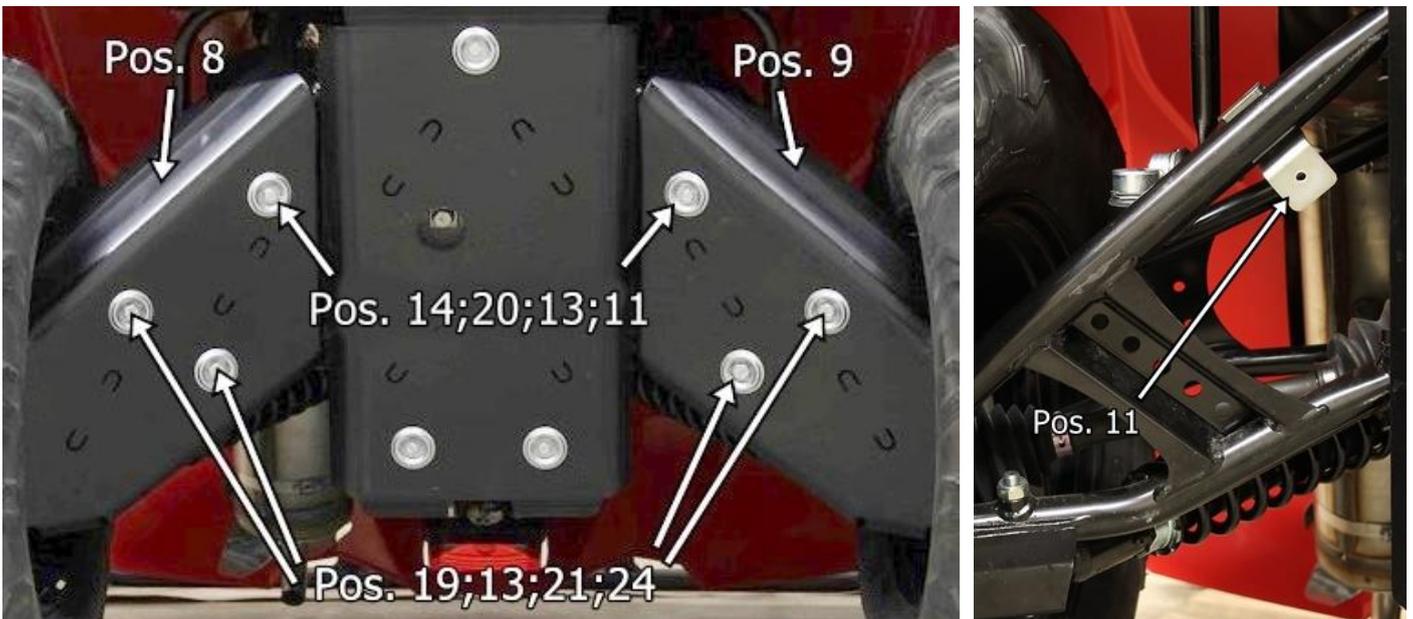

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

