

# IRON BALTIC

## PLASTIC SKID PLATE

## TRAPPER


### Chaser 550 / 750

## HISUN

### Tactic 550 / 750 2-UP

Code 02.21700

Version 17092023

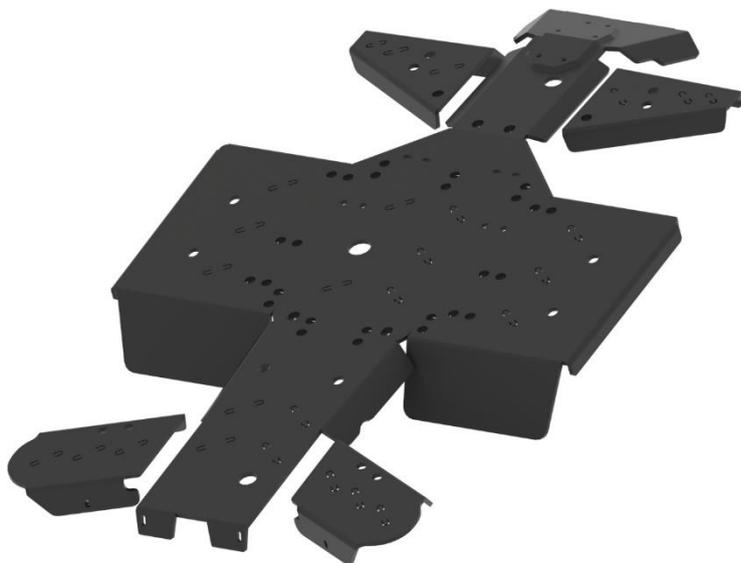

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/oTg0HHxJ](https://code.ironbaltic.com/u/oTg0HHxJ)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.21701K	1
2	Middle protection	02.21702	1
3	Rear part	02.21703	1
4	Right side protection	02.21704	1
5	Left side protection	02.21705	1
6	Rear left arm protection	02.21706	1
7	Rear right arm protection	02.21707	1
8	Front left arm protection	02.21708	1
9	Front right arm protection	02.21709	1
10	Bracket	02.718	4
11	Installation plate	02.5006	13
12	Installation bracket	02.8210	2
13	Installation angle	03.1502	2
14	Dished washer	14.503	46
15	Bolt M6x16 DIN 933	OT.02.02.050	32
16	Bolt M6x20 DIN 933	OT.02.02.060	10
17	Bolt M6x25 DIN 933	OT.02.02.070	4
18	Bolt M6x50 DIN 933	OT.02.02.120	4
19	Bolt M8x30 DIN 933	OT.02.02.200	2
20	Bolt M6x25 DIN 7991	OT.02.04.040	2
21	Bolt M8x25 DIN 7991	OT.02.04.160	2
22	Conical washer Ø6	14.502	2
23	Conical washer Ø8	14.501	2
24	Washer Ø6/15 SFS 3738	OT.04.03.020	58
25	Washer Ø8/20 SFS 3738	OT.04.03.030	4
26	Nyloc nut M6 DIN 985	OT.03.02.030	8
27	Nyloc nut M8 DIN 985	OT.03.02.040	2

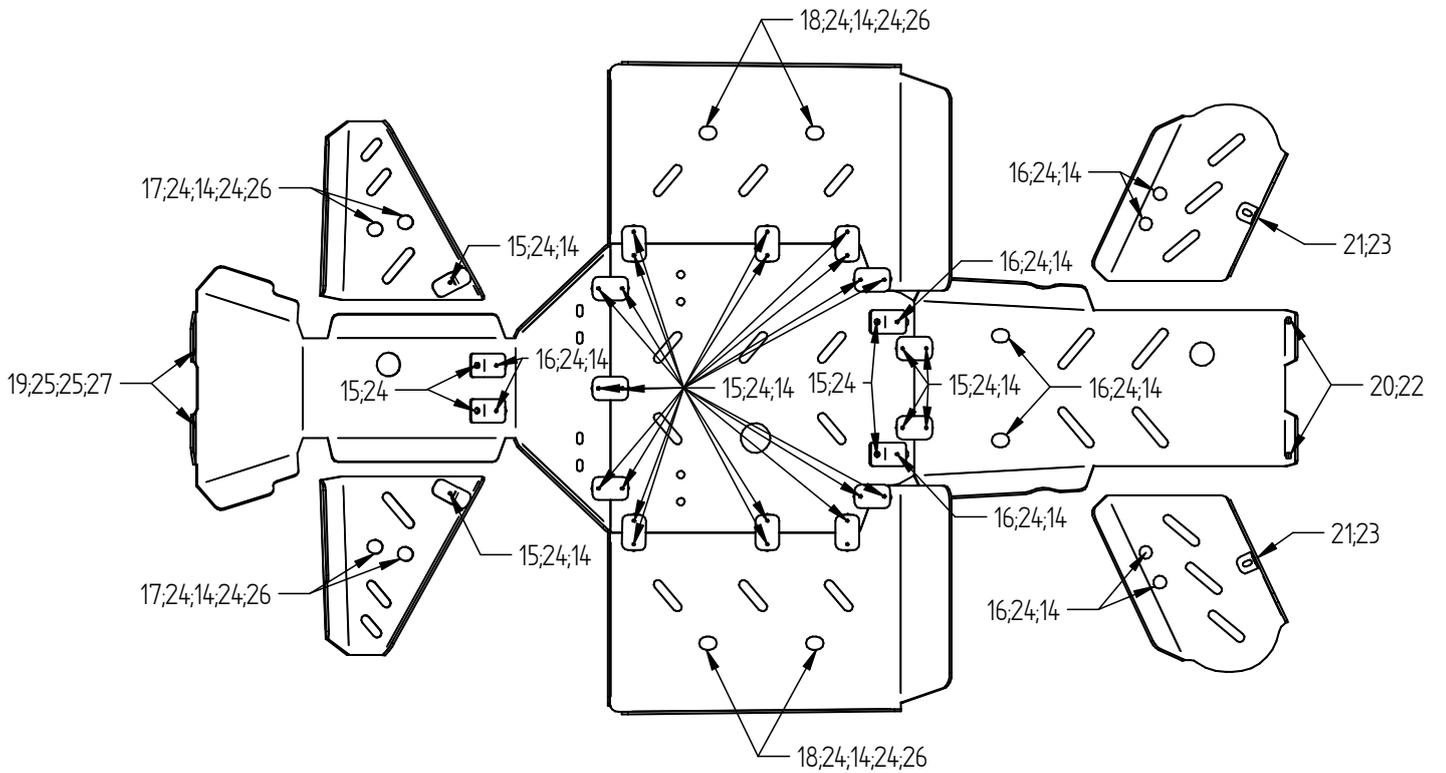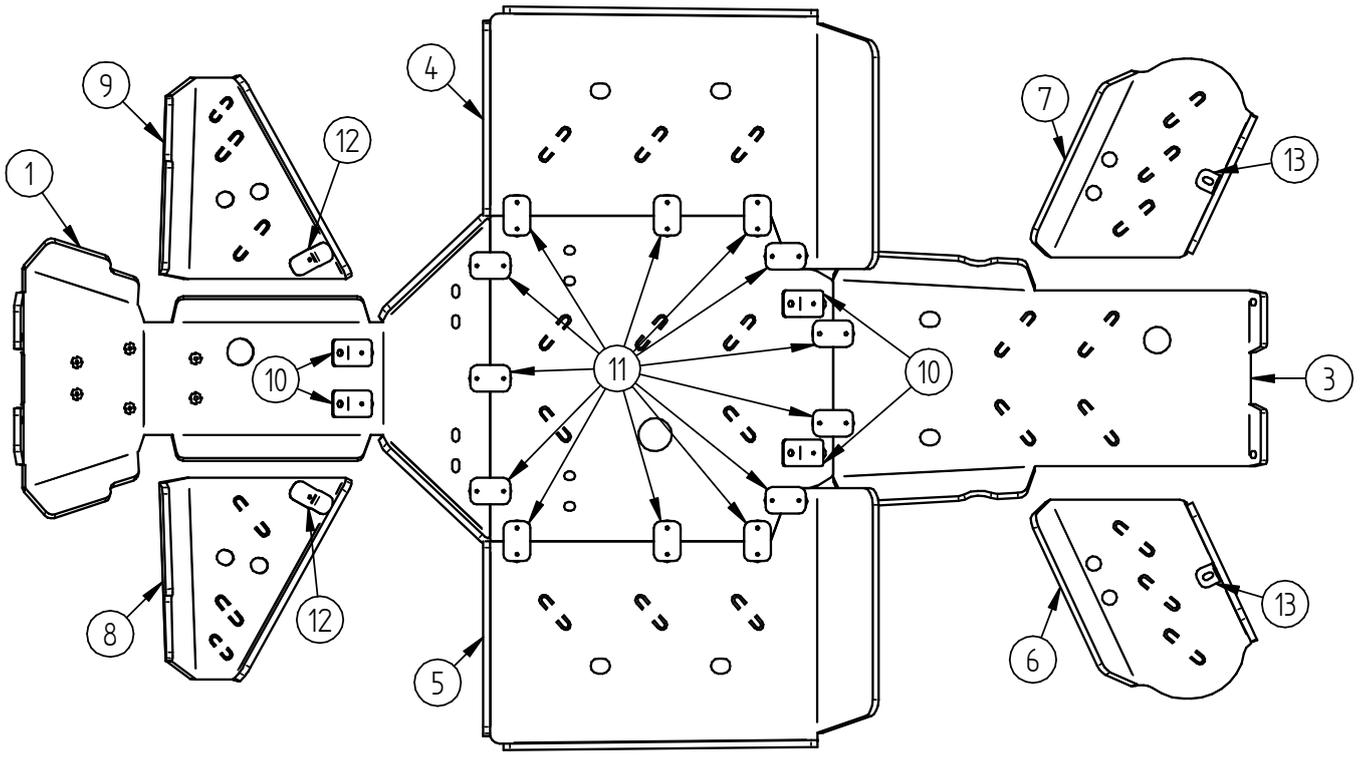


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers and fairlead. Remove also bolts indicated on the picture.





**Step 2** Install brackets 02.718.

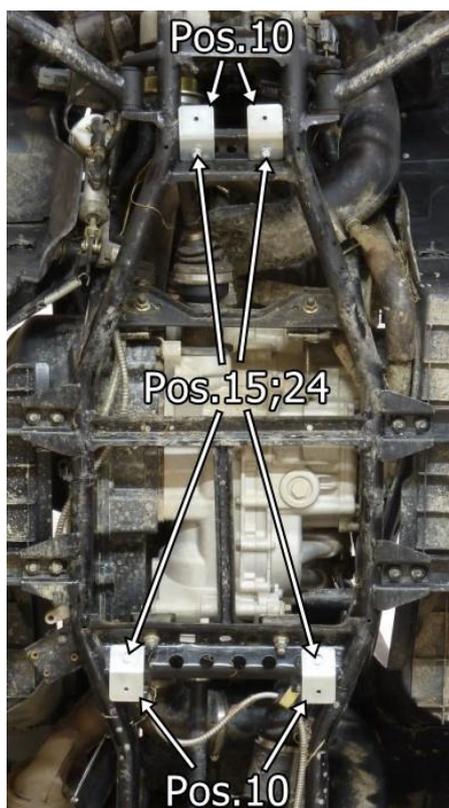



**Step 3** Install front arm protections 02.21708 and 02.21709.

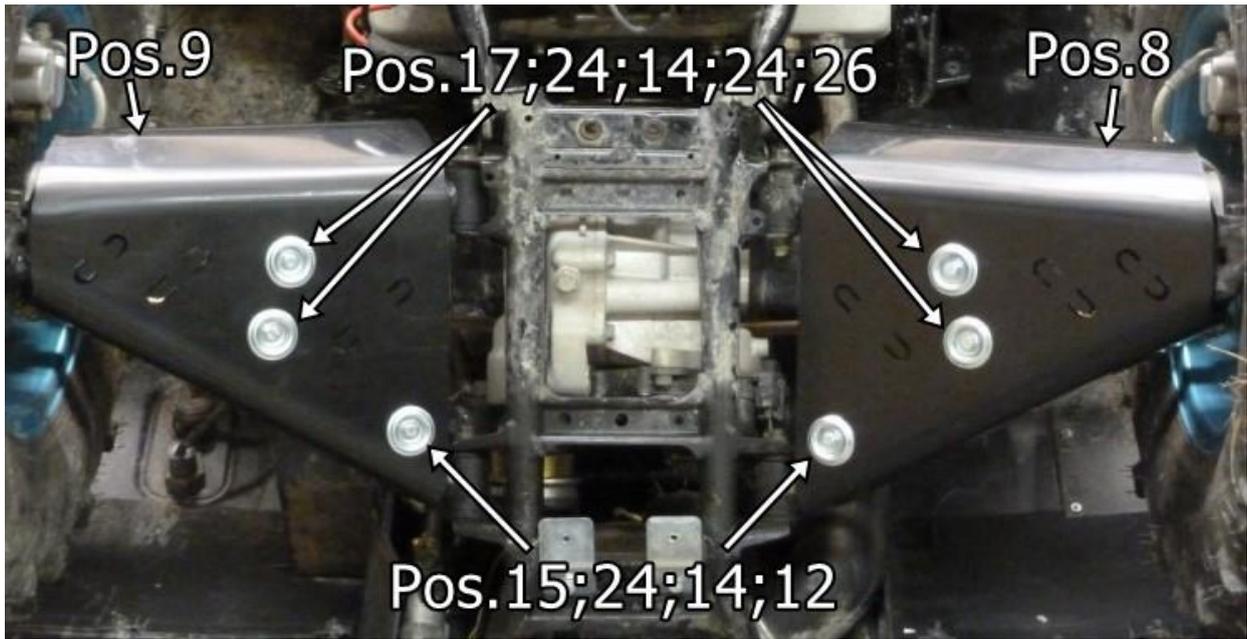



**Step 4** Install rear arm protections 02.21706 and 02.21707.

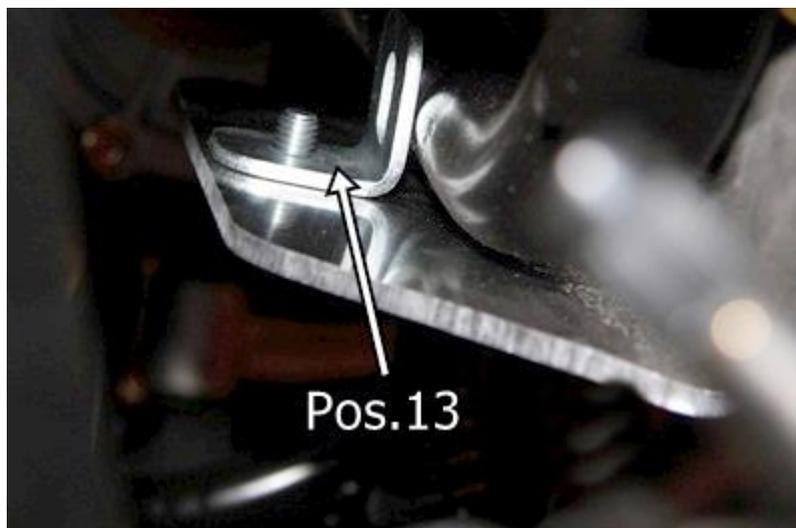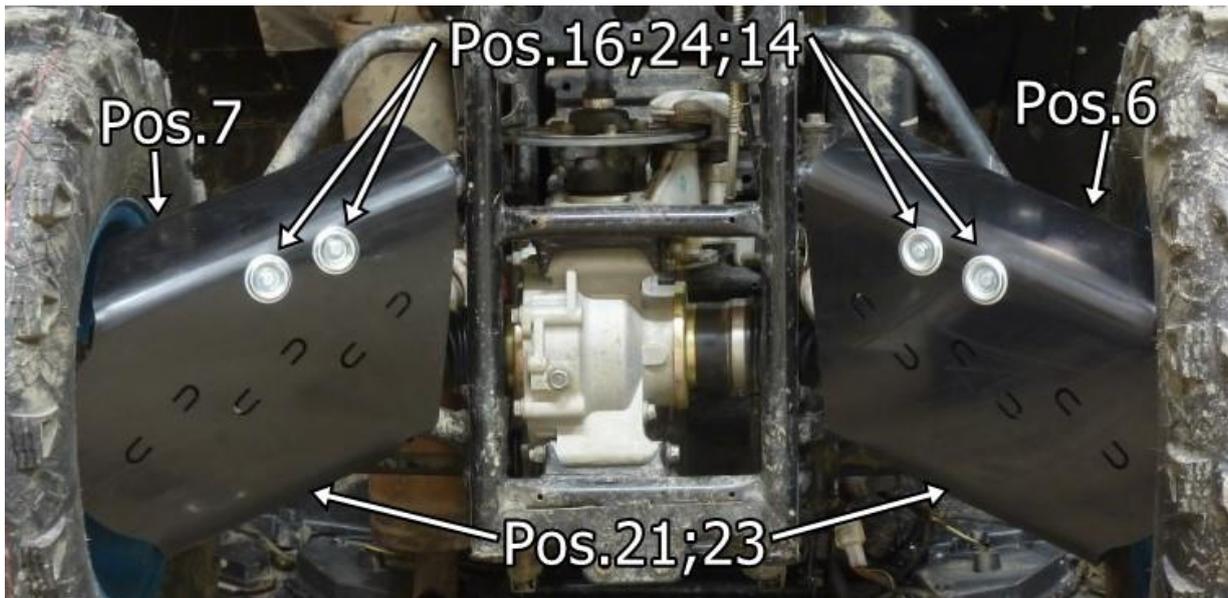

**Step 5** Install front protection 02.21701K and plates 02.5006. Loosen original plastic bolts to place the skid plate under it.

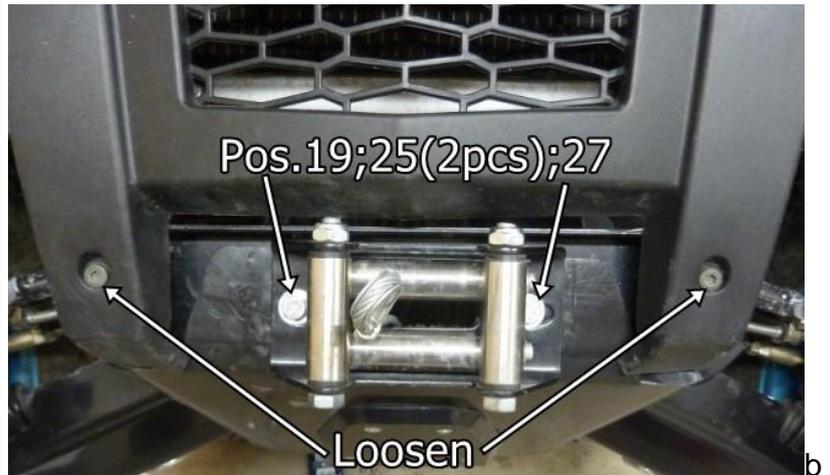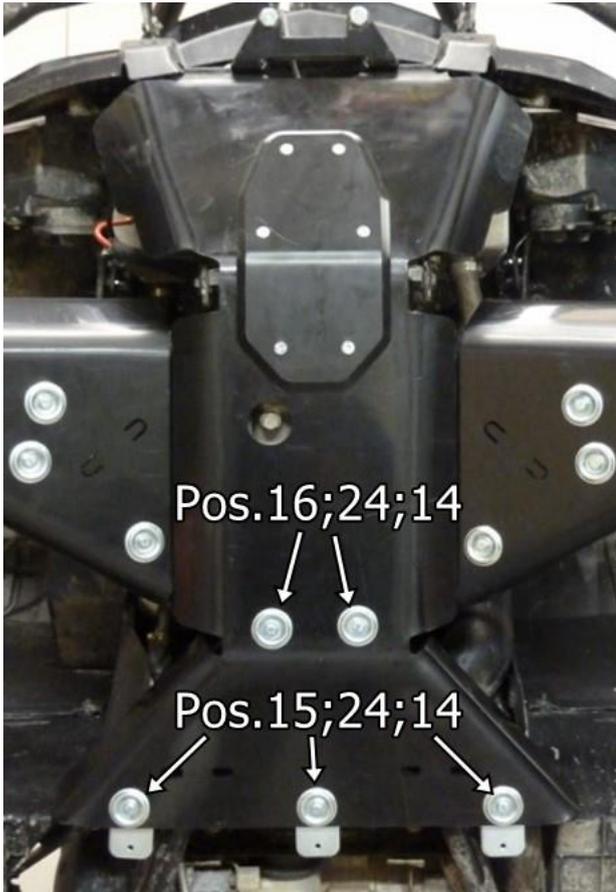


**Step 6** Install middle protection 02.21702 and plates 02.5006.

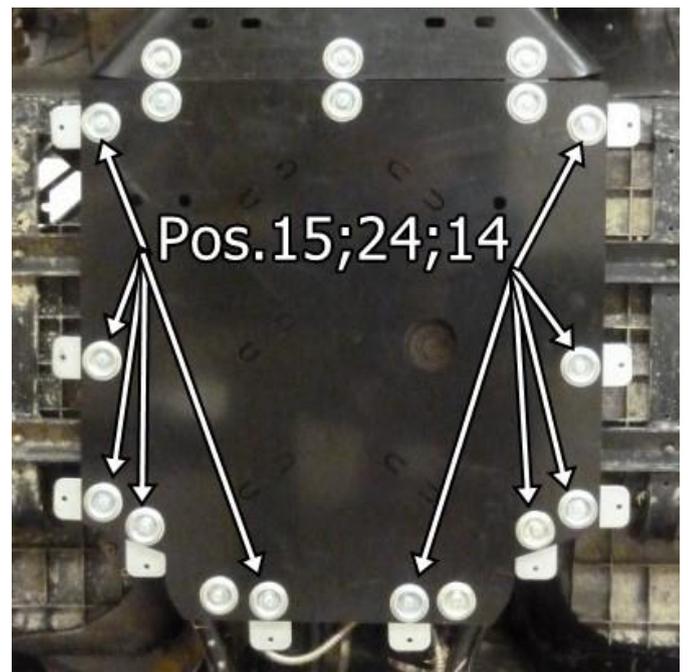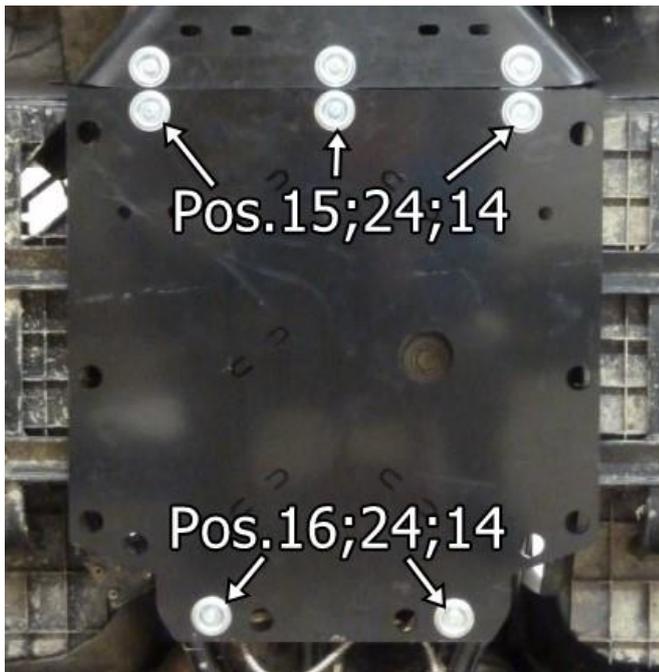

**Step 7** Install rear part 02.21703.



**Step 8** Install side protections 02.21704 and 02.21705.

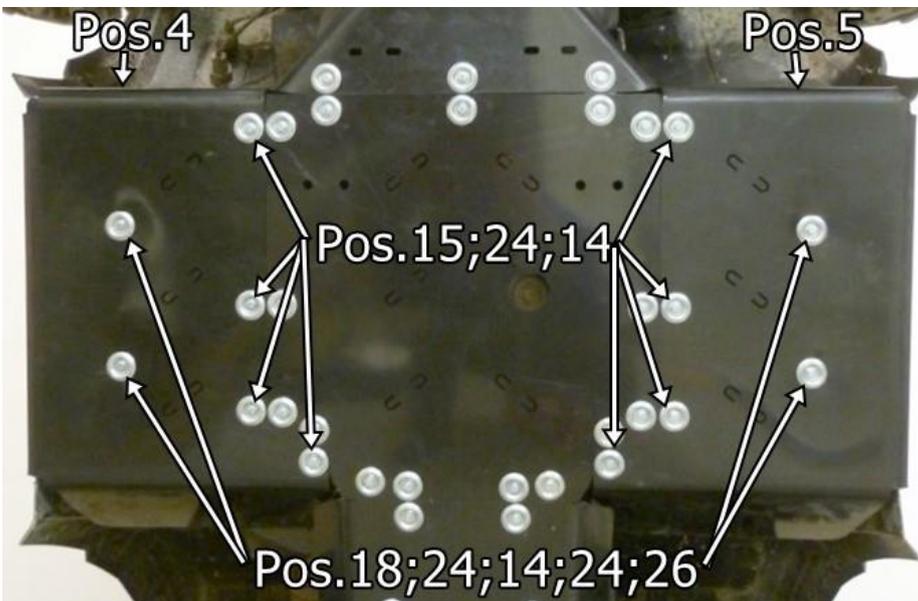

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

