



code.ironbaltic.com/u/uIHNbo6x


ALUMINIUM SKID PLATE

AODES

800 Assailant Zeus

Code 02.21800

Version 17092023


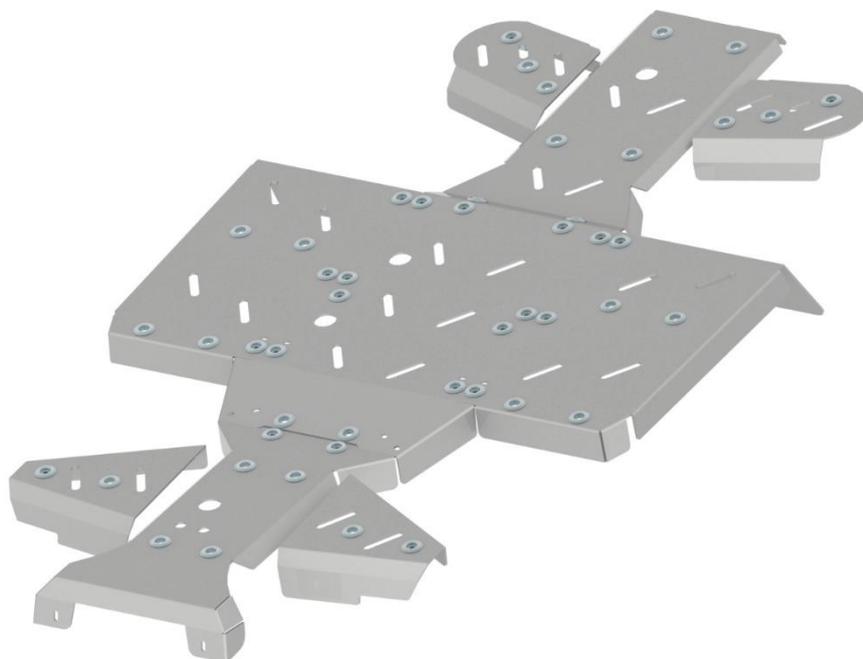


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.21801K	1
2	Right side protection	02.21802	1
3	Left side protection	02.21803	1
4	Front protection	02.21804	1
5	Rear part	02.21805	1
6	Front right arm protection	02.21806	1
7	Front left arm protection	02.21807	1
8	Rear right arm protection	02.21808	1
9	Rear left arm protection	02.21809	1
10	Installation plate	02.5006	8
11	Installation bracket	02.5709	2
12	Installation plate (30)	02.10007	2
13	Front arm protection bracet	02.12909	2
14	Dished washer	14.503	48
15	Bolt M6x12 DIN 933	OT.02.02.030	22
16	Bolt M6x16 DIN 933	OT.02.02.050	8
17	Bolt M6x20 DIN 933	OT.02.02.060	6
18	Bolt M6x25 DIN 933	OT.02.02.070	8
19	Bolt M6x35 DIN 933	OT.02.02.090	2
20	Bolt M8x30 DIN 933	OT.02.02.200	2
21	Bolt M6x45 DIN 7991	OT.02.04.075	2
22	Conical washer Ø6	14.502	2
23	Washer Ø6/15 SFS 3738	OT.04.03.020	46

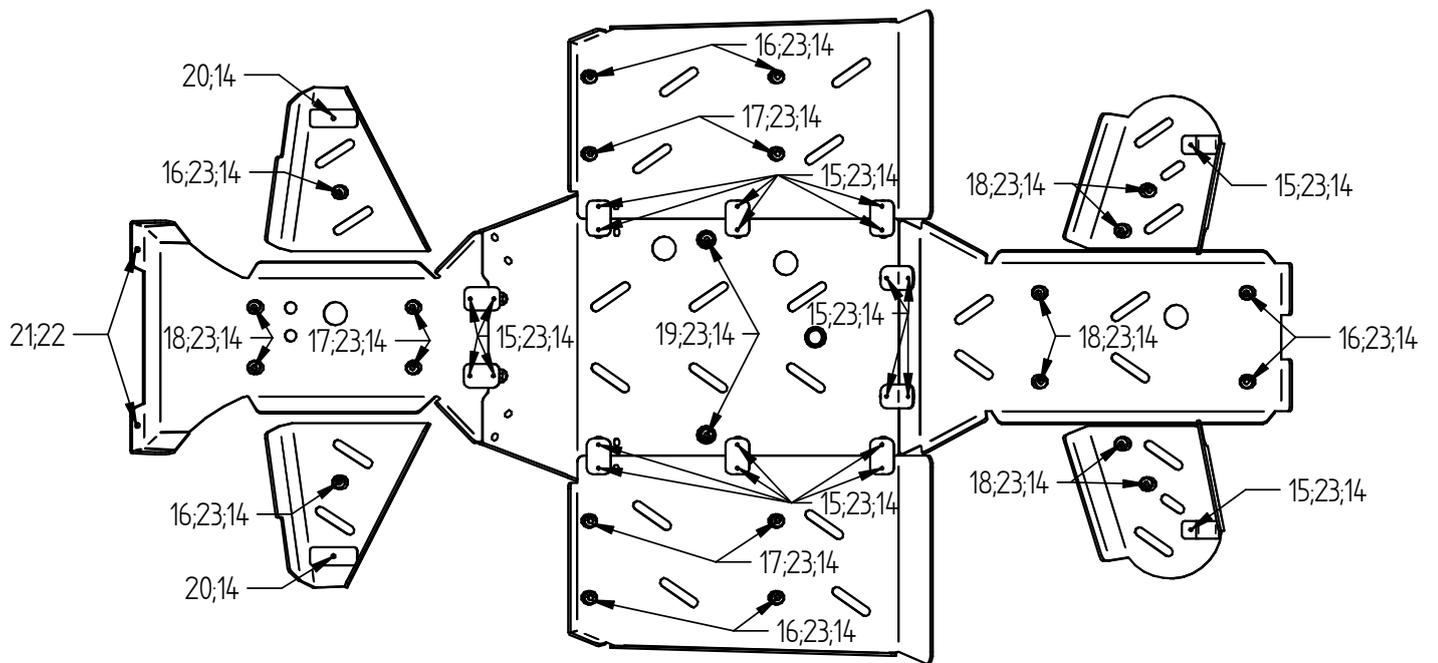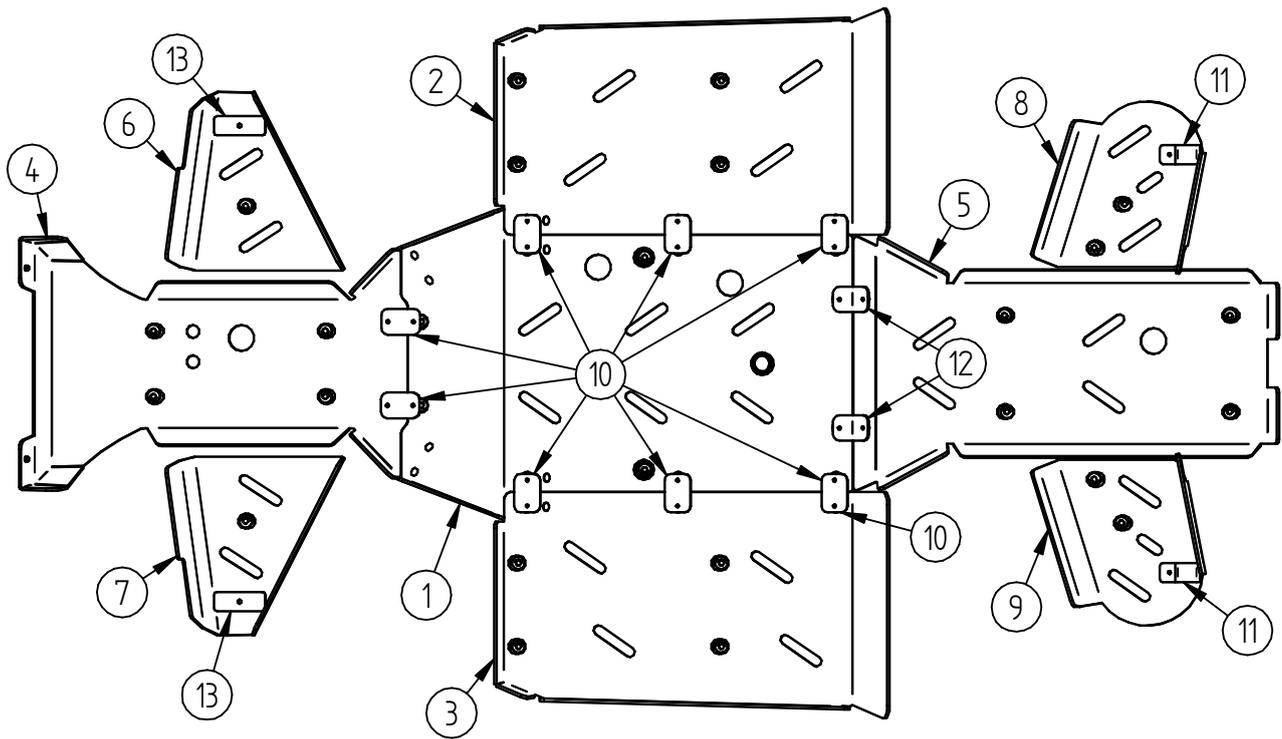


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers and bolts from front plastic, indicated with arrows.

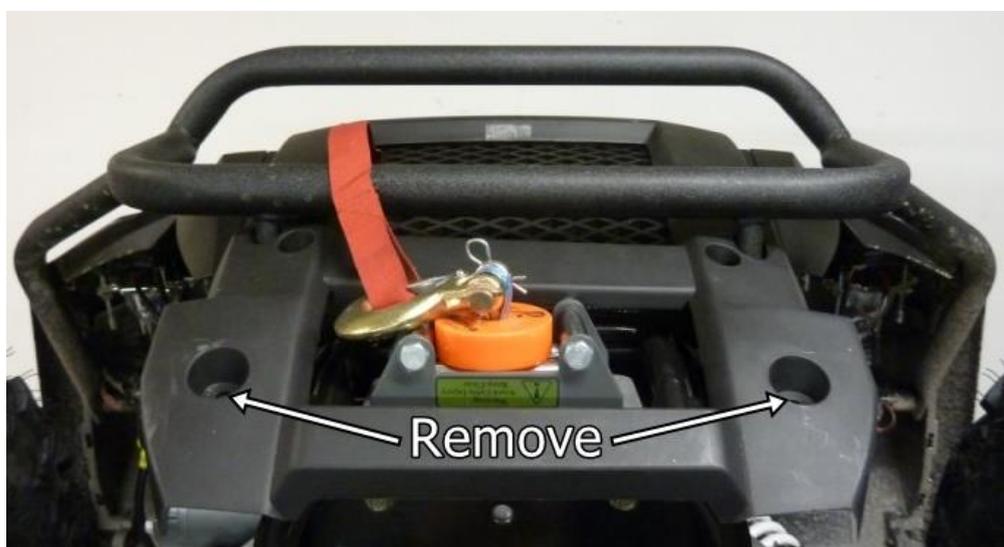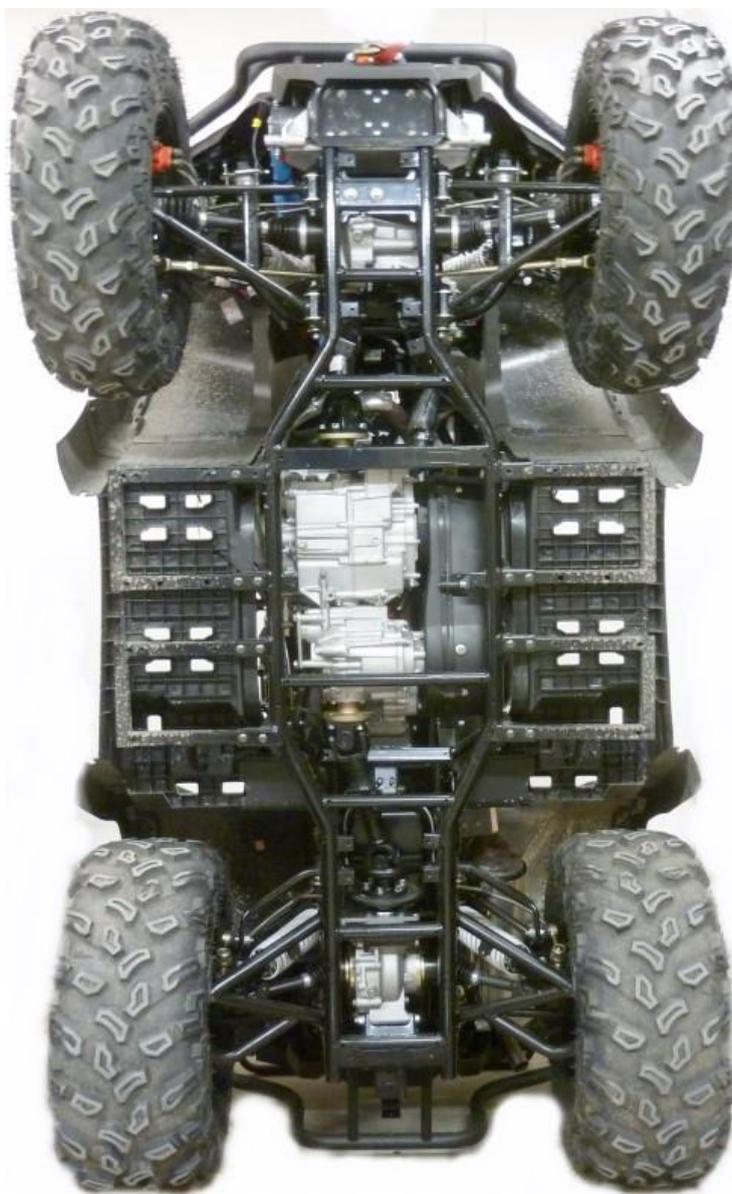



Step 2 Install front arm protections 02.21806 and 02.21807.

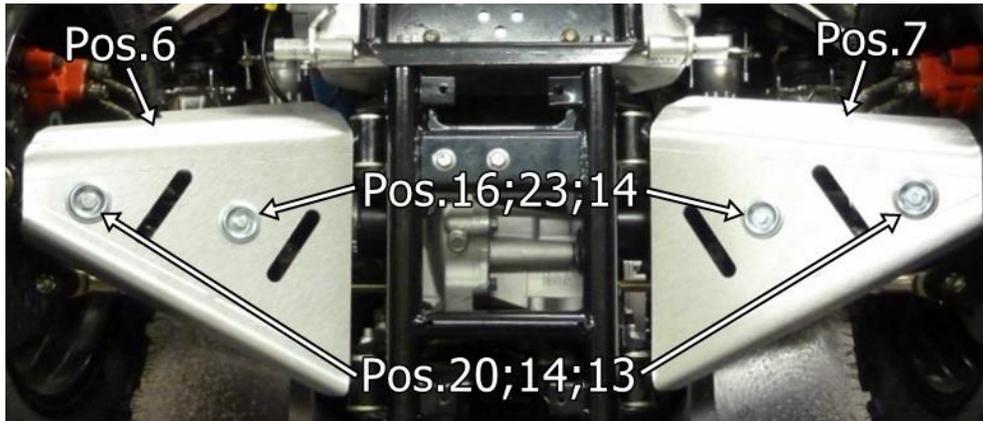


Step 3 Install rear arm protections 02.21808 and 02.21809.

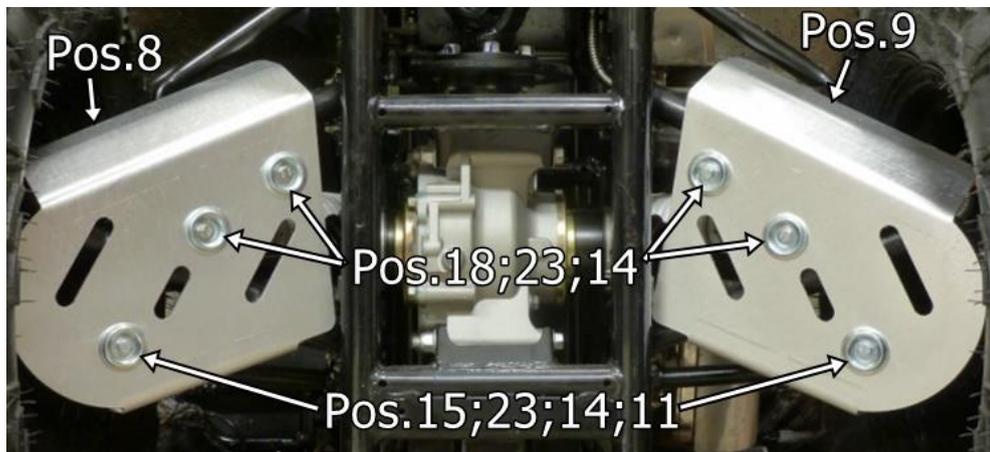

Step 4 Install front protection 02.21804 and plates 02.5006.

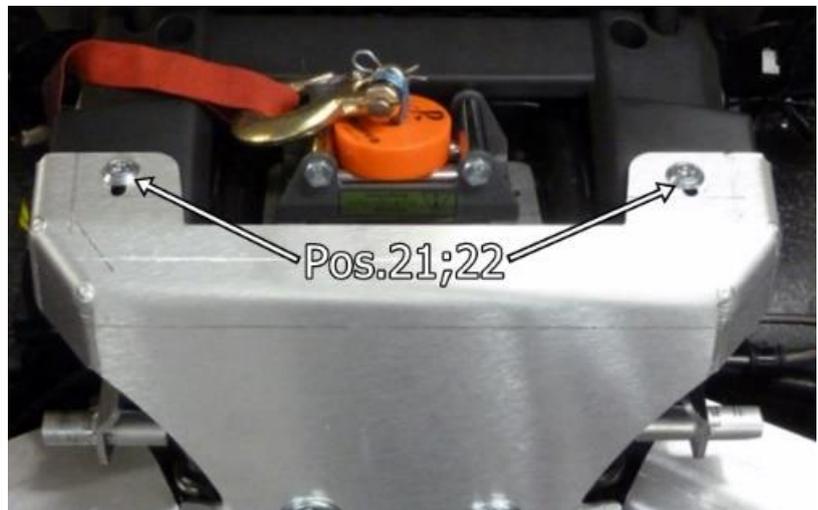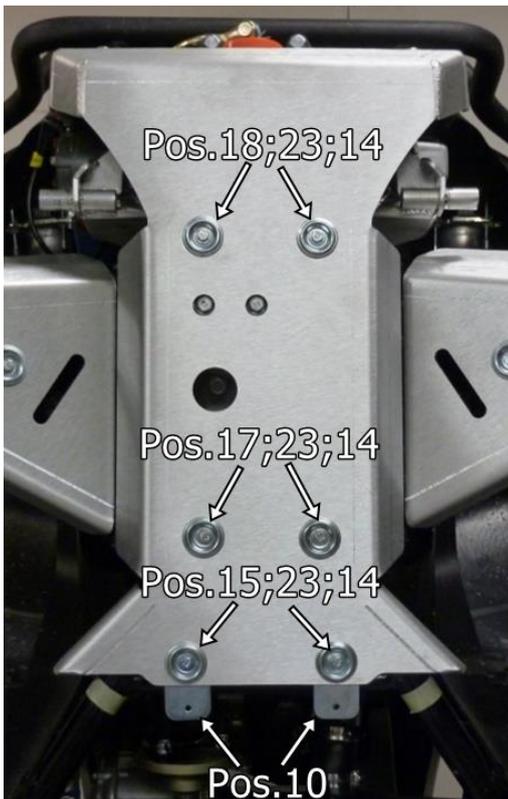


Step 5 Install middle protection 02.21804, plates 02.5006 and 02.10007.

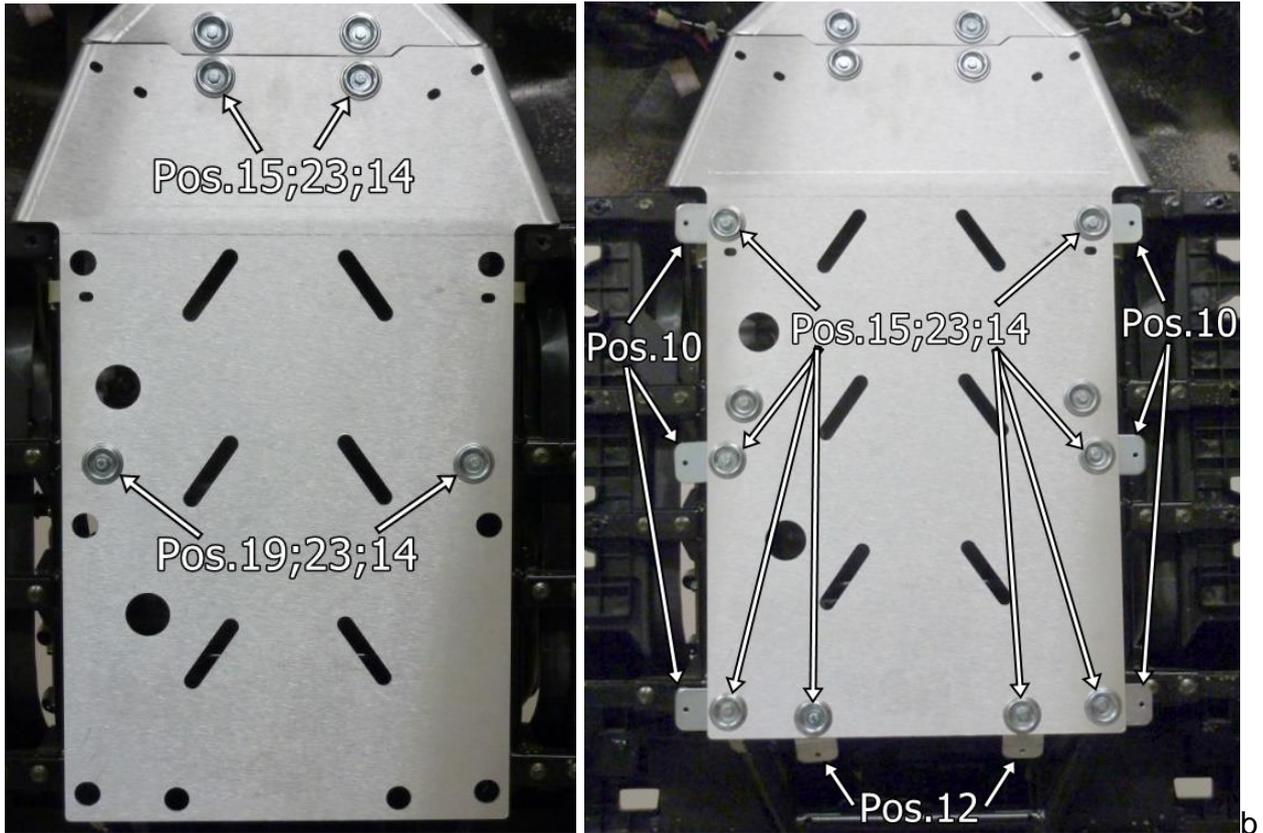

Step 6 Install rear part 02.21805.



Step 7 Install side protections 02.21802 and 02.21803.

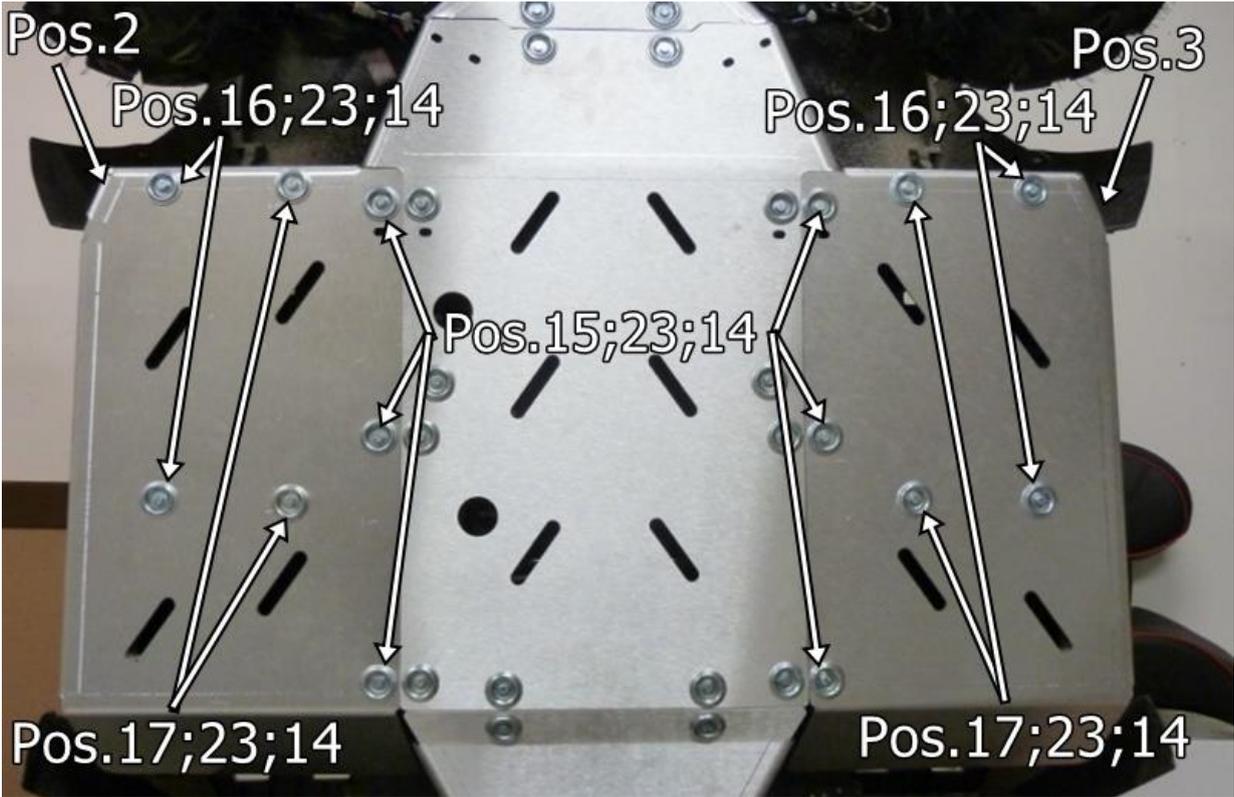

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

