



[code.ironbaltic.com/u/rXF0CRjT](https://code.ironbaltic.com/u/rXF0CRjT)


## ALUMINIUM SKID PLATE

# KYMCO

# MXU 700

Code 02.22000

Version 29092023


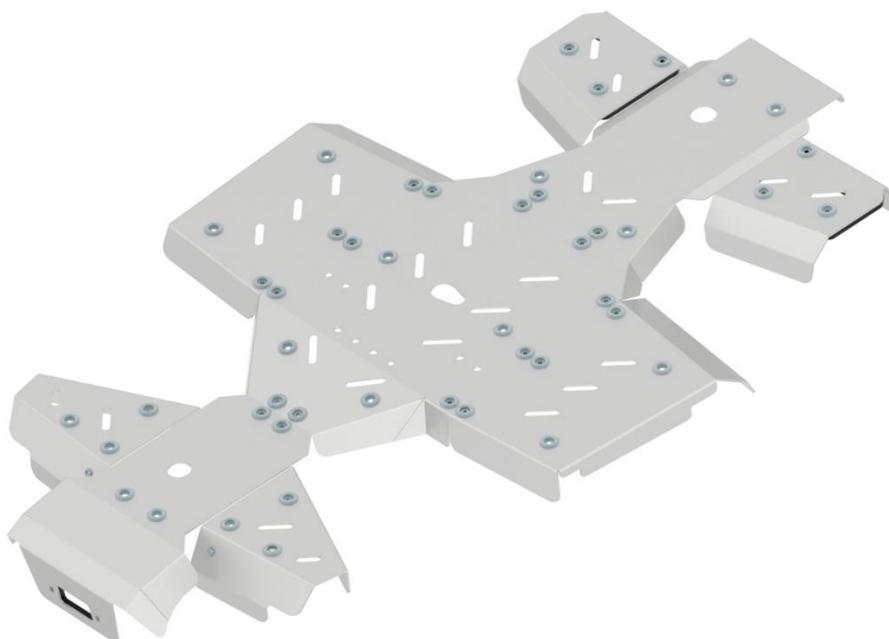


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION



| Pos. | Description                | Code         | Amount |
|------|----------------------------|--------------|--------|
| 1    | Front protection           | 02.22001     | 1      |
| 2    | Middle protection          | 02.22002K    | 1      |
| 3    | Right side protection      | 02.22004     | 1      |
| 4    | Left side protection       | 02.22005     | 1      |
| 5    | Rear protection            | 02.22006     | 1      |
| 6    | Front left arm protection  | 02.22007     | 1      |
| 7    | Front right arm protection | 02.22008     | 1      |
| 8    | Rear right arm protection  | 02.22009     | 1      |
| 9    | Distance plate             | 02.22010     | 2      |
| 10   | Rear left arm protection   | 02.22011     | 1      |
| 11   | Distance plate             | 05.3902      | 1      |
| 12   | Installation bracket       | 02.1018      | 2      |
| 13   | Installation bracket       | 02.1419      | 2      |
| 14   | Installation plate         | 02.5006      | 8      |
| 15   | Installation bracket       | 02.5710      | 2      |
| 16   | Installation bracket       | 02.8210      | 2      |
| 17   | Installation plate 10      | 02.8312      | 2      |
| 18   | Dished washer              | 14.503       | 46     |
| 19   | Bolt M6x12 DIN 933         | OT.02.02.030 | 20     |
| 20   | Bolt M6x20 DIN 933         | OT.02.02.060 | 18     |
| 21   | Bolt M6x30 DIN 933         | OT.02.02.080 | 2      |
| 22   | Bolt M6x30 DIN 7991        | OT.02.04.050 | 4      |
| 23   | Bolt M6x40 DIN 933         | OT.02.02.100 | 4      |
| 24   | Bolt M8x30 DIN 933         | OT.02.02.200 | 2      |
| 25   | Bolt M8x45 DIN 933         | OT.02.02.230 | 2      |
| 26   | Washer Ø6/15 SFS 3738      | OT.04.03.020 | 44     |
| 27   | Washer Ø6/18 DIN 9021      | OT.04.02.020 | 12     |
| 28   | Washer Ø8/20 SFS 3738      | OT.04.03.030 | 4      |
| 29   | Conical washer Ø6          | 14.502       | 4      |
| 30   | Nyloc nut M6 DIN 985       | OT.03.02.030 | 12     |
| 31   | Nyloc nut M8 DIN 985       | OT.03.02.040 | 4      |

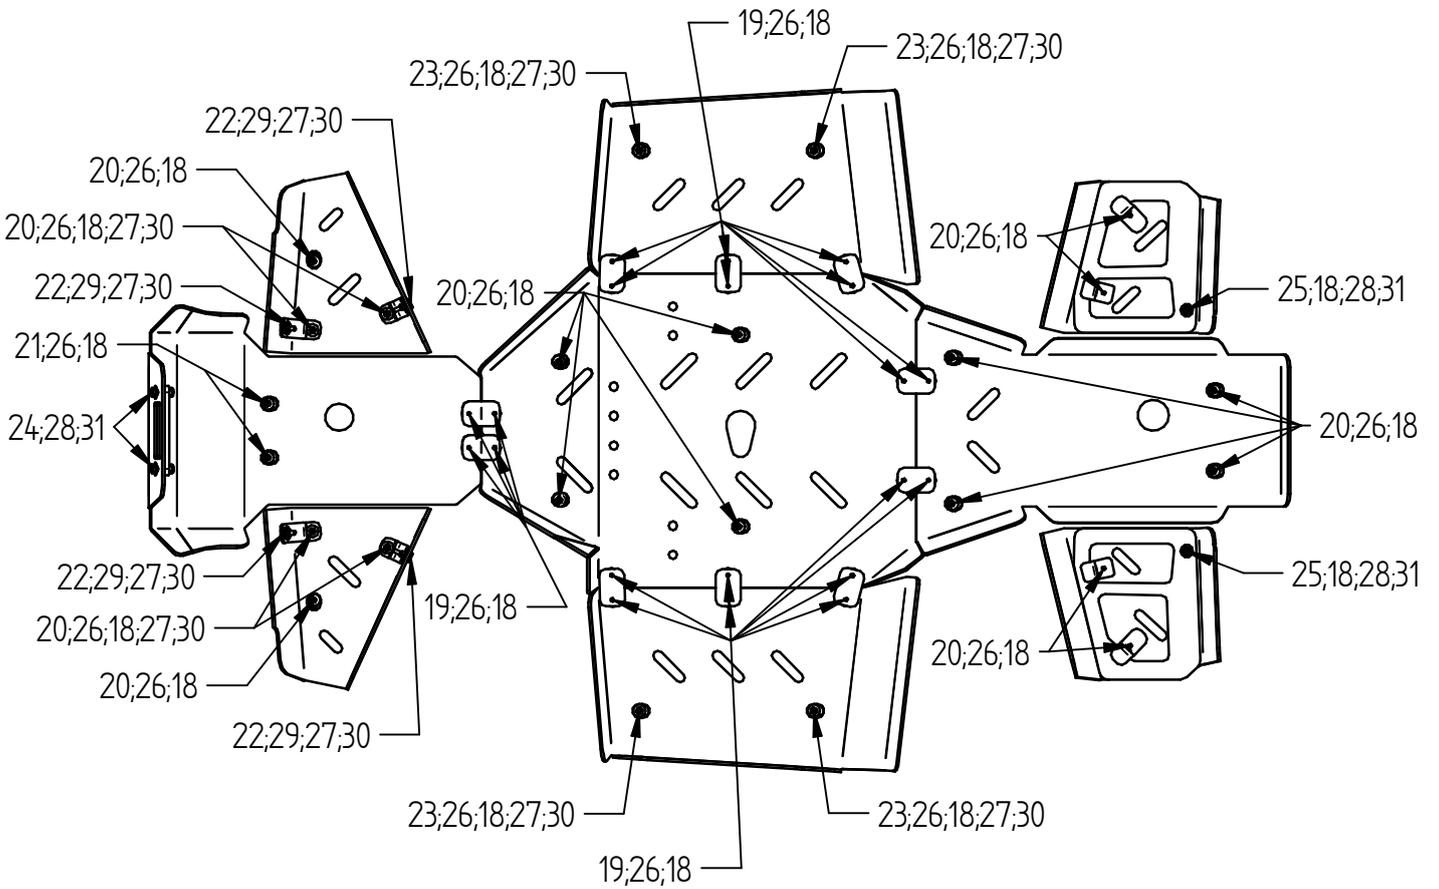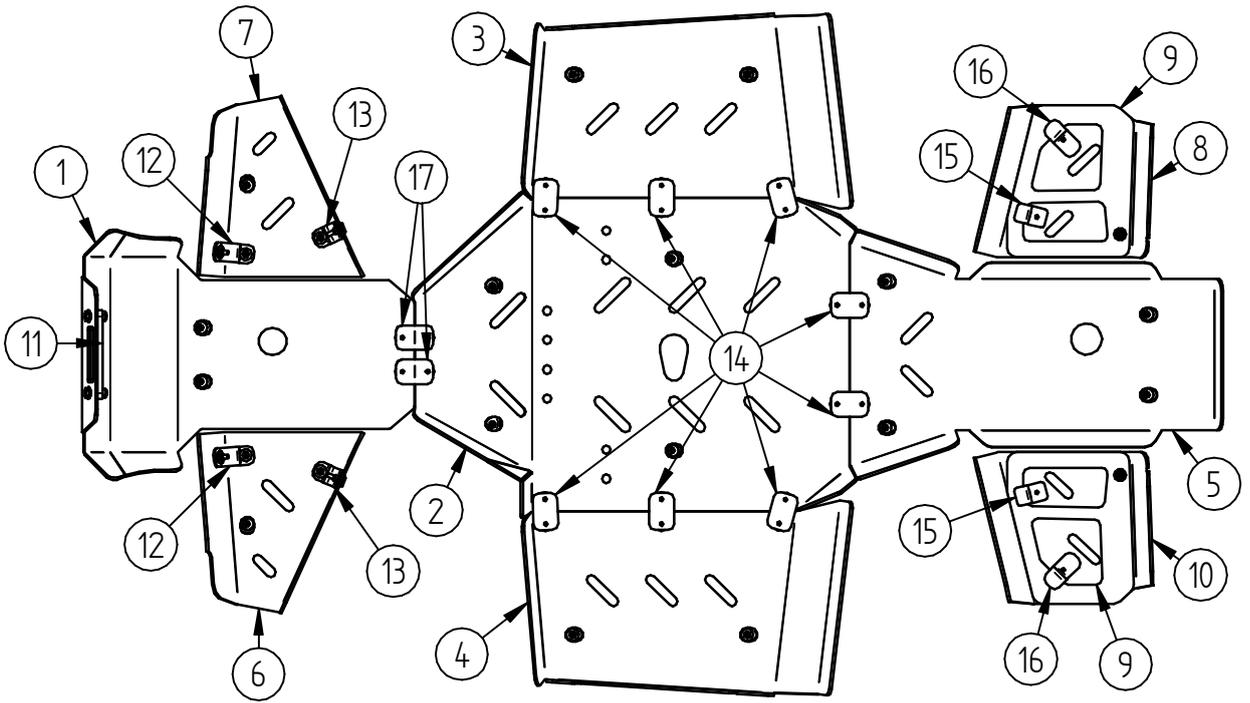

# FITTING INSTRUCTIONS


## Step 1

Remove all standard plastic covers, fairlead and original bolts (shown in the picture).

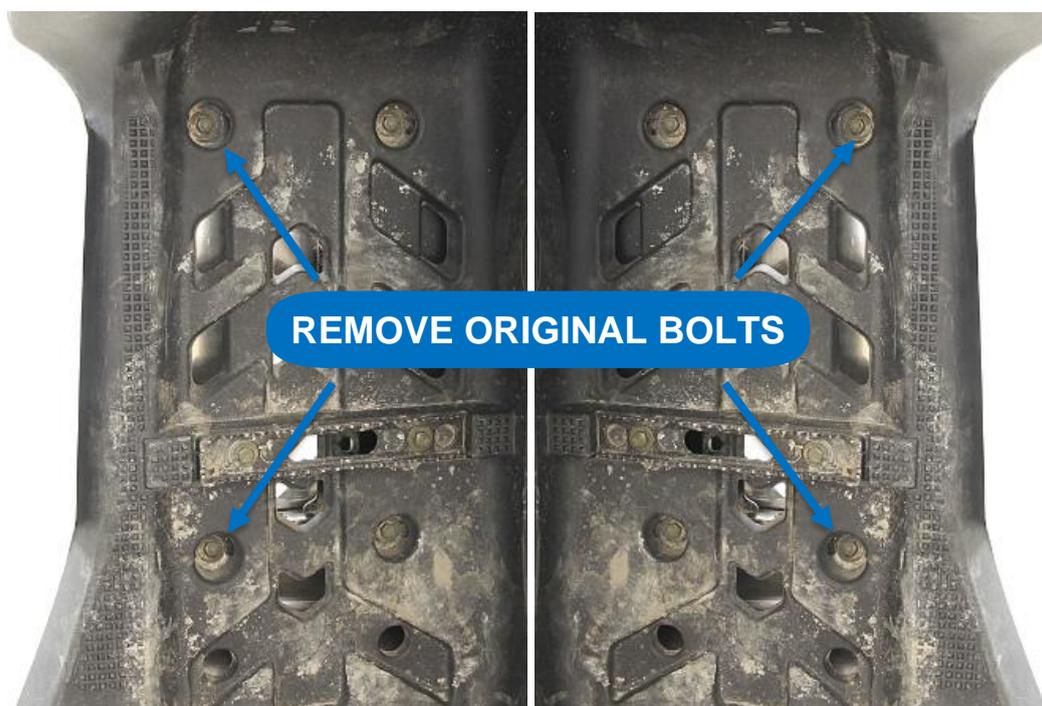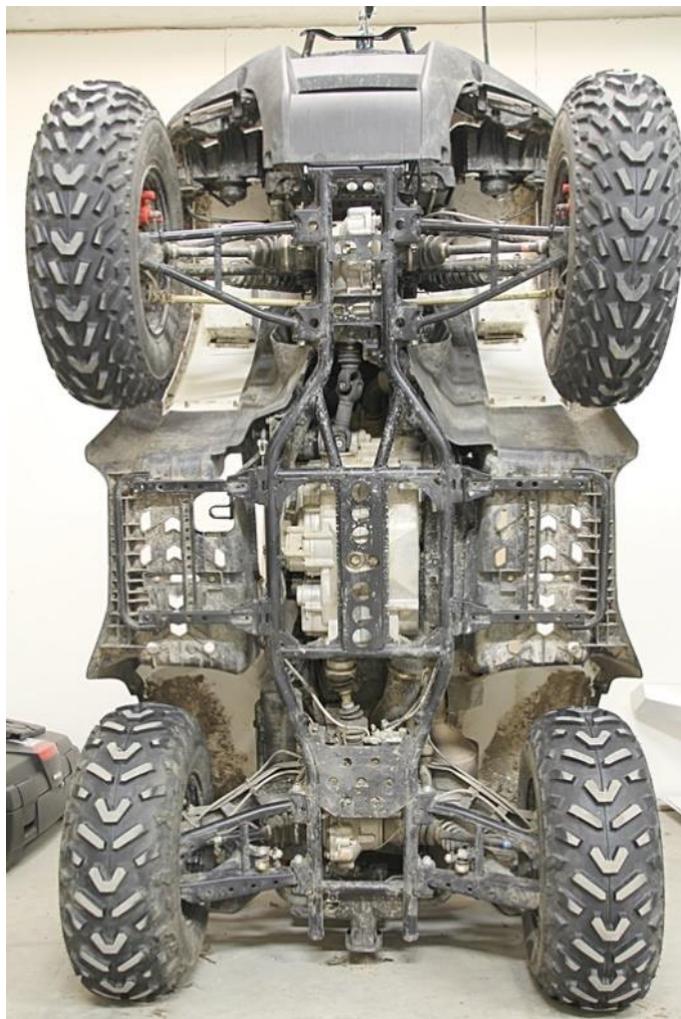


## Step 2

Install middle part 02.22002K and install plates 02.5006 / 02.8312 to middle part.

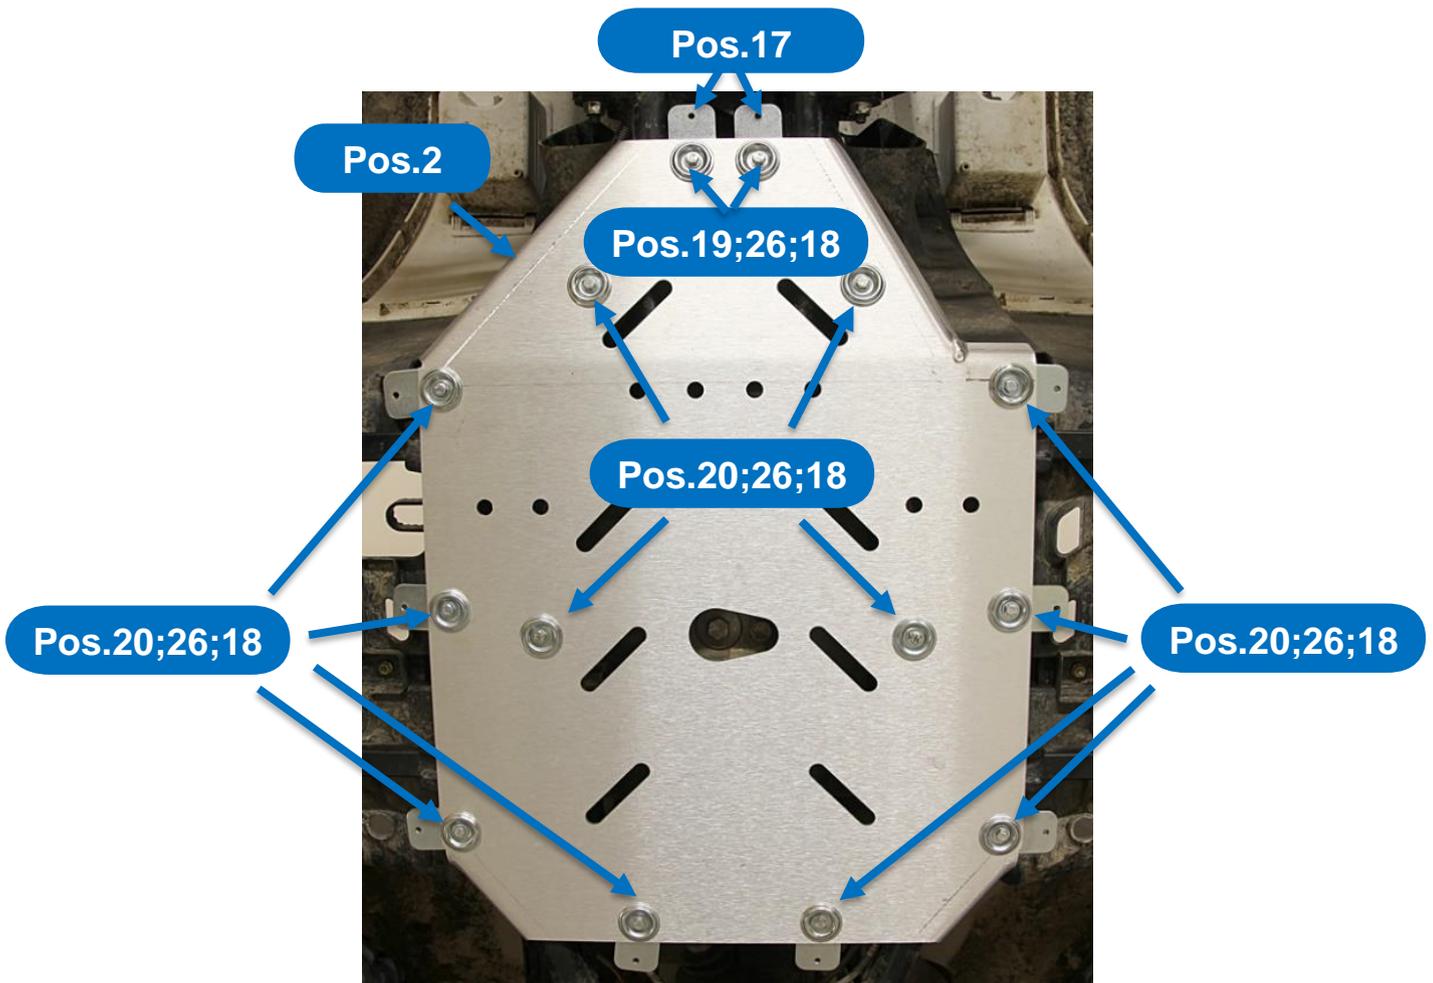


## Step 3

Install distance plate 05.3902 between frame and front protection. Front protection 02.22001 and fairlead but do not tighten bolts!

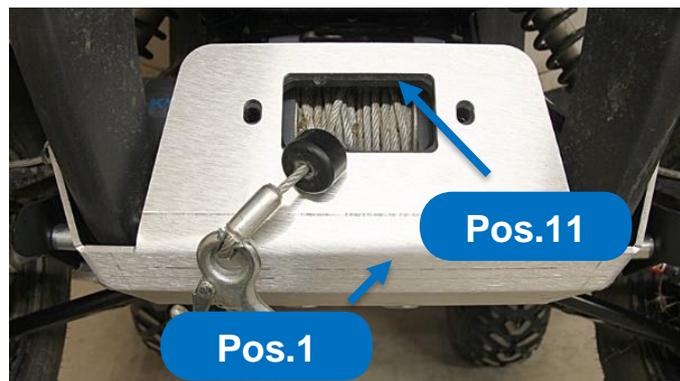


**Step 4**

Fix the front protection. Tighten all installed bolts.

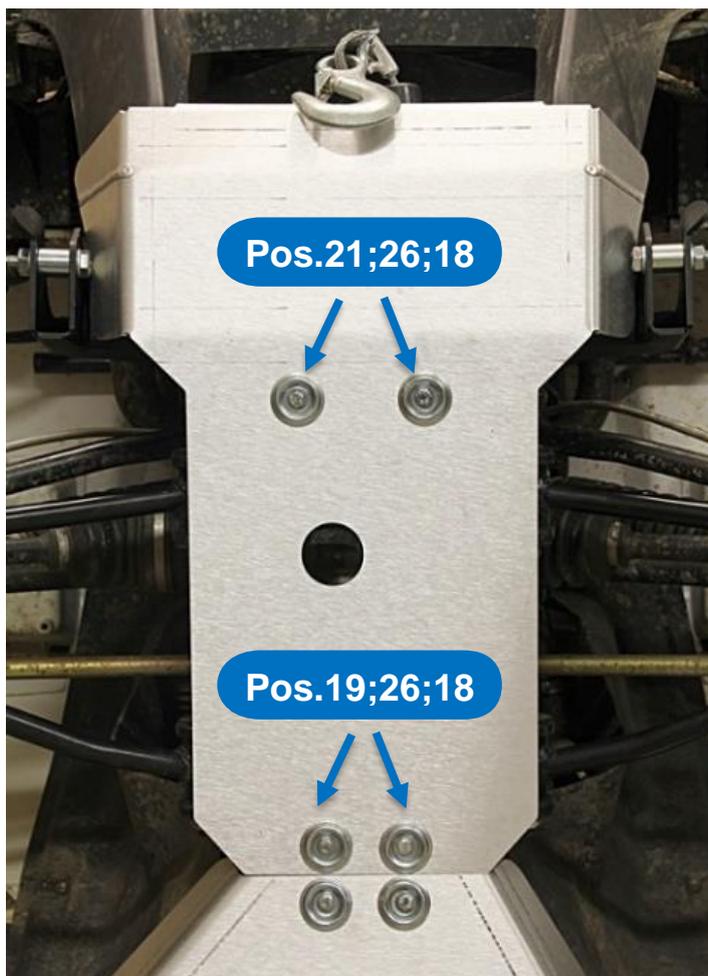



**Step 5**

Install rear part 02.22006.

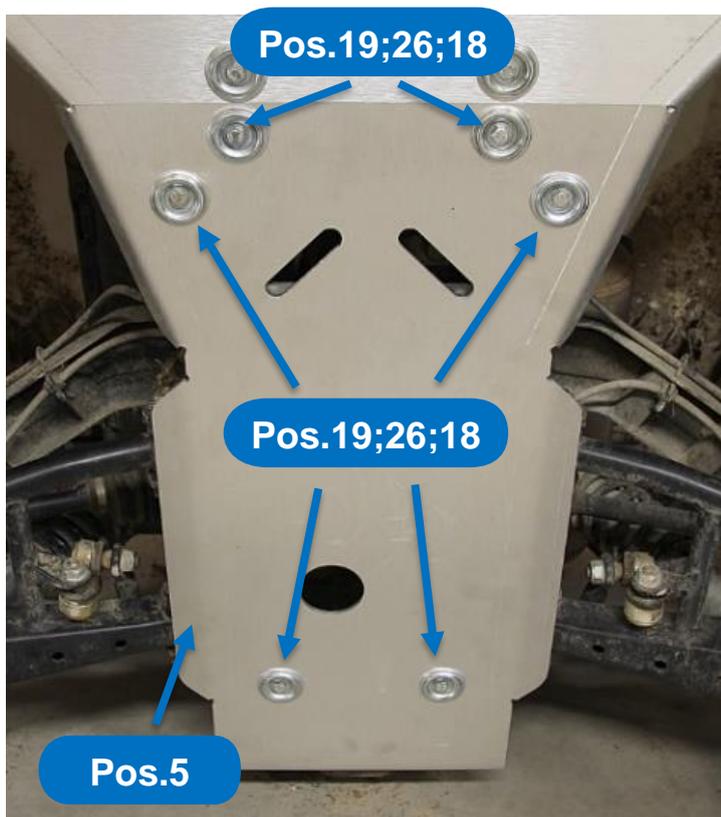


**Step 6**


Install side protections 02.22004 and 02.22005.

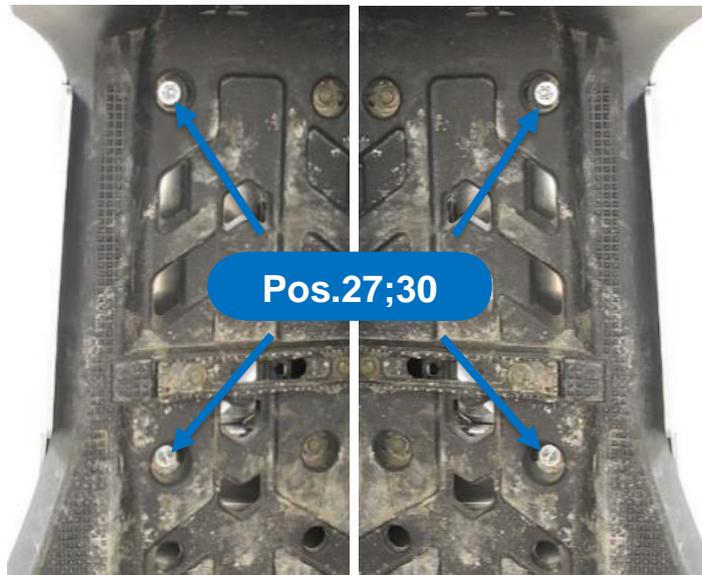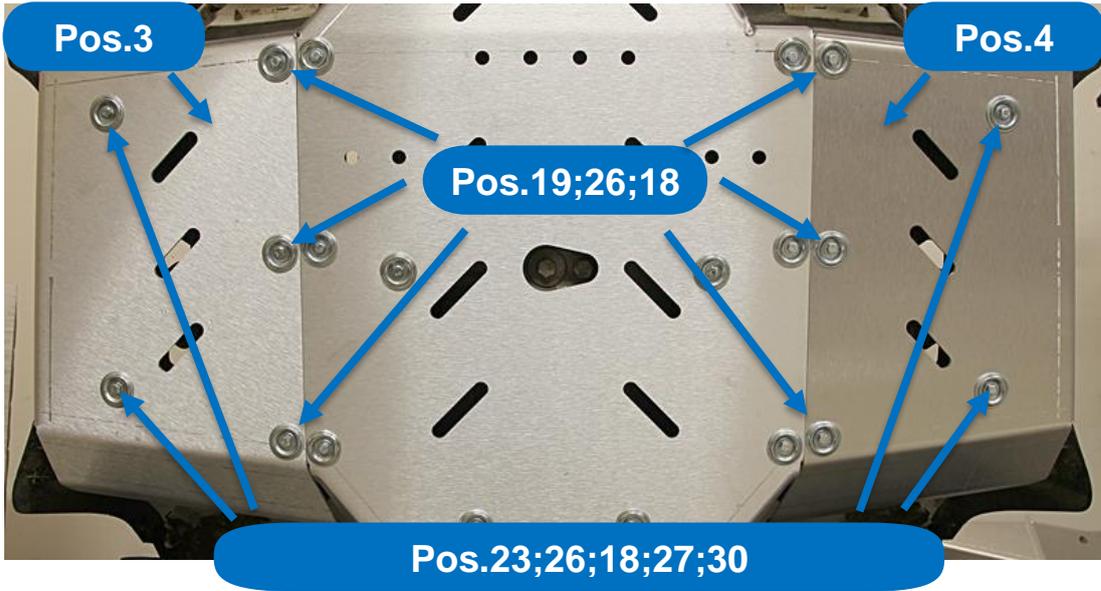

**Step 7**


Install front arm protections 02.22007 and 02.22008.

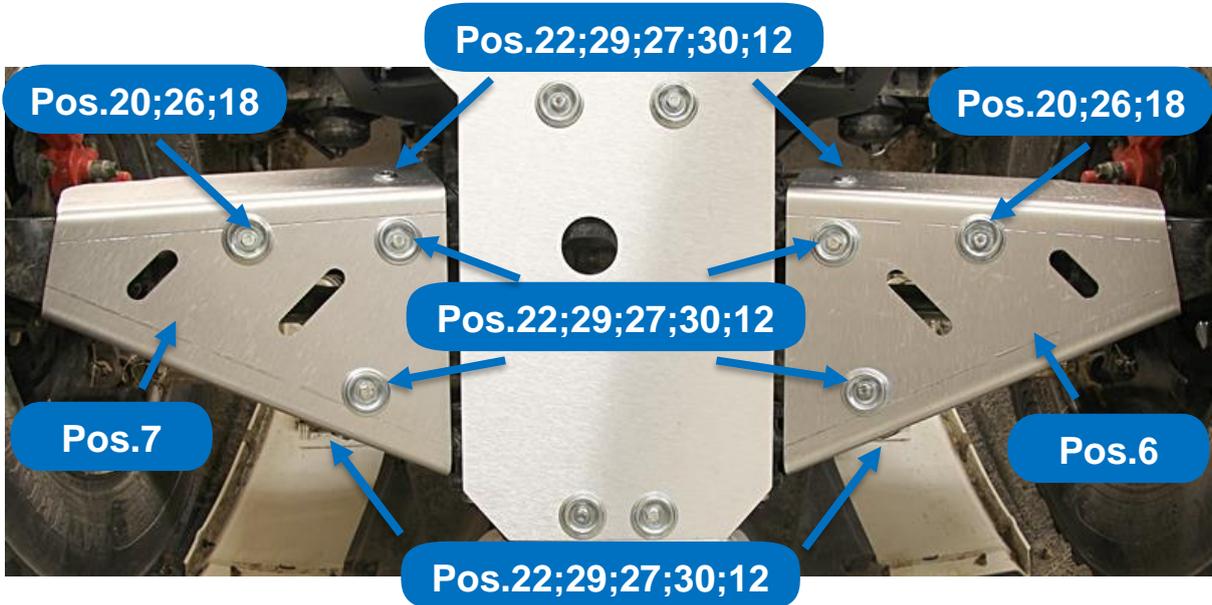

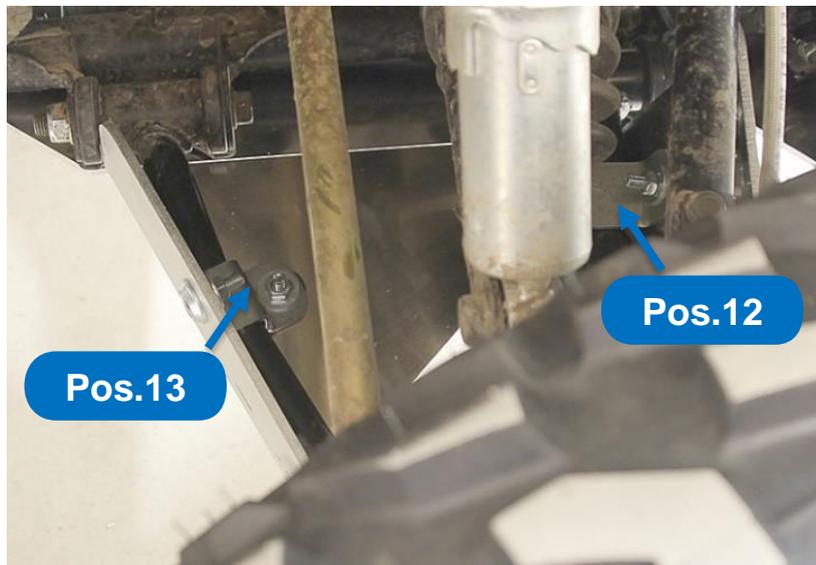

**Step 8**

Install rear arm protectors 02.22009, 02.22011 and distance plate 02.22010.

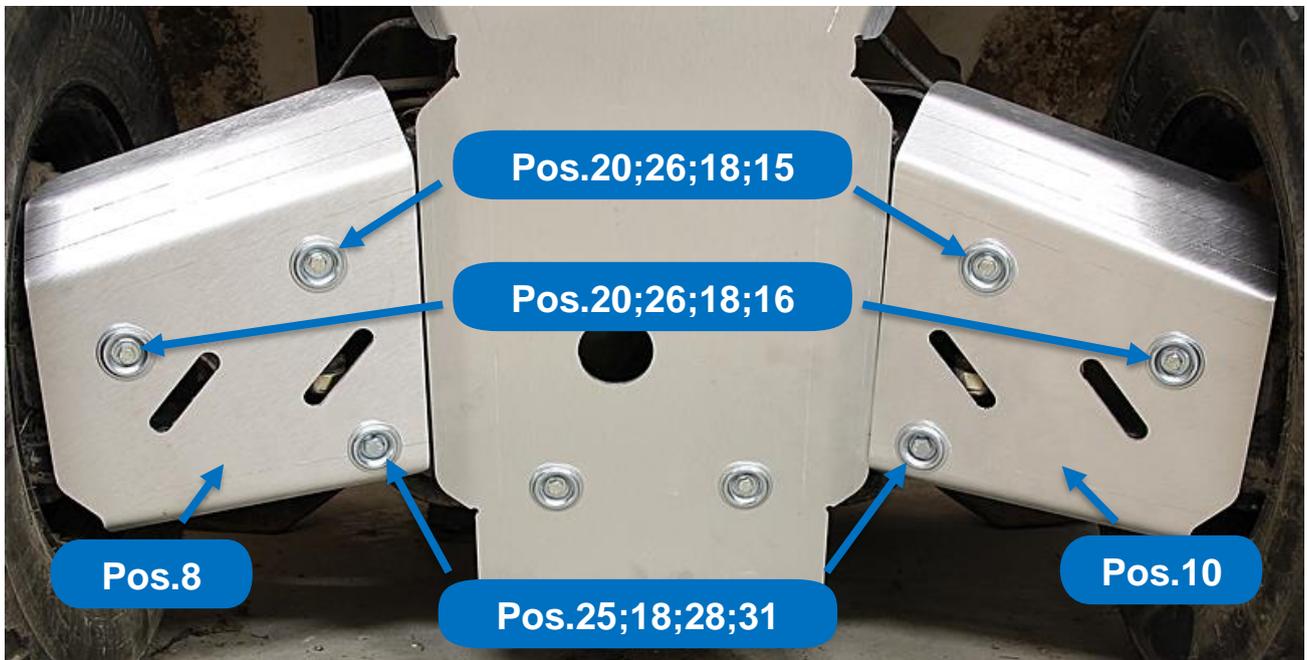







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

