

IRON BALTIC


PLASTIC SKID PLATE

KYMCO

MXU 700

Code 02.22100

Version 29092023

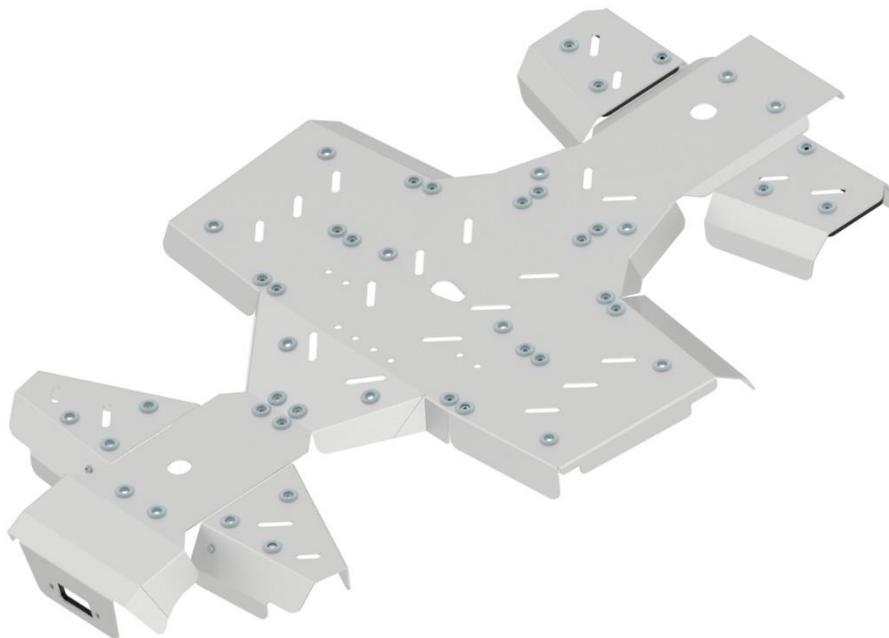

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/FFaehmkc

SPECIFICATION


Pos.	Nimetus	Kood	Kogus
1	Front protection	02.22101	1
2	Middle protection	02.22102	1
3	Right side protection	02.22103	1
4	Left side protection	02.22104	1
5	Rear protection	02.22105	1
6	Front left arm protection	02.22106	1
7	Front right arm protection	02.22107	1
8	Rear right arm protection	02.22108	1
9	Rear left arm protection	02.22109	1
10	Distance plate	02.22010	2
11	Distance plate	05.3902	1
12	Installation bracket	02.1018	2
13	Installation bracket	02.1419	2
14	Installation plate	02.5006	8
15	Installation bracket	02.5710	2
16	Installation bracket	02.8210	2
17	Installation plate 10	02.8312	2
18	Dished washer	14.503	46
19	Bolt M6x16 DIN 933	OT.02.02.050	20
20	Bolt M6x25 DIN 933	OT.02.02.070	18
21	Bolt M6x30 DIN 933	OT.02.02.080	2
22	Bolt M6x30 DIN 7991	OT.02.04.050	4
23	Bolt M6x50 DIN 933	OT.02.02.120	4
24	Bolt M8x40 DIN 933	OT.02.02.220	2
25	Bolt M8x50 DIN 933	OT.02.02.240	2
26	Washer Ø6/15 SFS 3738	OT.04.03.020	44
27	Washer Ø6/18 DIN 9021	OT.04.02.020	12
28	Washer Ø8/20 SFS 3738	OT.04.03.030	4
29	Conical washer Ø6	14.502	4
30	Nyloc nut M6 DIN 985	OT.03.02.030	12
31	Nyloc nut M8 DIN 985	OT.03.02.040	4

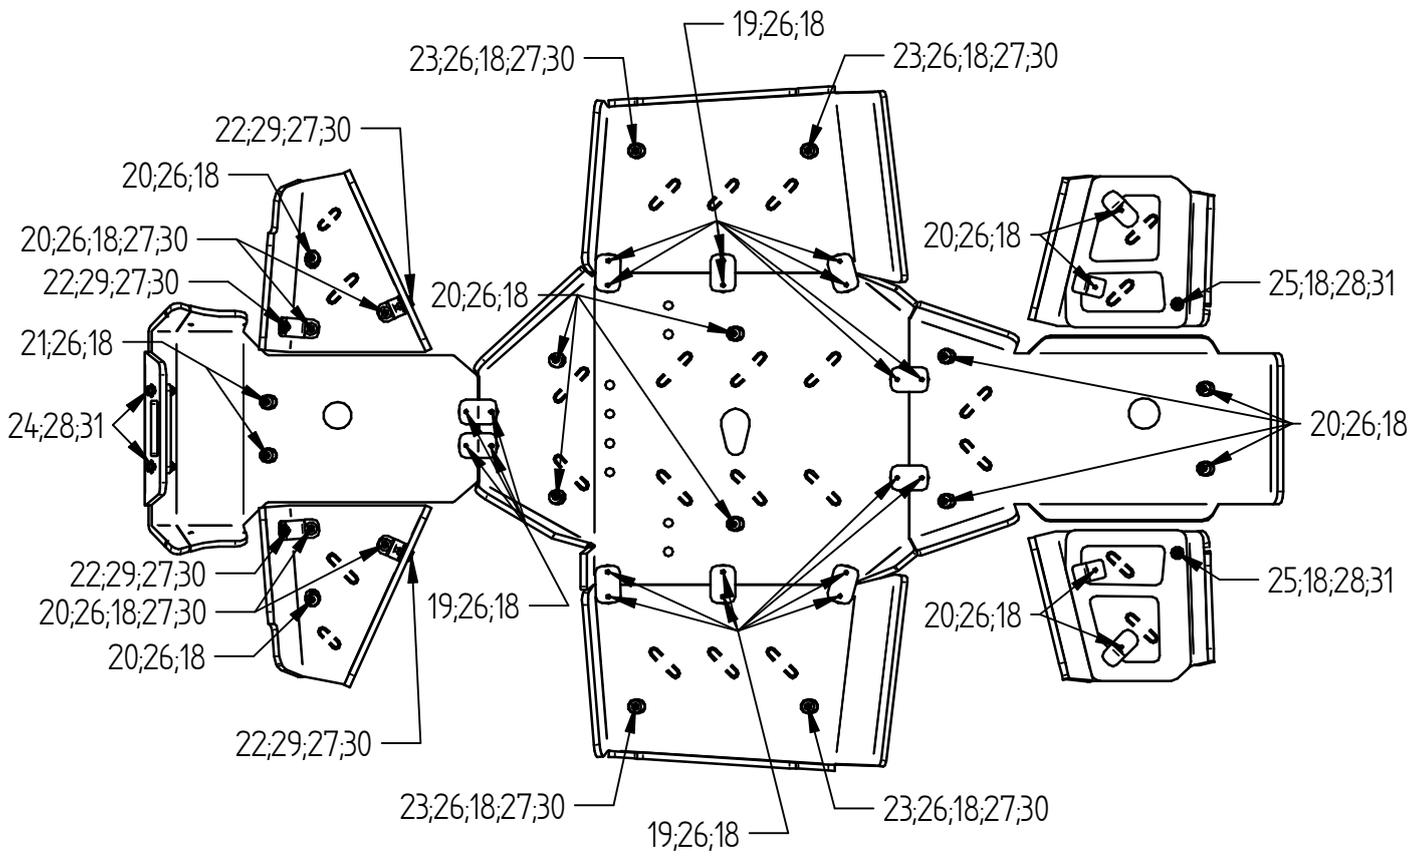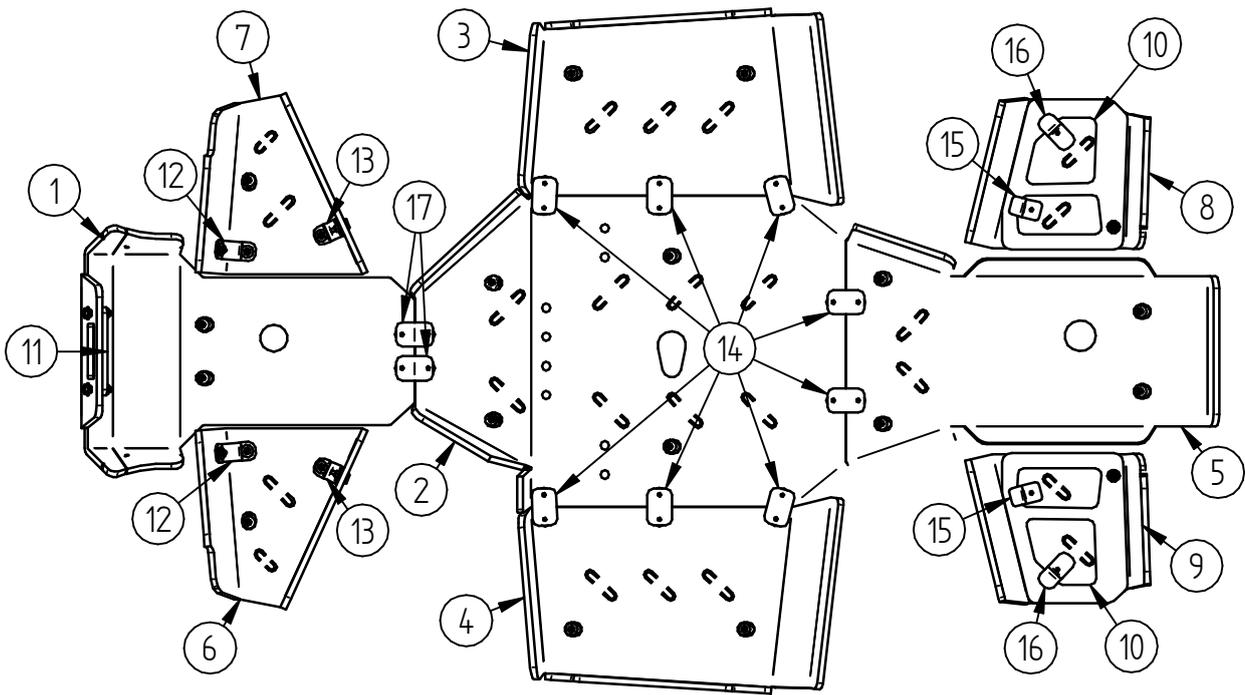

FITTING INSTRUCTIONS


Step 1

Remove all standard plastic covers, fairlead and original bolts (shown in the picture).

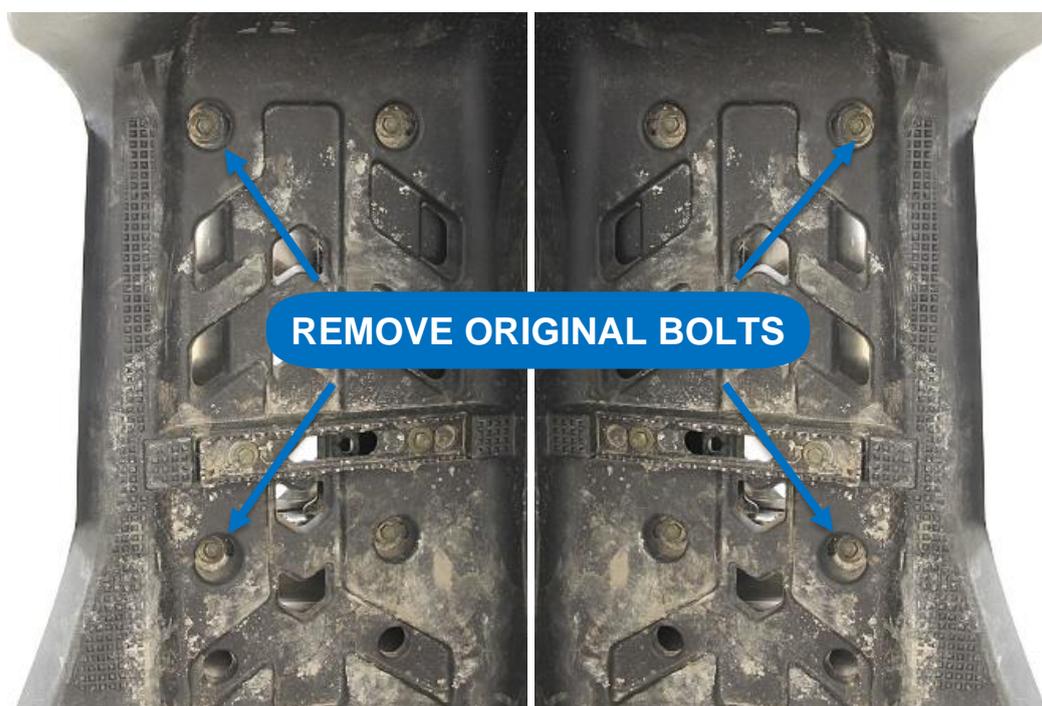


Step 2

Install middle part 02.22102 and install plates 02.5006 / 02.8312 to middle part.

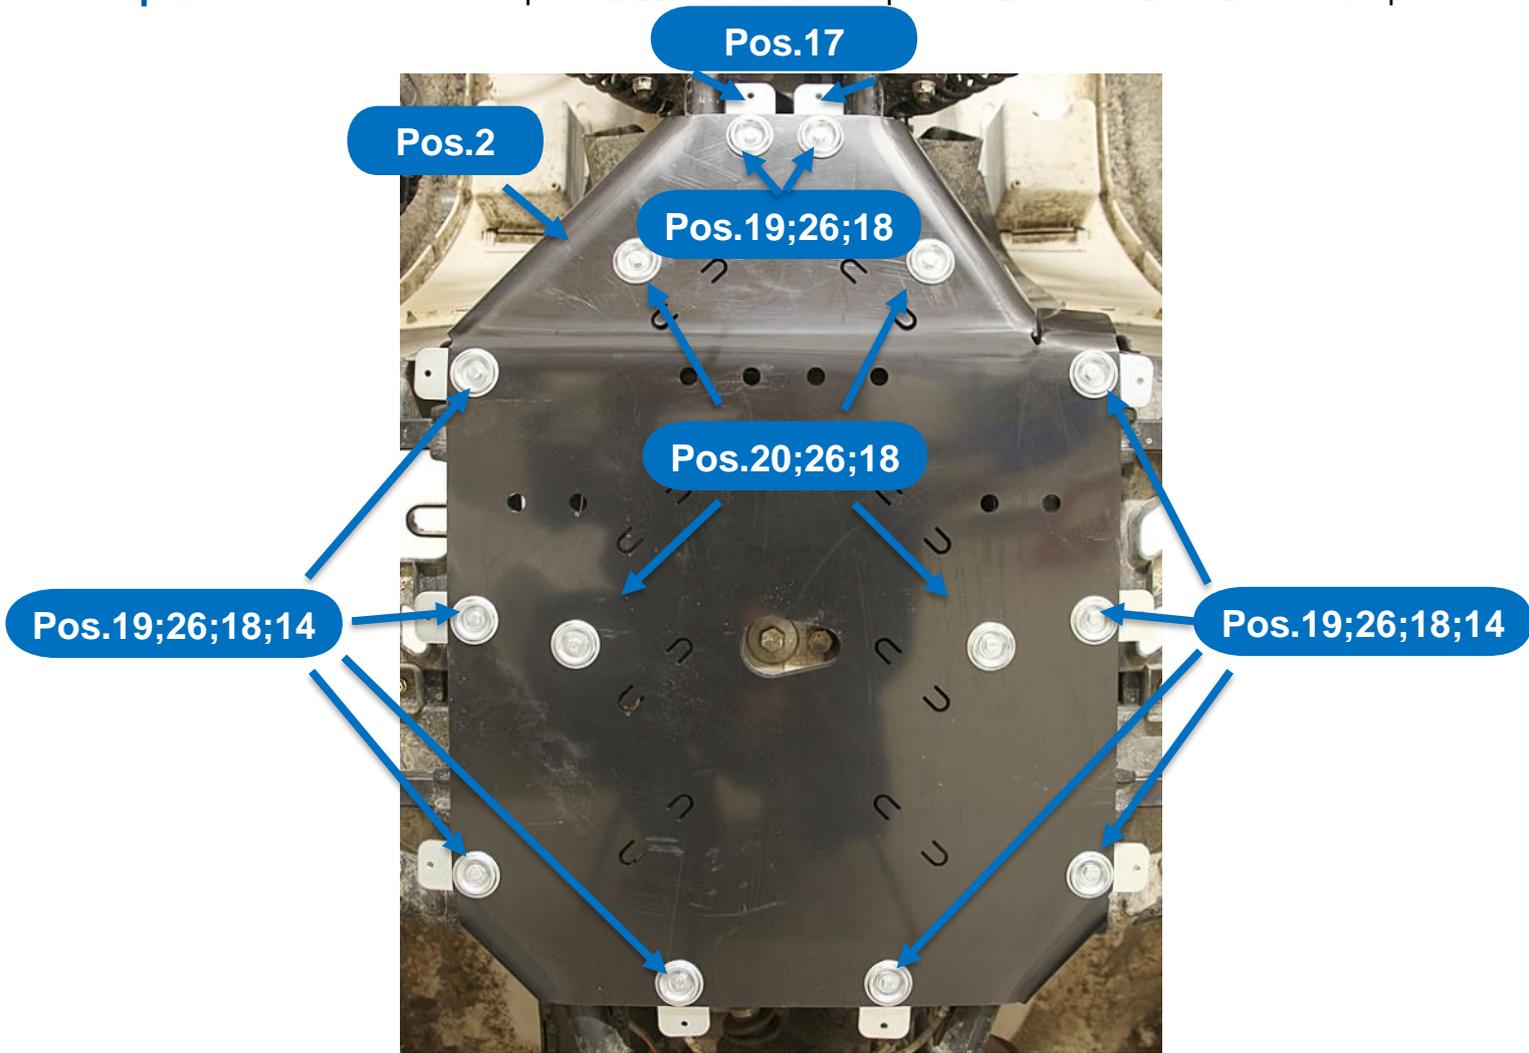


Step 3

Install distance plate 05.3902 between front protection and ATV frame, front protection 02.22101 and fairlead but do not tighten bolts!

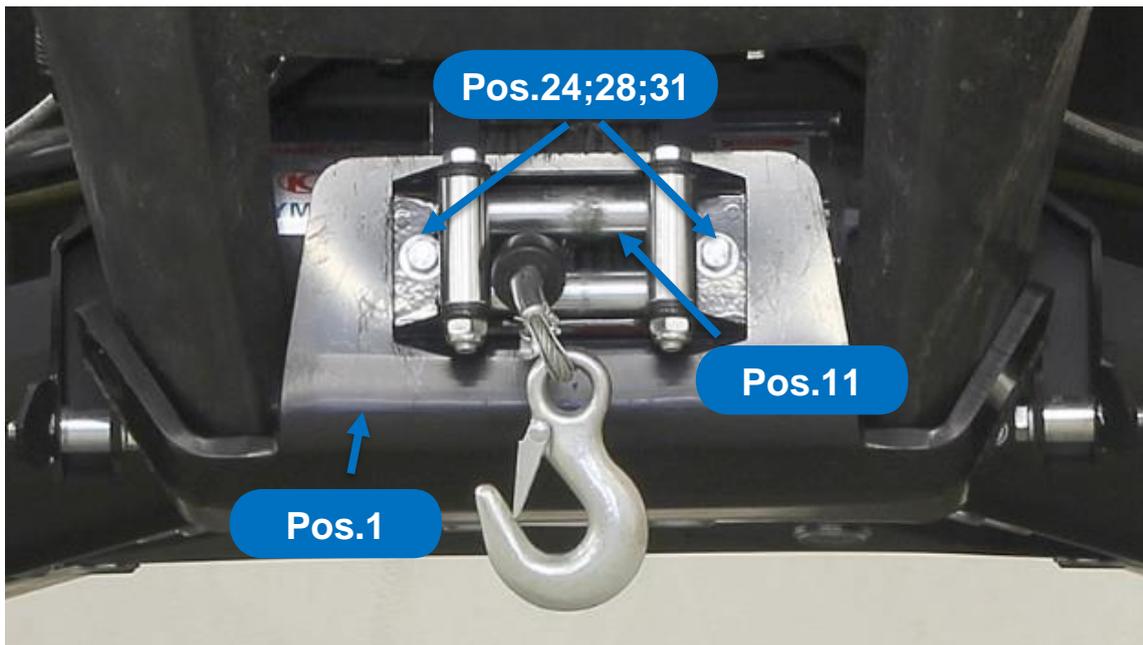


Step 4

Fix the front protection. Tighten all installed bolts.

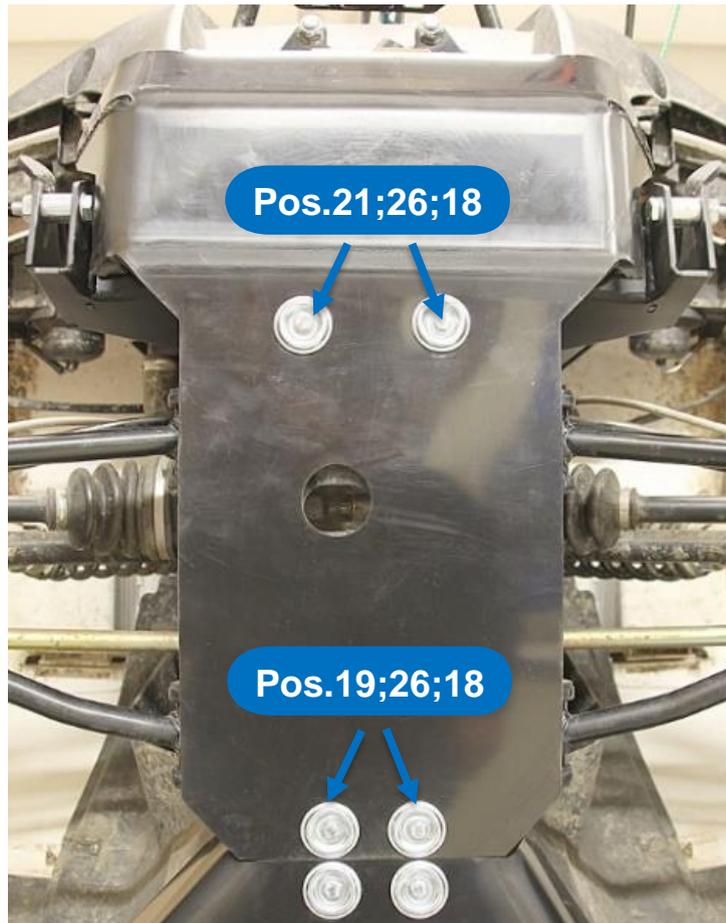



Step 5

Install rear part 02.22105.

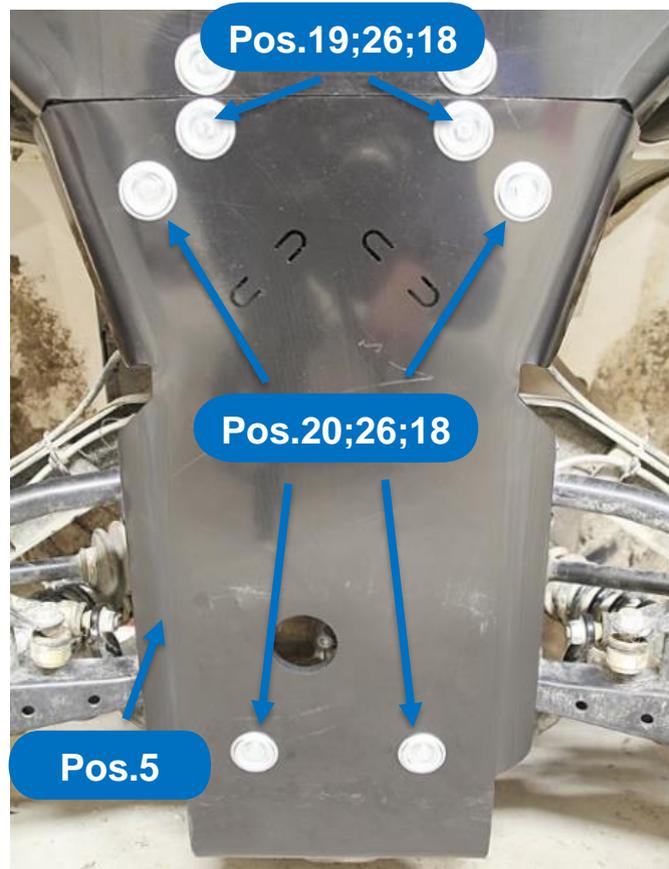


Step 6


Install side protections 02.22103 and 02.22104.

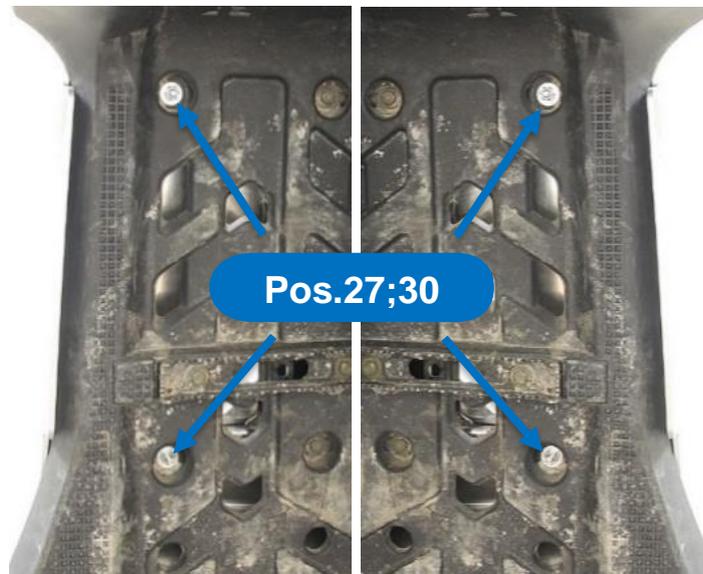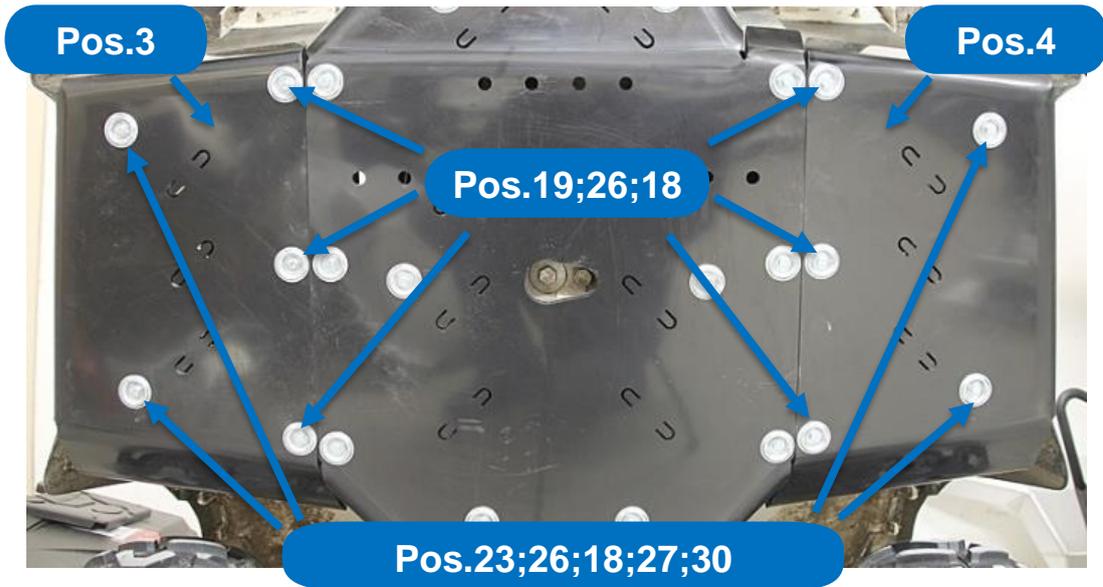

Step 7


Install front arm protections 02.22106 and 02.22107.

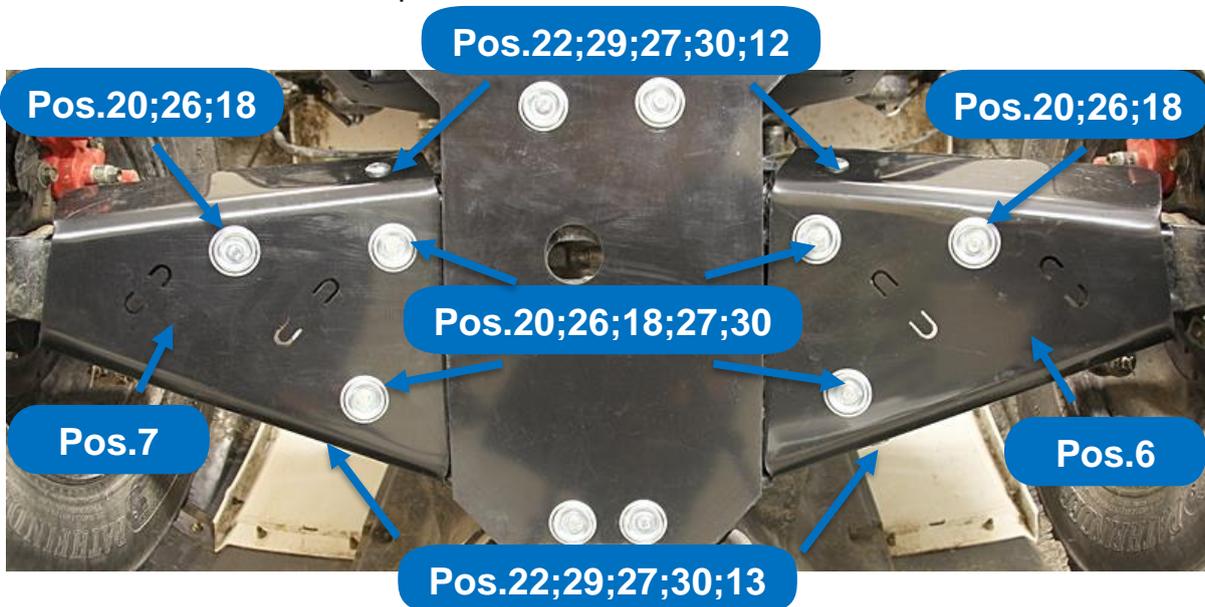

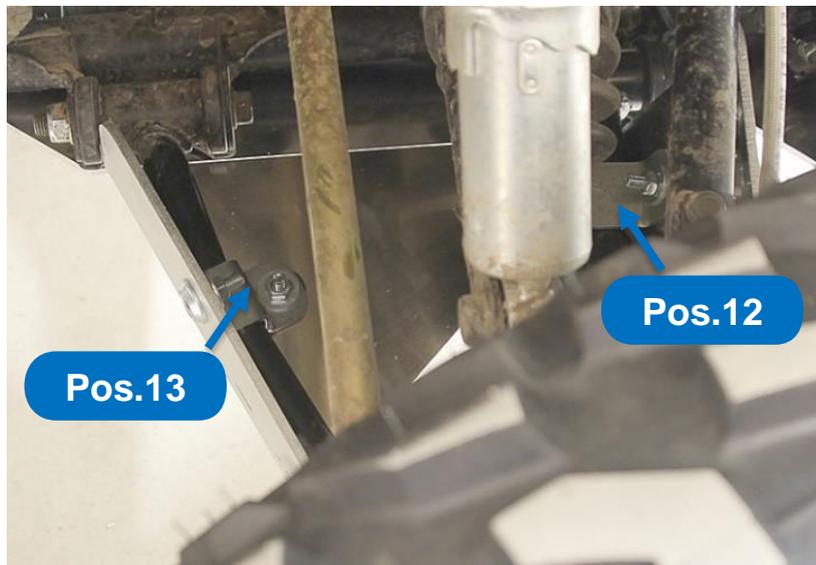

Step 8

Install rear arm protectors 02.22108, 02.22109 and distance plate 02.22010.

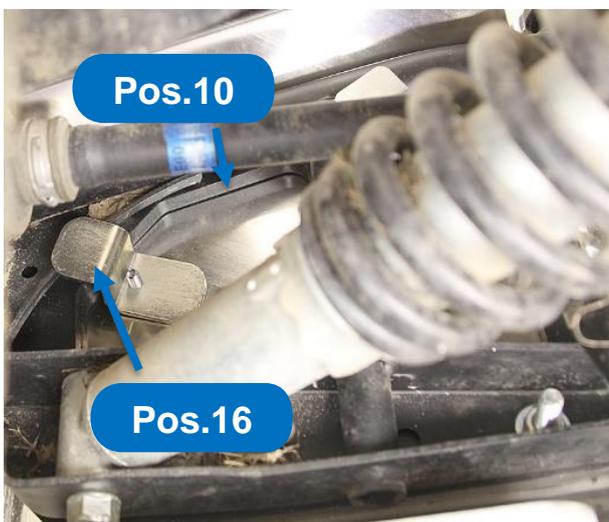

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

