

IRON BALTIC


ALUMINIUM SKID PLATE

TGB

600 Blade

Code 02.22200

Version 29092023

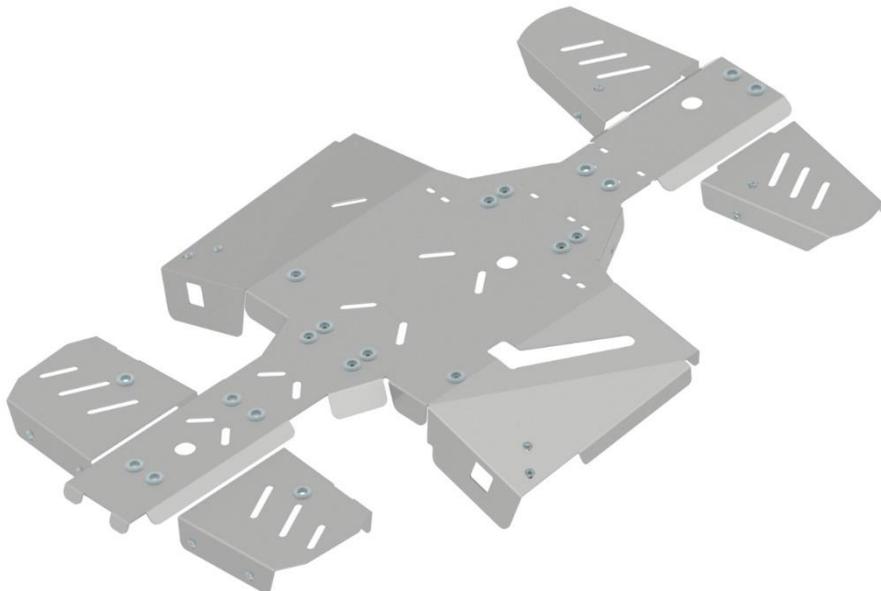

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ECVC0PWl


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.22201	1
2	Rear part	02.22202K	1
3	Rear left arm protection	02.22203	1
4	Rear right arm protection	02.22204	1
5	Front protection	02.14801K	1
6	Front left arm protection	02.14804	1
7	Front right arm protection	02.14805	1
8	Bracket	02.1419	2
9	Installation bracket	02.4606	2
10	Installation plate	02.5006	4
11	Installation bracket	03.1502	2
12	Dished washer	14.503	20
13	Bolt M6x16 DIN 933	OT.02.02.050	10
14	Bolt M6x25 DIN 933	OT.02.02.070	8
15	Bolt M6x60 DIN 933	OT.02.02.140	2
16	Bolt M8x20 DIN 933	OT.02.02.180	2
17	Bolt M6x20 DIN 7991	OT.02.04.030	10
18	Bolt M6x40 DIN 7991	OT.02.04.070	8
19	Washer Ø6/15 SFS 3738	OT.04.03.020	26
20	Washer Ø6/18 DIN 9021	OT.04.02.020	2
21	Conical washer Ø6	14.502	18
22	Nyloc nut M6 DIN 985	OT.03.02.030	6

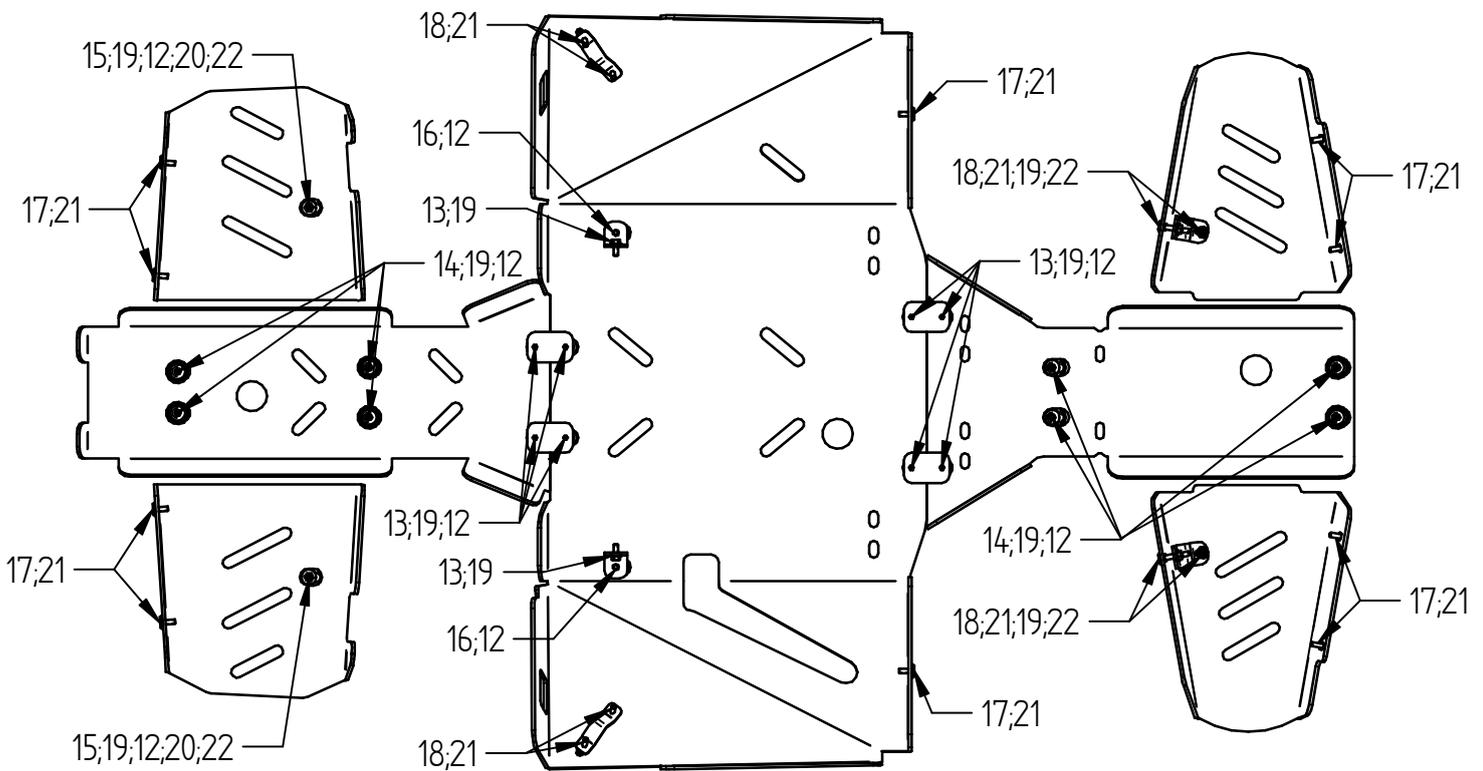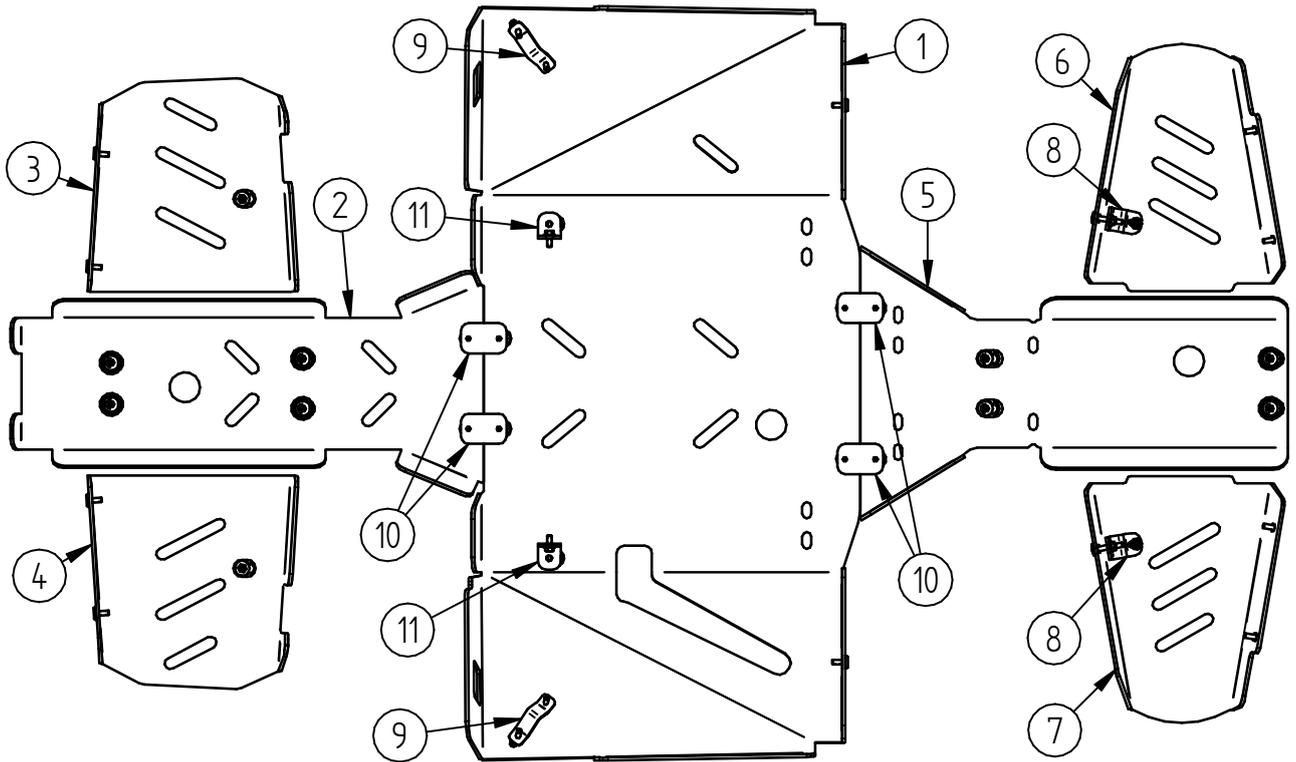


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and original bolts (shown on the picture).

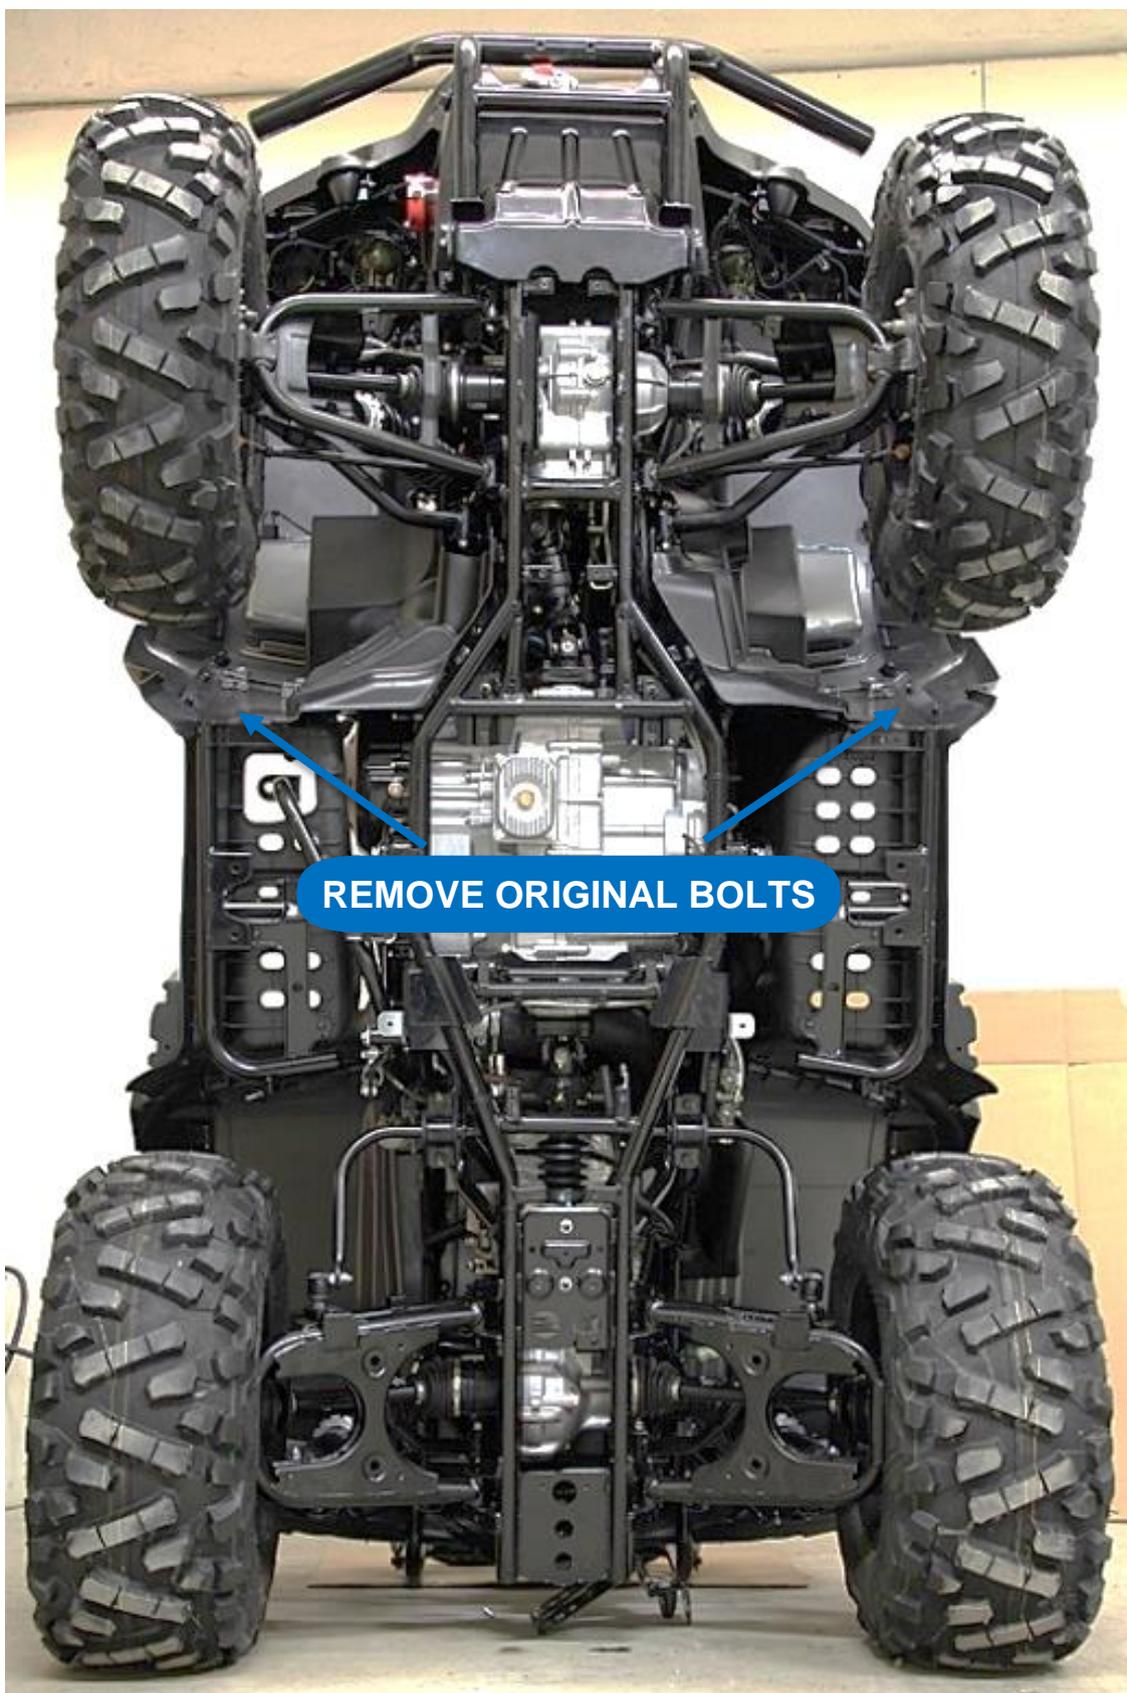



Step 2

Install front protection 02.14801K and plates 02.5006.

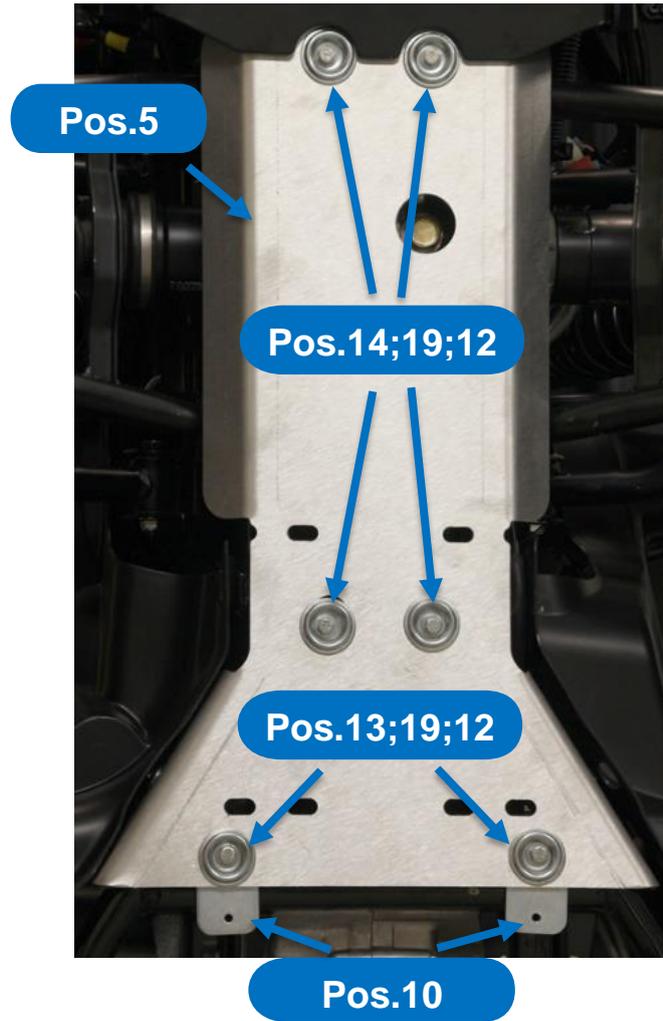


Step 3

Install bracket 03.1502.

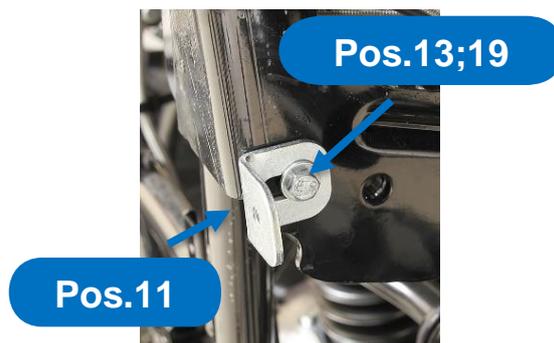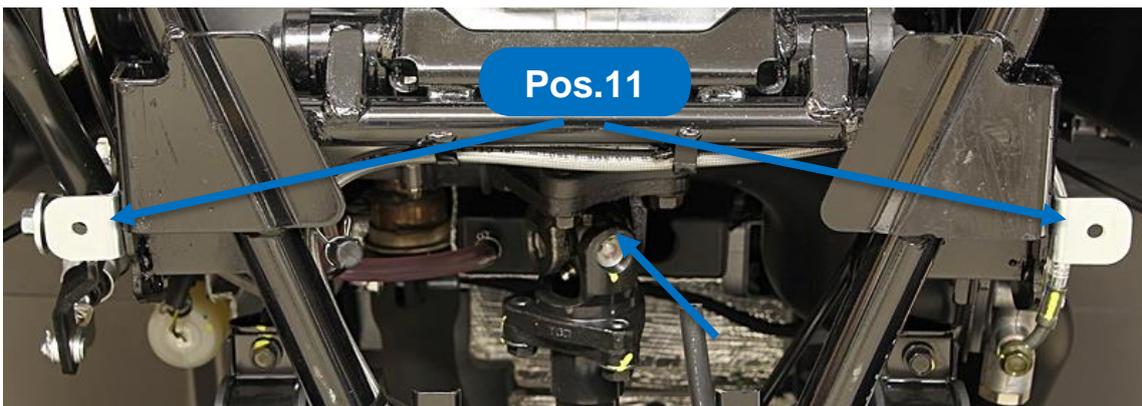


Step 4

Install front protection 02.22201 and plates 02.5006

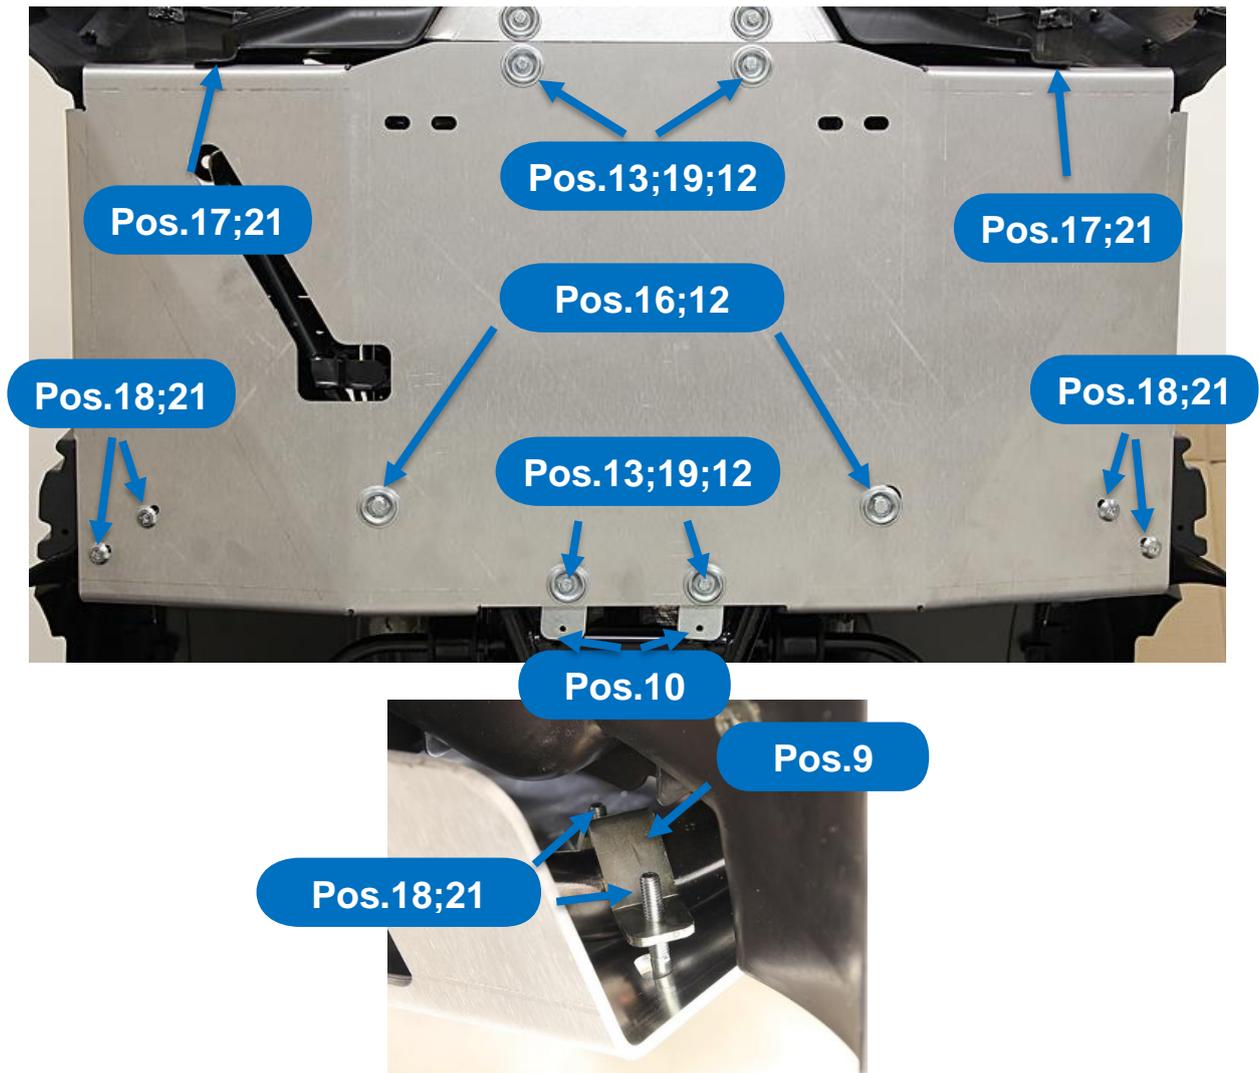


Step 5

Install rear part 02.22202K.

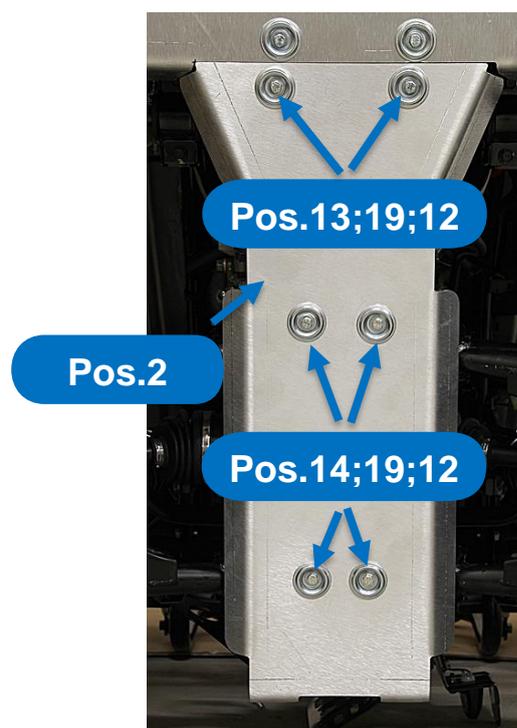

Step 6

Install front arm protections 02.14804 and 02.14805.

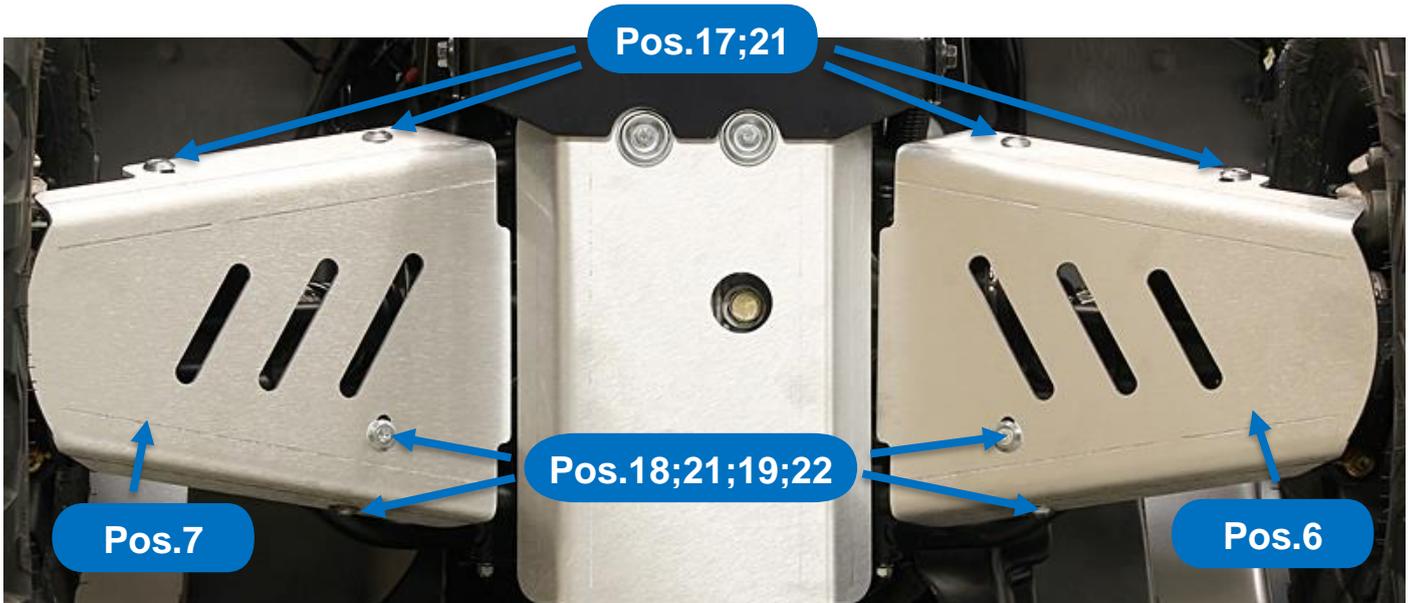

Step 7

Install rear arm protectors 02.22203 and 02.22204.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

