



code.ironbaltic.com/u/ViKeUdeG


ALUMINIUM SKID PLATE

CAN AM

Outlander 6x6 MAX

Code 02.22900

Version 30092023


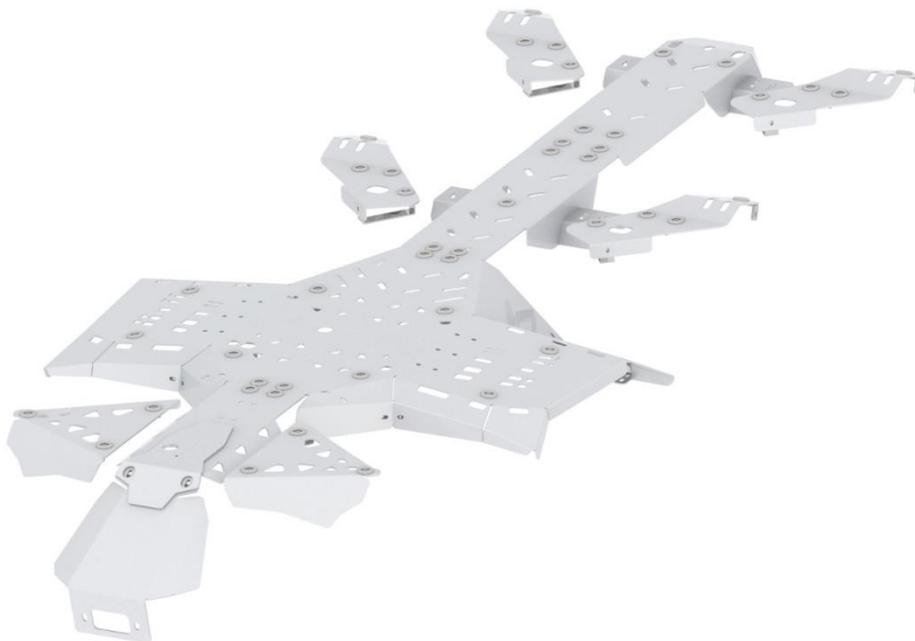


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear part 1	02.22901K	1
2	Rear part 1	02.20302K	1
3	Rear right trailing arm protection	02.18801	2
4	Rear left trailing arm protection	02.18802	2
5	Left side part	02.10003	1
6	Right side part	02.10002	1
7	Middle part	02.10001	1
8	Front part	02.8402K	1
9	Front left arm protection	02.8205	1
10	Front right arm protection	02.8204	1
11	Rear part bracket	02.20303	1
12	Bracket (100)	02.18806	4
13	Bracket (80)	02.18805	4
14	Bracket	02.18804	4
15	Rear arm protection clamp	02.18803	4
16	Connecting plate (30)	02.10007	2
17	Connecting plate (40)	02.10006	2
18	Bush for front part	02.10005	2
19	Plate for front part	02.10004	1
20	Clamp for front arm protection	02.8210	4
21	Plate	02.5006	12
22	Plate	02.2305	3
23	Bracket	03.3502	4
24	Bracket	03.1502	2
25	Dished washer	14.503	47
26	Bolt M6x12 DIN933	OT.02.02.030	16
27	Bolt M6x16 DIN933	OT.02.02.050	4
28	Bolt M6x20 DIN933	OT.02.02.060	6
29	Bolt M6x35 DIN933	OT.02.02.090	2
30	Bolt M6x50 DIN933	OT.02.02.120	4
31	Bolt M6x55 DIN933	OT.02.02.130	4
32	Bolt M8x16 DIN933	OT.02.02.170	20
33	Bolt M8x35 DIN933	OT.02.02.210	1
34	Bolt M10x30 DIN933	OT.02.02.320	4
35	Bolt M6x16 DIN7991	OT.02.04.020	20
36	Bolt M6x25 DIN7991	OT.02.04.040	3
37	Bolt M8x50 DIN7991	OT.02.04.200	2
38	Carriage bolt M8x25 DIN603	OT.02.05.060	8
39	Washer Ø6/15 SFS3738	OT.04.03.020	49
40	Washer Ø8/20 SFS3738	OT.04.03.030	12
41	Washer Ø10/20 DIN125	OT.04.01.040	8
42	Conical washer Ø6	14.502	23
43	Conical washer Ø8	14.501	2
44	Nyloc nut M6 DIN985	OT.03.02.030	13
45	Nyloc nut M8 DIN985	OT.03.02.040	10
46	Nyloc nut M10 DIN985	OT.03.02.050	2

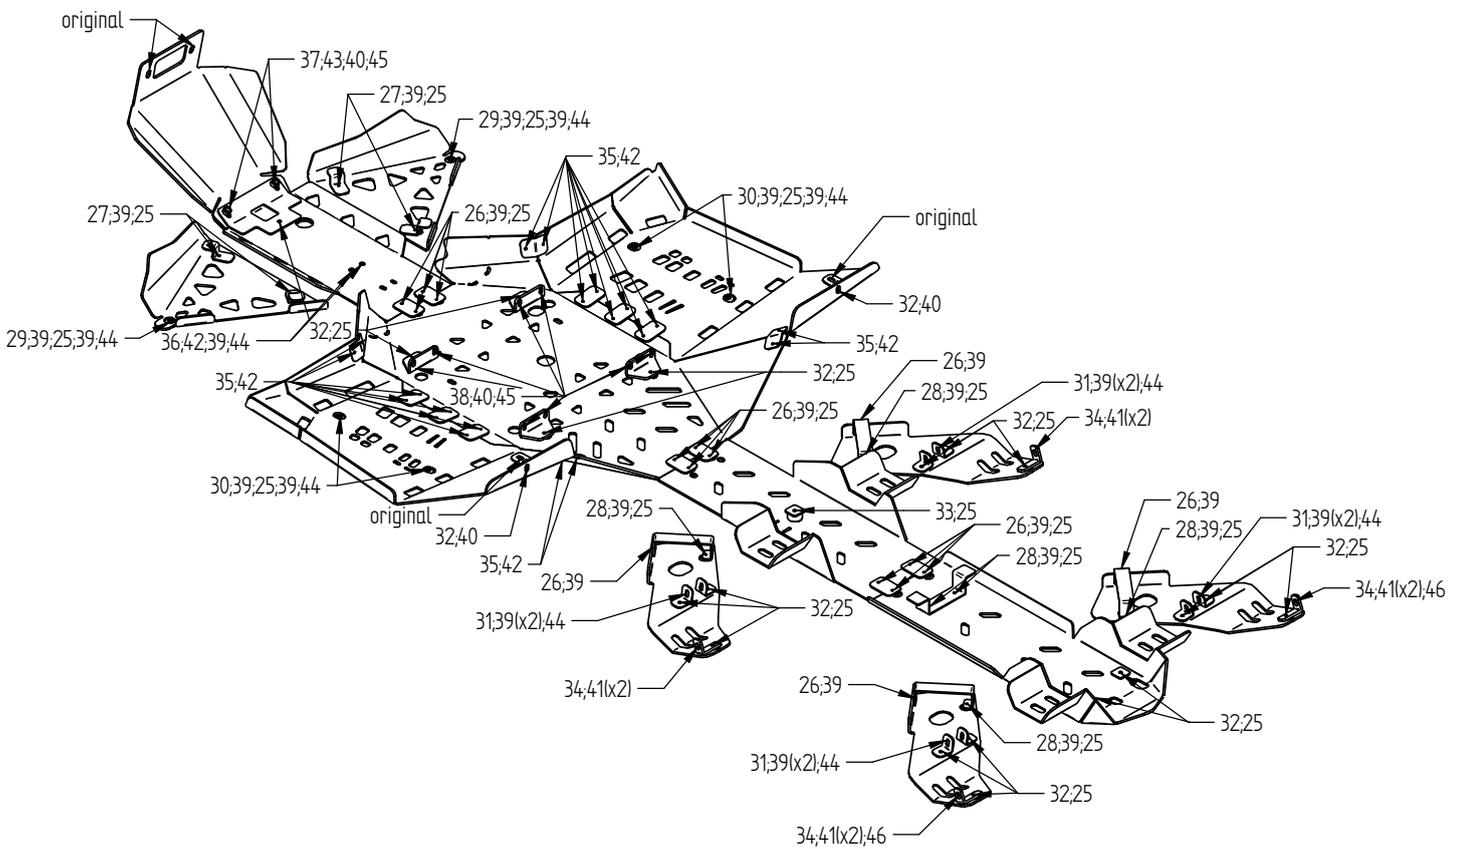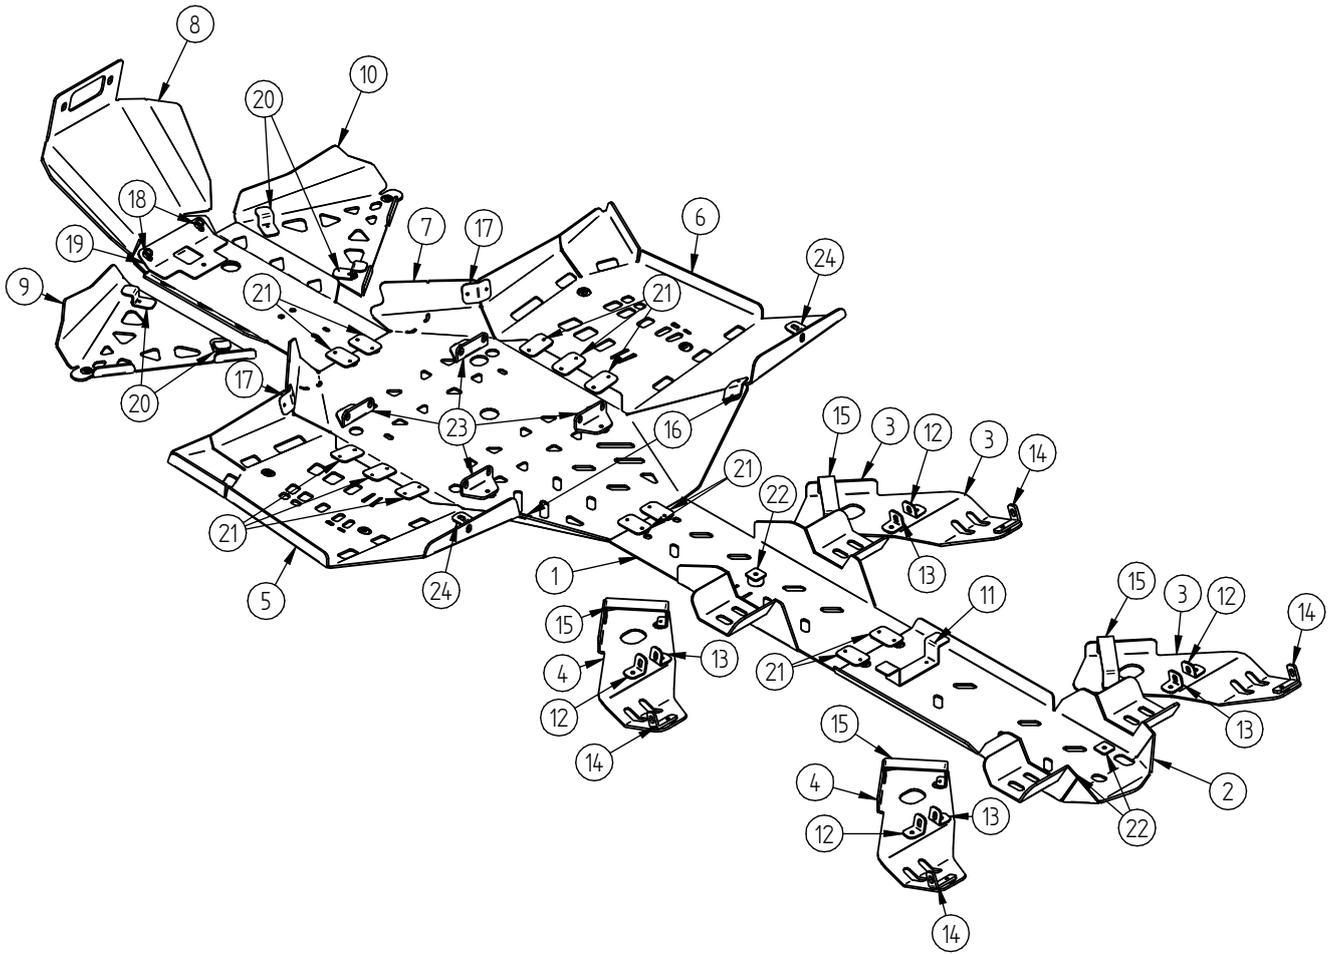




FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and bolts indicated with arrows.




Step 2 Install brackets 03.3502 and 03.1502. Place brackets 03.3502 to same plane as frame.

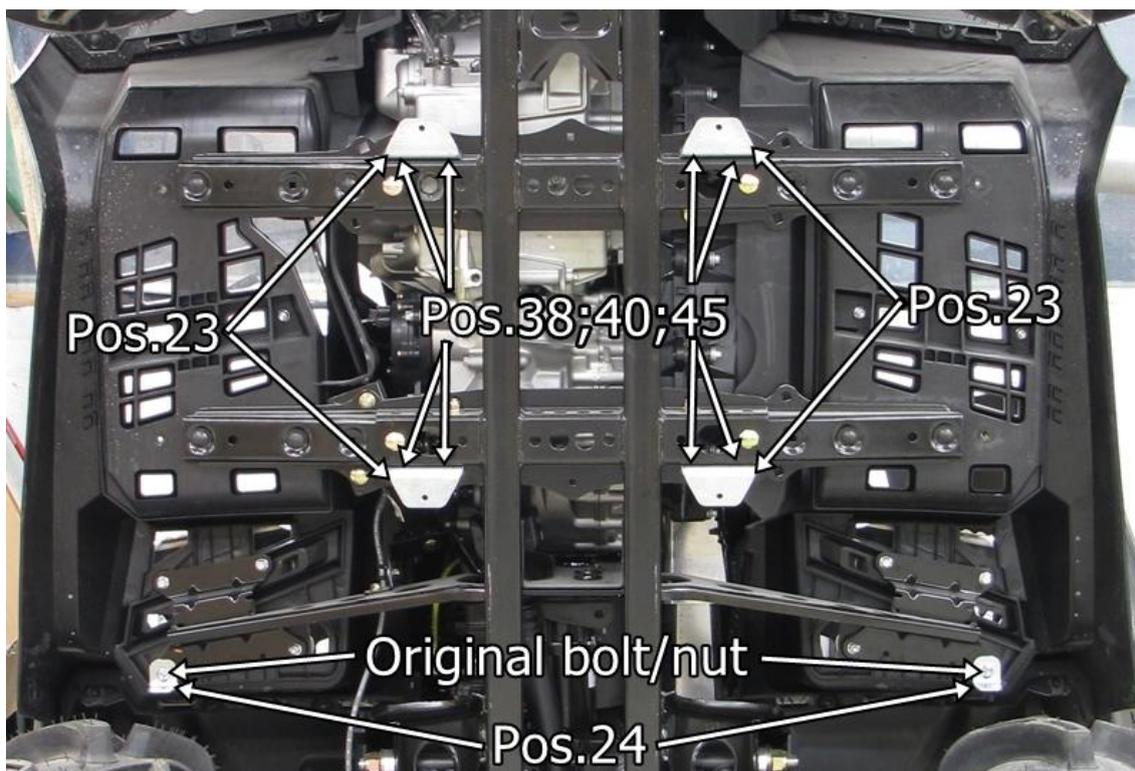

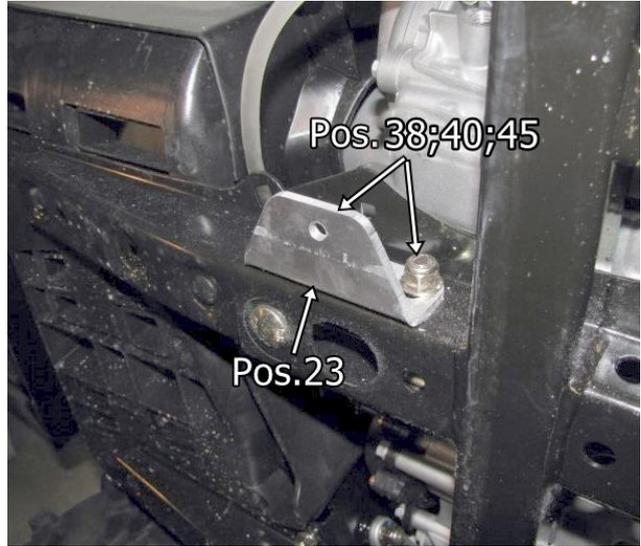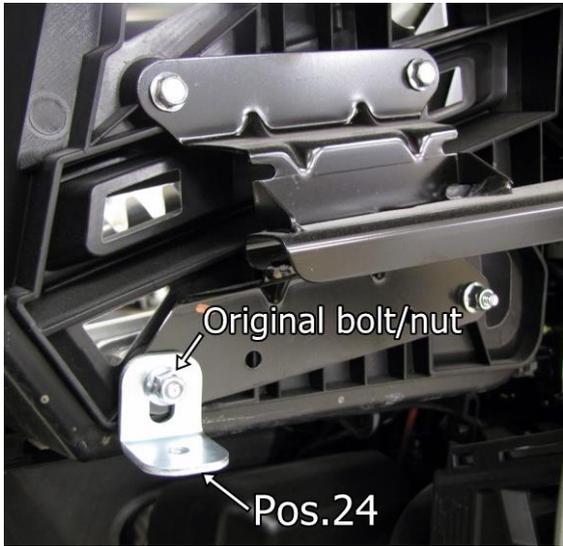


Step 3

Install middle part 02.10001.

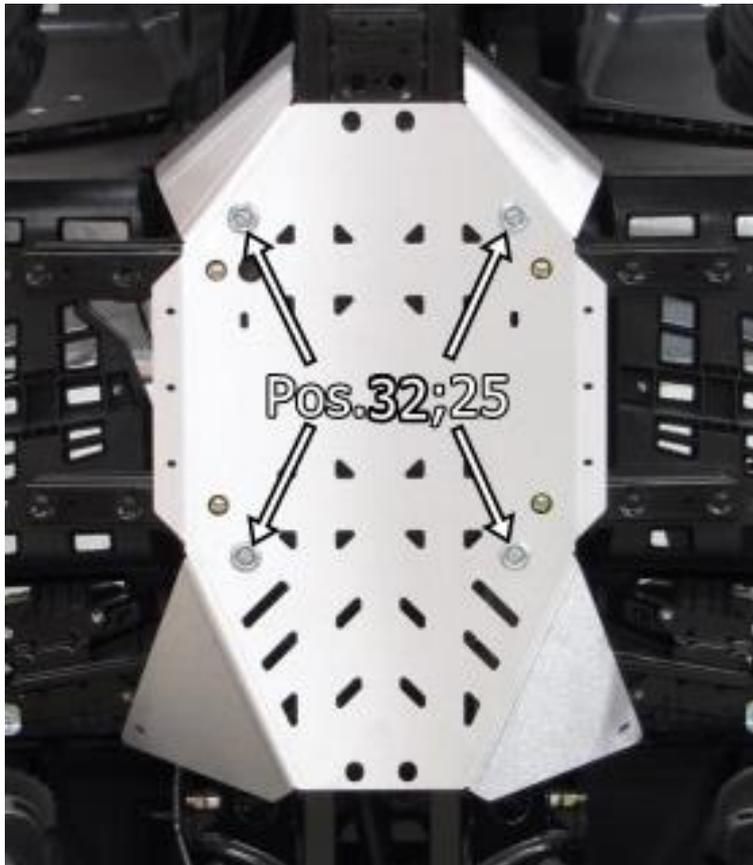


Step 4

Install plates 02.5006, 02.10007 and 02.10006.

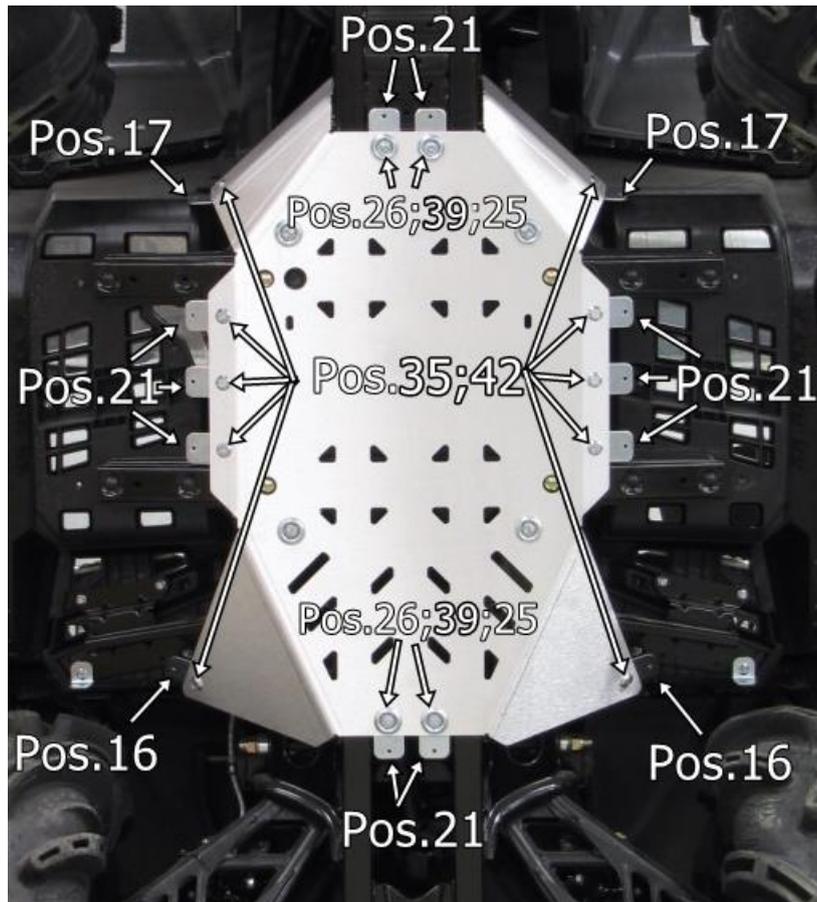


Step 5

Install side protections 02.10002 and 02.10003.

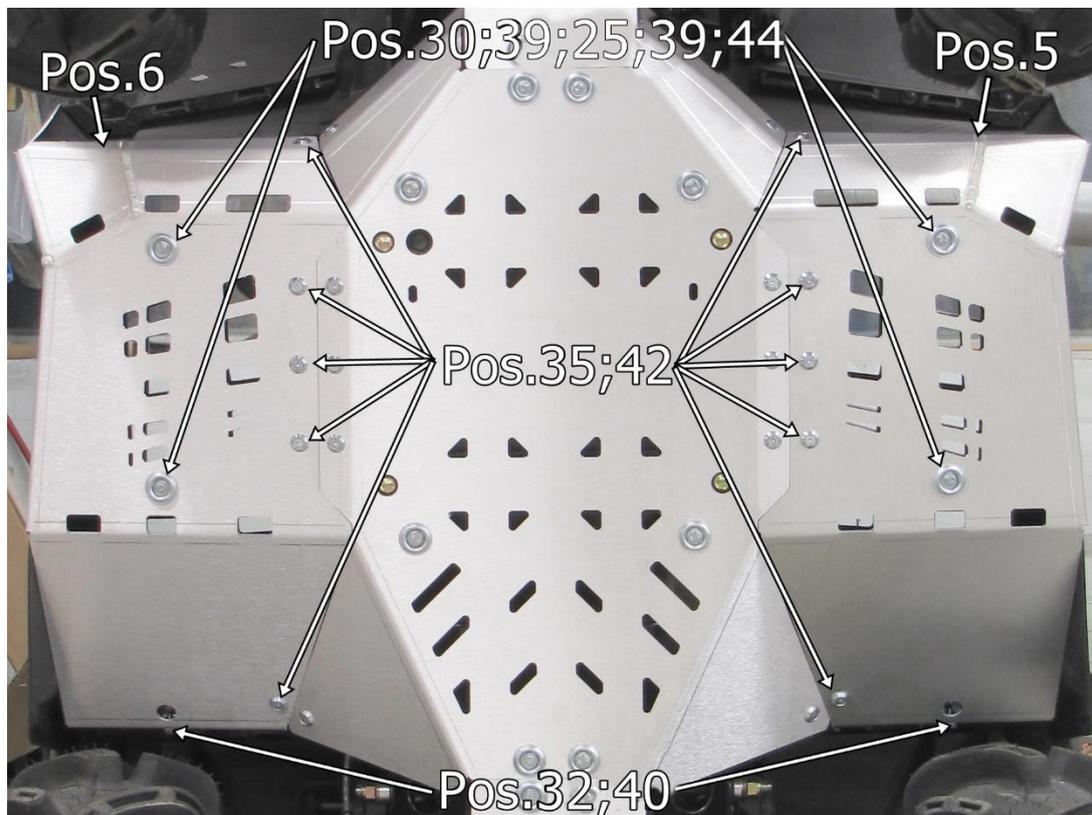


Step 6

Install front part 02.8402K.

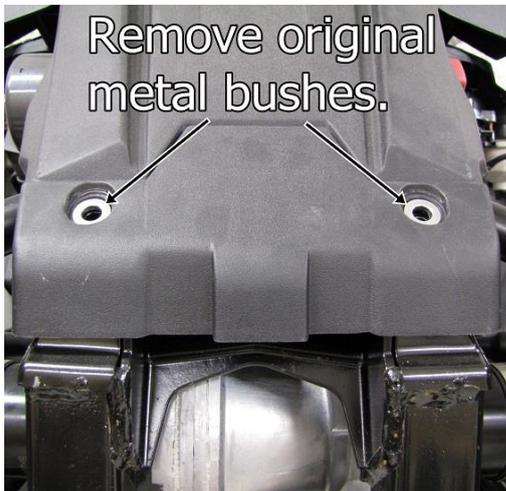



Step 7

Install rear part 02.22901K and plates 02.5006. For easier installation, we recommend removing one ATV wheel.

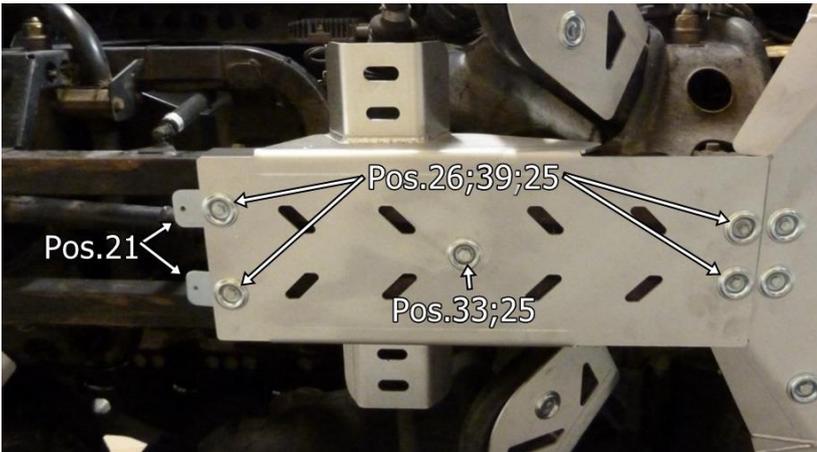


Step 8

Install second rear protection 02.20302K.

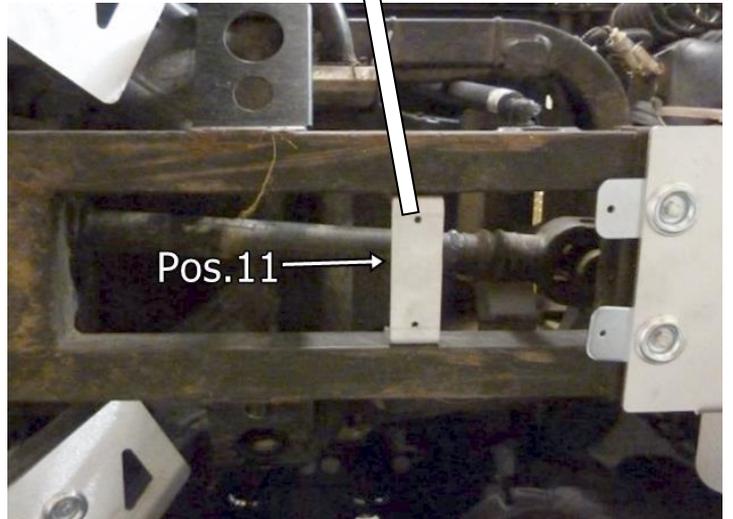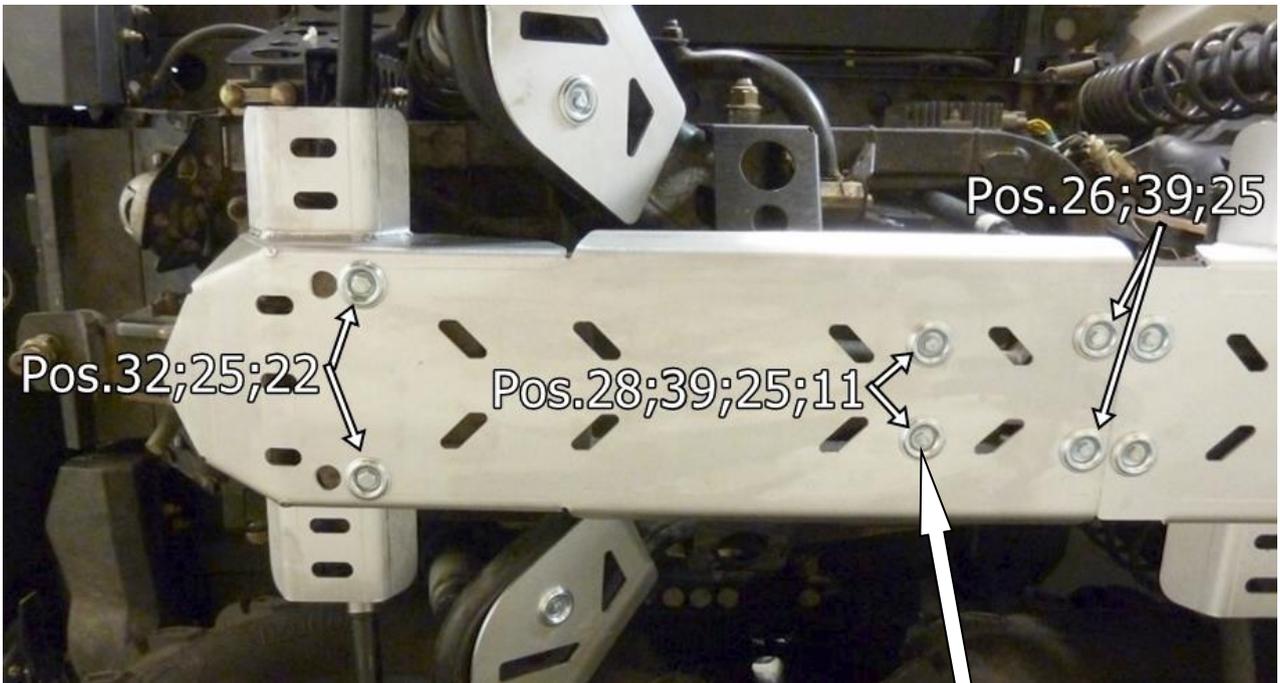


Step 9

Install front arms protections 02.8204 and 02.8205.

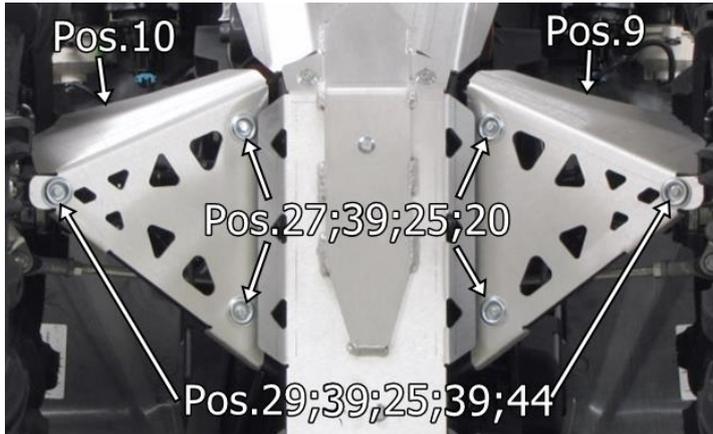


Step 10

Install brackets 02.18804, 02.18805, 02.18806.

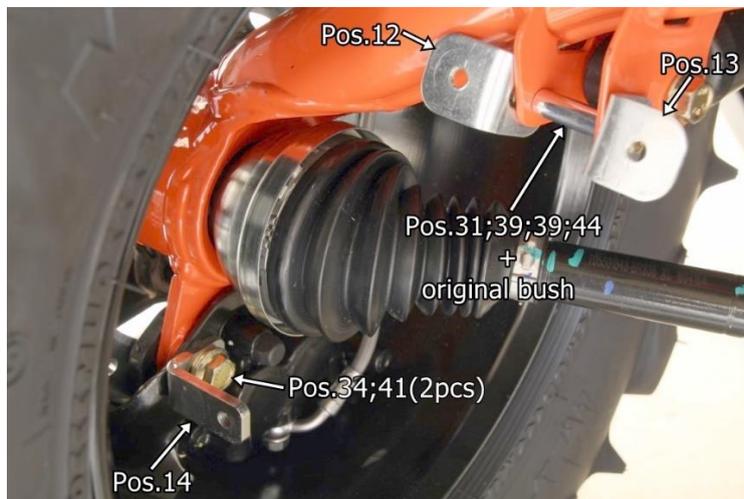

WHEEL WITH BRAKE

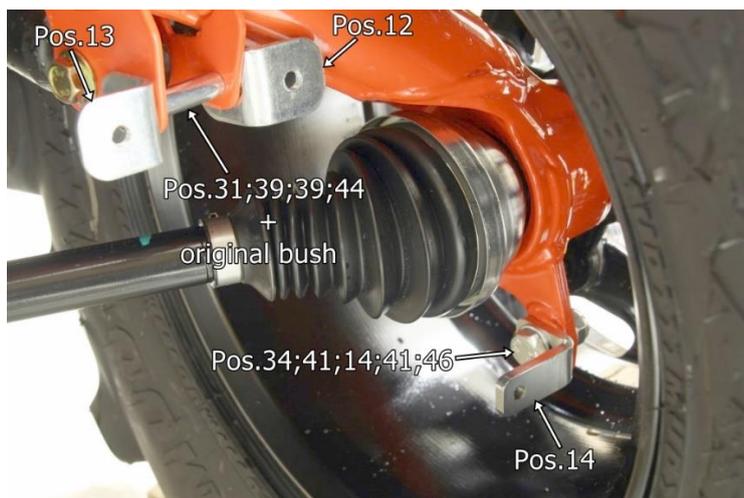

WHEEL WITHOUT BRAKE




NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.33 and brake disc!

Step 11

Install rear arm protections 02.18801 and 02.18802.

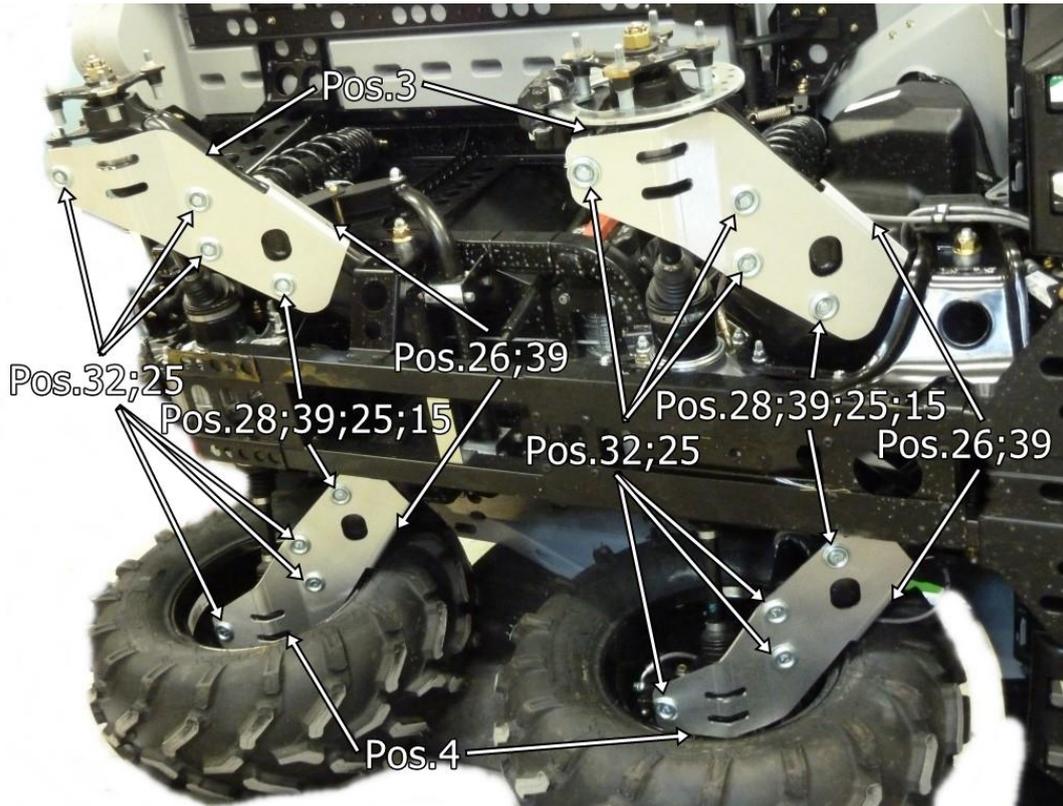

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

