

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

Outlander 6x6 MAX

Code 02.23000

Version 30092023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/GupOnEaP

SPECIFICATION


Pos.	Description	Code	Amount
1	Rear part 1	02.20402	1
2	Rear part 2	02.20401K	1
3	Rear right trailing arm protection	02.18902	2
4	Rear left trailing arm protection	02.18901	2
5	Left side part	02.10103	1
6	Right side part	02.10102	1
7	Middle part	02.10101	1
8	Front part	02.8502K	1
9	Front left arm protection	02.8305	1
10	Front right arm protection	02.8304	1
11	Rear part bracket	02.20303	1
12	Bracket (100)	02.18806	4
13	Bracket (80)	02.18805	4
14	Bracket	02.18804	4
15	Rear arm protection clamp	02.18803	4
16	Connecting plate (45)	02.10104	2
17	Connecting plate (40)	02.10006	2
18	Bush for front part	02.10005	2
19	Plate for front part	02.10004	1
20	Front part bracket	02.8506	1
21	Clamp for front arm protection	02.8210	4
22	Plate	02.5006	14
23	Plate	02.2305	3
24	Bracket	03.3502	4
25	Bracket	03.1502	2
26	Dished washer	14.503	54
27	Bolt M6x16 DIN933	OT.02.02.050	16
28	Bolt M6x20 DIN933	OT.02.02.060	10
29	Bolt M6x25 DIN933	OT.02.02.070	4
30	Bolt M6x40 DIN933	OT.02.02.100	2
31	Bolt M6x55 DIN933	OT.02.02.130	4
32	Bolt M6x60 DIN933	OT.02.02.140	4
33	Bolt M8x20 DIN933	OT.02.02.180	23
34	Bolt M8x40 DIN933	OT.02.02.220	1
35	Bolt M10x30 DIN933	OT.02.02.320	4
36	Bolt M6x20 DIN7991	OT.02.04.030	20
37	Bolt M6x30 DIN7991	OT.02.04.050	3
38	Bolt M8x60 DIN7991	OT.02.04.210	2
39	Carriage bolt M8x25 DIN603	OT.02.05.060	8
40	Washer Ø6/15 SFS3738	OT.04.03.020	53
41	Washer Ø8/20 SFS3738	OT.04.03.030	12
42	Washer Ø10/20 DIN125	OT.04.01.040	8
43	Conical washer Ø6	14.502	23
44	Conical washer Ø8	14.501	2
45	Nyloc nut M6 DIN985	OT.03.02.030	13
46	Nyloc nut M8 DIN985	OT.03.02.040	10
47	Nyloc nut M10 DIN985	OT.03.02.050	2



FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and bolts indicated with arrows.




Step 2 Install brackets 03.3502 and 03.1502. Place brackets 03.3502 to same plane as frame.

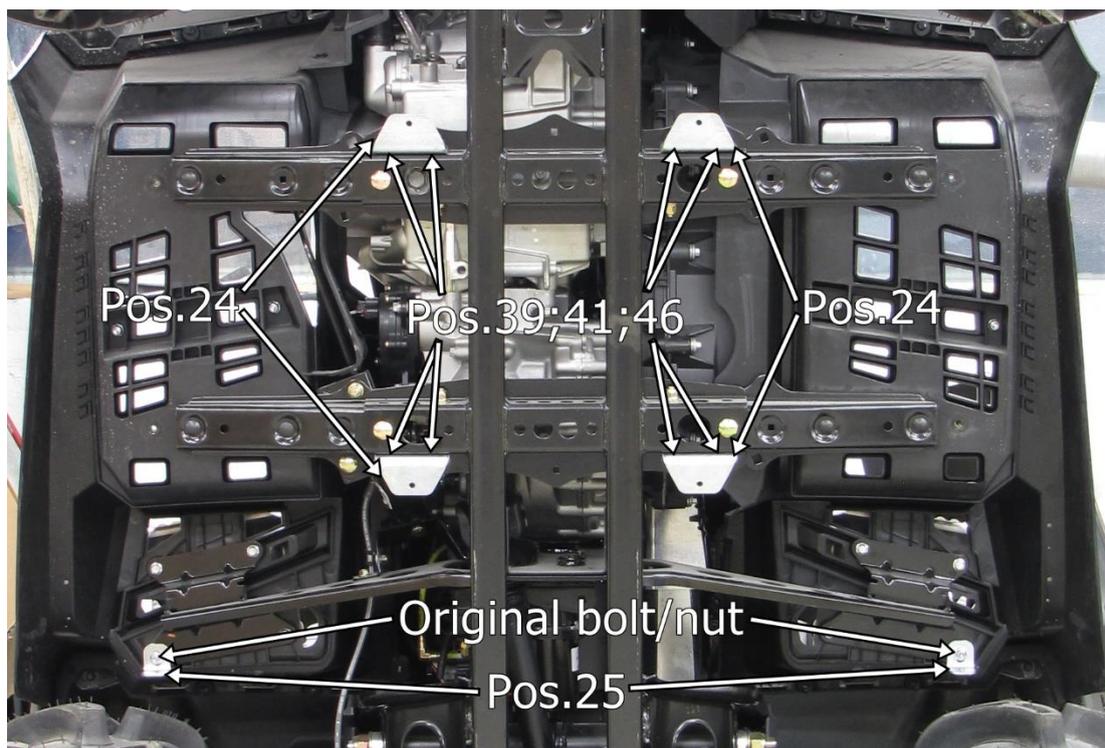

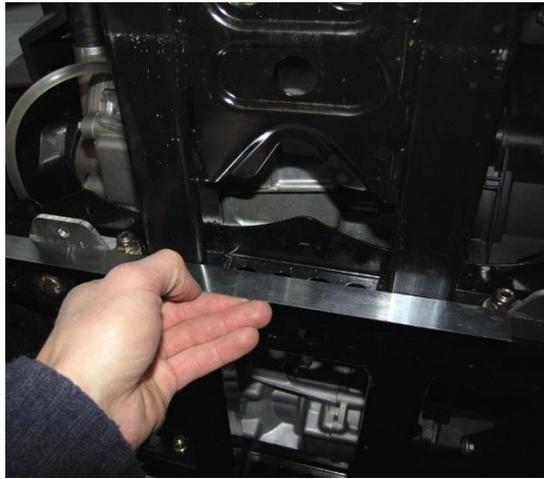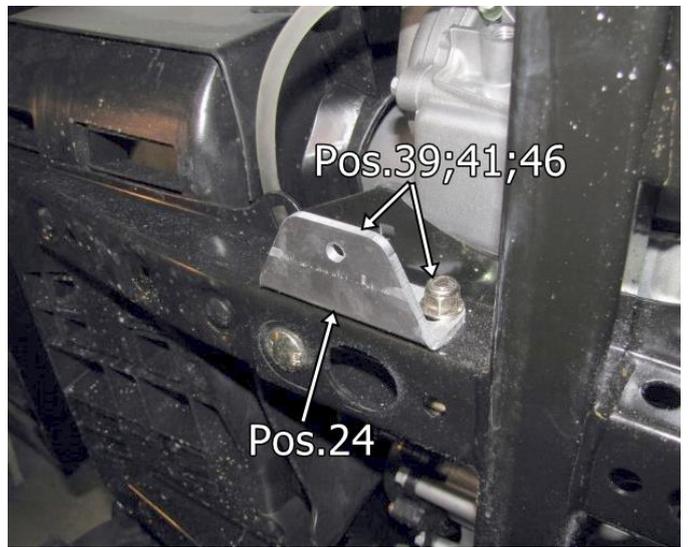


Step 3

Install middle part 02.10101.

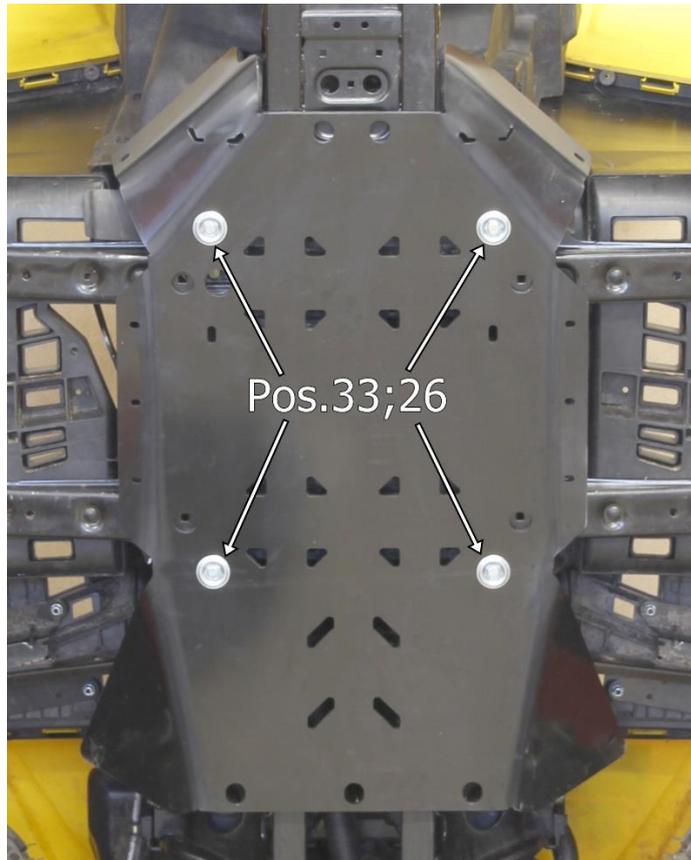


Step 4

Install plates 02.5006, 02.10104 and 02.10006.

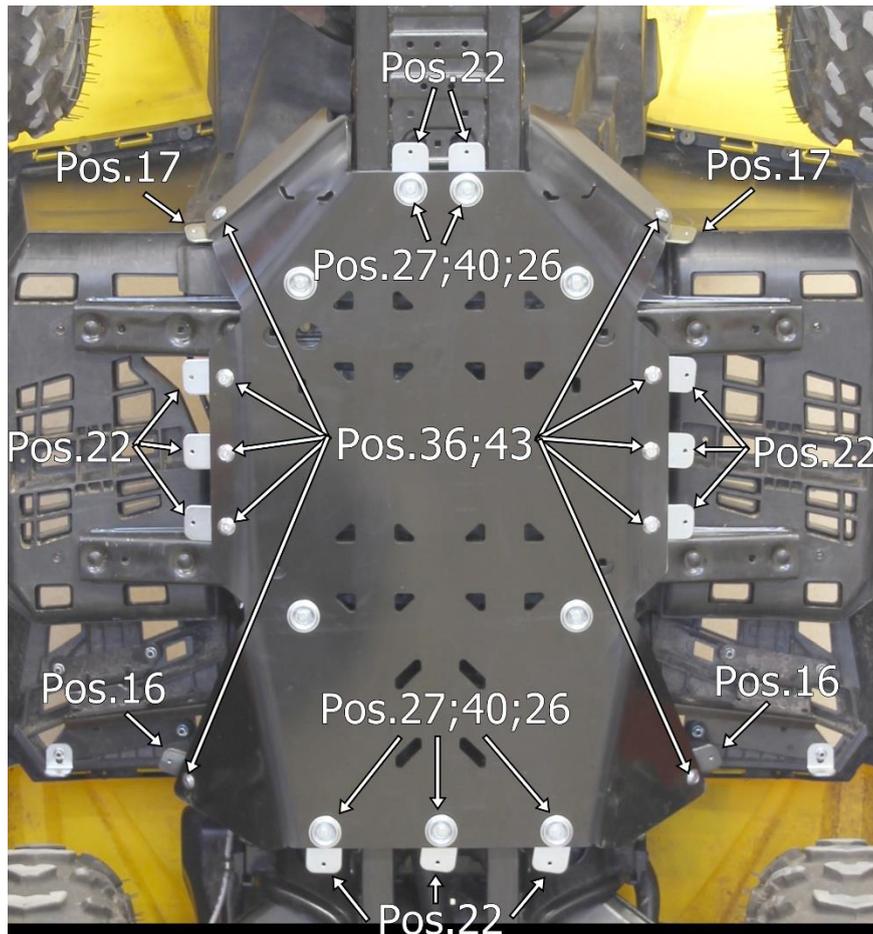






Step 5

Install side protections 02.10102 and 02.10103.

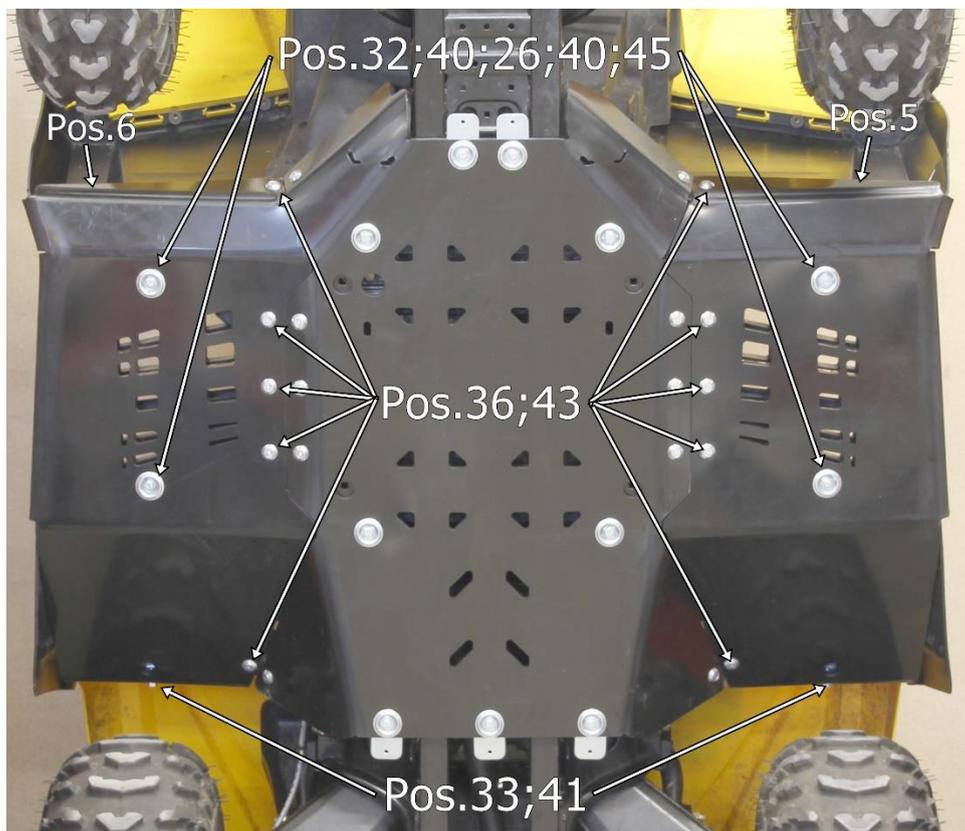


Step 6

Install front part 02.8402K.

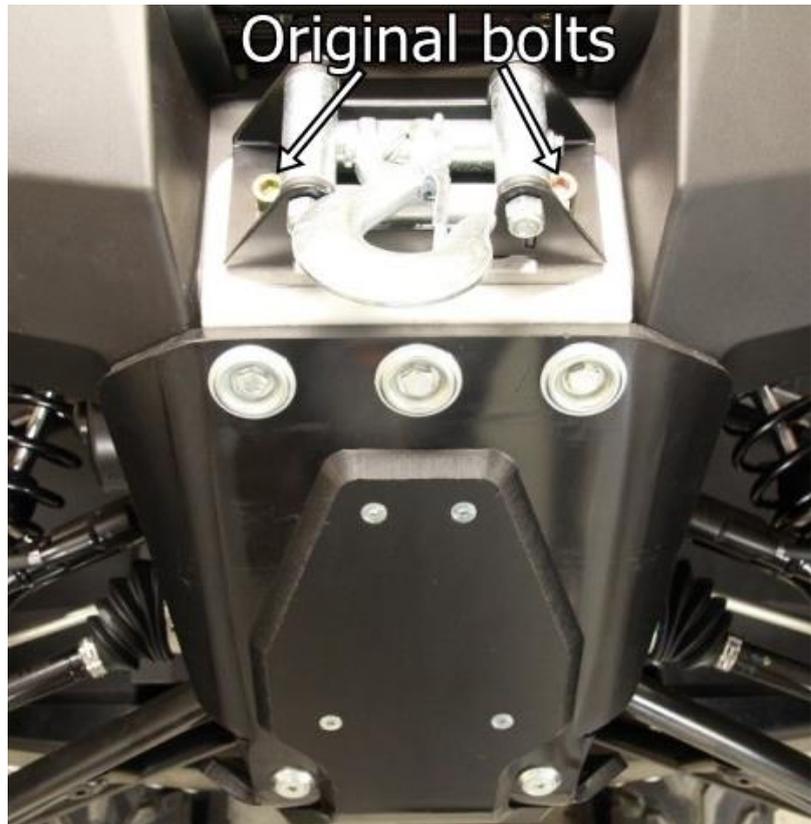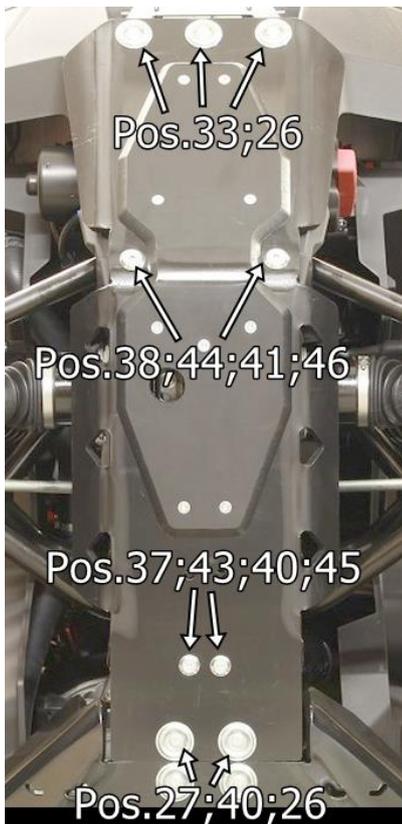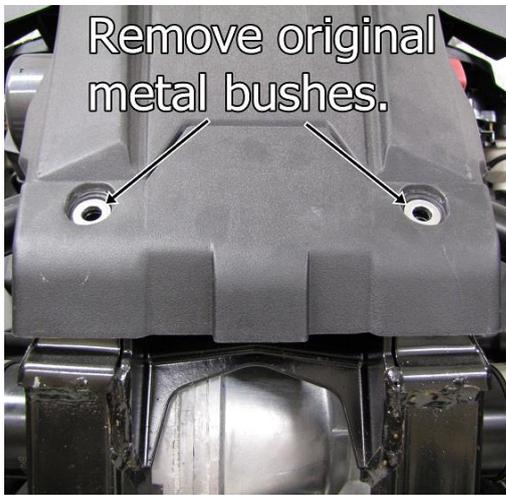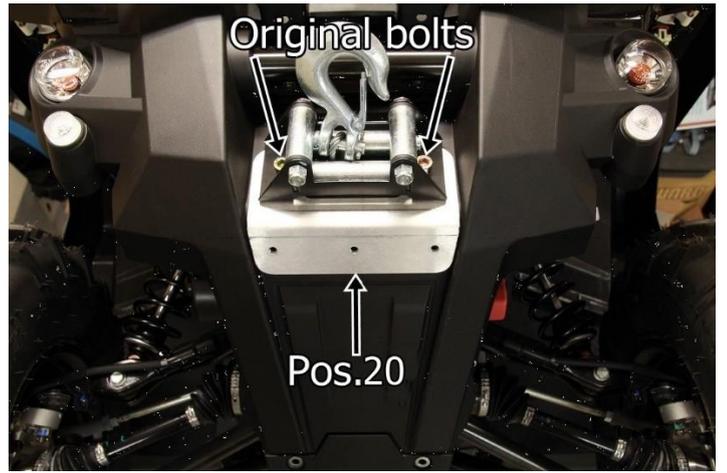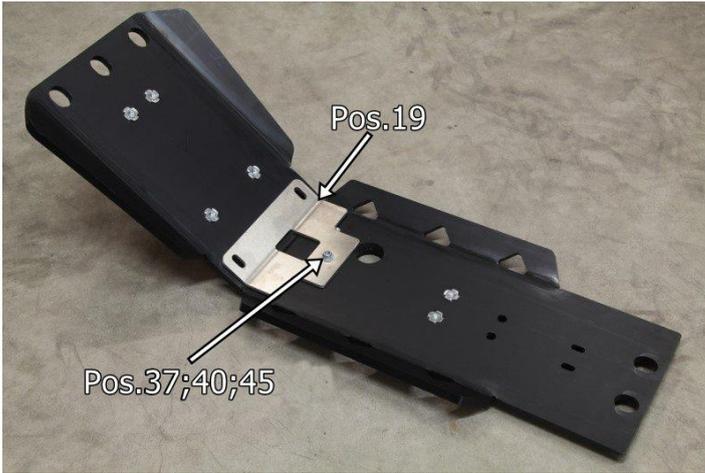



Step 7

Install rear part 02.20401K and plates 02.5006. For easier installation, we recommend removing one ATV wheel.

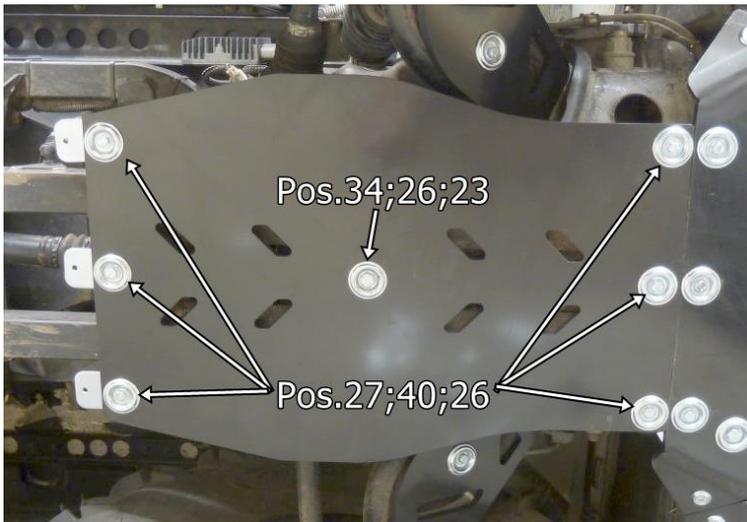



Step 8

Install second rear protection 02.20402.

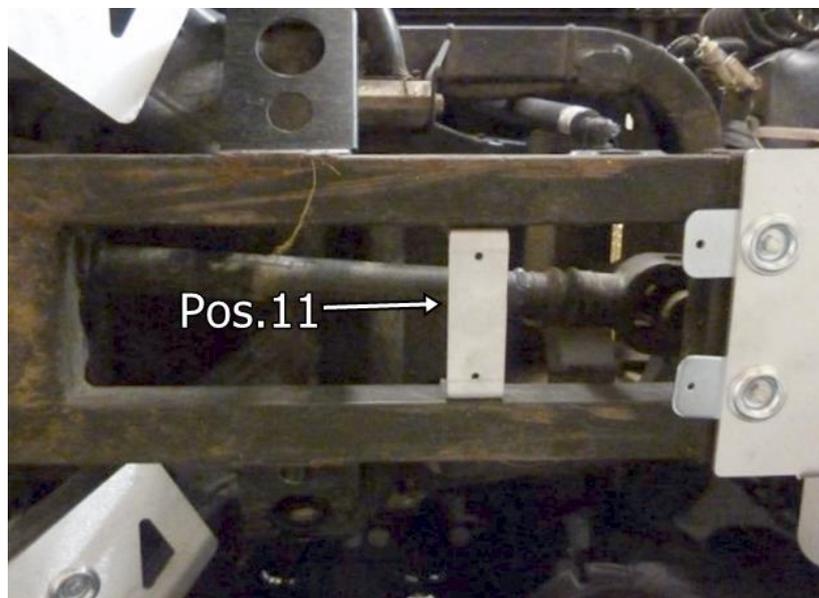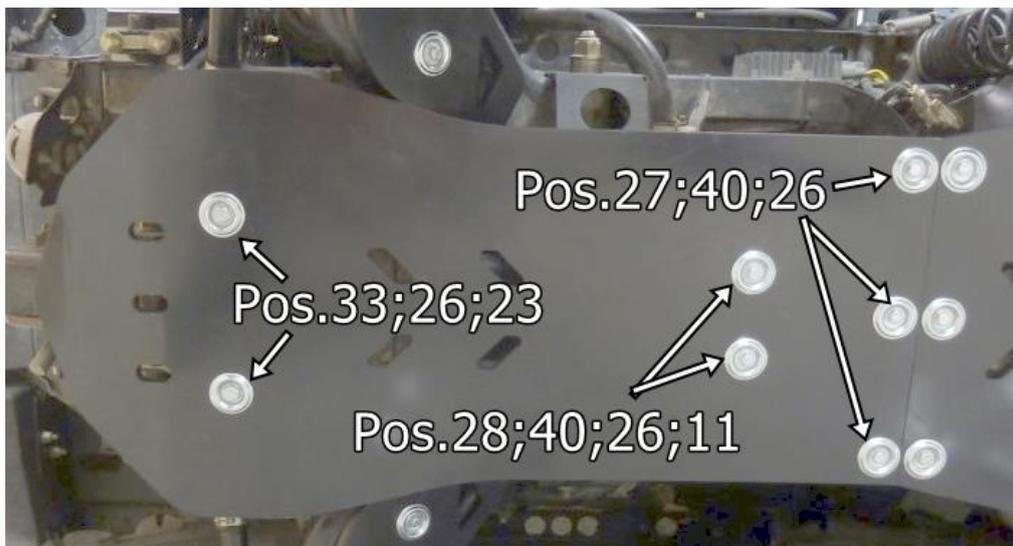


Step 9

Install front arms protections 02.8304 and 02.8305.

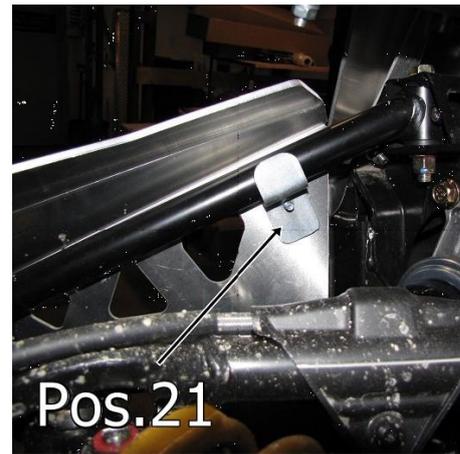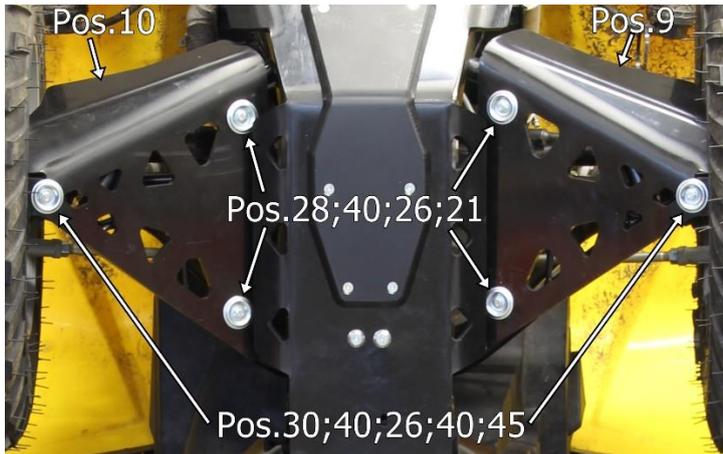


Step 10

Install brackets 02.18804, 02.18805, 02.18806.

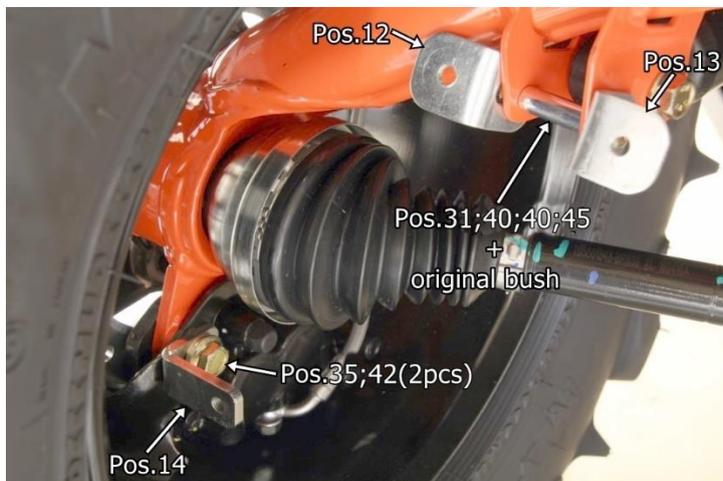

PIDURIGA RATTAL

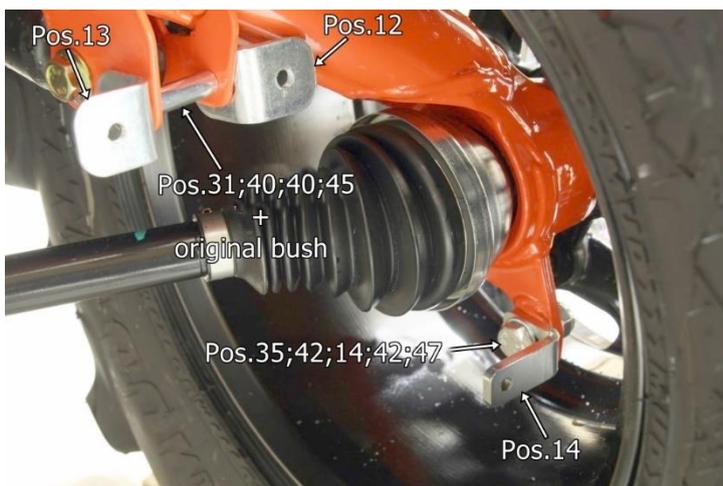

ILMA PIDURITA RATTAL




NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.33 and brake disc.

Step 11

Install rear arm protections 02.18901 and 02.18902.

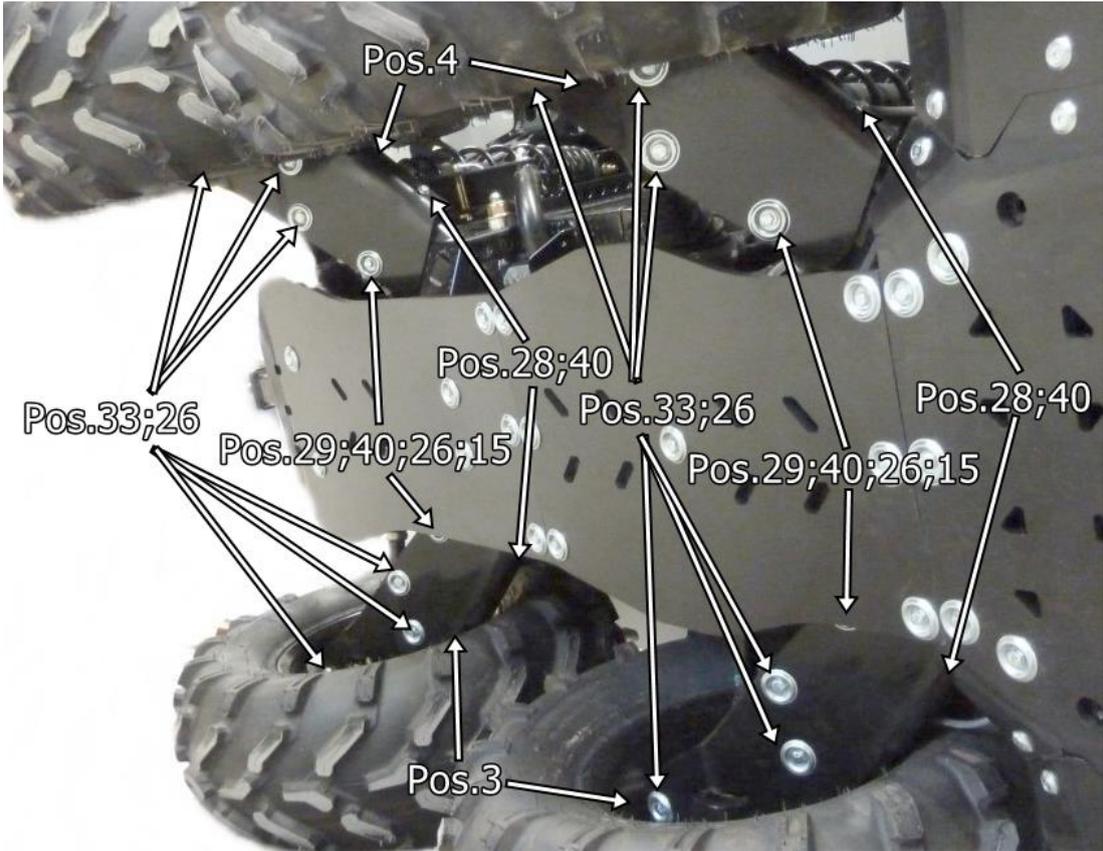

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

