



ALUMINIUM SKID PLATE

CAN AM

Outlander G2 650 / 850 / 1000 (2019-...)

Outlander G2 570 T3 (2019-...)

Code 02.23100

Version 30092023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Front left A-arm protection	02.23101S	1
2	Front right A-arm protection	02.23102S	1
3	Rear right trailing arm protection	02.23103	1
4	Rear left trailing arm protection	02.23104	1
5	Rear protection	02.8203K	1
6	Middle protection	02.8401K	1
7-1	Front protection (-2022)	02.8402K	1
7-2	Front protection 2 (2023+)	02.8406K	1
8	Angle (80)	02.18805	2
9	Rear protection angle	02.18804	2
10	Bush for front part	02.10005	2
11	Plate for front part	02.10004	1
12	Installation bracket	02.6408	4
13	Connecting plate	02.5006	4
14	Threaded plate	02.2305	1
15	Installation angle	03.3502	4
16	Dished washer	14.503	33
17	Bolt M6x12 DIN 933	OT.02.02.030	10
18	Bolt M6x16 DIN 933	OT.02.02.050	6
19	Bolt M6x20 DIN 933	OT.02.02.060	4
20	Bolt M6x35 DIN 933	OT.02.02.090	2
21	Bolt M6x50 DIN 933	OT.02.02.120	4
22	Bolt M8x16 DIN 933	OT.02.02.170	8
23	Bolt M8x30 DIN 933	OT.02.02.200	1
24	Bolt M10x30 DIN 933	OT.02.02.320	2
25	Bolt M6x25 DIN 7991	OT.02.04.040	3
26	Bolt M8x50 DIN 7991	OT.02.04.200	2
27	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
28	Washer Ø6/15 SFS 3738	OT.04.03.020	37
29	Washer Ø6/18 DIN 9021	OT.04.02.020	2
30	Washer Ø8/20 SFS 3738	OT.04.03.030	10
31	Washer Ø10/20 DIN 125	OT.04.01.040	5
32	Conical washer Ø6	14.502	3
33	Conical washer Ø8	14.501	2
34	Nyloc nut M6 DIN 985	OT.03.02.030	13
35	Nyloc nut M8 DIN 985	OT.03.02.040	10
36	Nyloc nut M10 DIN 985	OT.03.02.050	1

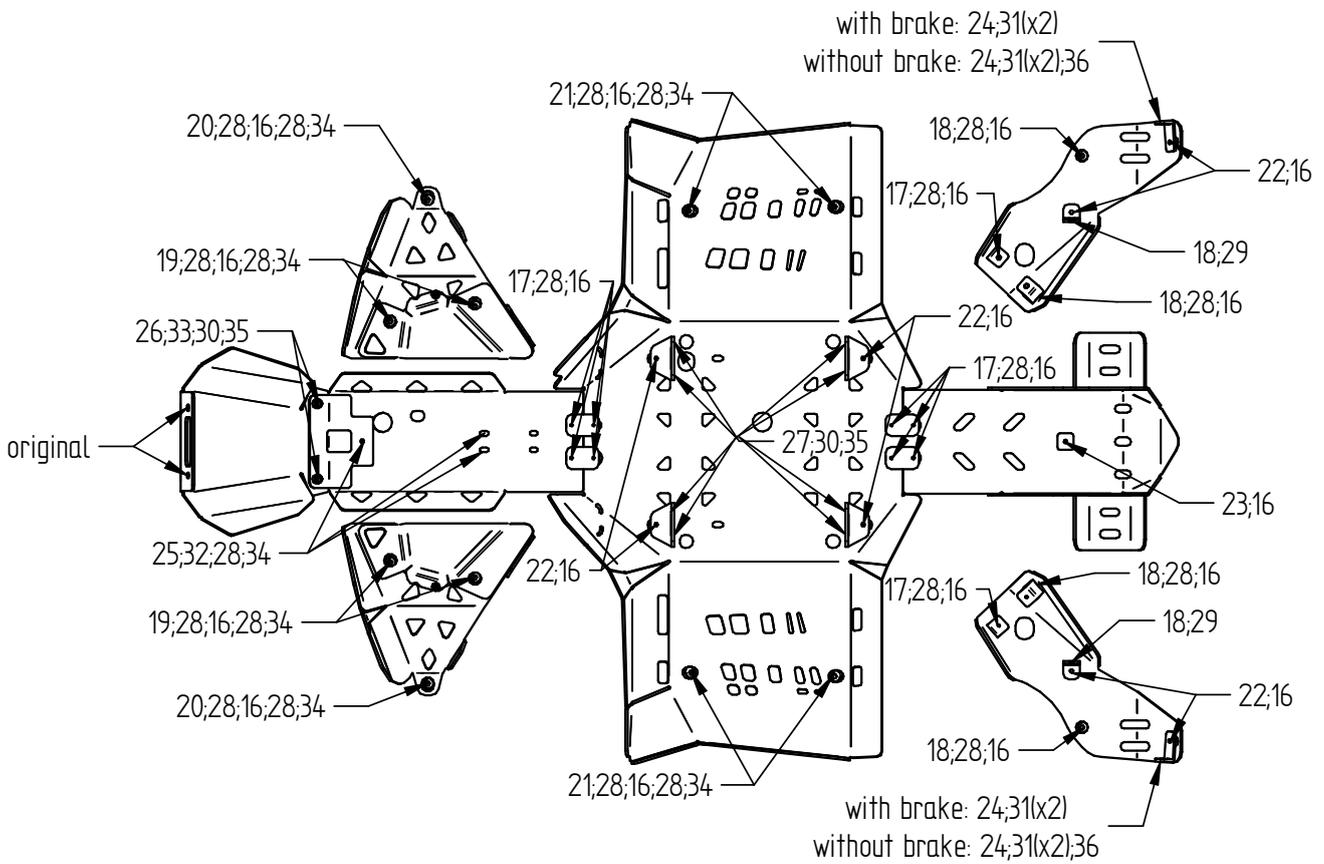
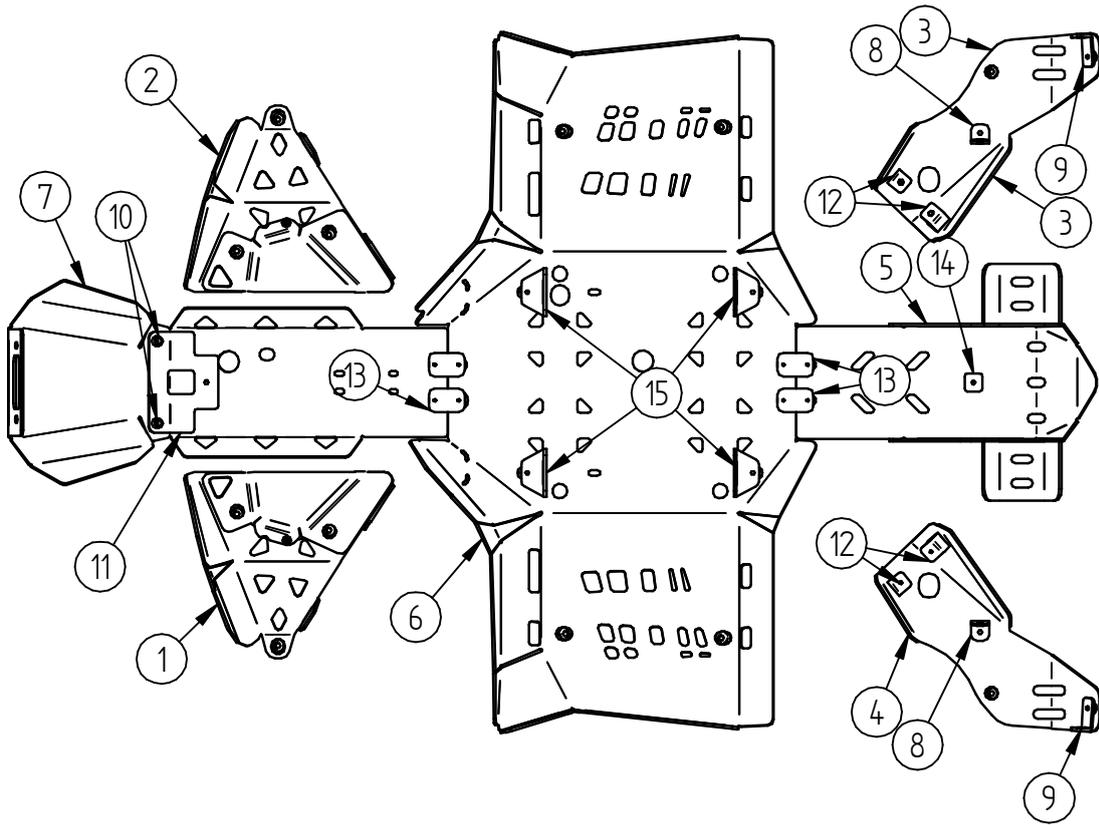


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and winch fairlead.

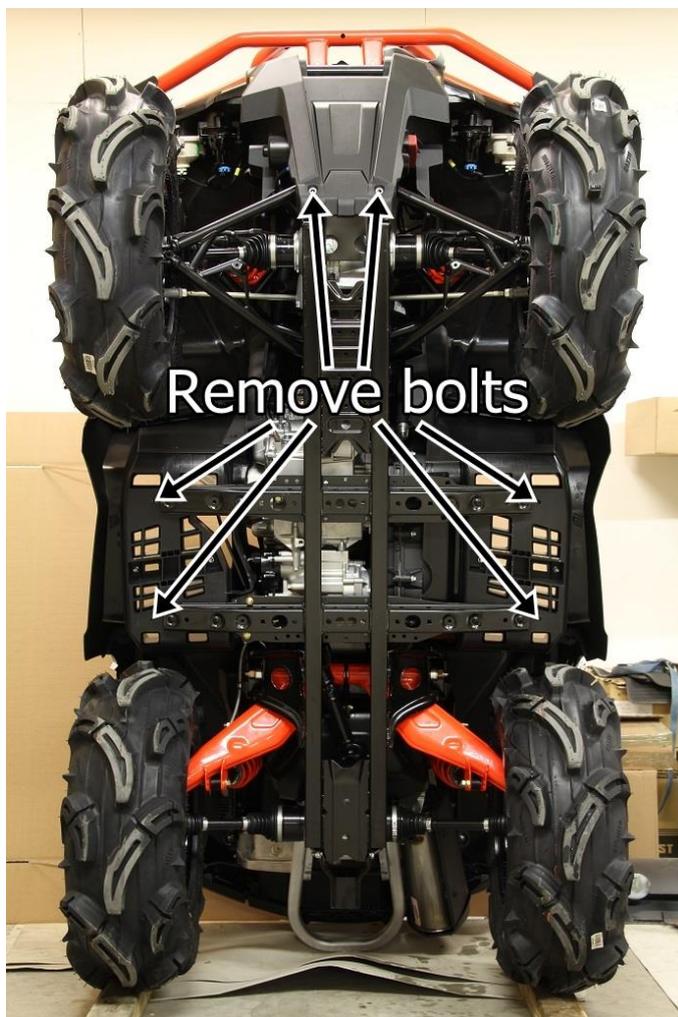


Step 2 Install brackets 03.3502. Place brackets same plane as frame.

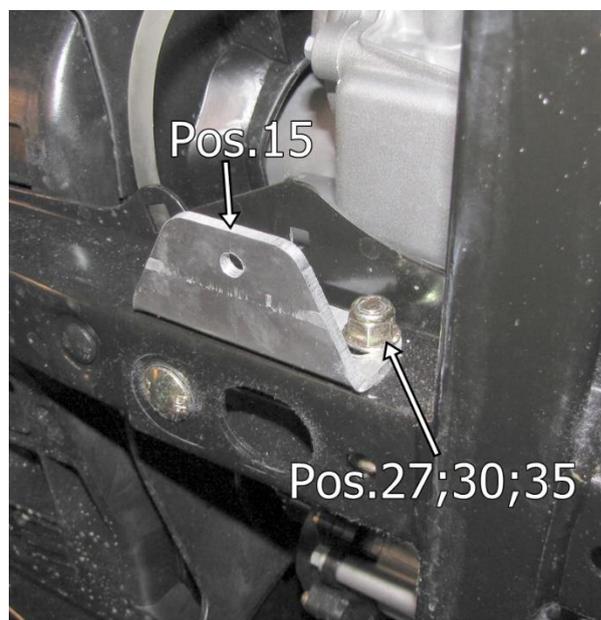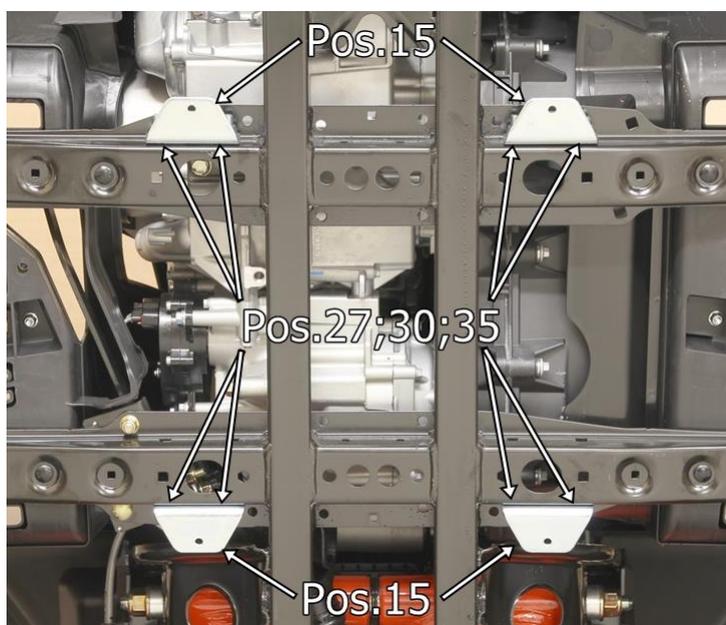


Step 3

Install middle protection 02.8401K.

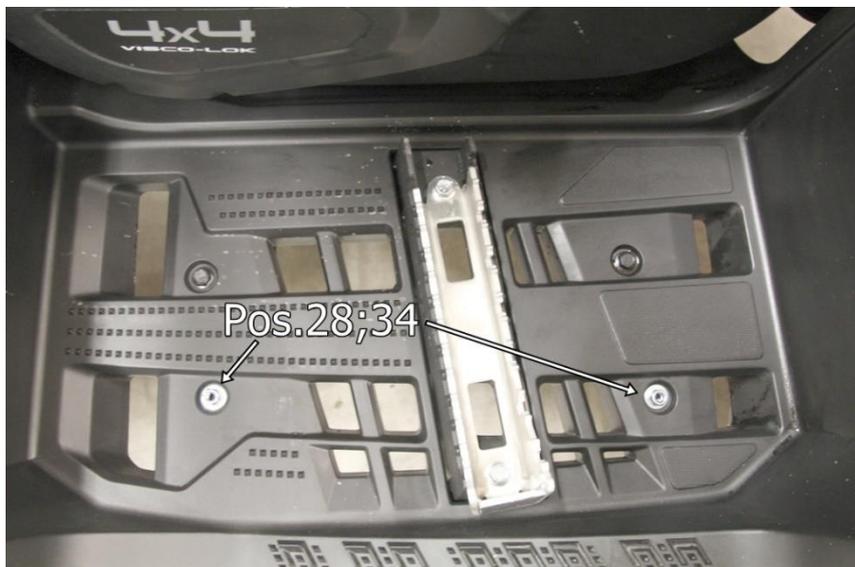

Step 4



Install plates 02.5006.





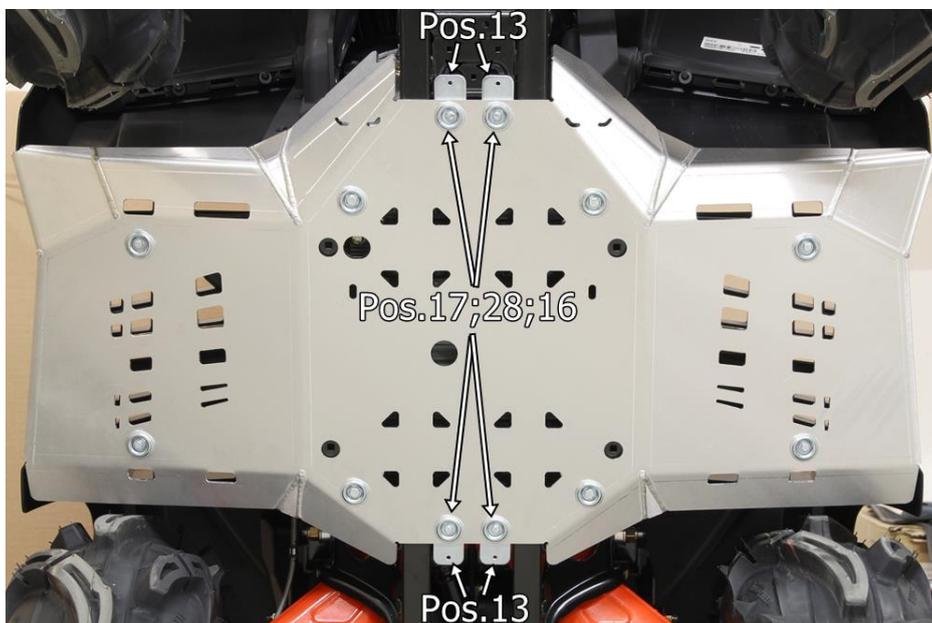




Step 5

Install front protection 02.8402K or 02.8406K.

- a) Use 02.8406K front part on models from MY2023. NB! There will be gap between front part and Pos.11 plate, this is normal.
- b) When installing on Outlander XXC model, pre-marked area must be cut off before installation.
- c) If you are using CanAm OE mounting plate (P/N 715004338), keep original bushes under new bushes and do not install plate 02.10004 (Pos.11), also cut front protection side bends (see Picture)! When installing with OE mounting plate, use plow OE bolts (see Picture).

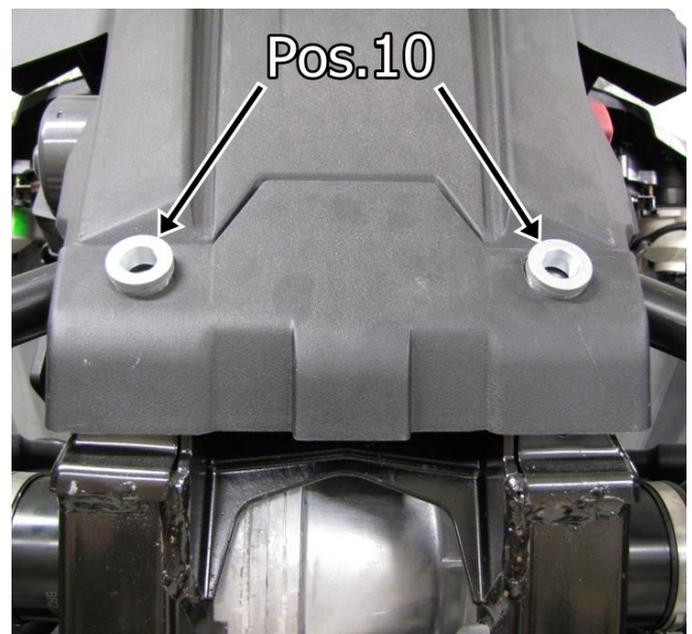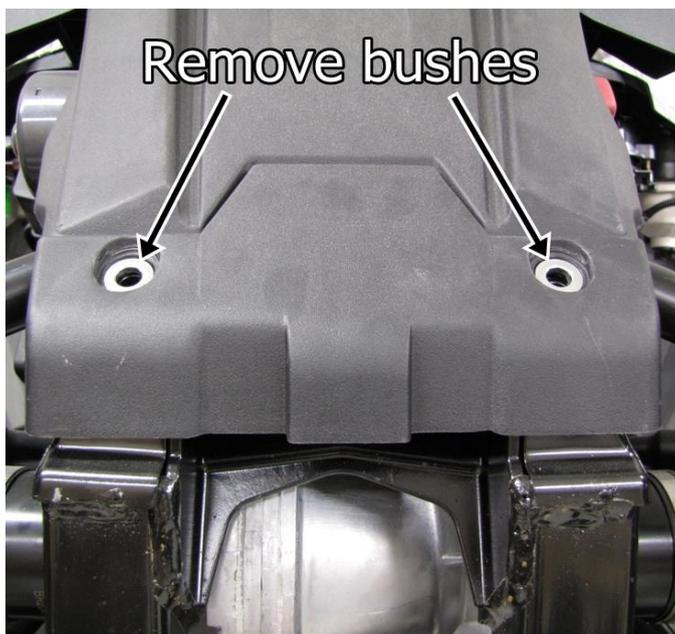

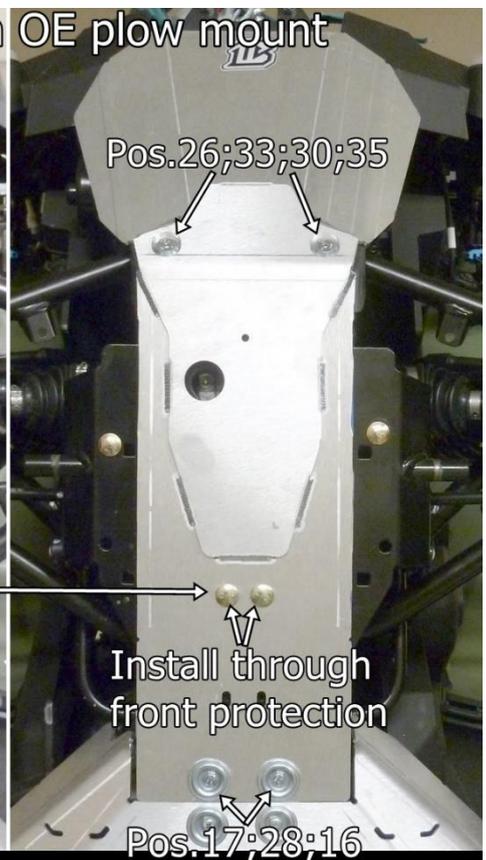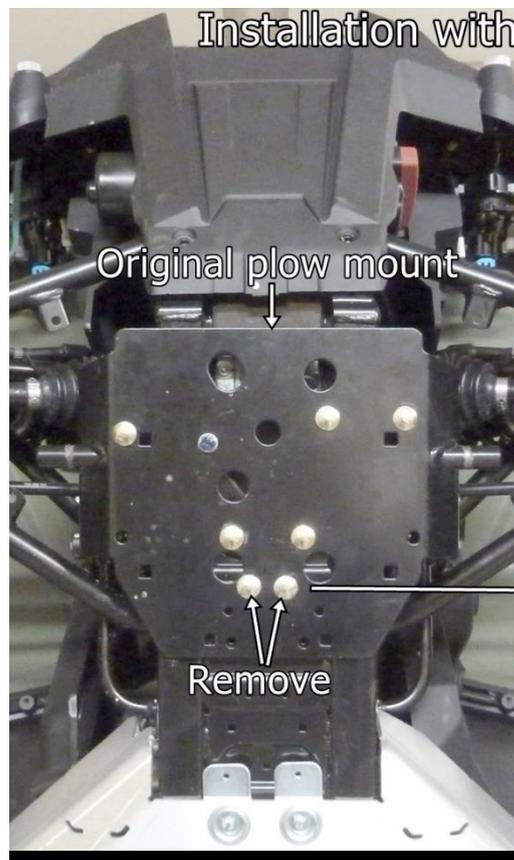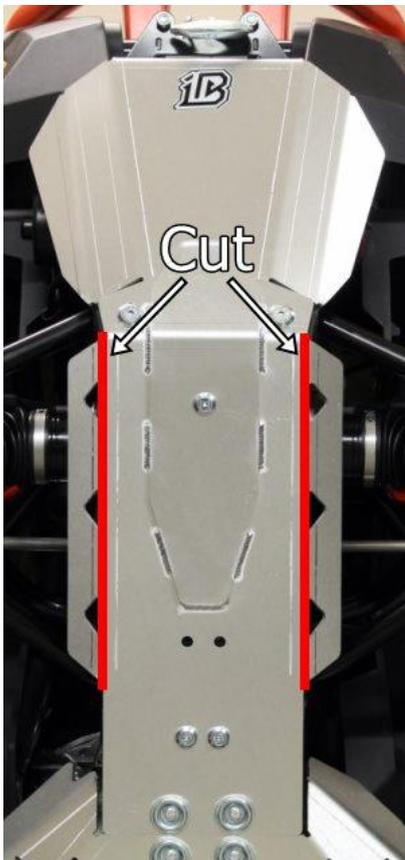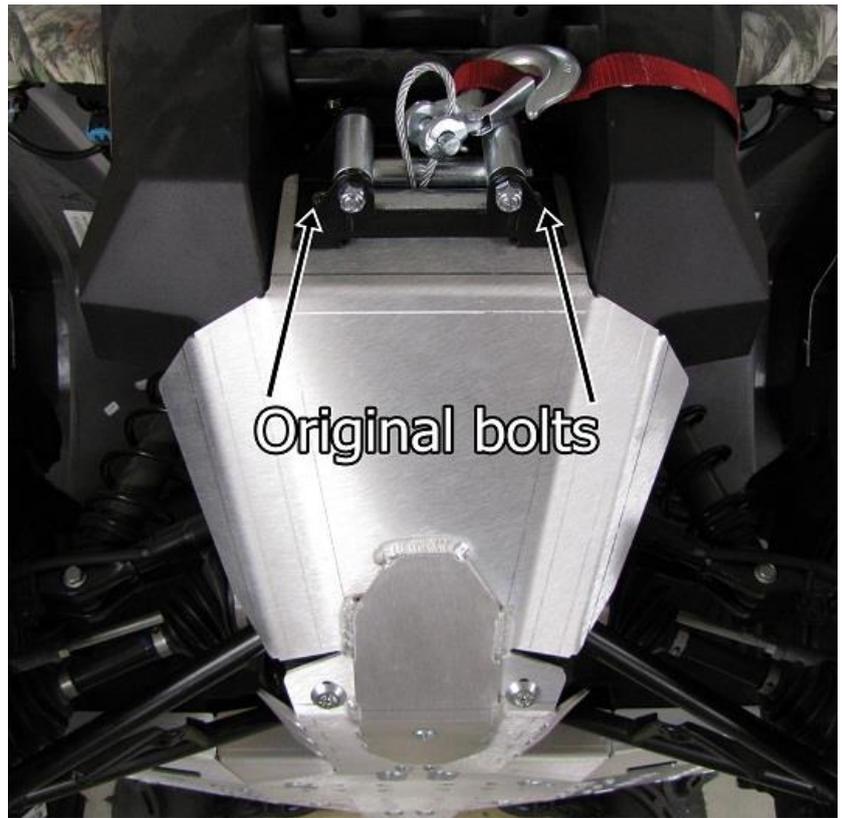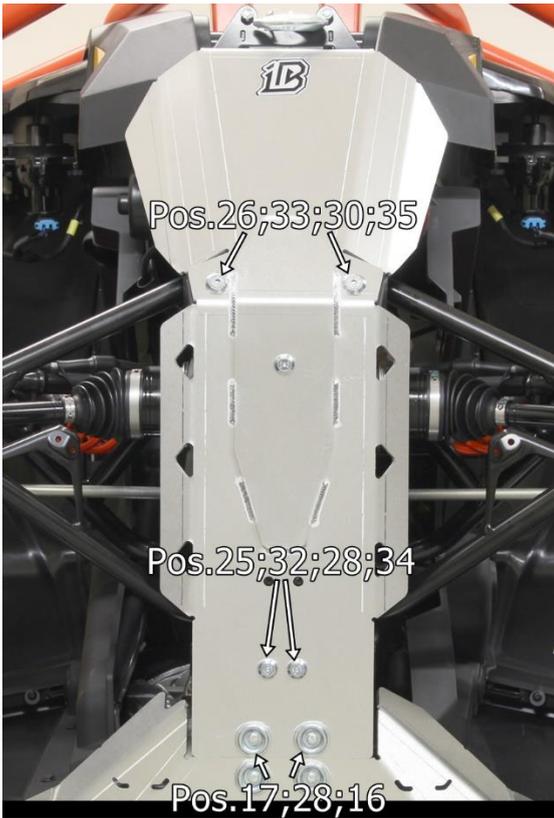

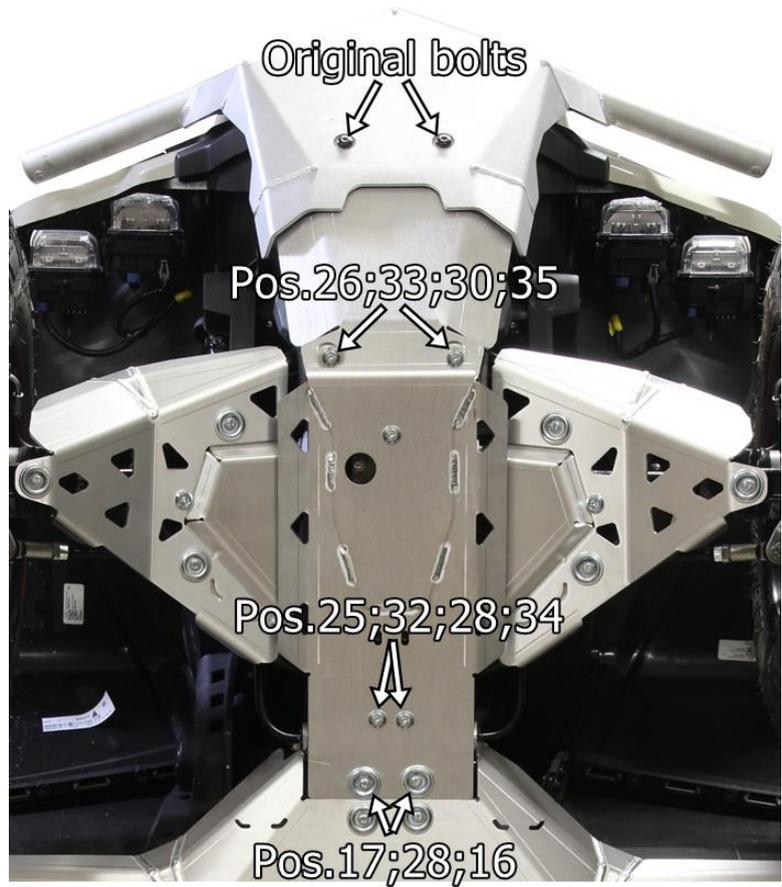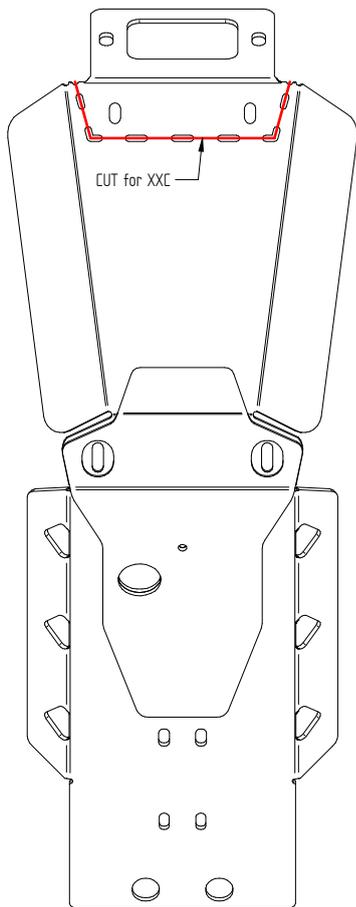


Step 6

Install rear protection 02.8203K.




Step 7

Install front A-arms protections 02.23101S and 02.23102S.

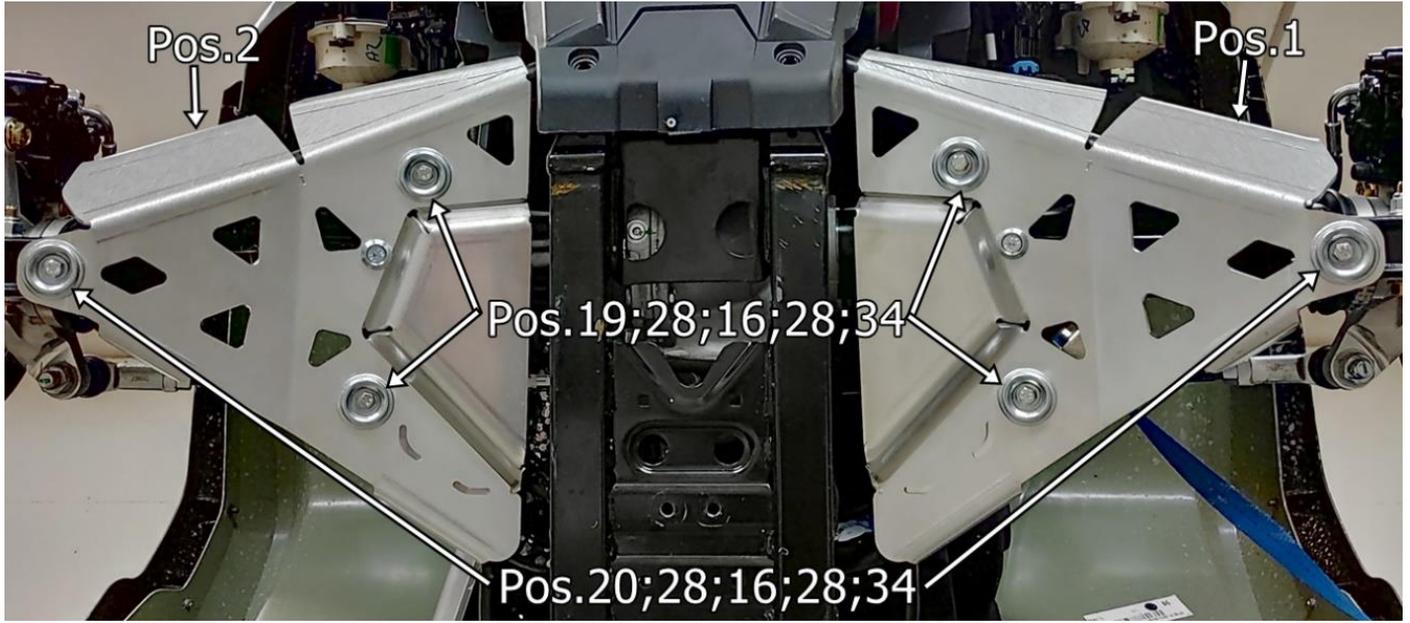


NB!

If you are using CanAm original snow plow adapter, then remove cover and cut section indicated with arrows.


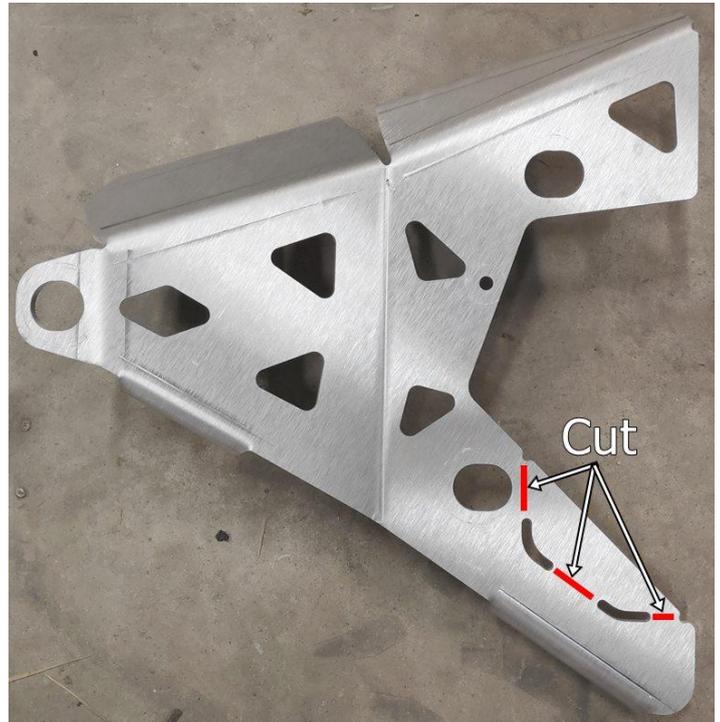


Step 8

Install brackets 02.18804 and 02.18805.

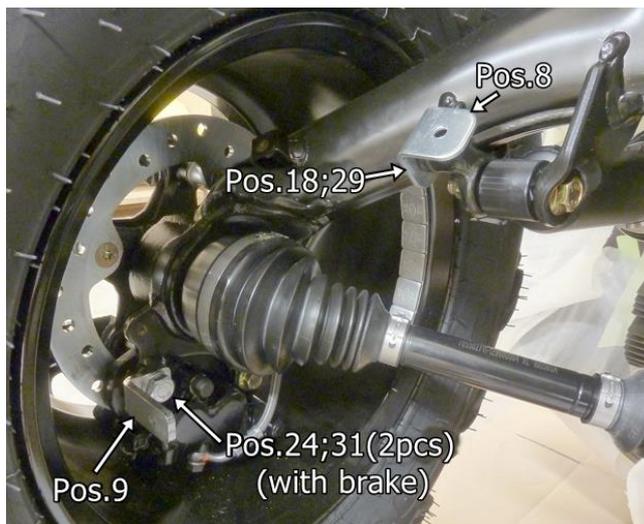

PIDURIGA RATTAL

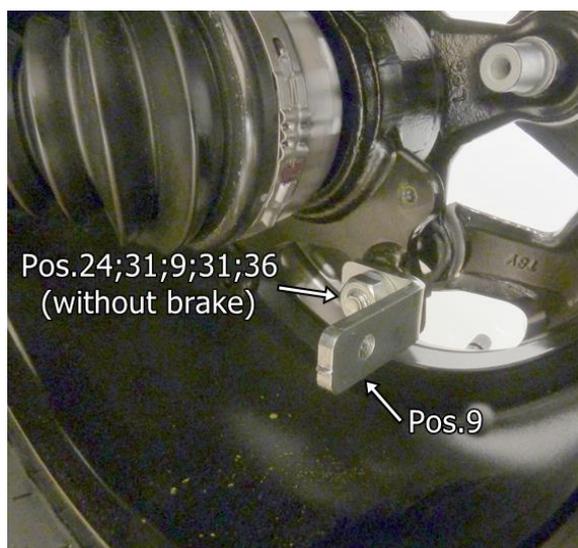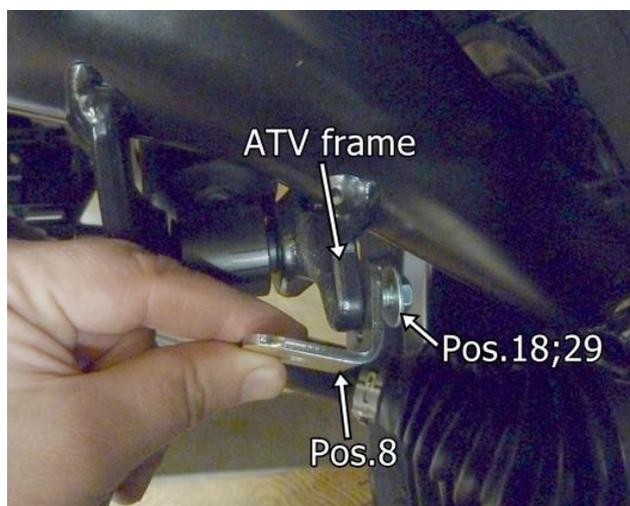

ILMA PIDURITA RATTAL




NB!

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.24 and brake disc.
If needed add third Ø10 washer for distance.**

Step 9

Install rear trailing arms protections 02.23103 and 02.23104.

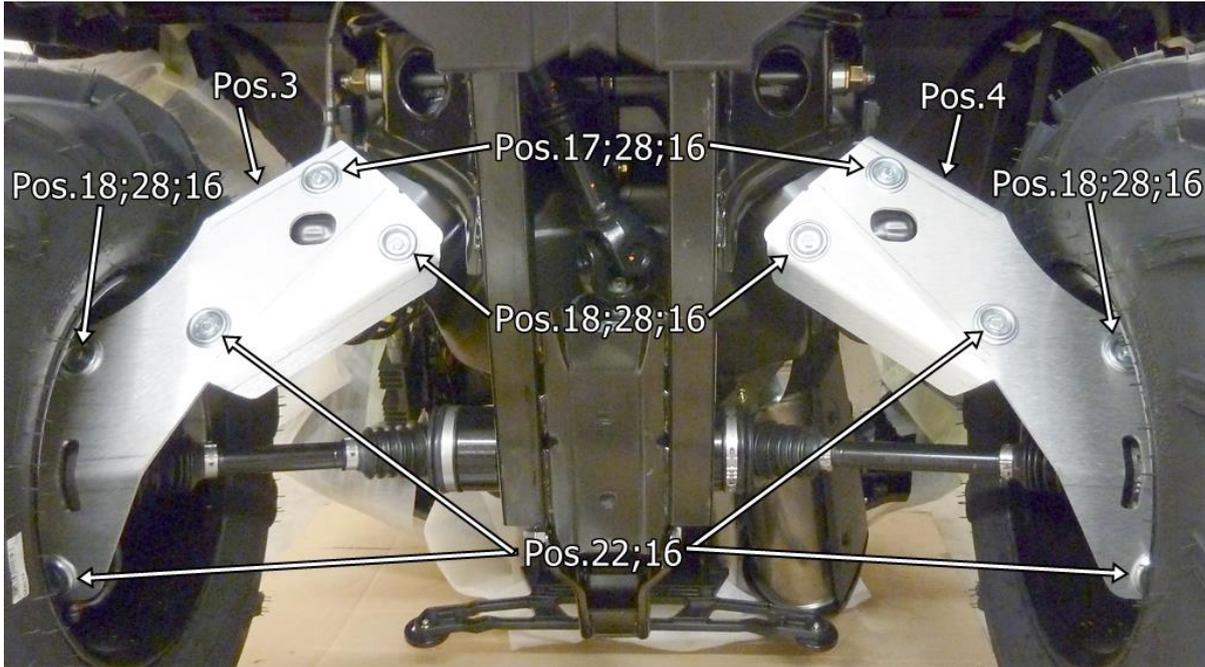

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

