

# IRON BALTIC

## FRONT A-ARM GUARDS (ALUMINIUM)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/3cTW3BsD](https://code.ironbaltic.com/u/3cTW3BsD)

## CAN AM

### Outlander / Renegade (2019-...)

Code 02.23110VP

Version 30092023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION


Pos.	Description	Code	Amount
1	Front left A-arm protection	02.23101S	1
2	Front right A-arm protection	02.23102S	1
3	Dished washer	14.503	6
4	Bolt M6x20 DIN933	OT.02.02.060	4
5	Bolt M6x35 DIN933	OT.02.02.090	2
6	Washer Ø6/15 SFS3738	OT.04.03.020	12
7	Nyloc nut M6 DIN985	OT.03.02.030	6

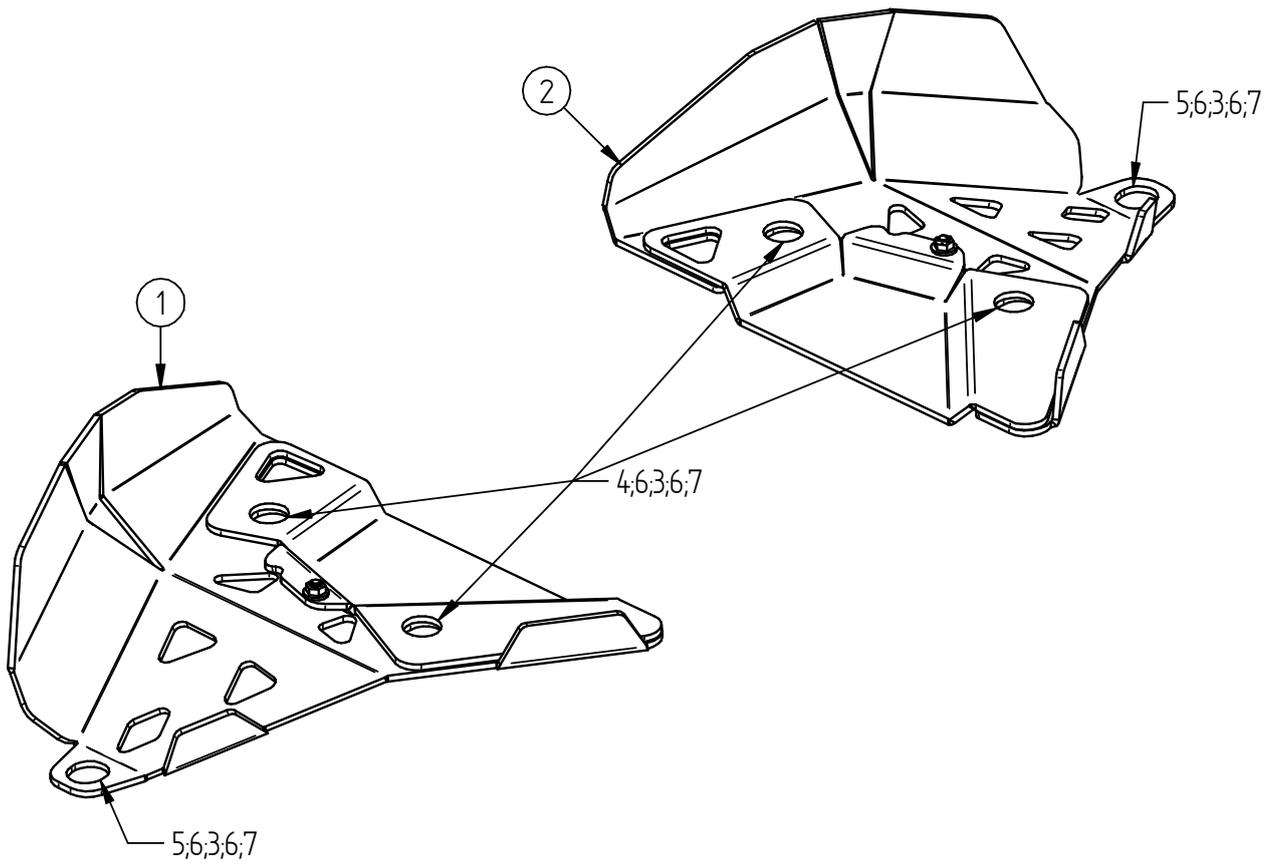

# FITTING INSTRUCTIONS


**Step 1** Remove original front a-arm protections.

**Step 2** Install front A-arm protections 02.23101S ja 02.23102S.

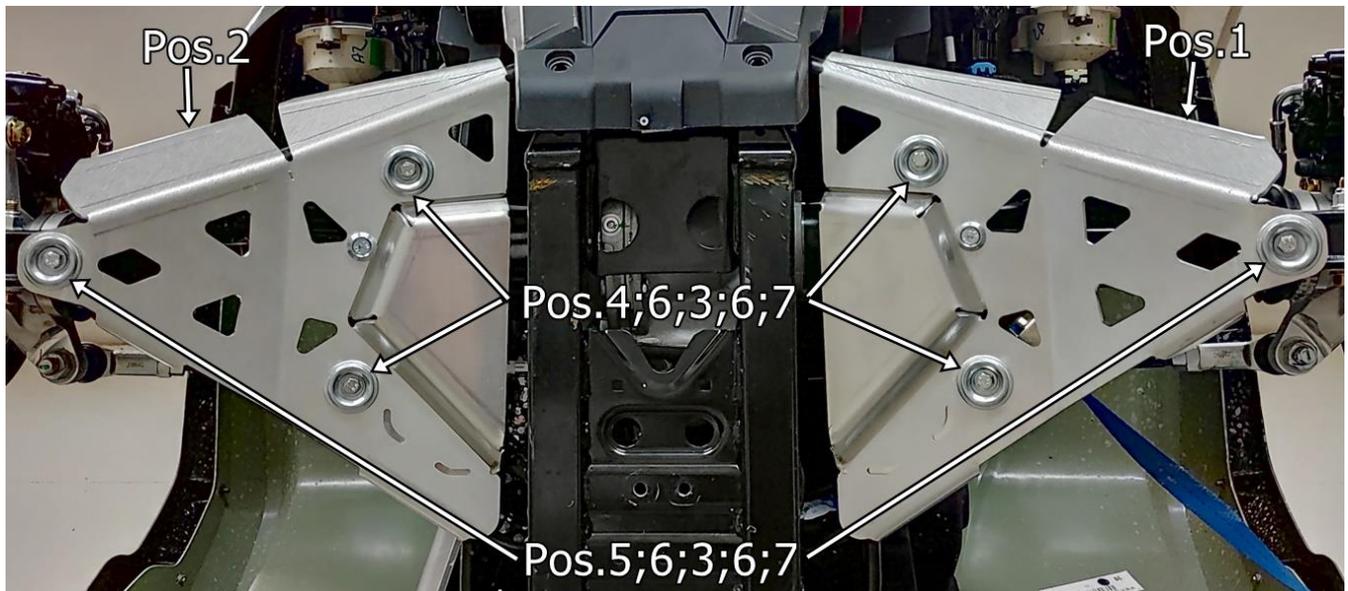

**NB!**

If you are using CanAm original snow plow adapter, then remove cover and cut section indicated with arrows.

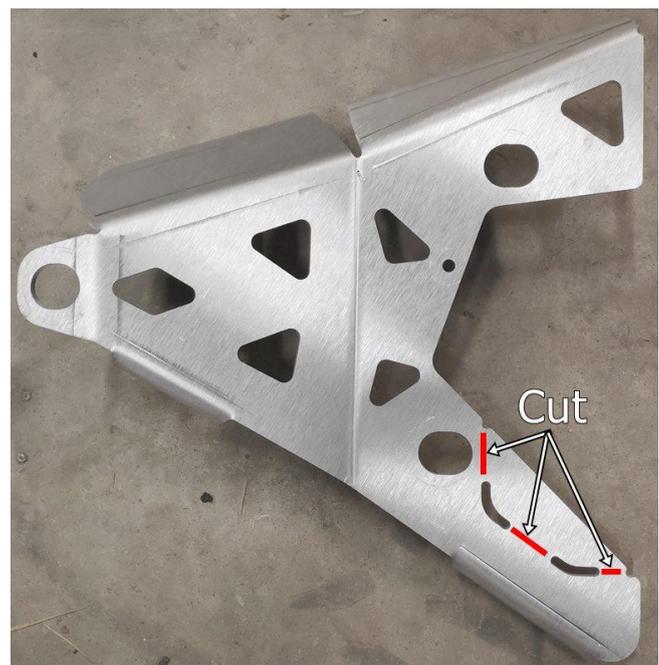







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

