

## REAR A-ARM GUARDS (ALUMINIUM)



[code.ironbaltic.com/u/zRYbb4tE](https://code.ironbaltic.com/u/zRYbb4tE)

## CAN AM

### Outlander / Renegade (2019-...)

Code 02.23120VP

Version 30092023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION



Pos.	Description	Code	Amount
1	Rear right trailing arm protection	02.23103	1
2	Rear left trailing arm protection	02.23104	1
3	Angle (80)	02.18805	2
4	Bracket	02.18804	2
5	Bracket 2	02.6408	4
6	Dished washer	14.503	10
7	Bolt M6x12 DIN933	OT.02.02.030	2
8	Bolt M6x16 DIN933	OT.02.02.050	6
9	Bolt M8x16 DIN933	OT.02.02.170	4
10	Bolt M10x30 DIN933	OT.02.02.320	2
11	Washer Ø6/15 SFS3738	OT.04.03.020	6
12	Washer Ø6/18 DIN9021	OT.04.02.020	2
13	Washer Ø10/20 DIN125	OT.04.01.040	4
14	Nyloc nut M10 DIN985	OT.03.02.050	1

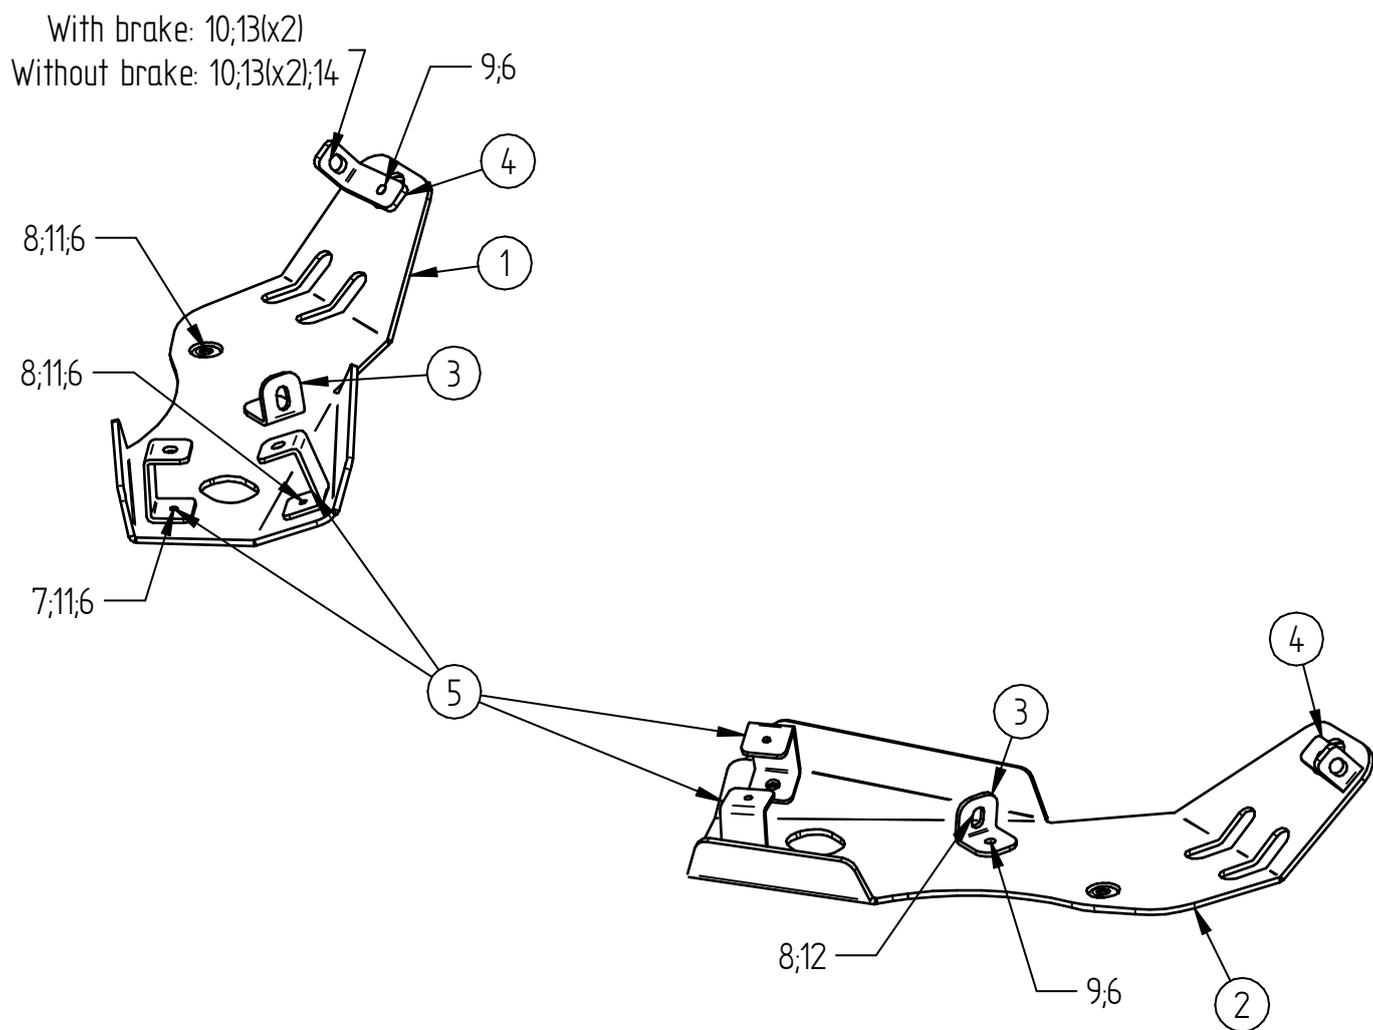


# FITTING INSTRUCTIONS

**Step 1** Remove original rear trailing arm protections.

**Step 2** Install brackets 02.18804, 02.18805. Use thread lock!

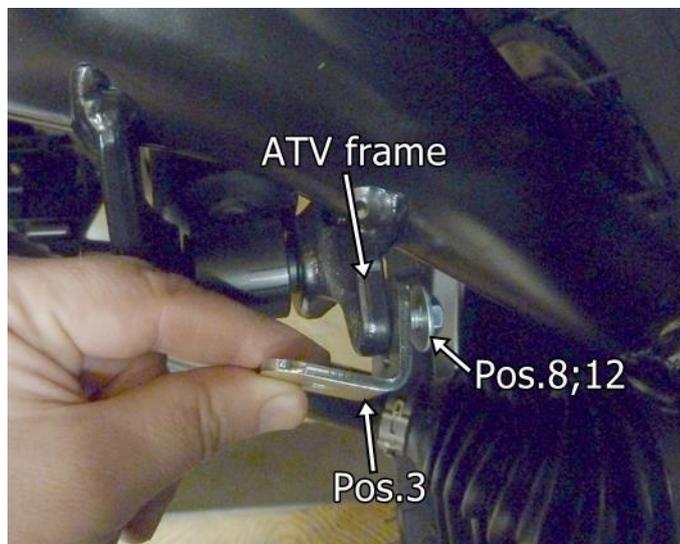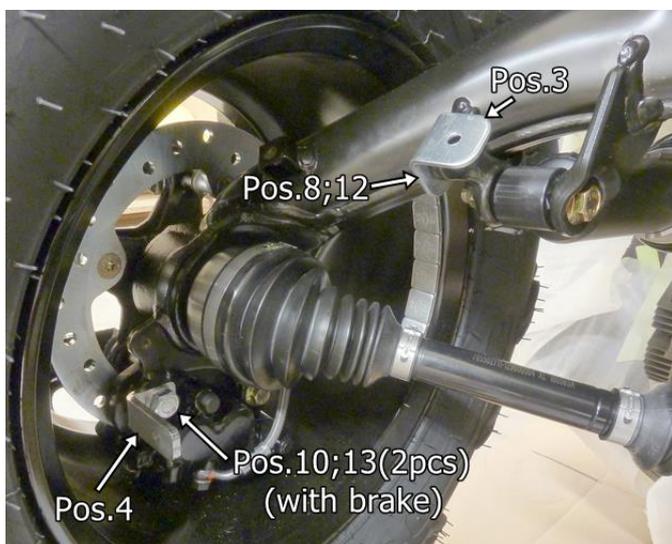

**WHEEL WITH BRAKE**

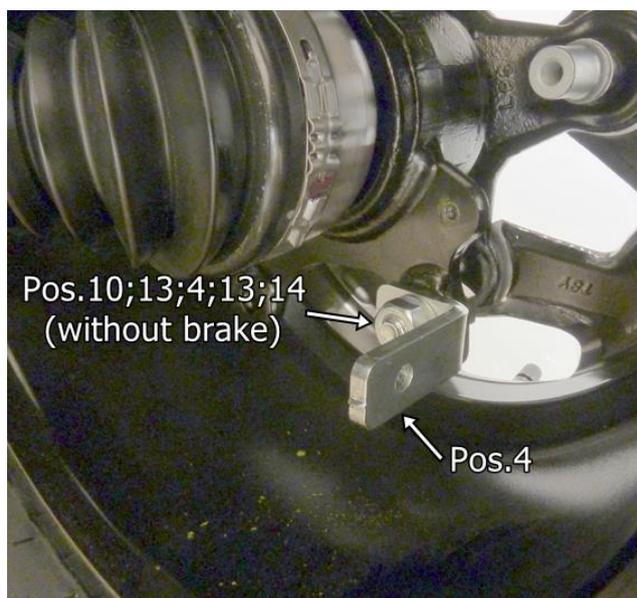

**WHEEL WITHOUT BRAKE**



**NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.10 and brake disc.**







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

