




## FRONT A-ARM GUARDS (PLASTIC)

### CAN AM

### Outlander / Renegade (2019-...)

Code 02.23210VP

Version 01102023

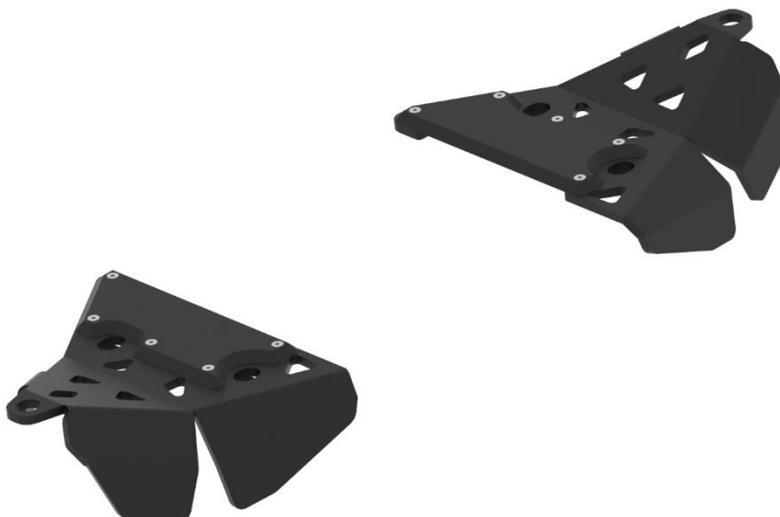


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION



Pos.	Description	Code	Amount
1	Front left A-arm protection	02.23201K	1
2	Front right A-arm protection	02.23202K	1
3	Installation plate	02.2305	4
4	Dished washer	14.503	6
5	Bolt M6x25 DIN933	OT.02.02.070	4
6	Bolt M6x40 DIN933	OT.02.02.100	2
7	Washer Ø6/15 SFS3738	OT.04.03.020	12
8	Nyloc nut M6 DIN985	OT.03.02.030	6

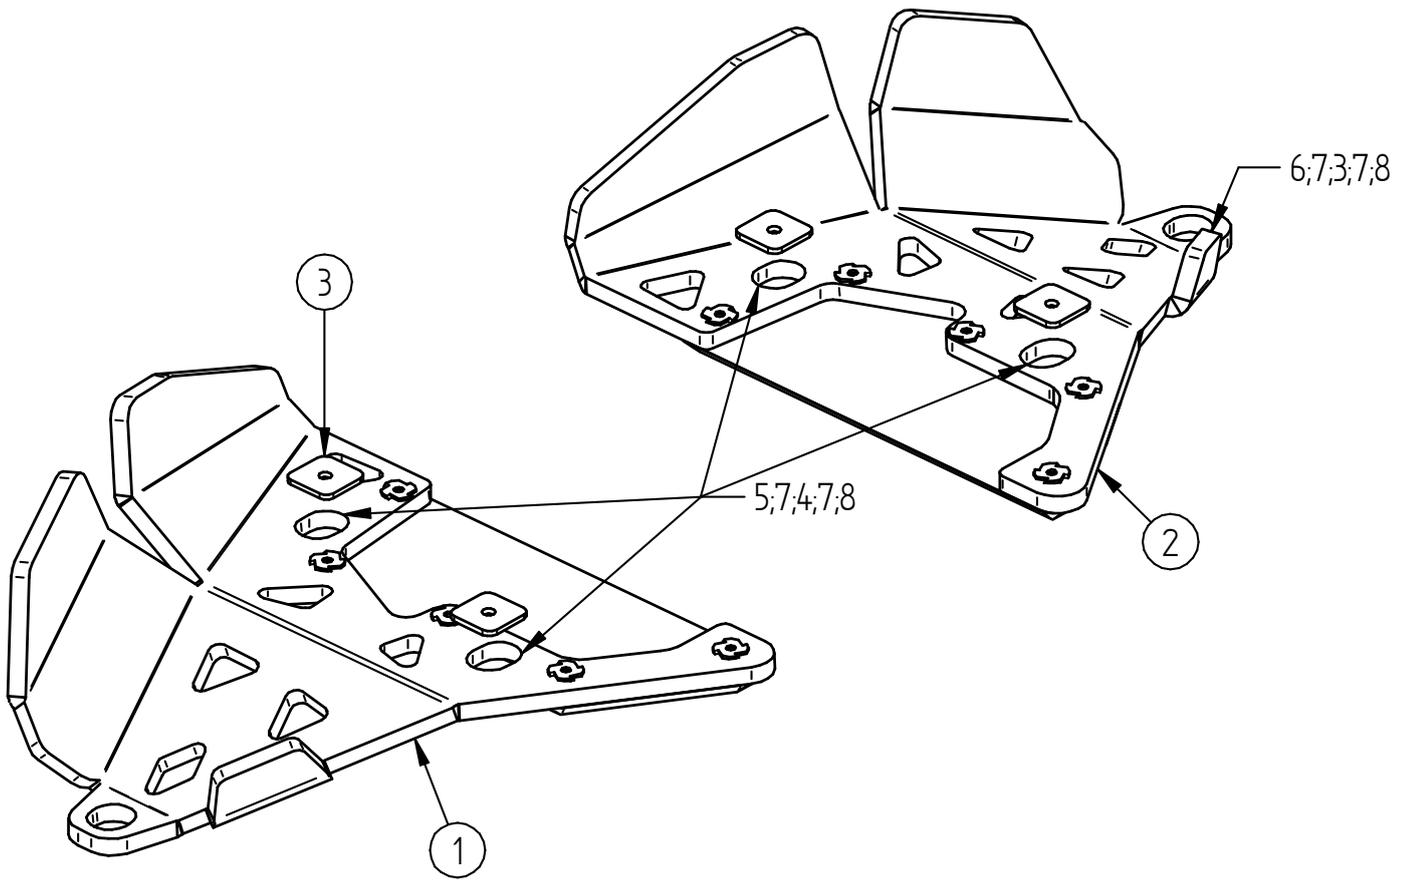

# FITTING INSTRUCTIONS

**Step 1** Remove original front a-arm protections.

**Step 2** Install front A-arm protections 02.23201K ja 02.23202K. Place the plate 02.2305 between a-arm protection and ATV a-arm frame.

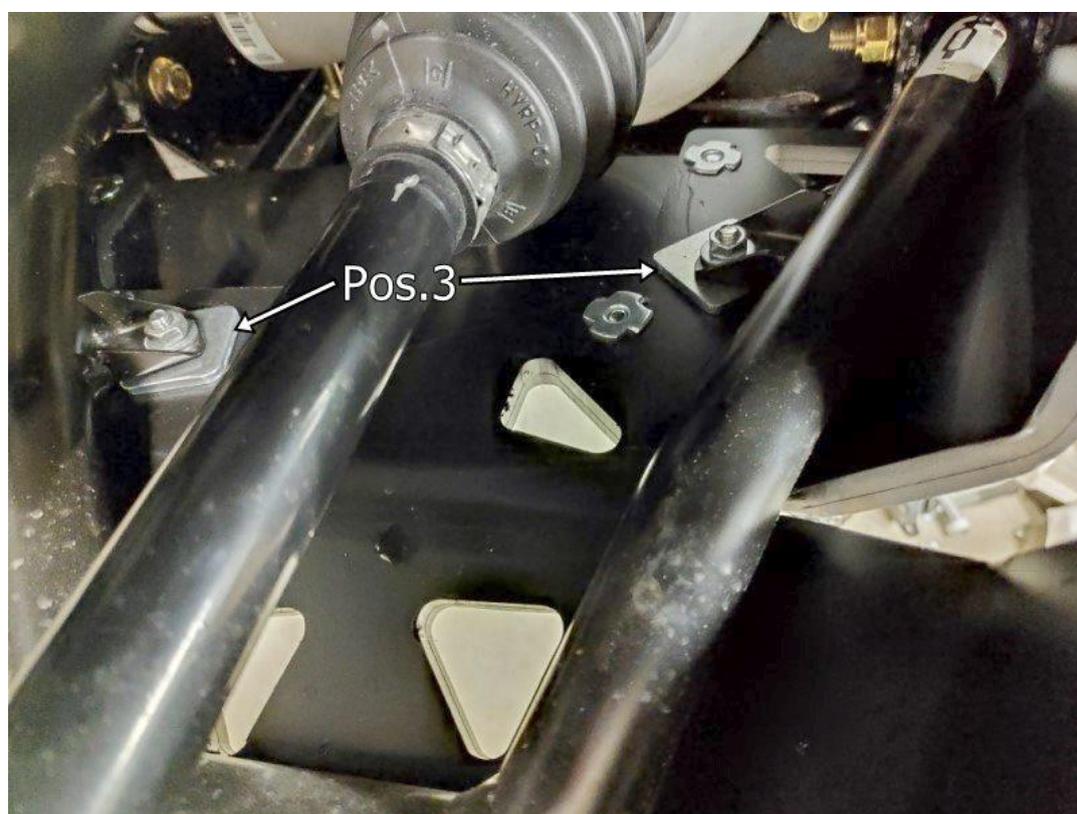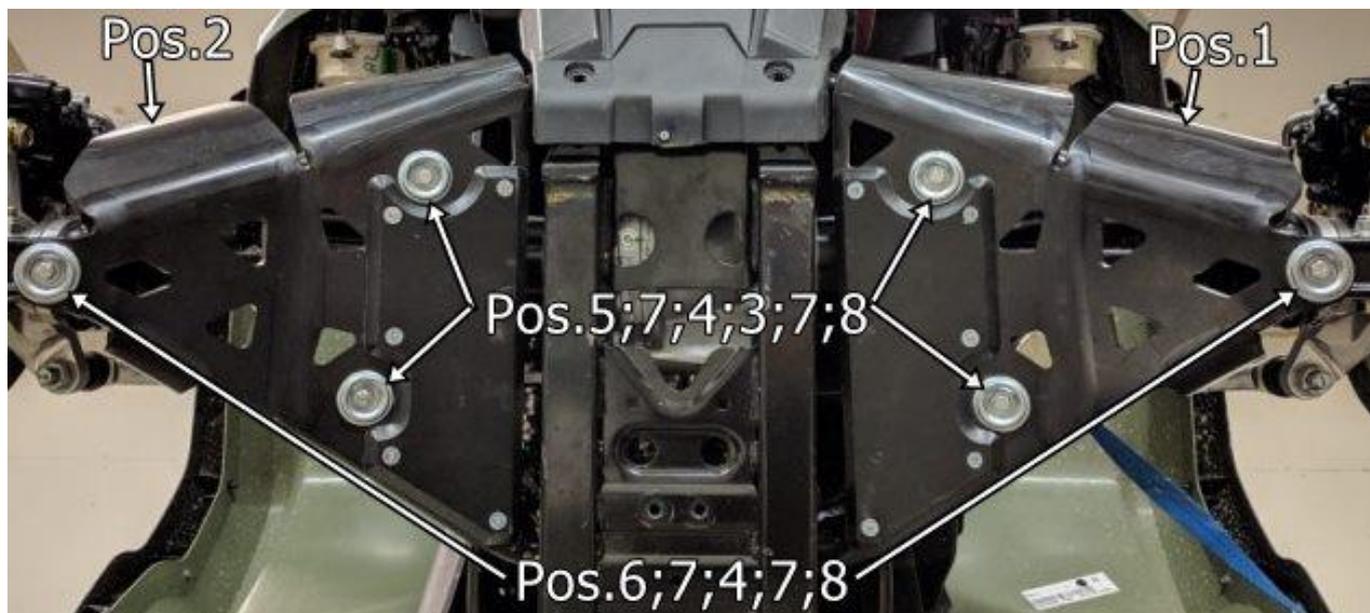



**NB!**

If you are using CanAm original snow plow adapter, then remove cover, indicated with arrow.







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

