



REAR A-ARM GUARDS (PLASTIC)

CAN AM

Outlander / Renegade (2019-...)

Code 02.23220VP

Version 01102023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right trailing arm protection	02.23203	1
2	Rear left trailing arm protection	02.23204	1
3	Angle (80)	02.18805	2
4	Bracket	02.18804	2
5	Bracket 2	02.6408	4
6	Dished washer	14.503	10
7	Bolt M6x16 DIN933	OT.02.02.050	6
8	Bolt M6x20 DIN933	OT.02.02.060	2
9	Bolt M8x20 DIN933	OT.02.02.180	4
10	Bolt M10x30 DIN933	OT.02.02.320	2
11	Washer Ø6/15 SFS3738	OT.04.03.020	6
12	Washer Ø6/18 DIN9021	OT.04.02.020	2
13	Washer Ø10/20 DIN125	OT.04.01.040	4
14	Nyloc nut M10 DIN985	OT.03.02.050	1



With brake: 10;13(x2)
Without brake: 10;13(x2);14

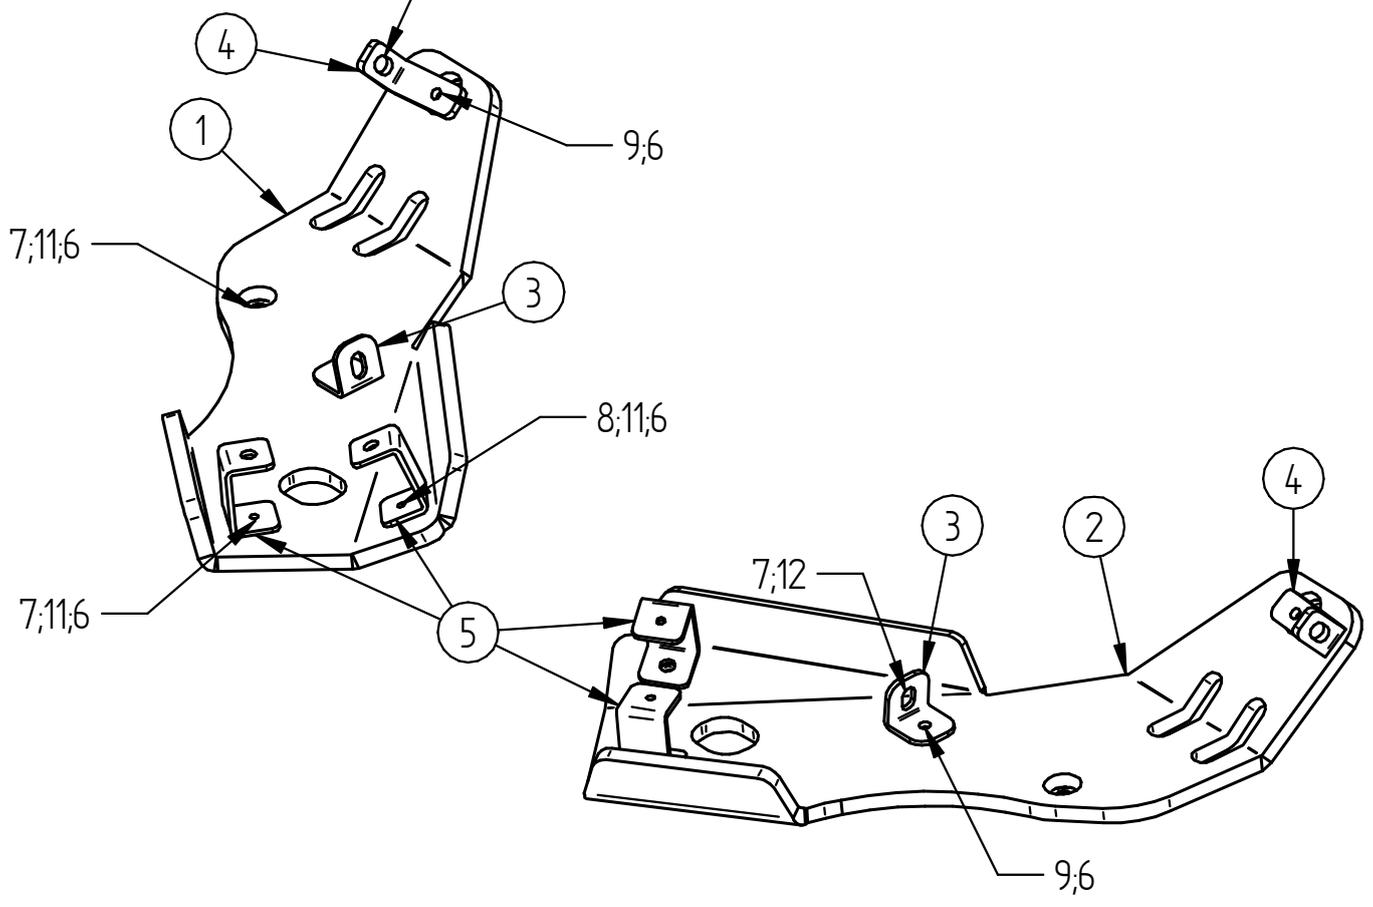


FITTING INSTRUCTIONS

Step 1 Remove original rear trailing arm protections.

Step 2 Install brackets 02.18804, 02.18805. Use thread lock!

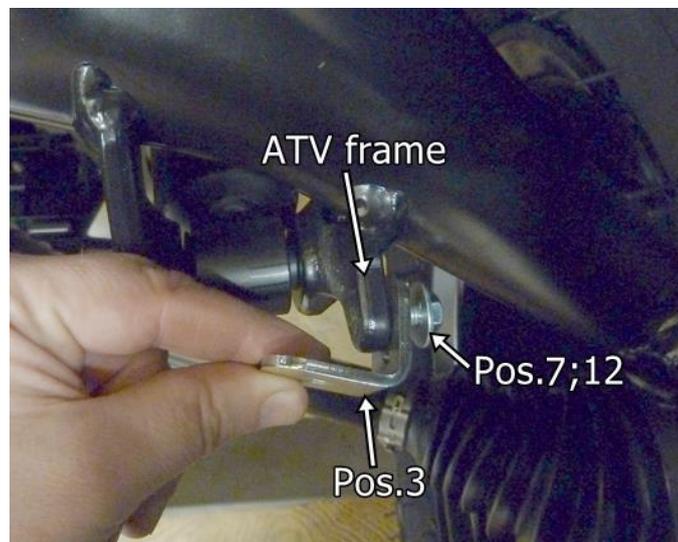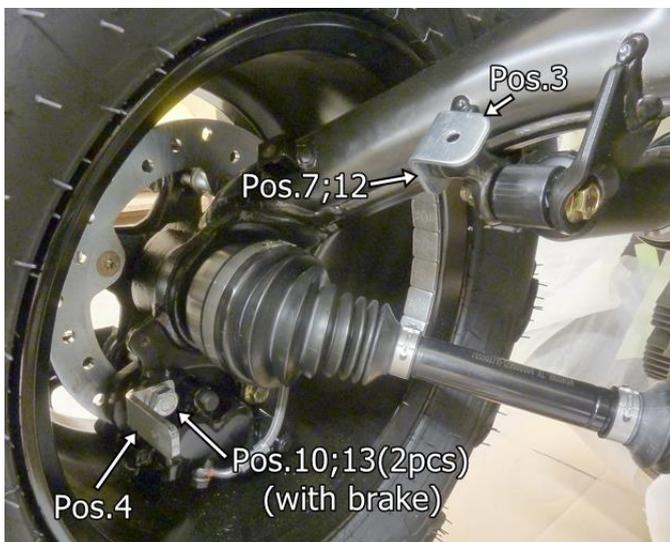

WHEEL WITH BRAKE

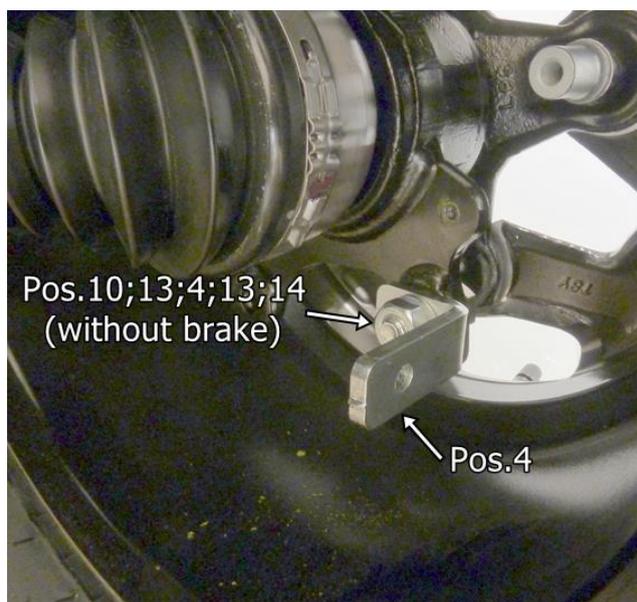

WHEEL WITHOUT BRAKE




NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.10 and brake disc.

Step 3

Install rear trailing arms protections 02.23203 ja 02.23204.

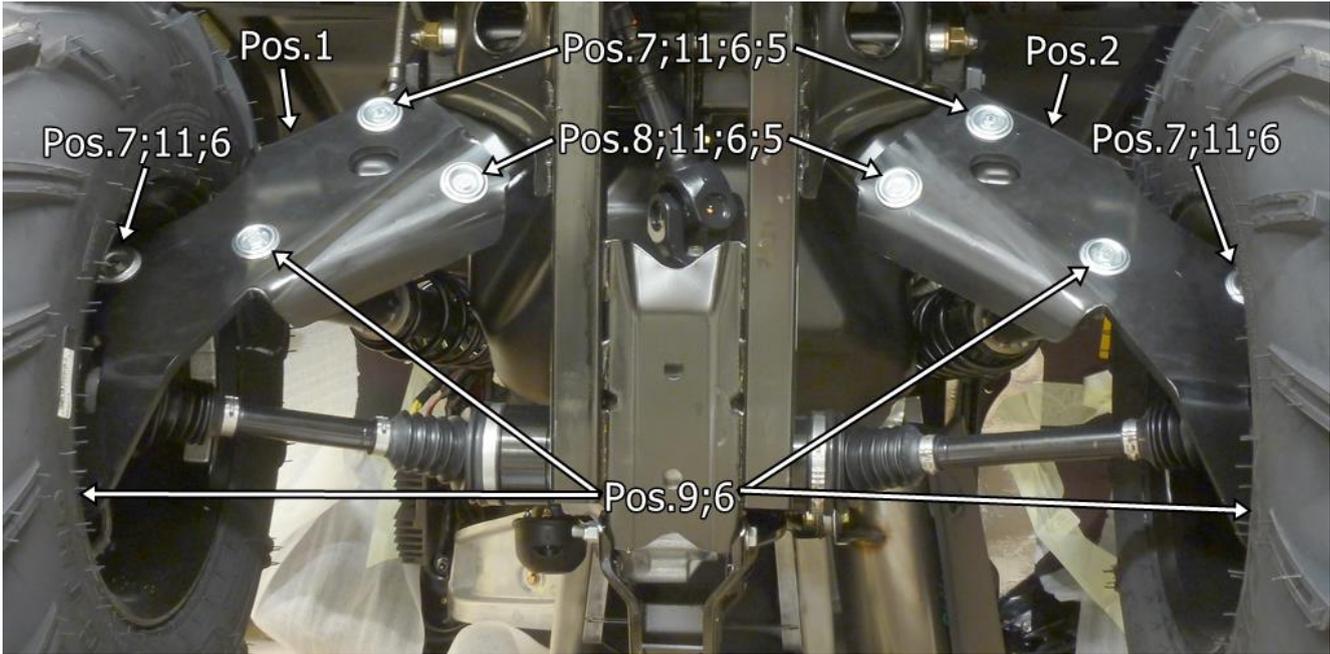

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

