

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

G2 Renegade (2019-2022)

Code 02.23900

Version 02102023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/fh4w6L77

SPECIFICATION


Pos.	Description	Code	Amount
1	Front left arm protection	02.23201K	1
2	Front right arm protection	02.23202K	1
3	Rear right trailing arm protection	02.23203	1
4	Rear left trailing arm protection	02.23204	1
5	Rear part	02.20202	1
6	Middle part	02.8301	1
7	Front part	02.8302K	1
8	Right side protection	02.8308	1
9	Left side protection	02.8309	1
10	Clamp	02.20201	1
11	Angle (80 degrees)	02.18805	2
12	Rear protection angle	02.18804	2
13	Connecting plate (10)	02.8312	2
14	Connecting plate (20)	02.8311	2
15	Installation bracket	02.6408	4
16	Connecting plate	02.5006	11
17	Threaded plate	02.2305	5
18	Bush D30h14	02.707	1
19	Dished washer	14.503	36
20	Bolt M6x16 DIN933	OT.02.02.050	18
21	Bolt M6x20 DIN933	OT.02.02.060	2
22	Bolt M6x25 DIN933	OT.02.02.070	6
23	Bolt M6x30 DIN933	OT.02.02.080	6
24	Bolt M6x40 DIN933	OT.02.02.100	2
25	Bolt M6x90 DIN933	OT.02.02.162	2
26	Bolt M8x20 DIN933	OT.02.02.180	4
27	Bolt M8x35 DIN933	OT.02.02.210	1
28	Bolt M10x30 DIN933	OT.02.02.320	2
29	Bolt M6x20 DIN7991	OT.02.04.030	20
30	Bolt M6x30 DIN7991	OT.02.04.050	2
31	Washer Ø6/15 SFS3738	OT.04.03.020	46
32	Washer Ø6/18 DIN9021	OT.04.02.020	2
33	Washer Ø8/20 SFS3738	OT.04.03.030	1
34	Washer Ø10/20 DIN125	OT.04.01.040	4
35	Conical washer Ø6	14.502	22
36	Nyloc nut M6 DIN985	OT.03.02.030	8

FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install middle part 02.8301.

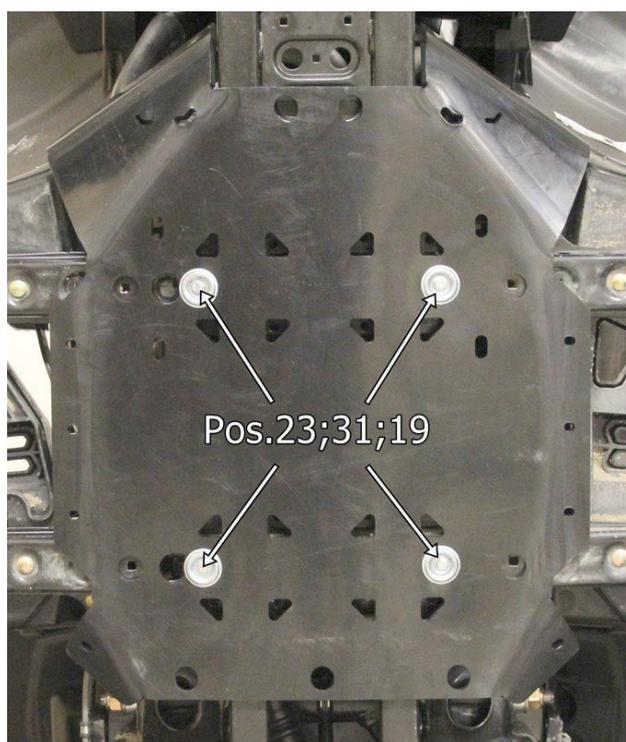


Step 3

Install plates.

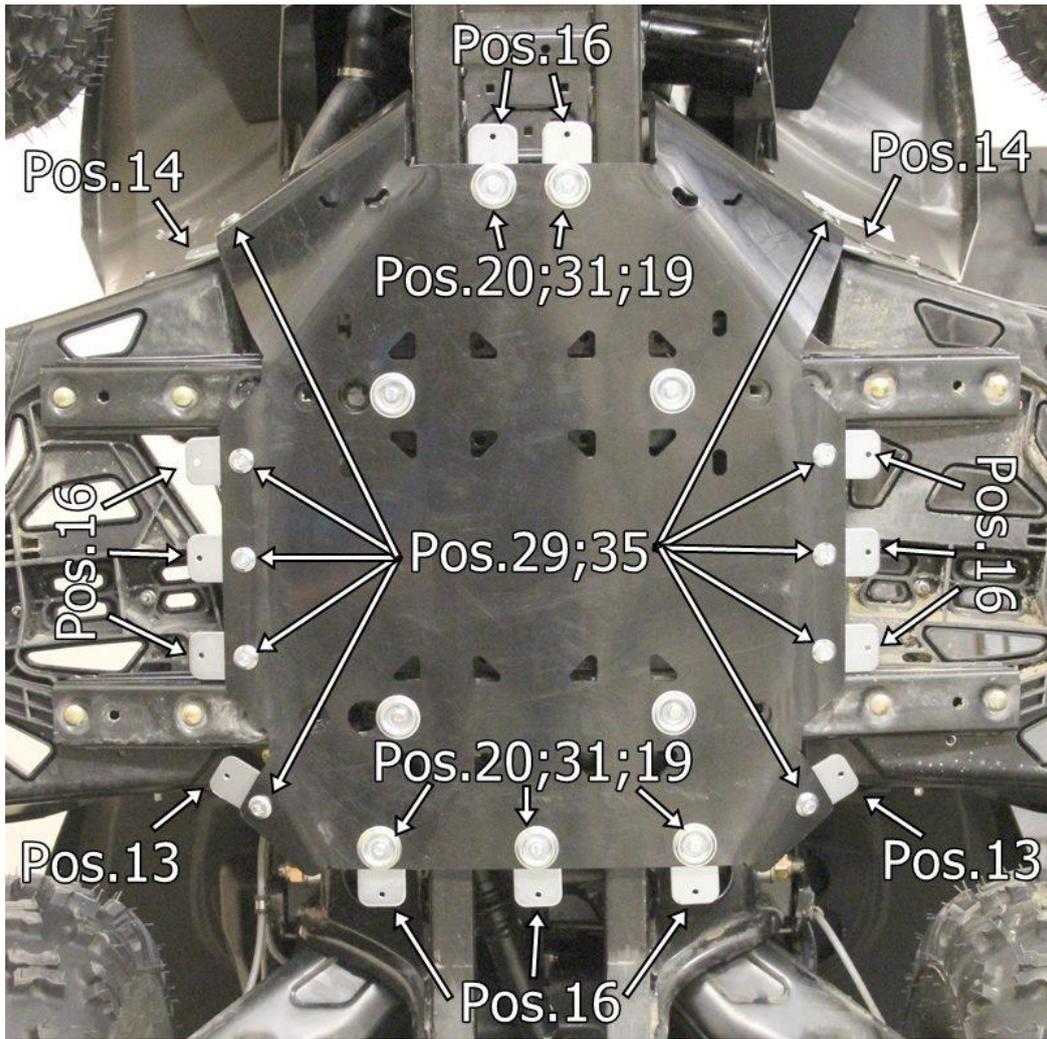



Step 4

Install right (02.8308) and left (02.8309) arm protections.

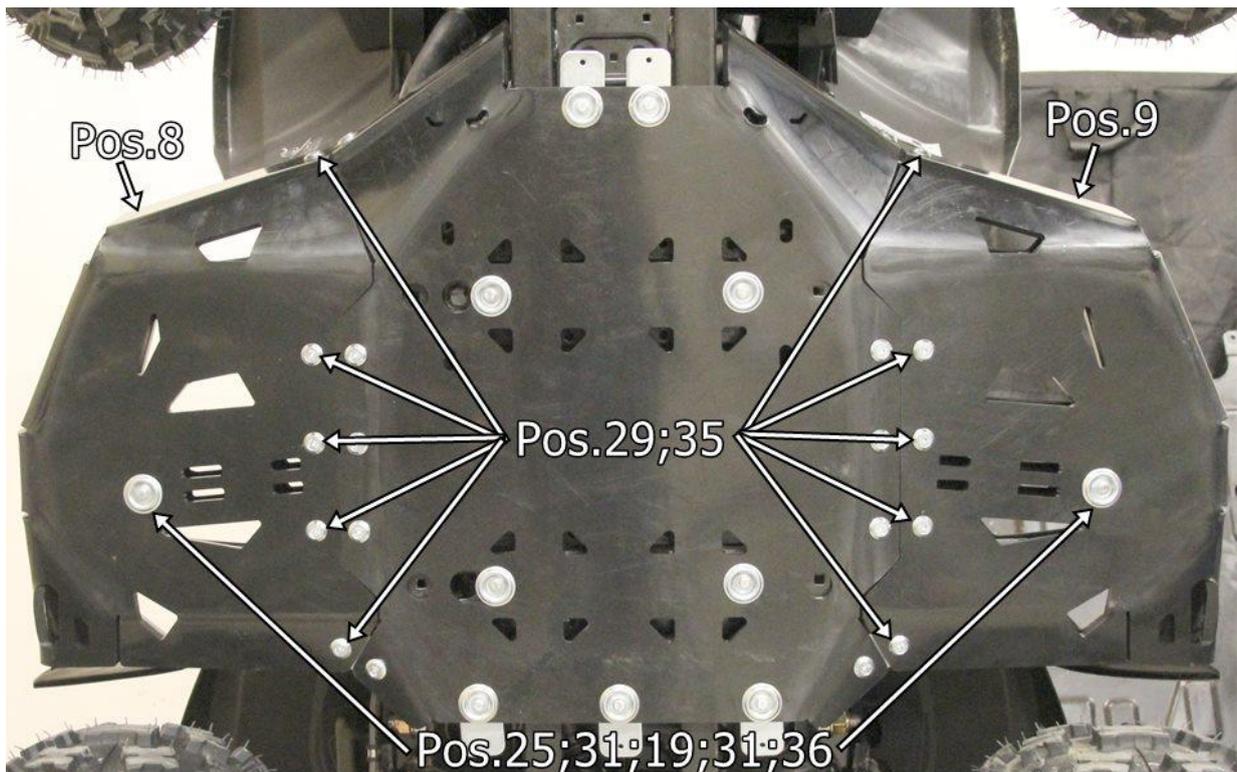


Step 5

Install front part 02.8302K. If you are using CanAm original plow mounting plate (P/N 715004338) cut front protection side bends (see Picture)!

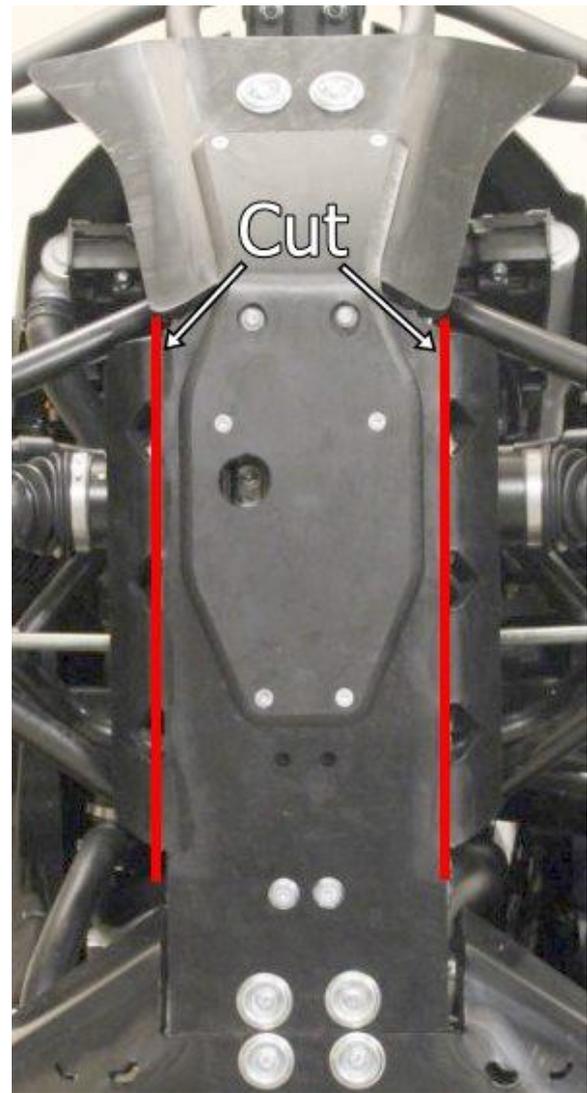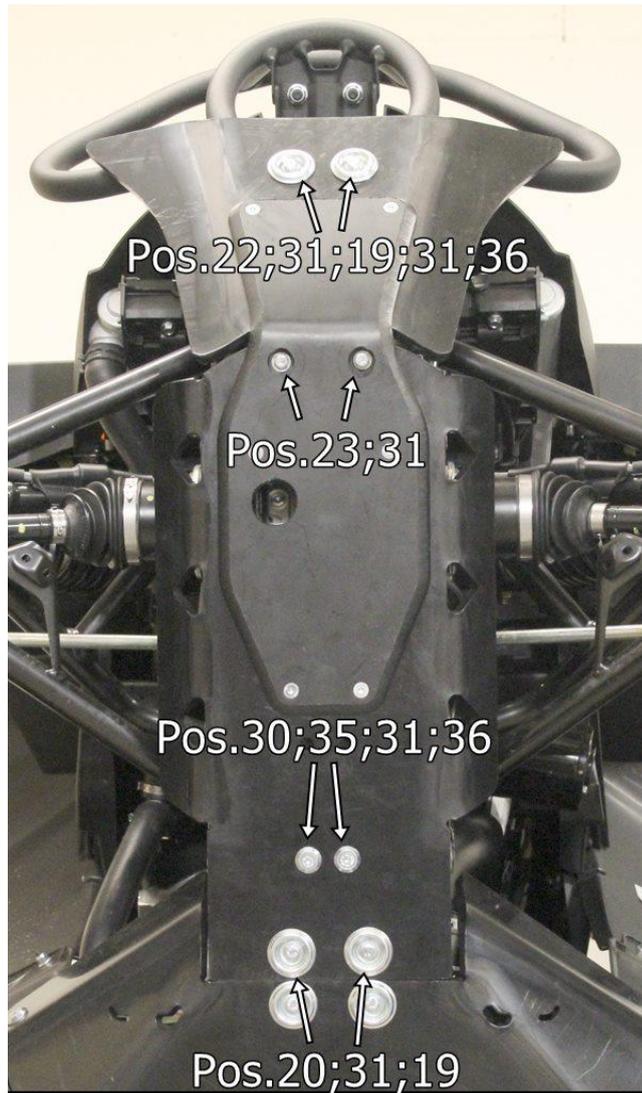

Step 6

Install bush (Pos.18) between plate (Pos.10) and frame.

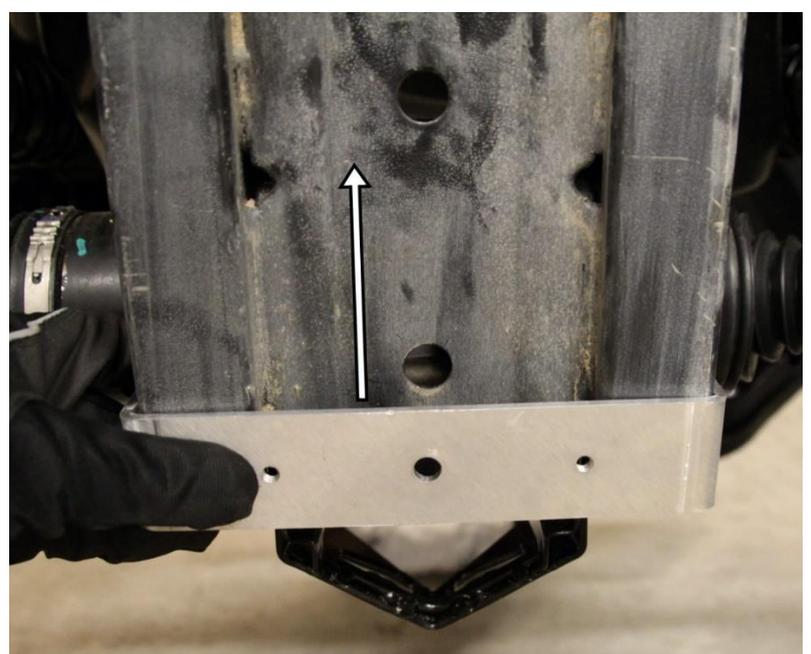


Step 7

Install rear part 02.20202.



Sam 8

Install front A-arms protections 02.23201K and 02.23202K. Place the plate 02.2305 between a-arm protection and ATV a-arm frame.

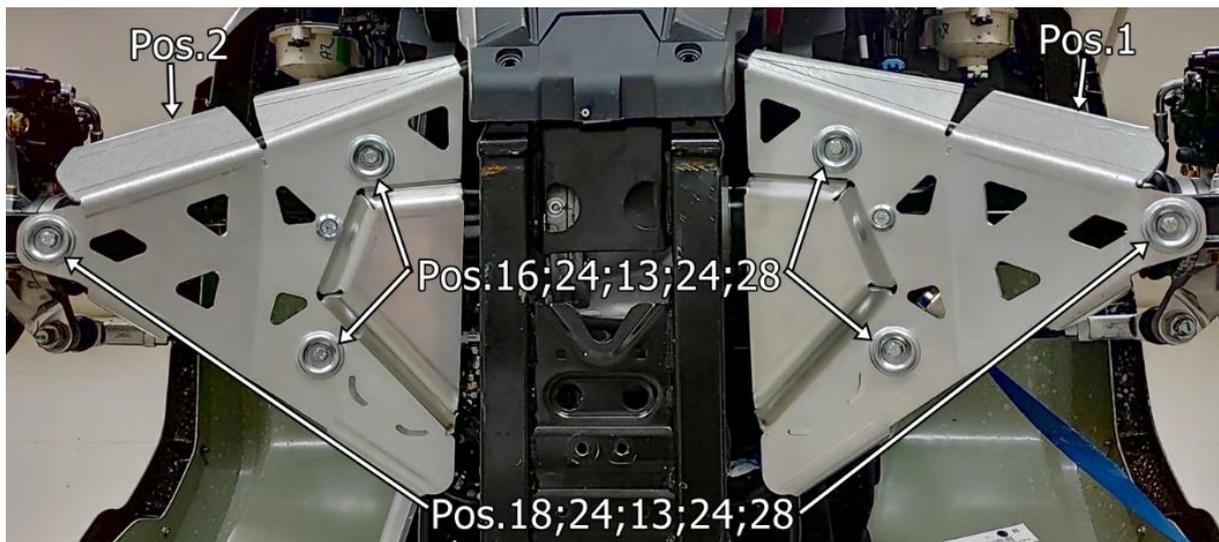





NB!

If you are using CanAm original snow plow adapter, then remove cover, indicated with arrow.



Samm 9

Install brackets 02.18804 and 02.18805.

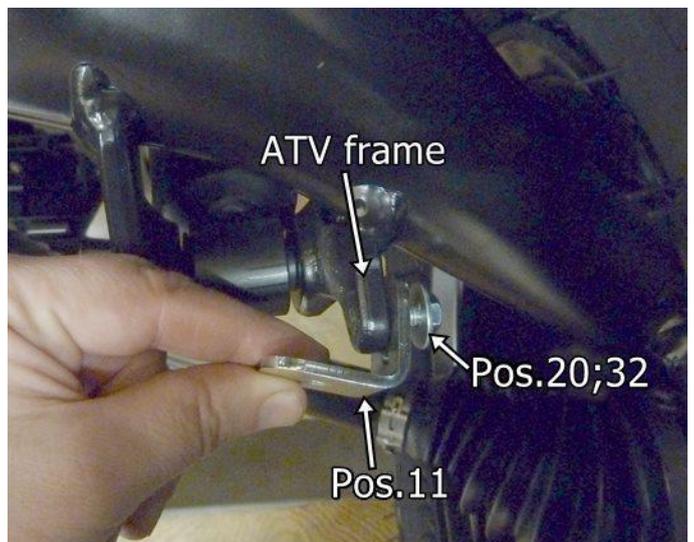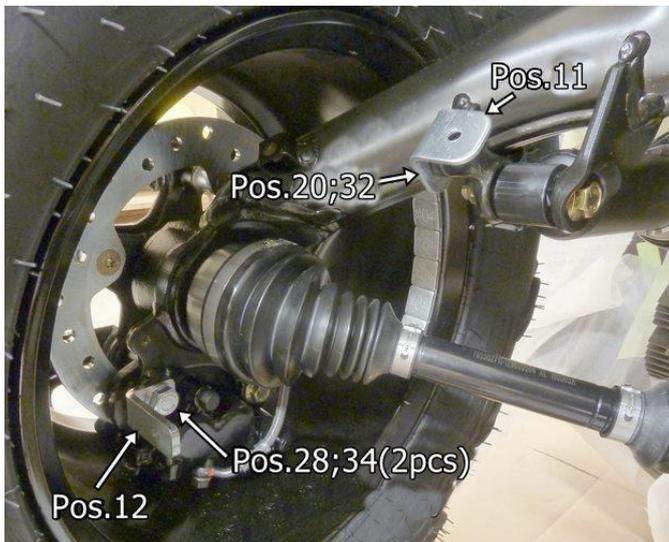


NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.28 and brake disc.

Step 10

Install rear trailing arms protections 02.23203 and 02.23204.
Use installation brackets 02.6408.

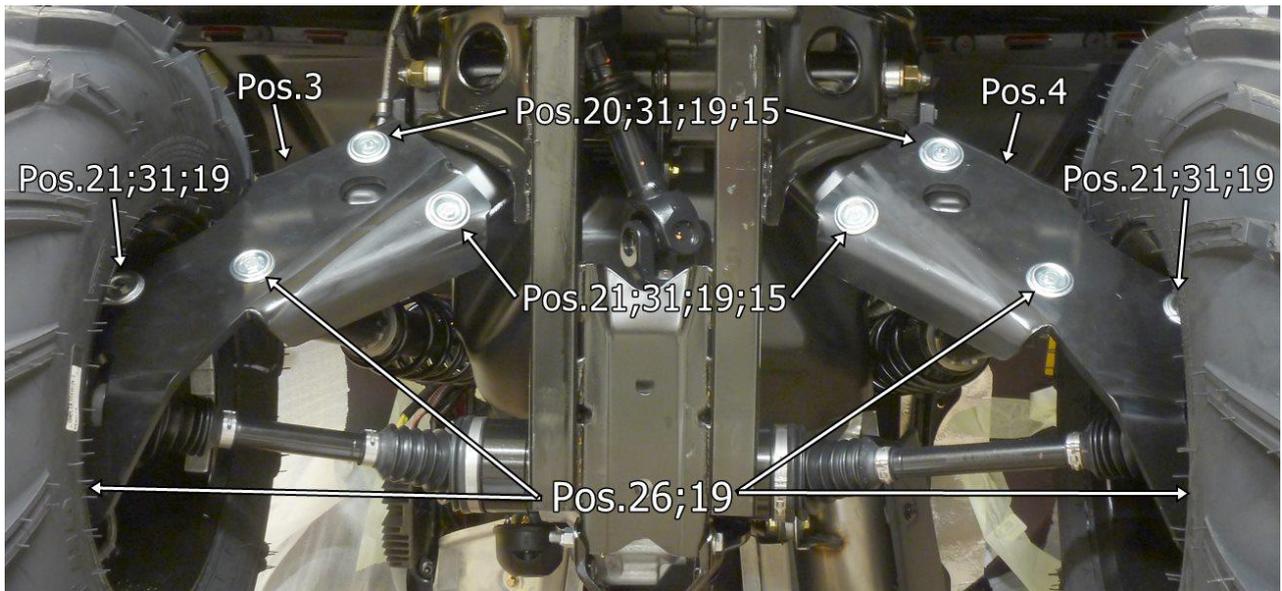

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

