

IRON BALTIC

ALUMINIUM SKID PLATE

LINHAI

500

Code 02.24200

Version 02102023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/MlyooBYa


SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.24201	1
2	Middle protection	02.24202	1
3	Rear protection	02.24203	1
4	Front right arm protection	02.24204	1
5	Front left arm protection	02.24205	1
6	Rear right arm protection	02.24206	1
7	Rear left arm protection	02.24207	1
8	Bracket	02.24208K	2
9	Installation bracket	02.4606	2
10	Installation plate	02.5006	6
11	Installation bracket	02.8210	8
12	Dished washer	14.503	40
13	Bolt M6x14 DIN933	OT.02.02.040	18
14	Bolt M6x16 DIN933	OT.02.02.050	8
15	Bolt M6x25 DIN933	OT.02.02.070	10
16	Bolt M8x25 DIN933	OT.02.02.190	2
17	Bolt M8x45 DIN933	OT.02.02.230	2
18	Washer Ø6/15 SFS3738	OT.04.03.020	36
19	Washer Ø8/20 SFS3738	OT.04.03.030	2
20	Nylock nut M8 DIN985	OT.03.02.040	2

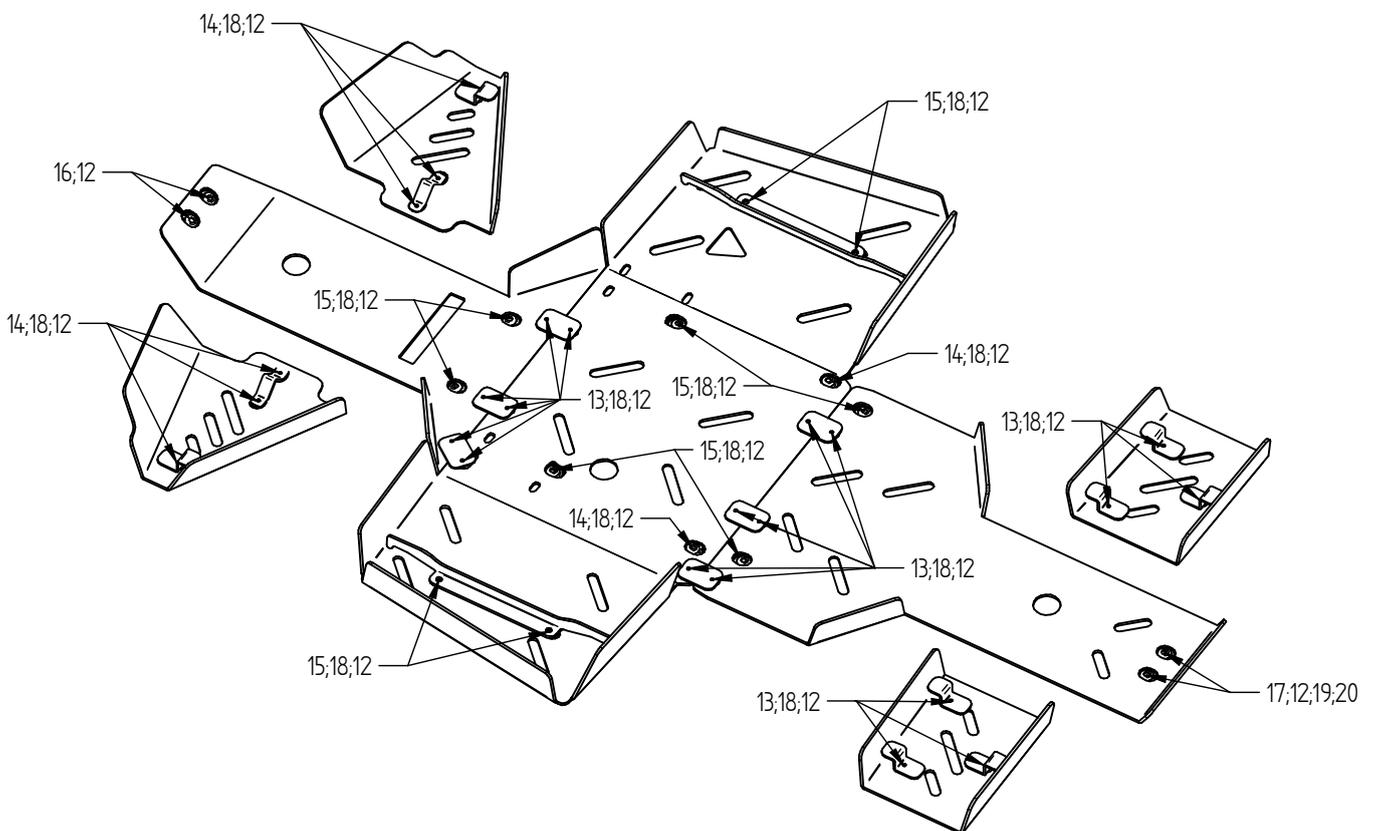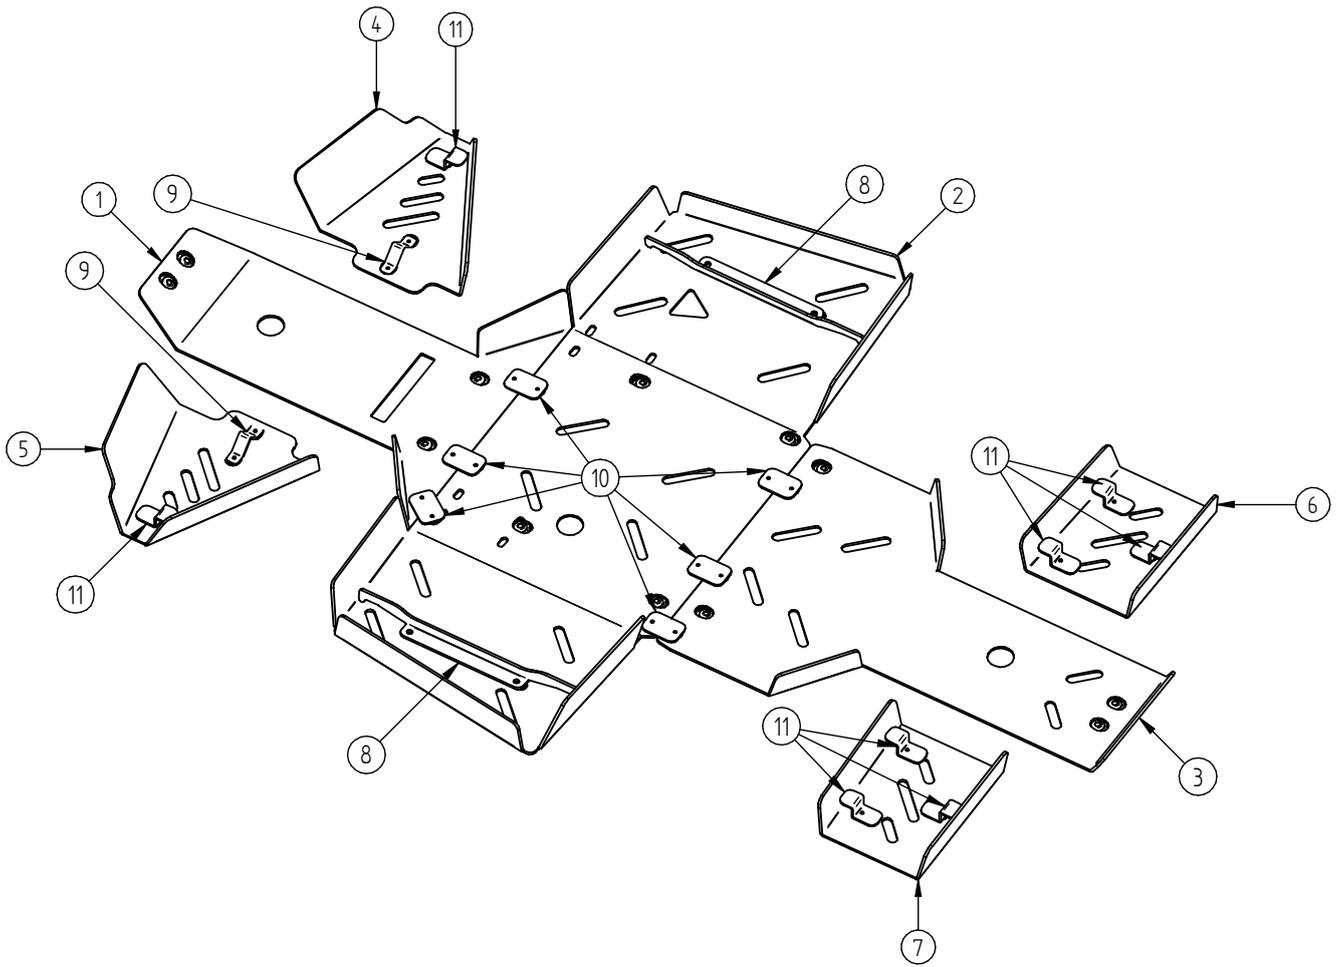


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

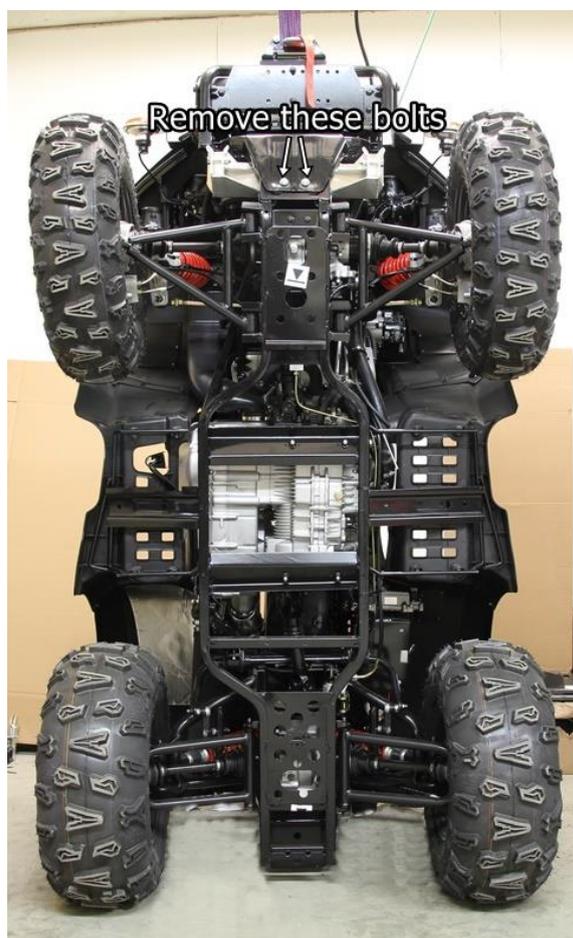


Step 2 Install front protection 02.24201.

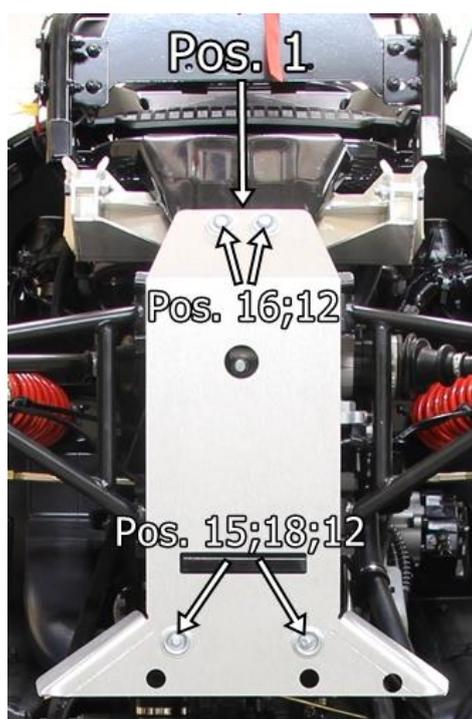


Step 3

Install plates 02.5006 and brackets 02.24208.

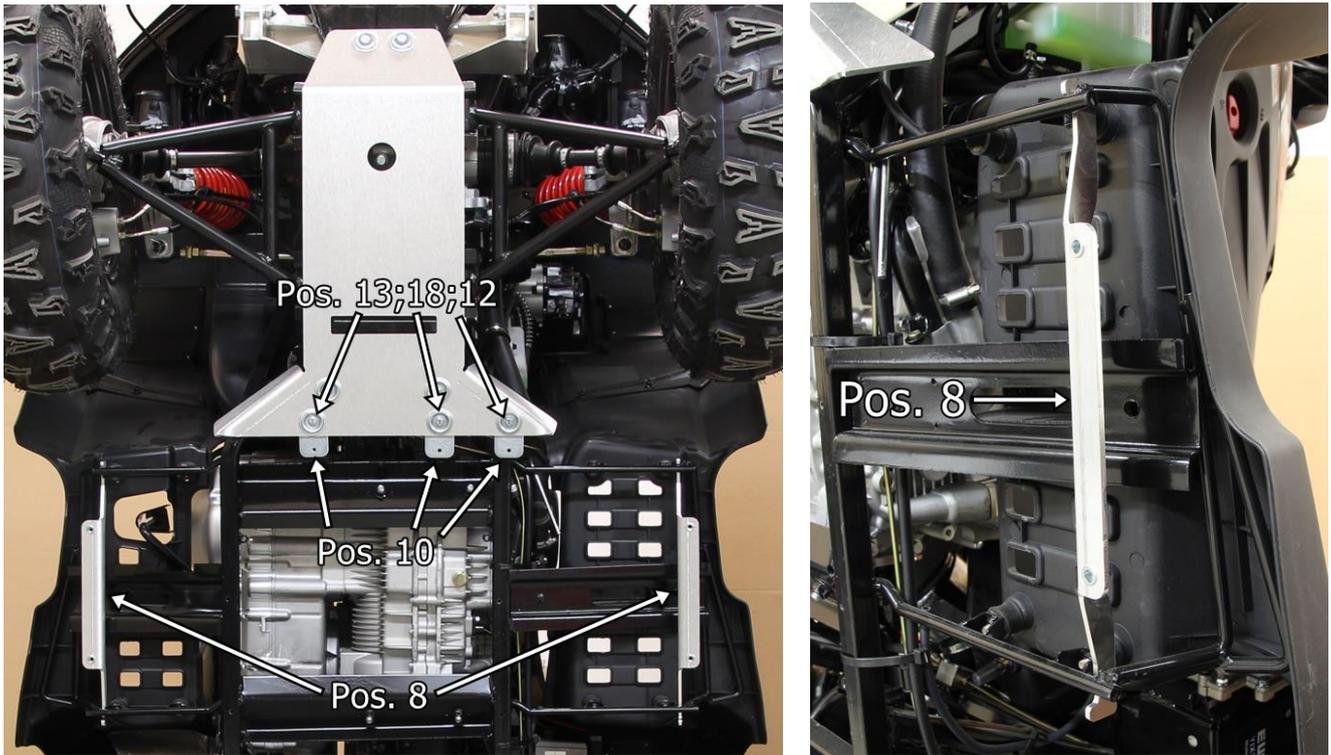


Step 4

Install middle part 02.24202.

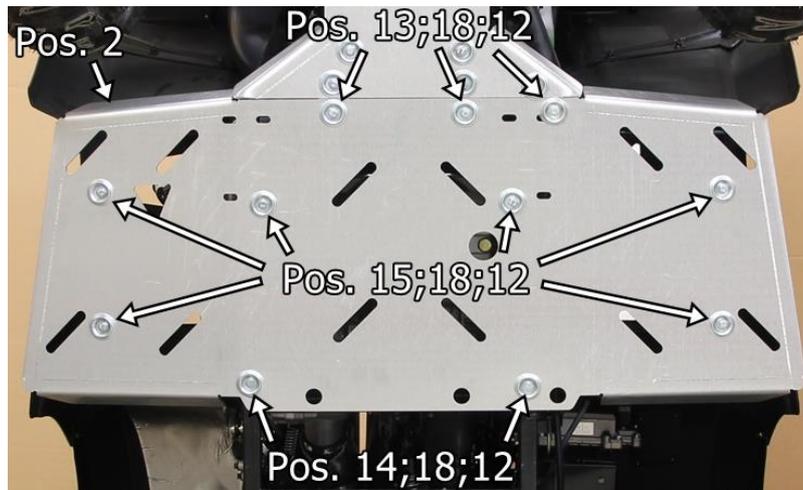

Step 5

Install plates 02.5006 to the middle part.

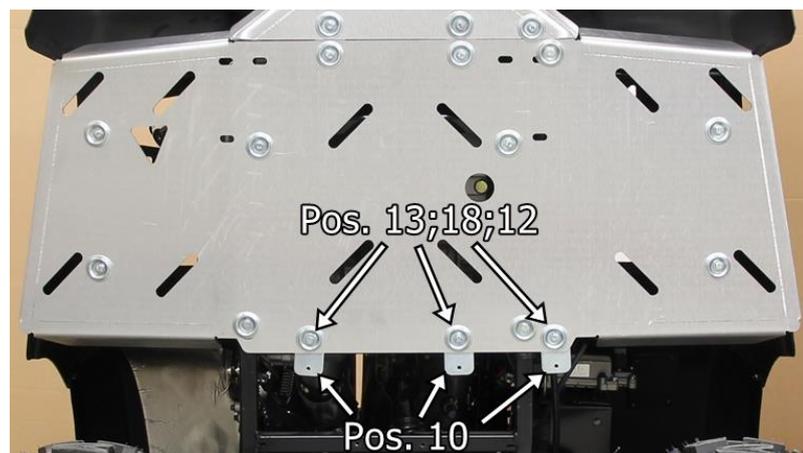



Step 6

Install rear part 02.24203.




Step 7

Install front arm protections 02.24204 and 02.24205.
Use brackets 02.4606 and 02.8210.

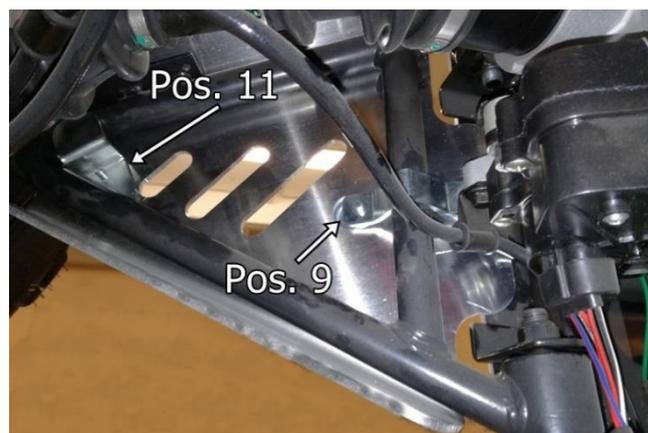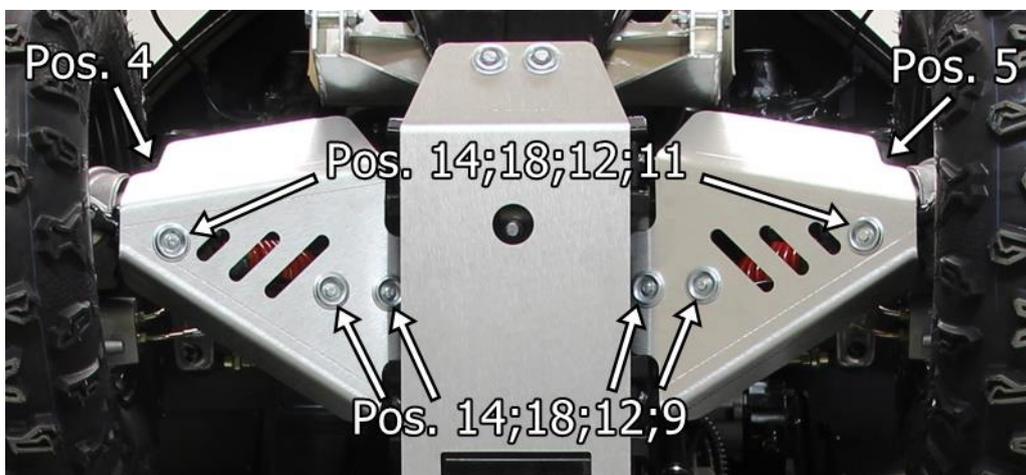

Step 8

Install rear arm protections 02.24206 and 02.24207. Use brackets 02.8210.

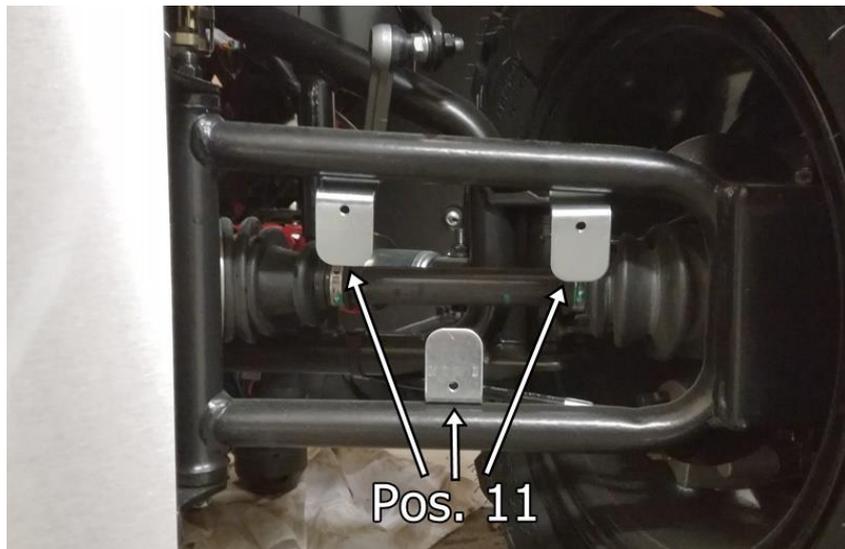

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

