



[code.ironbaltic.com/u/HGgcTx1r](https://code.ironbaltic.com/u/HGgcTx1r)


## ALUMINIUM SKID PLATE

# CAN AM

## Outlander 6x6 (2019-...)

Code 02.24800

Version 05102023

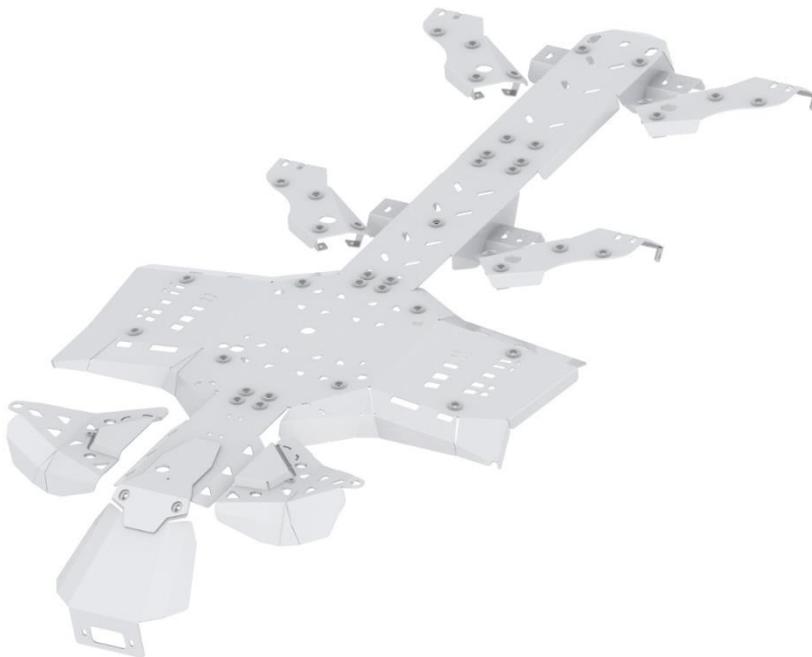

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Front left A-arm protection	02.23101S	1
2	Front right A-arm protection	02.23102S	1
3	Rear right trailing arm protection	02.23103	2
4	Rear left trailing arm protection	02.23104	2
5	Rear part 1	02.20301K	1
6	Rear part 2	02.20302K	1
7	Middle part	02.8401K	1
8-1	Front part (-2022)	02.8402K	1
8-2	Front part 2 (2023+)	02.8406K	1
9	Rear part bracket	02.20303	1
10	Angle (80)	02.18805	4
11	Bracket	02.18804	4
12	Bush for front part	02.10005	2
13	Plate for front part	02.10004	1
14	Bracket 2	02.6408	8
15	Plate	02.5006	6
16	Plate	02.2305	3
17	Bracket	03.3502	4
18	Dished washer	14.503	51
19	Bolt M6x12 DIN 933	OT.02.02.030	16
20	Bolt M6x16 DIN 933	OT.02.02.050	12
21	Bolt M6x20 DIN 933	OT.02.02.060	4
22	Bolt M6x35 DIN 933	OT.02.02.090	2
23	Bolt M6x50 DIN 933	OT.02.02.120	4
24	Bolt M8x16 DIN 933	OT.02.02.170	14
25	Bolt M8x35 DIN 933	OT.02.02.210	1
26	Bolt M6x25 DIN 7991	OT.02.04.040	3
27	Bolt M8x50 DIN 7991	OT.02.04.200	2
28	Bolt M10x30 DIN 933	OT.02.02.320	4
29	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
30	Washer Ø6/15 SFS 3738	OT.04.03.020	49
31	Washer Ø6/18 DIN9021	OT.04.04.020	4
32	Washer Ø8/20 SFS 3738	OT.04.04.030	10
33	Washer Ø10/20 DIN 125	OT.04.01.040	10
34	Conical washer Ø6	14.502	3
35	Conical washer Ø8	14.501	2
36	Nyloc nut M6 DIN 985	OT.03.02.030	13
37	Nyloc nut M8 DIN 985	OT.03.02.040	10
38	Nyloc nut M10 DIN 985	OT.03.02.050	2





# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.

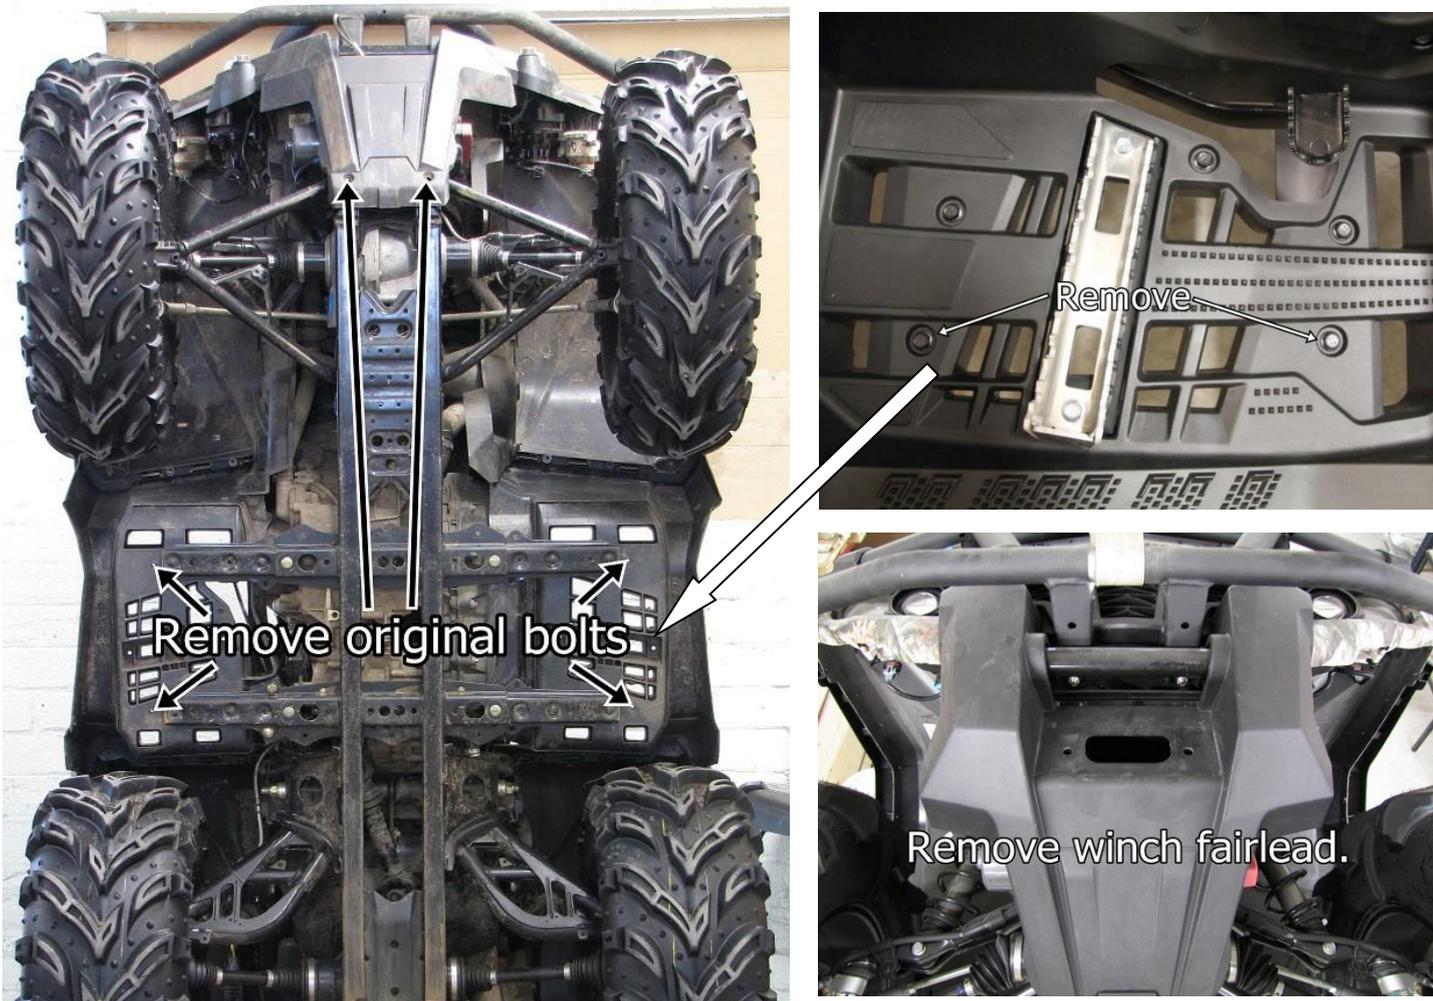

**Step 2** Install brackets 03.3502. Place brackets same plane as frame.

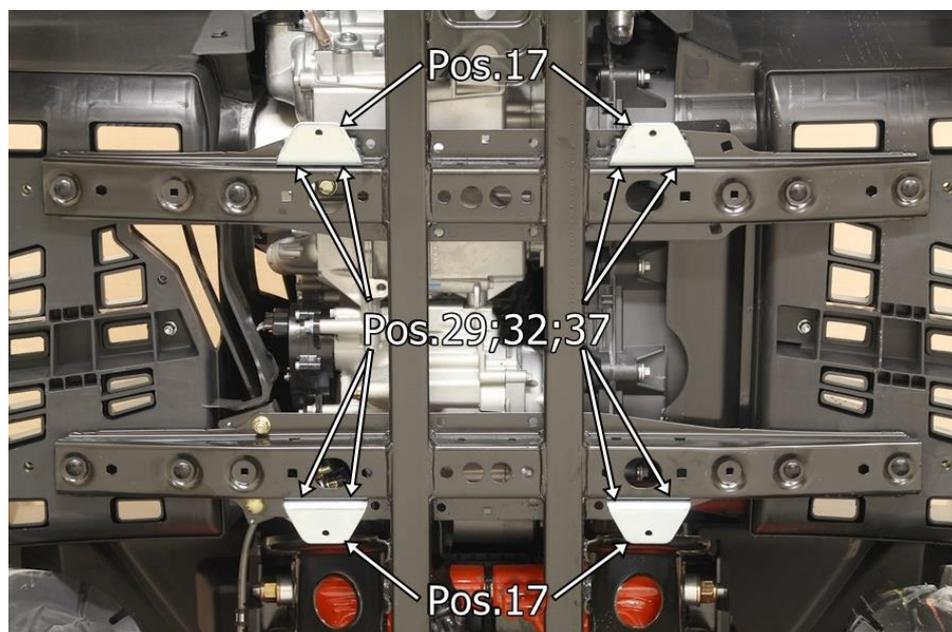


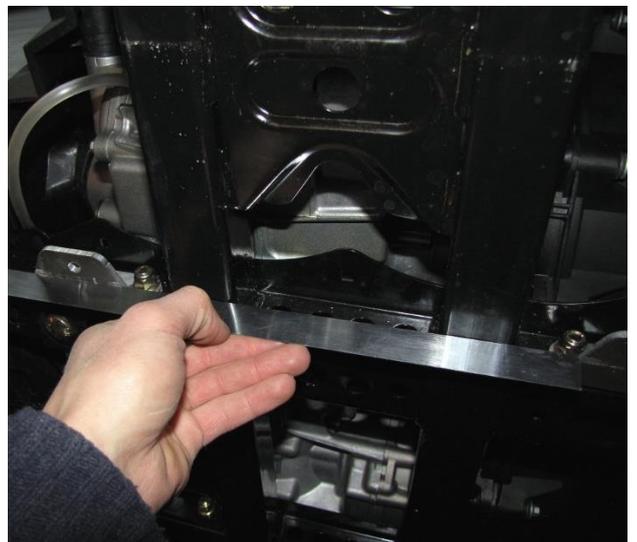

**Step 3** Install middle part 02.8401K.



**Step 4** Install plates 02.5006.



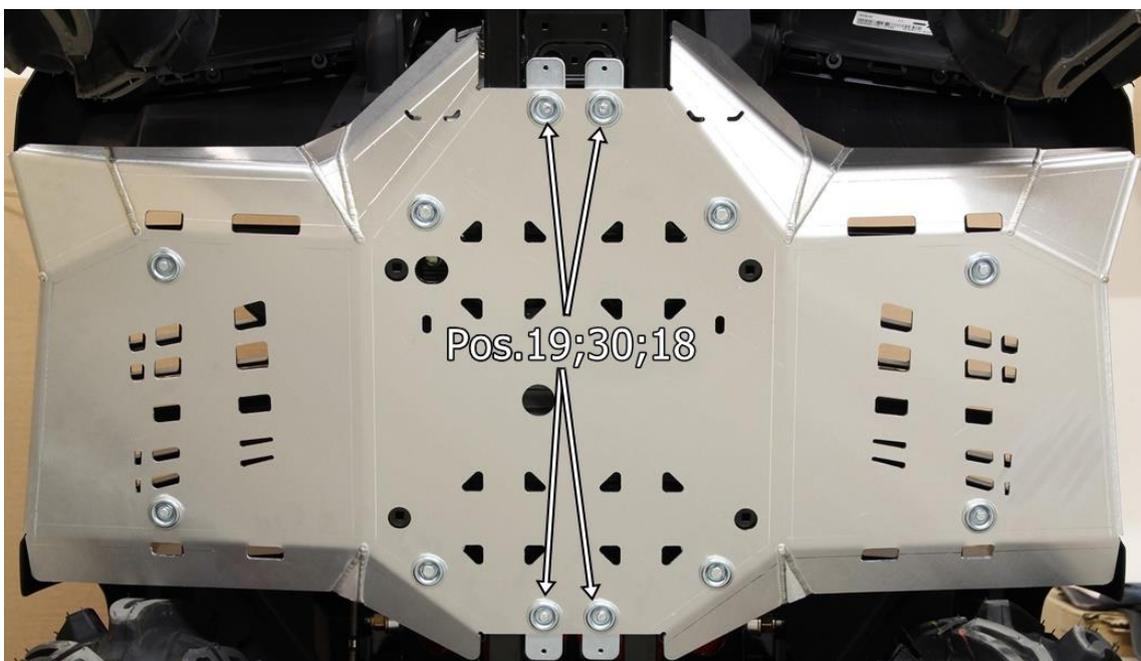





## Step 5

Install front protection 02.8402K or 02.8406K.

a) Use 02.8406K front part on models from MY2023. NB! There will be gap between front part and Pos.11 plate, this is normal.


b) If you are using CanAm OE mounting plate (P/N 715004338), keep original bushes under new bushes and do not install plate 02.10004 (Pos.11), also cut front protection side bends (see Picture)!When installing with OE mounting plate, use plow OE bolts (see Picture).

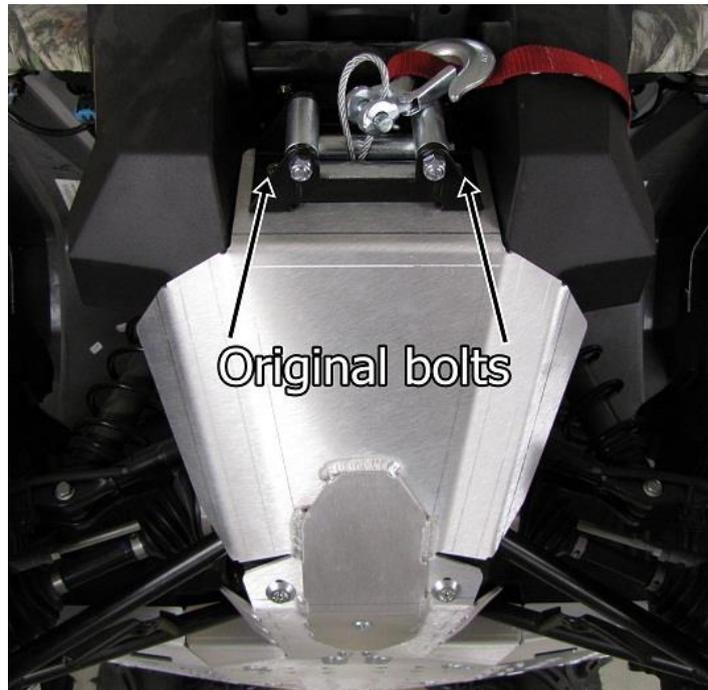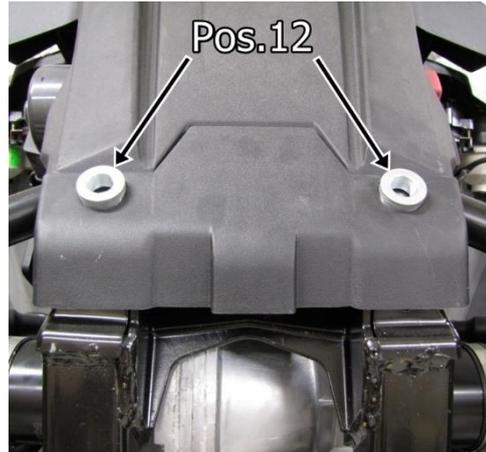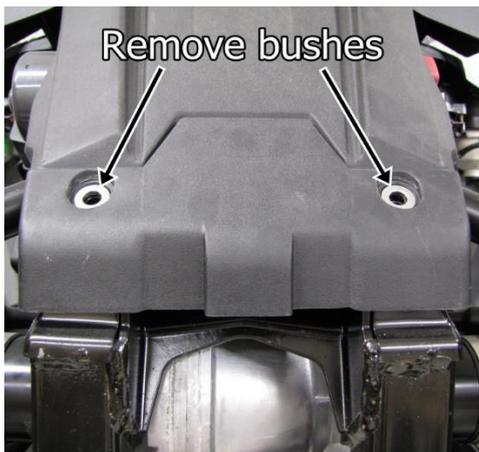

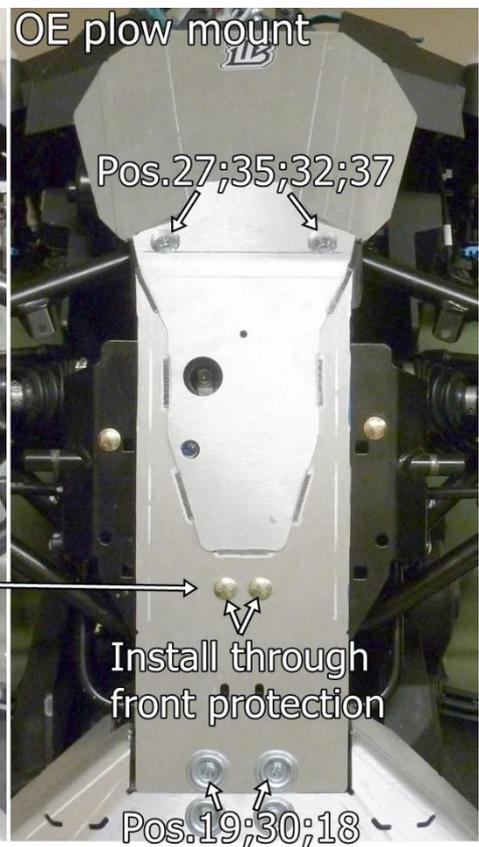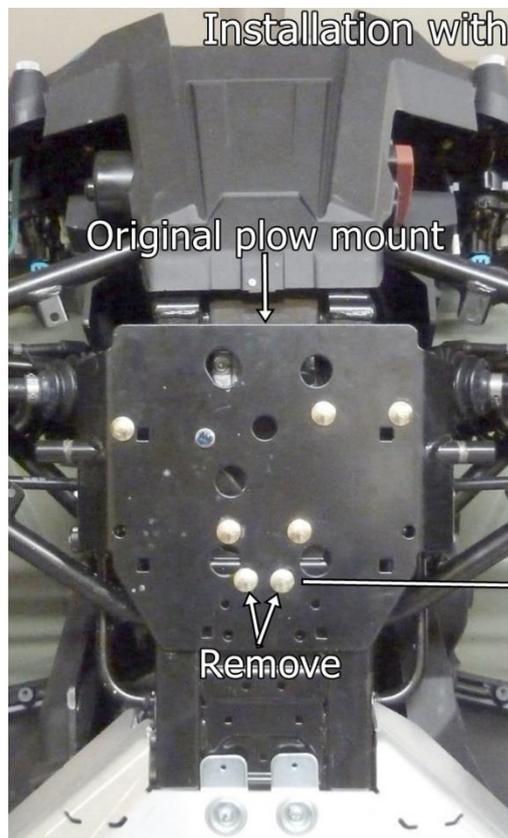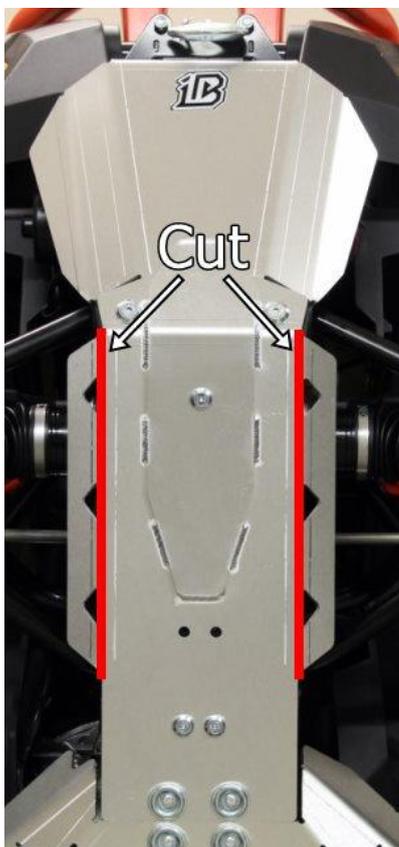


**Step 6**

Install rear part 02.20301K and plates 02.5006. For easier installation, we recommend removing one wheel.

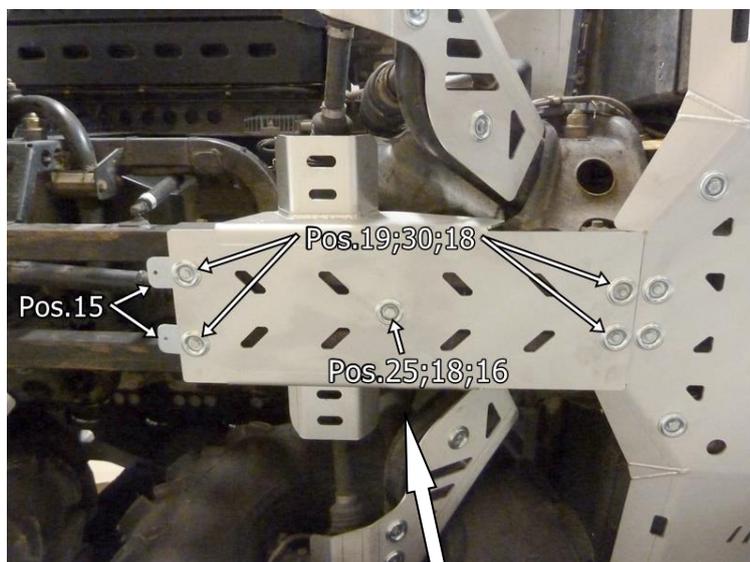


**Step 7**

Install second rear protection 02.20302K.

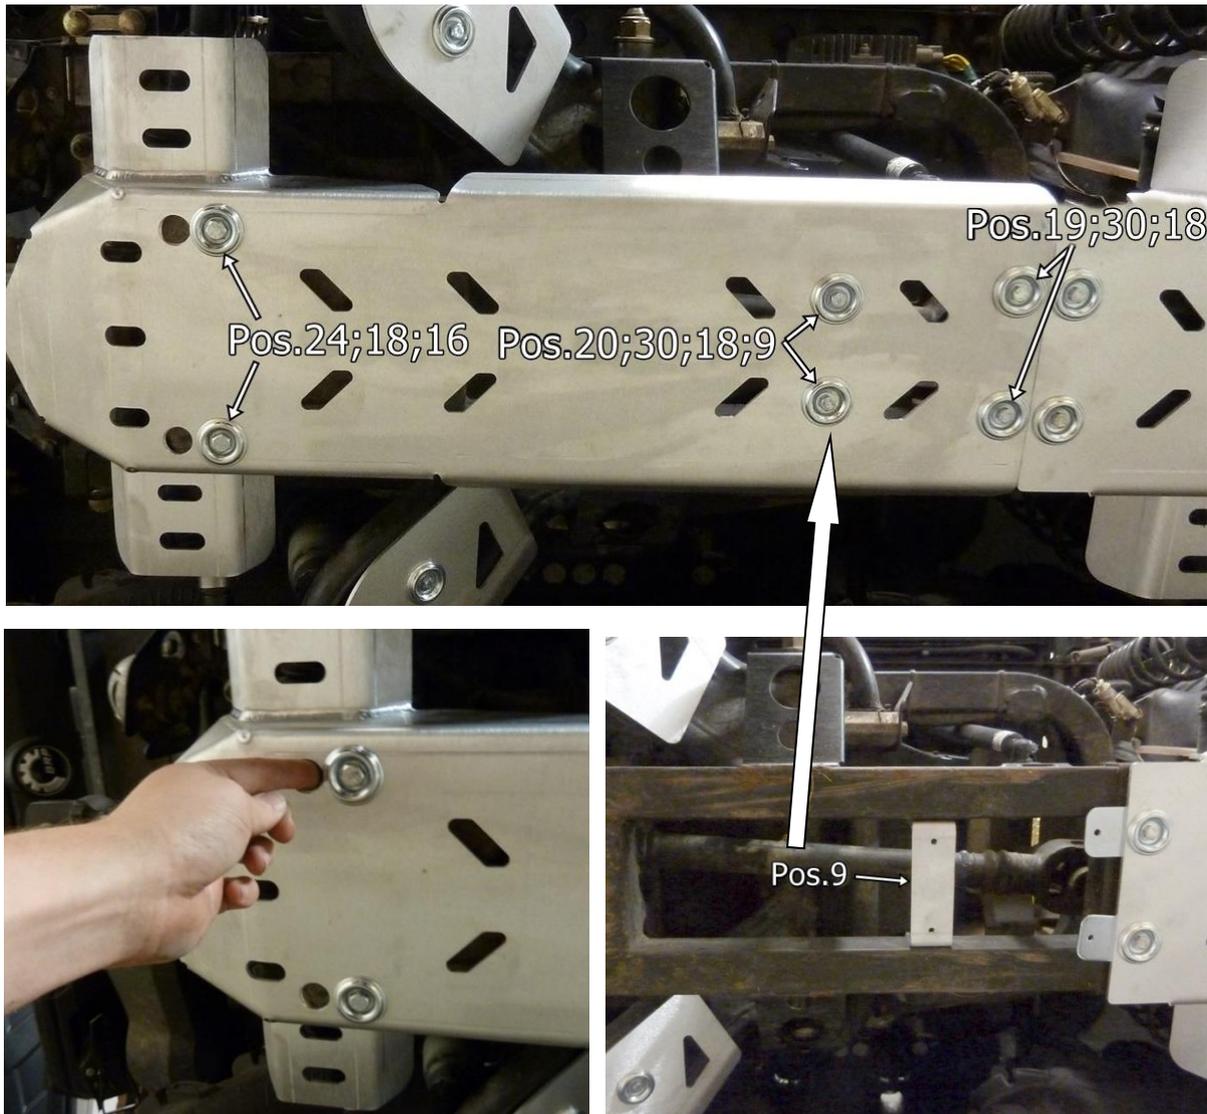

**Step 8**


Install front A-arms protections 02.23101S and 02.23102S.

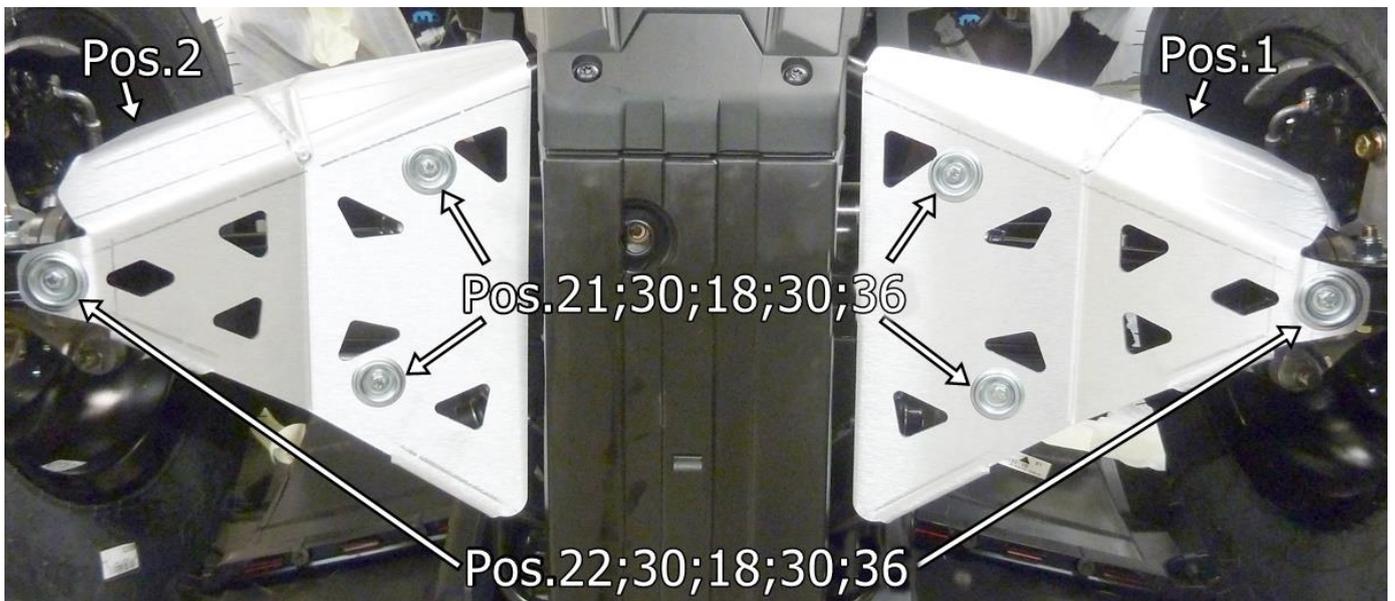





**NB!**

If you are using CanAm original snow plow adapter, then remove cover and cut section indicated with arrows.

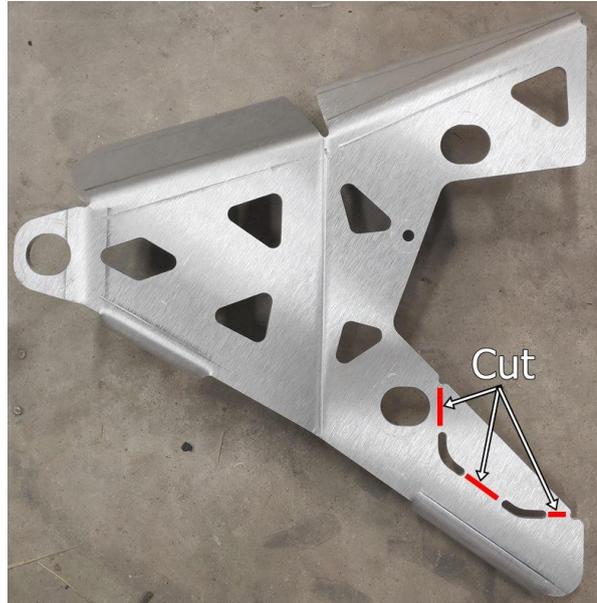

**Step 9**

Install brackets 02.18804 and 02.18805.

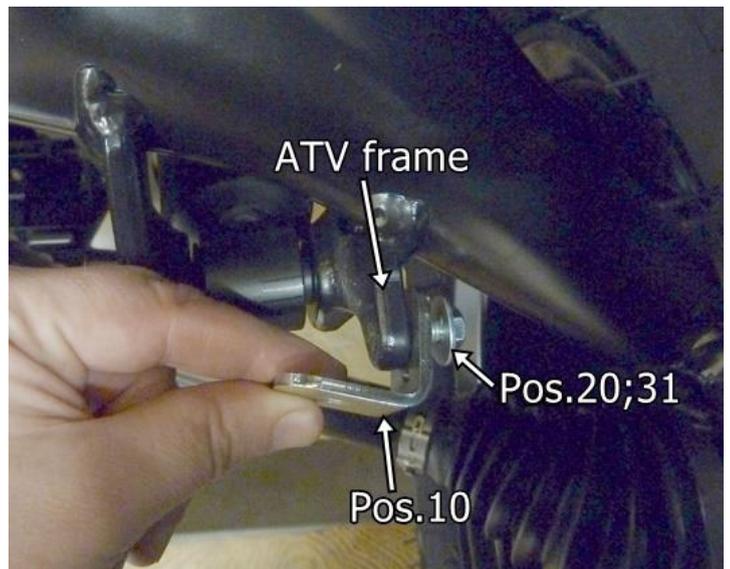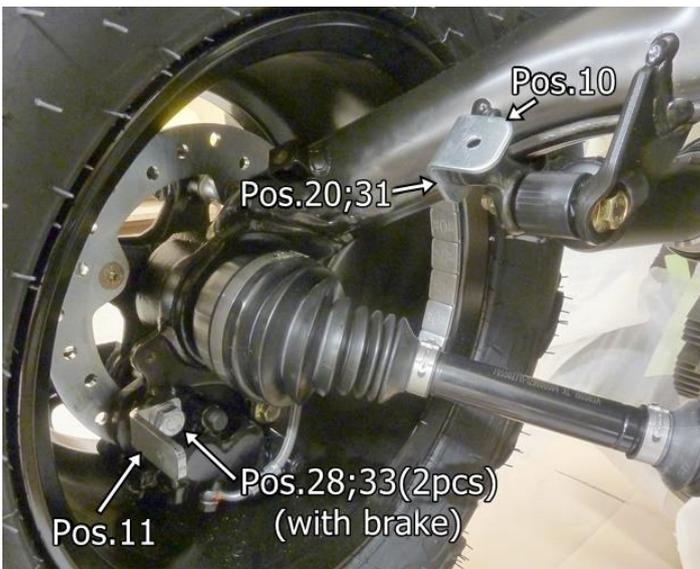

**WHEEL WITH BRAKE**



**WHEEL WITHOUT BRAKE**





**NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.28 and brake disc.  
If needed add third Ø10 washer for distance!**

**Step 10**

Install rear trailing arms protections 02.23103 and 02.23104.

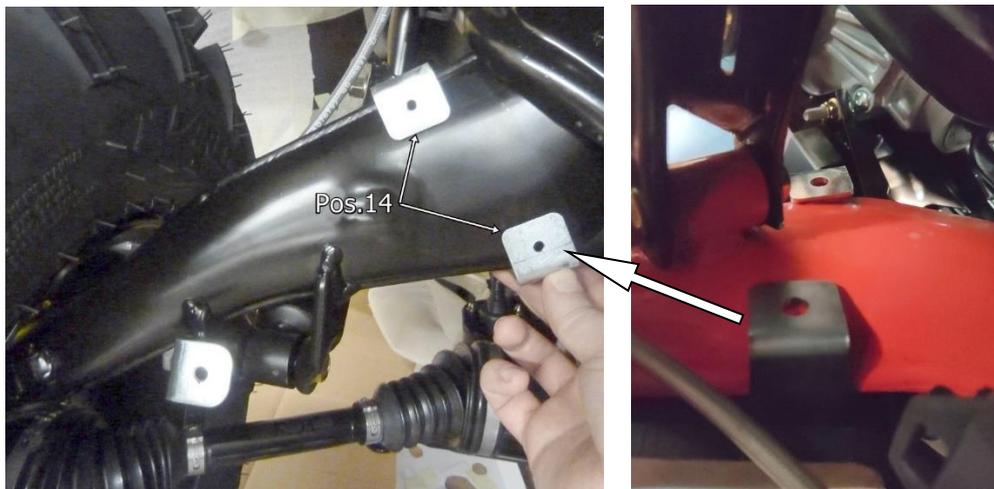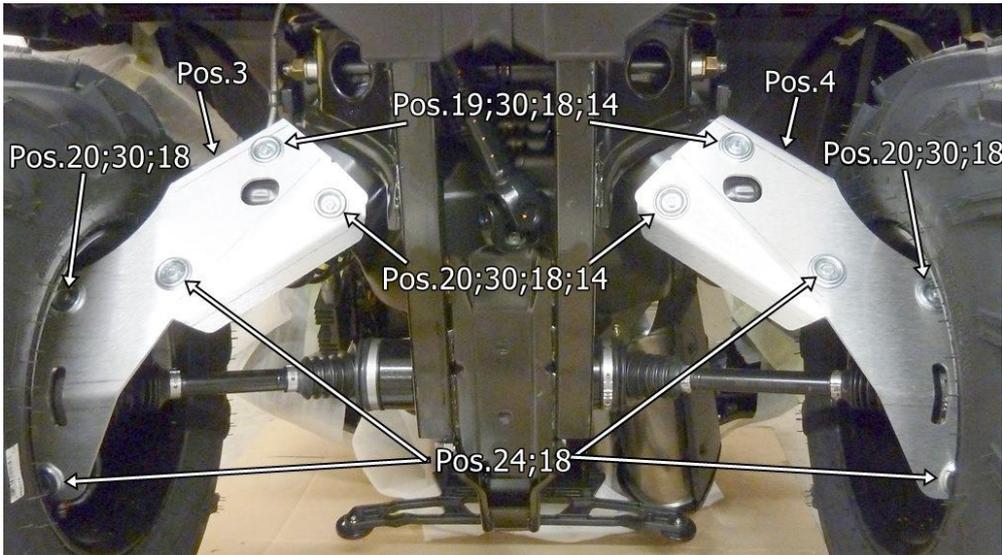



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

