



code.ironbaltic.com/u/BxwICdqD


ALUMINIUM SKID PLATE

CAN AM

Outlander 6x6 MAX (2019-...)

Code 02.25100

Version 05102023

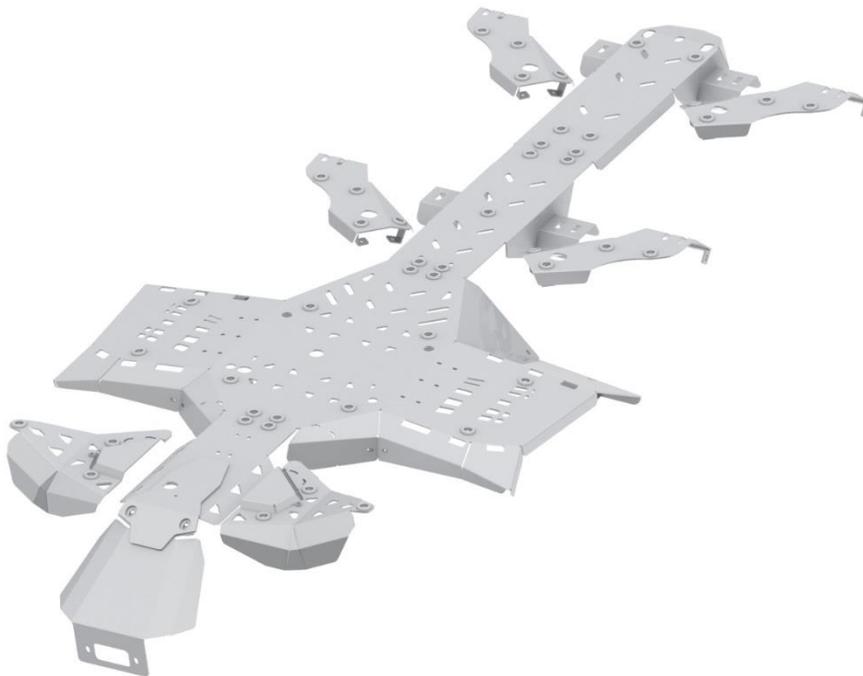

Keep this manual for future reference!



If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION



Pos.	Description	Code	Amount
1	Front left arm protection	02.23101S	1
2	Front right arm protection	02.23102S	1
3	Rear right trailing arm protection	02.23103	2
4	Rear left trailing arm protection	02.23104	2
5	Rear part 1	02.22901K	1
6	Rear part 2	02.20302K	1
7	Middle part	02.10001	1
8	Right side part	02.10002	1
9	Left side part	02.10003	1
10-1	Front part (-2022)	02.8402K	1
10-2	Front part 2 (2023+)	02.8406K	1
11	Rear part bracket	02.20303	1
12	Bracket (80)	02.18805	4
13	Rear arm protection bracket	02.18804	4
14	Connecting plate (30)	02.10007	2
15	Connecting plate (40)	02.10006	2
16	Bush for front part	02.10005	2
17	Plate for front part	02.10004	1
18	Bracket 2	02.6408	8
19	Connecting plate	02.5006	12
20	Threaded plate	02.2305	3
21	Bracket	03.3502	4
22	Bracket	03.1502	2
23	Dished washer	14.503	51
24	Bolt M6x12 DIN 933	OT.02.02.030	16
25	Bolt M6x16 DIN 933	OT.02.02.050	12
26	Bolt M6x20 DIN 933	OT.02.02.060	6
27	Bolt M6x35 DIN 933	OT.02.02.090	2
28	Bolt M6x50 DIN 933	OT.02.02.120	4
29	Bolt M8x16 DIN 933	OT.02.02.170	16
30	Bolt M8x35 DIN 933	OT.02.02.210	1
31	Bolt M10x30 DIN 933	OT.02.02.320	4
32	Bolt M6x16 DIN 7991	OT.02.04.020	20
33	Bolt M6x25 DIN 7991	OT.02.04.040	3
34	Bolt M8x50 DIN 7991	OT.02.04.200	2
35	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
36	Washer Ø6/15 SFS 3738	OT.04.03.020	49
37	Washer Ø6/18 DIN9021	OT.04.04.020	4
38	Washer Ø8/20 SFS 3738	OT.04.04.030	12
39	Washer Ø10/20 DIN 125	OT.04.01.040	10
40	Conical washer Ø6	14.502	23
41	Conical washer Ø8	14.501	2
42	Nyloc nut M6 DIN 985	OT.03.02.030	13
43	Nyloc nut M8 DIN 985	OT.03.02.040	10
44	Nyloc nut M10 DIN 985	OT.03.02.050	2



FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and bolts indicated with arrows.

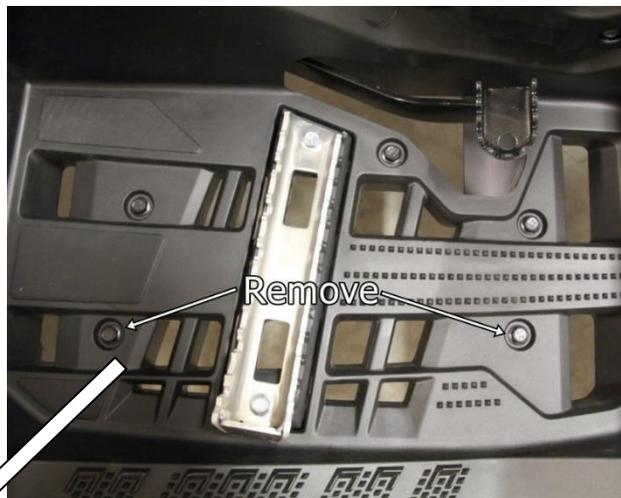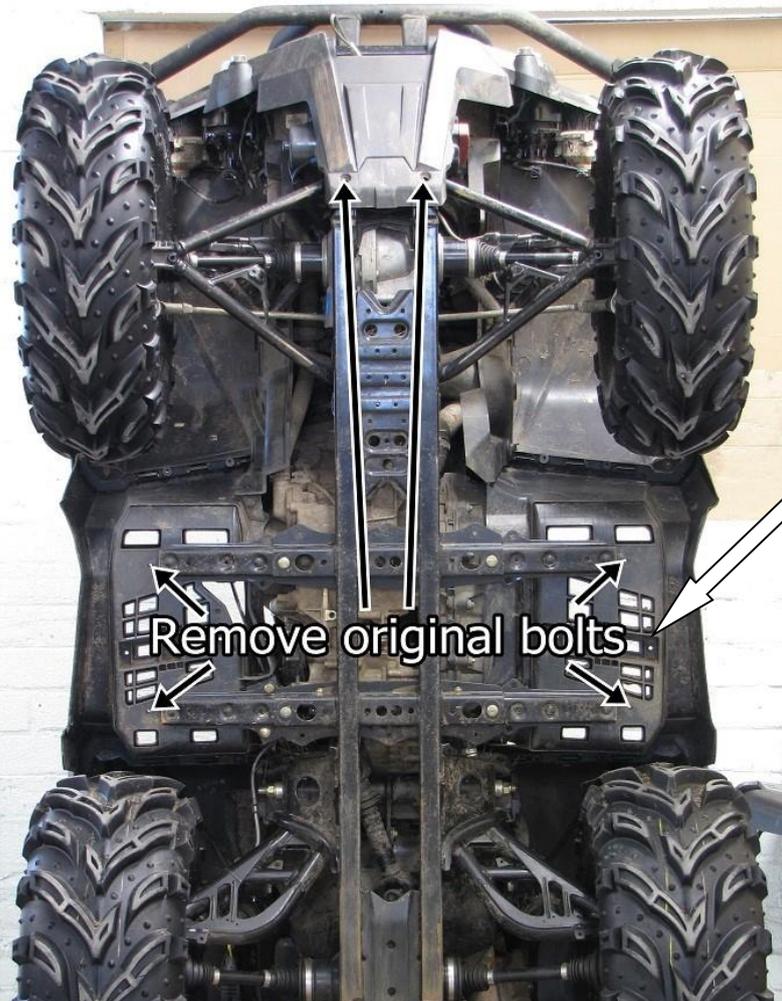


Step 2 Install brackets 03.3502 and 03.1502.
Place brackets 03.3502 to same plane as frame.

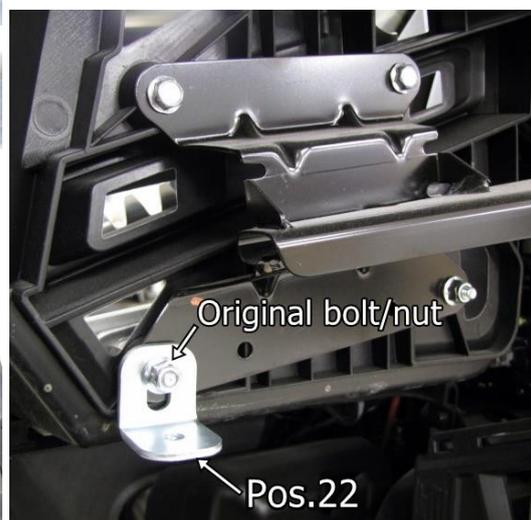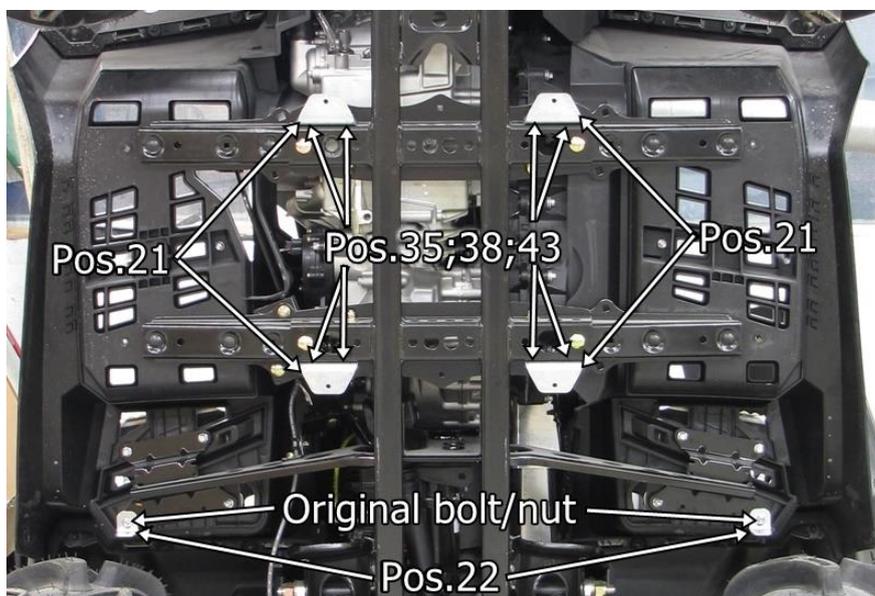


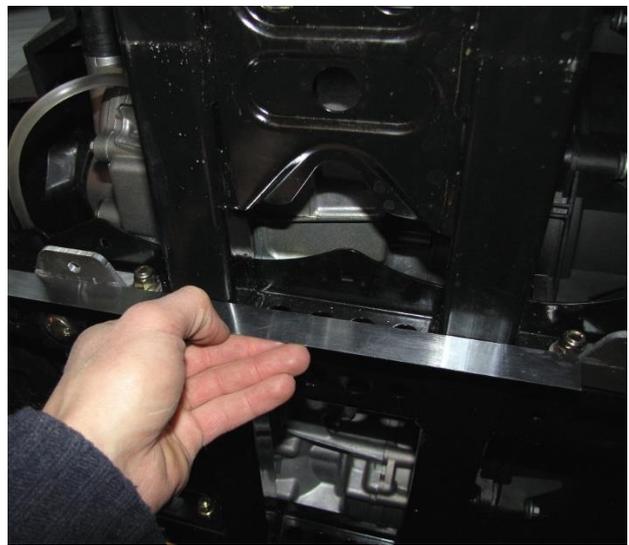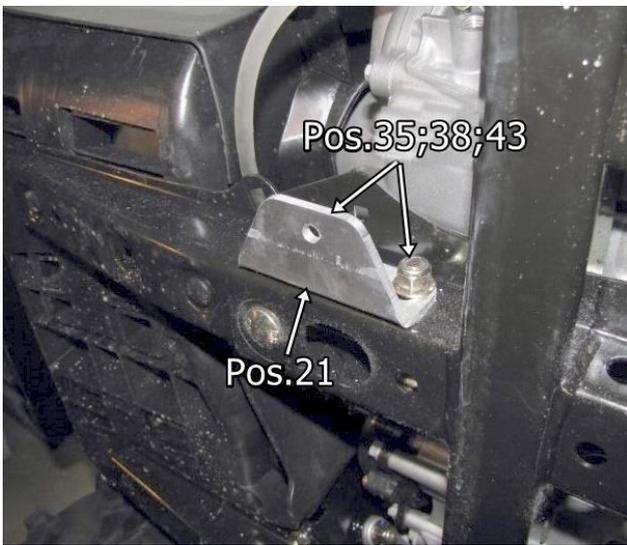

Step 3 Install middle part 02.10001.

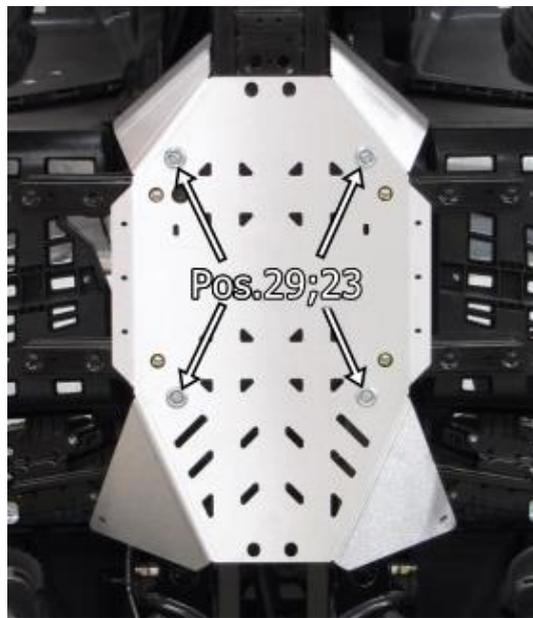


Step 4 Install plates 02.5006, 02.10007 and 02.10006.

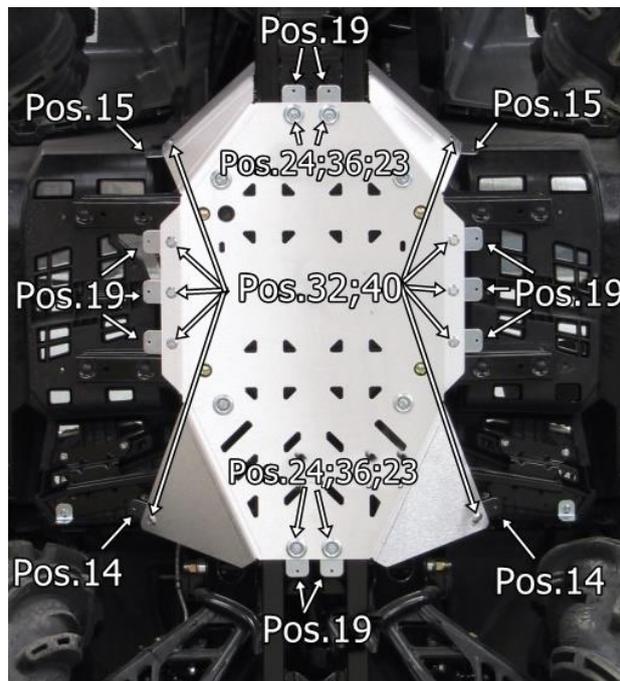

Step 5

Install side protections 02.10002 and 02.10003.

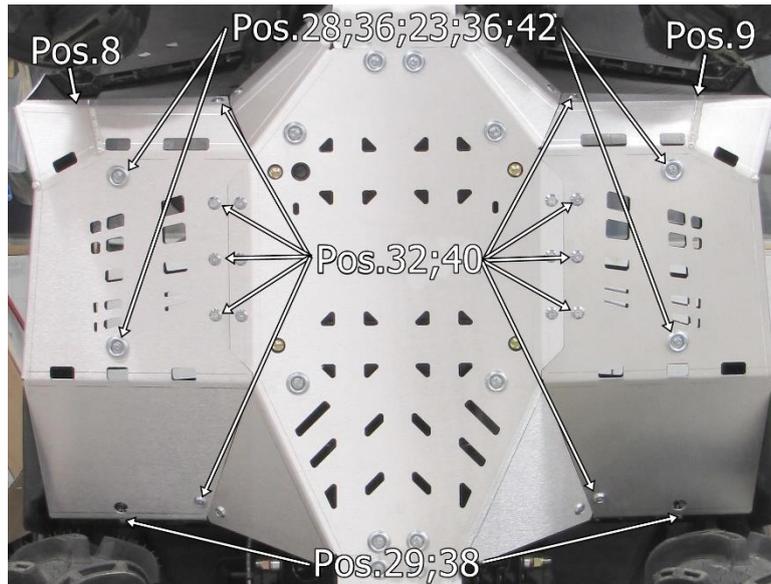







Step 6

Install front protection 02.8402K or 02.8406K.

a) Use 02.8406K front part on models from MY2023. NB! There will be gap between front part and Pos.11 plate, this is normal.


b) If you are using CanAm OE mounting plate (P/N 715004338), keep original bushes under new bushes and do not install plate 02.10004 (Pos.11), also cut front protection side bends (see Picture)! When installing with OE mounting plate, use plow OE bolts (see Picture).

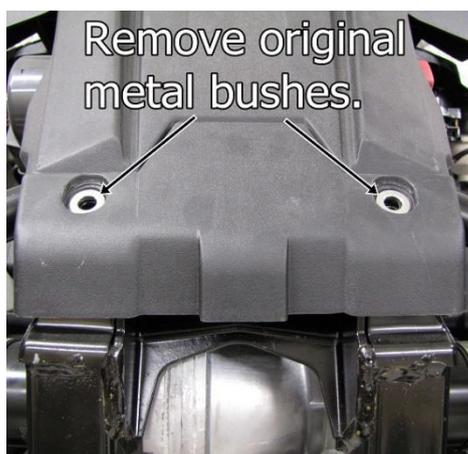

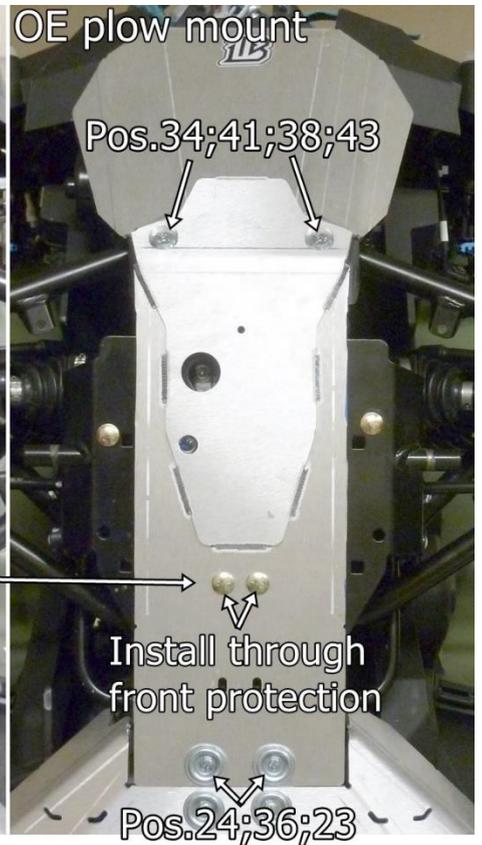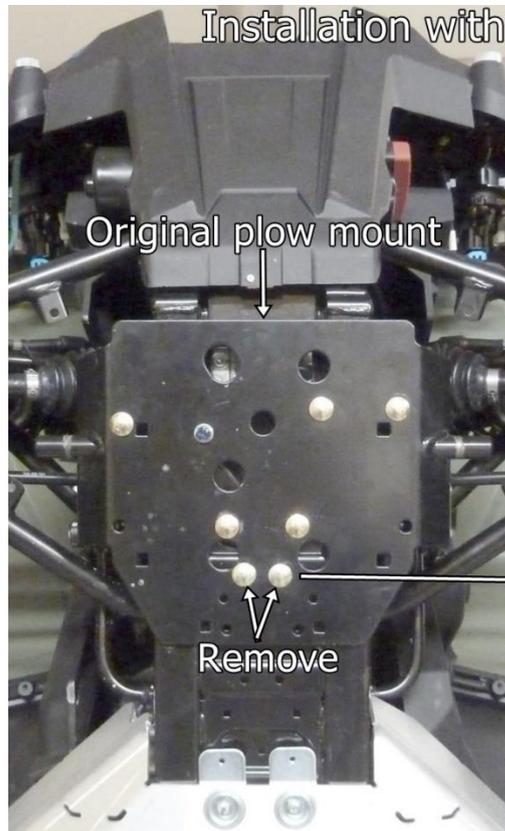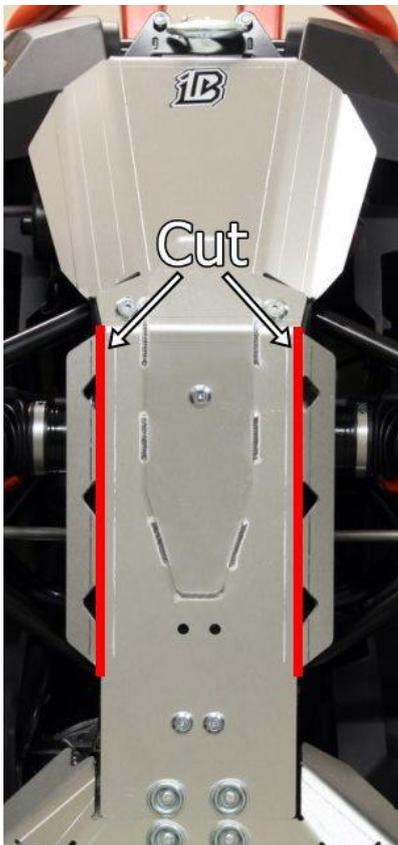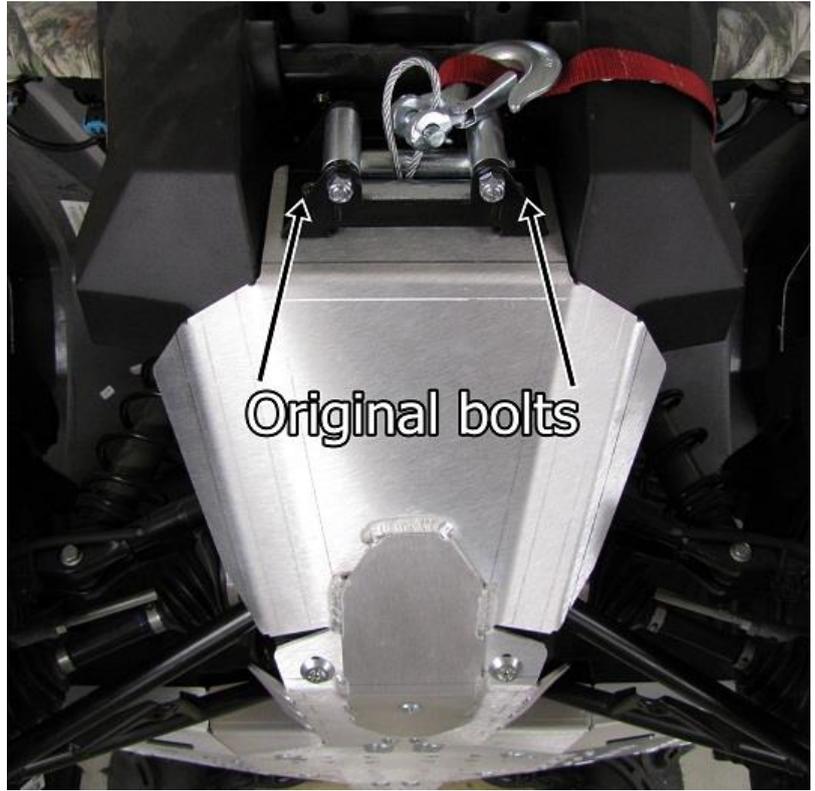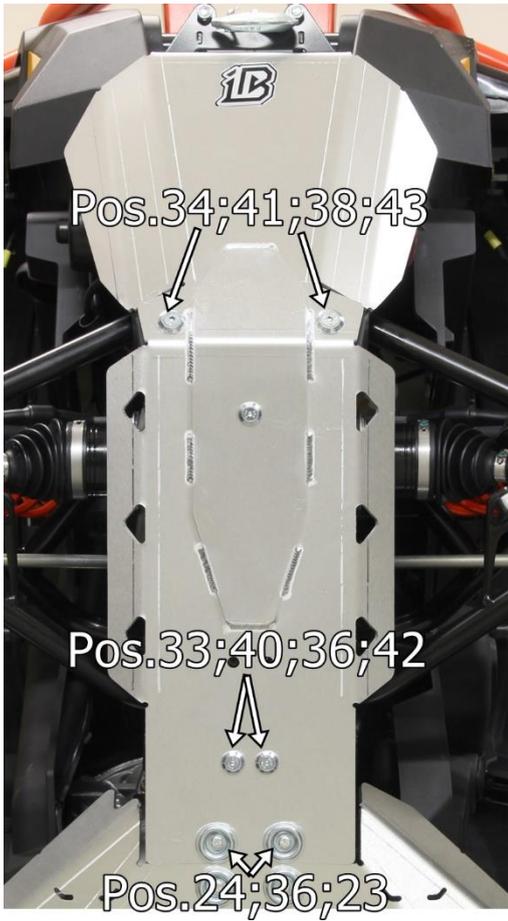


Step 7

Install rear part 02.22901K and plates 02.5006.
For easier installation, we recommend removing one ATV wheel.

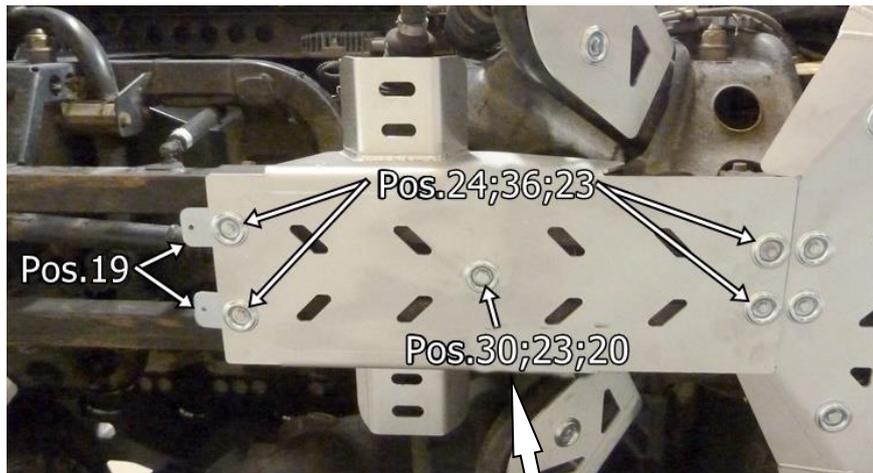


Step 8

Install second rear protection 02.20302K.

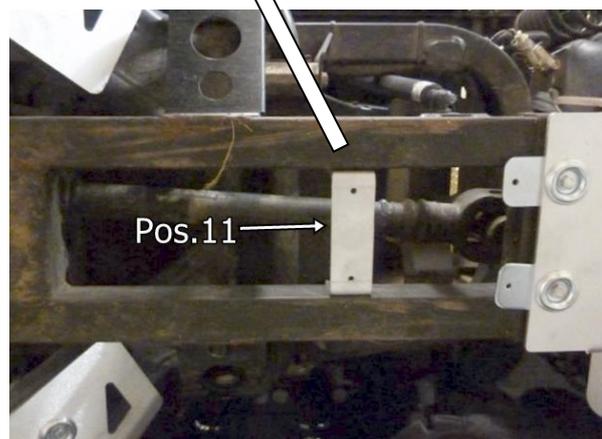


Step 9

Install front A-arms protections 02.23101S and 02.23102S.

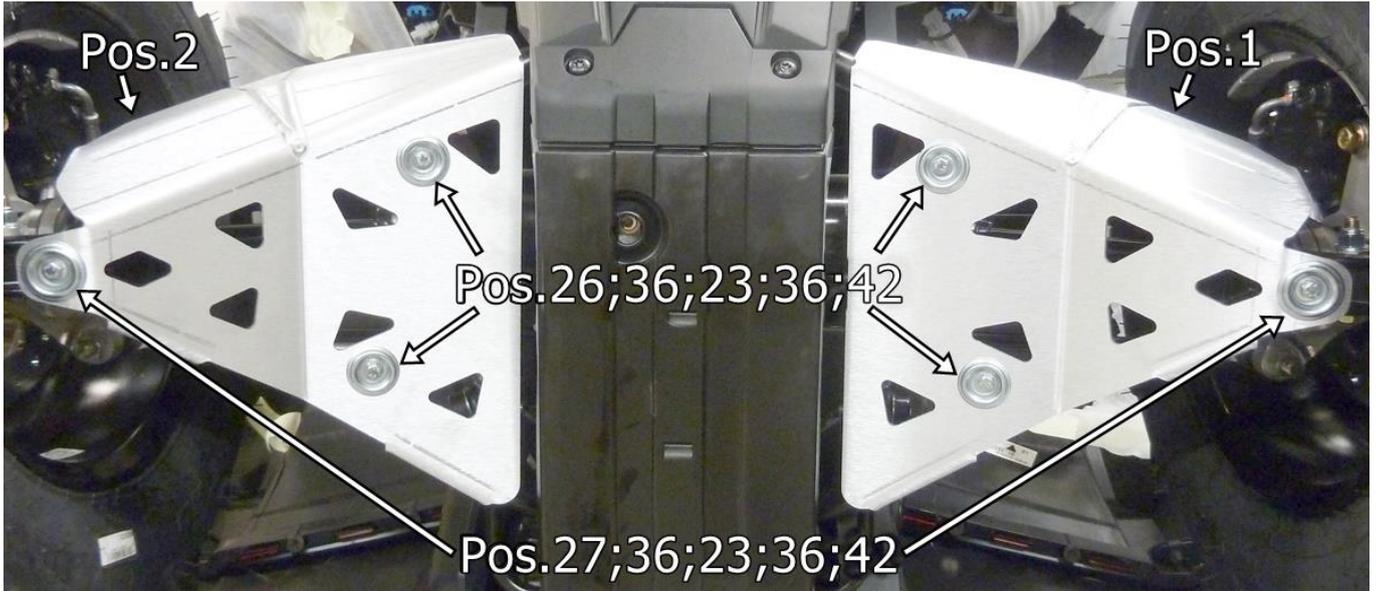



NB!

If you are using CanAm original snow plow adapter, then remove cover and cut section indicated with arrows.

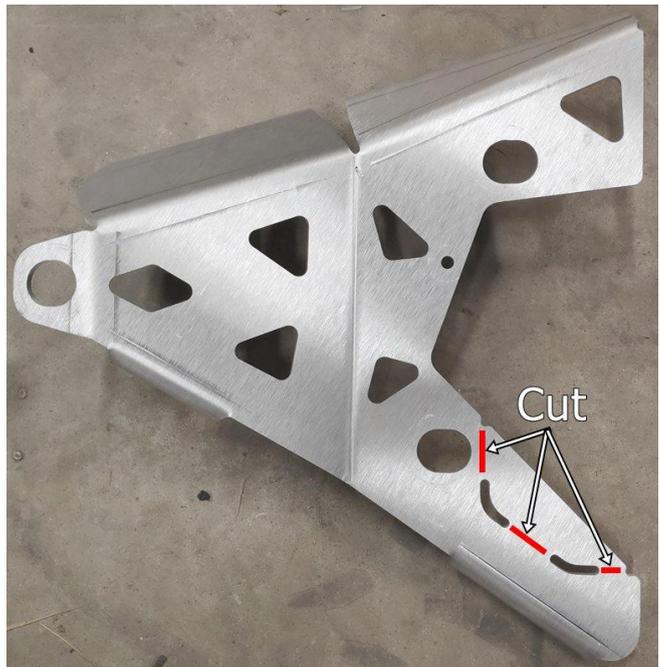


Step 10

Install brackets 02.18804 and 02.18805.

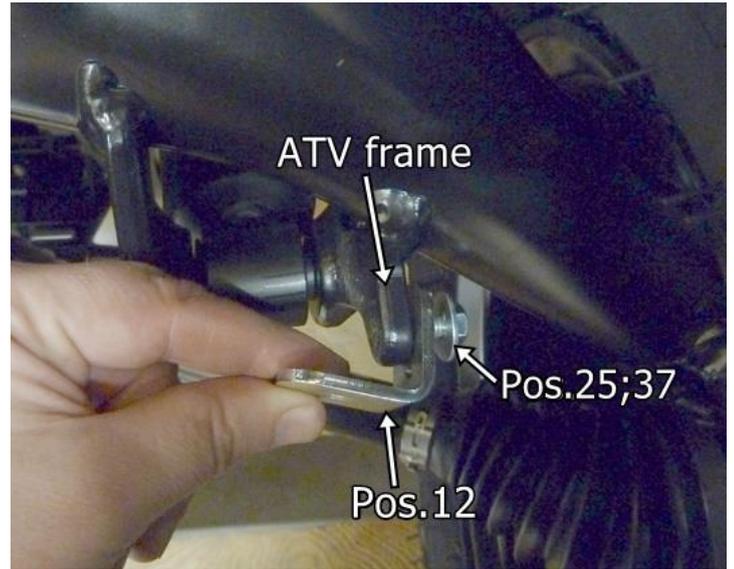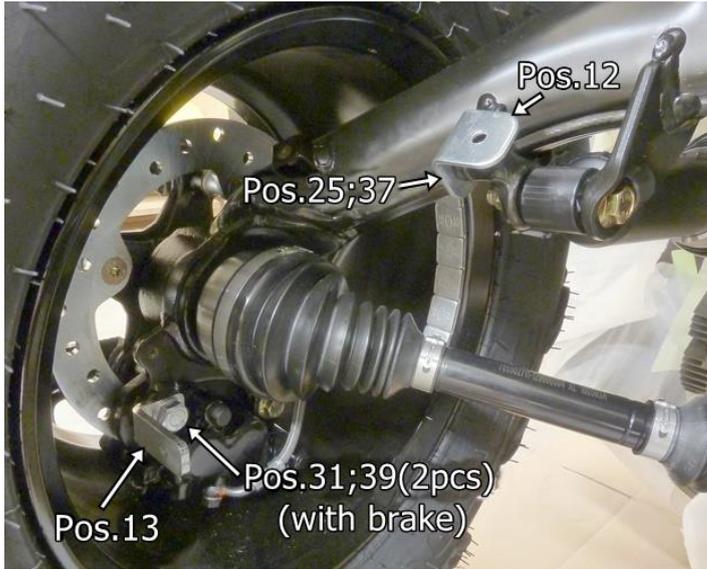

WHEEL WITH BRAKE

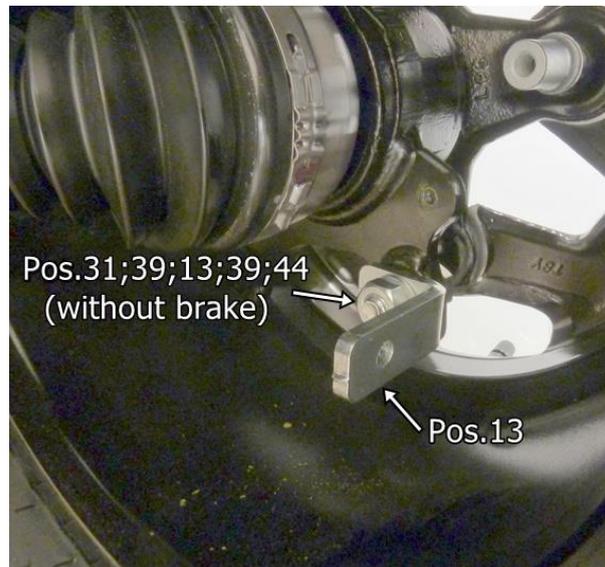

WHEEL WITHOUT BRAKE




NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.31 and brake disc.

If needed add third Ø10 washer for distance!

Step 11

Install rear trailing arms protections 02.23103 and 02.23104.

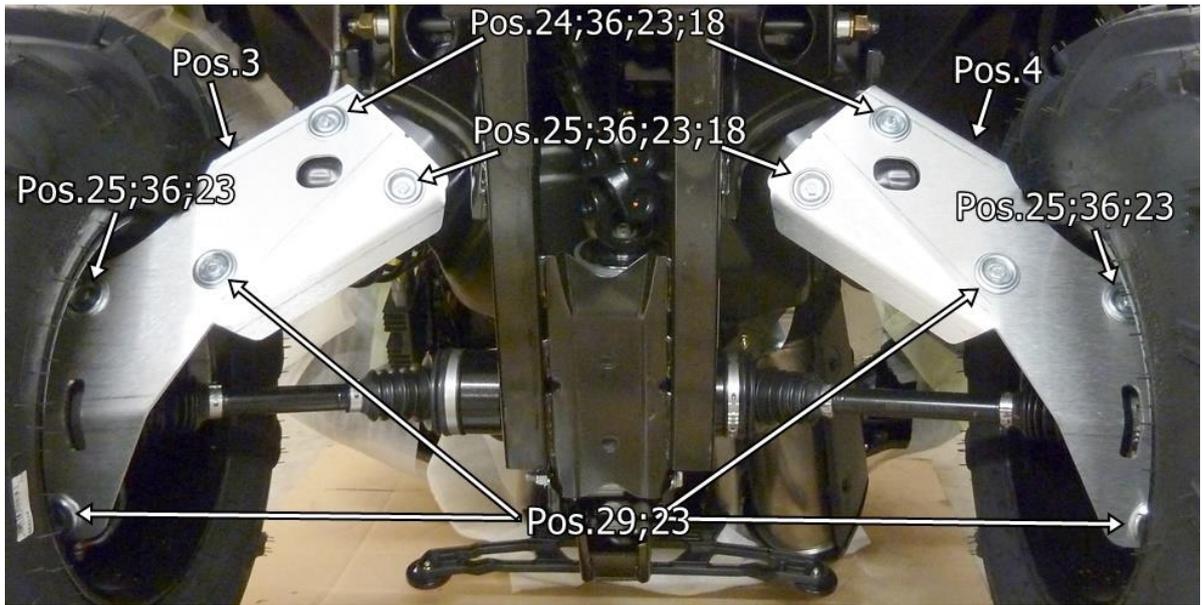

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

