



ALUMINIUM SKID PLATE

ACCESS

AX 600/700/800 U

Code 02.25300

Version 05102023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Front part of the skid plate	02.25301	1
2	Middle part of the skid plate	02.25302	1
3	Rear part of the skid plate	02.25303K	1
4	Front right A-arm protection	02.14303-P	1
5	Front left A-arm protection	02.14303-V	1
6	Rear right A-arm protection	02.14304-P	1
7	Rear left A-arm protection	02.14304-V	1
8	Connecting plate	02.5006	5
9	Rear A-arm bracket	02.5709	2
10	Front A-arm bracket right 1	02.14306-PK	1
11	Front A-arm bracket left 1	02.14306-VK	1
12	Front A-arm bracket right 2	02.14307-PK	1
13	Front A-arm bracket left 2	02.14307-VK	1
14	Distance plate	05.3902	3
15	Dished washer	14.503	37
16	Bolt M6x14 DIN933	OT.02.02.040	12
17	Bolt M6x20 DIN933	OT.02.02.060	6
18	Bolt M6x40 DIN933	OT.02.02.100	4
19	Bolt M6x45 DIN933	OT.02.02.110	2
20	Bolt M8x20 DIN933	OT.02.02.180	10
21	Bolt M8x35 DIN933	OT.02.02.210	1
22	Bolt M8x55 DIN933	OT.02.02.241	4
23	Washer Ø6/15 SFS3738	OT.04.03.020	30
24	Washer Ø8/20 SFS3738	OT.04.03.030	6
25	Nyloc nut M6 DIN985	OT.03.02.030	6
26	Nyloc nut M8 DIN985	OT.03.02.040	4

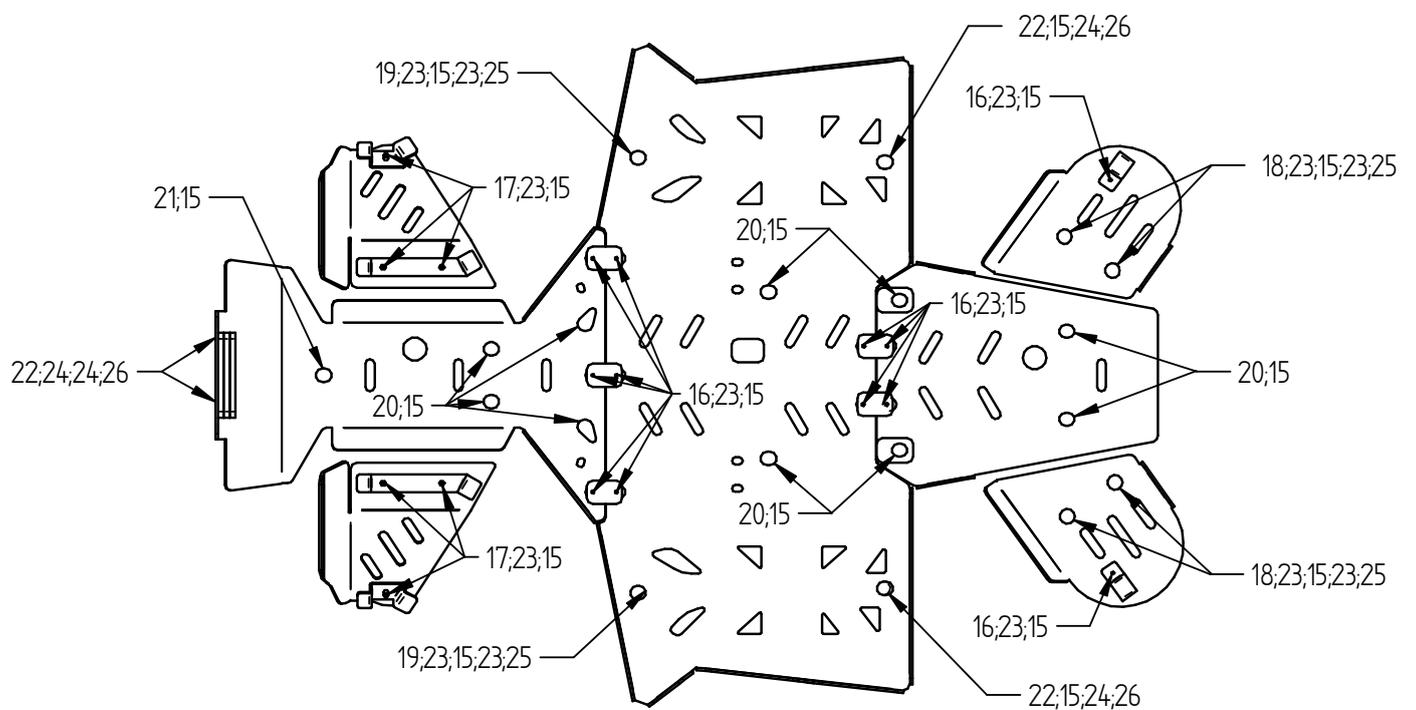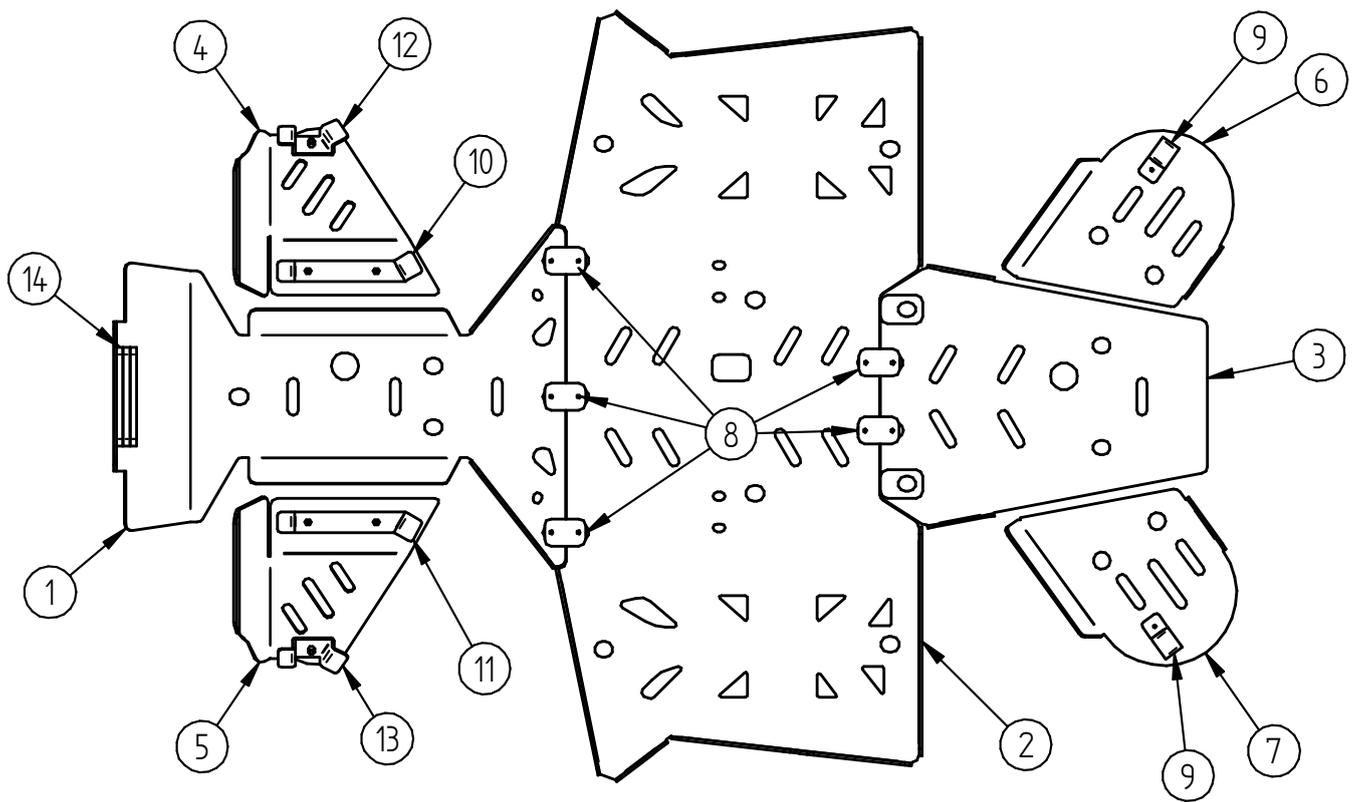


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers, winch fairlead and bolts indicated by arrow.

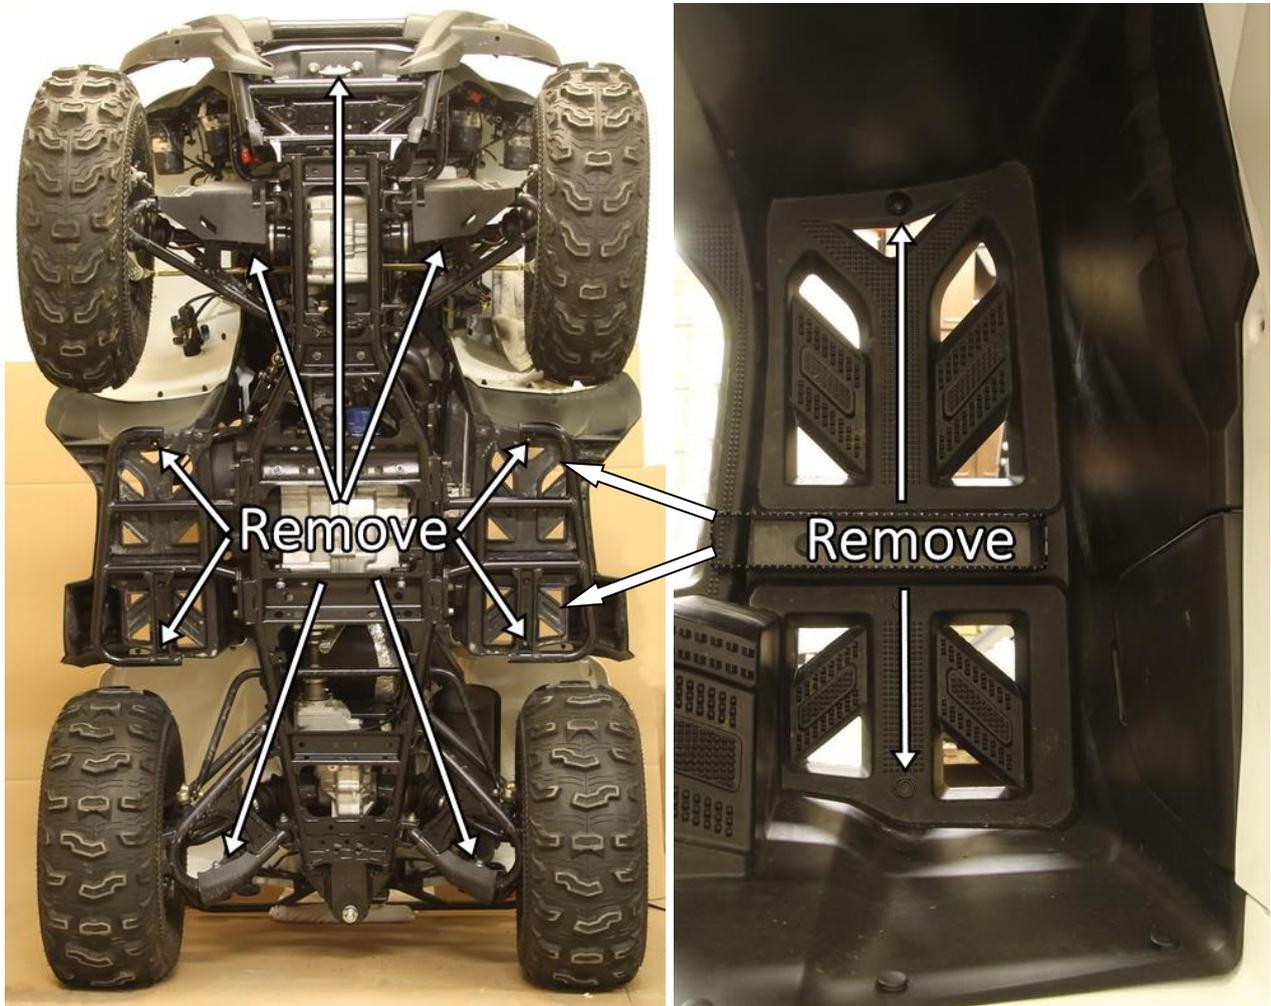


Step 2 Install middle part 02.25302.

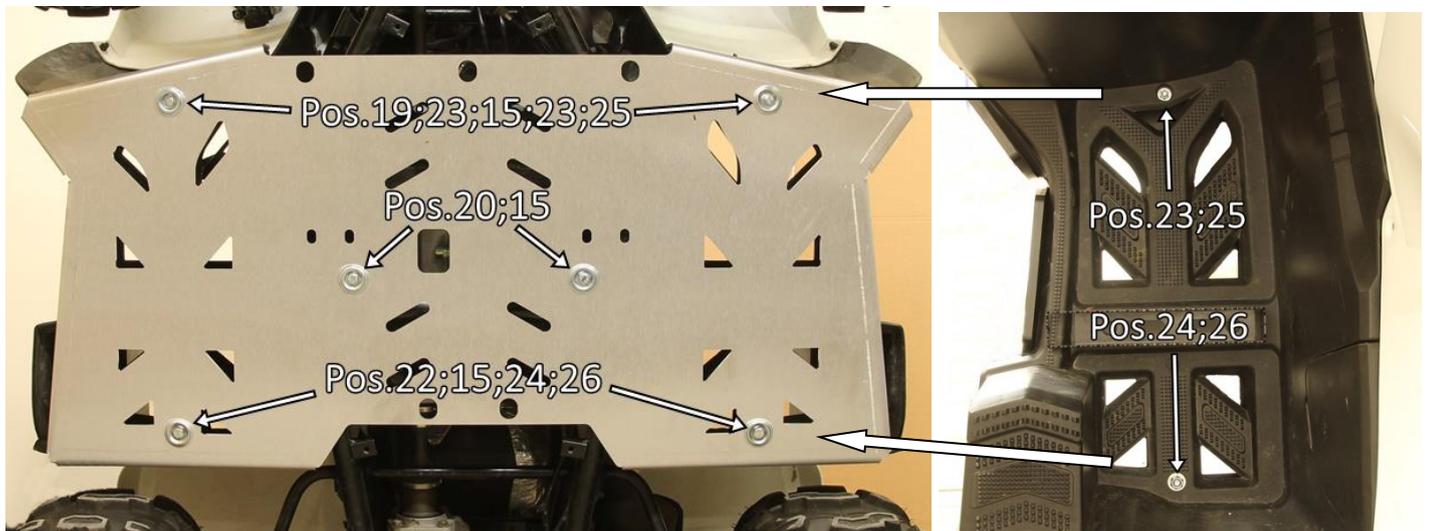




Step 3

Install plates 02.5006 to middle part.

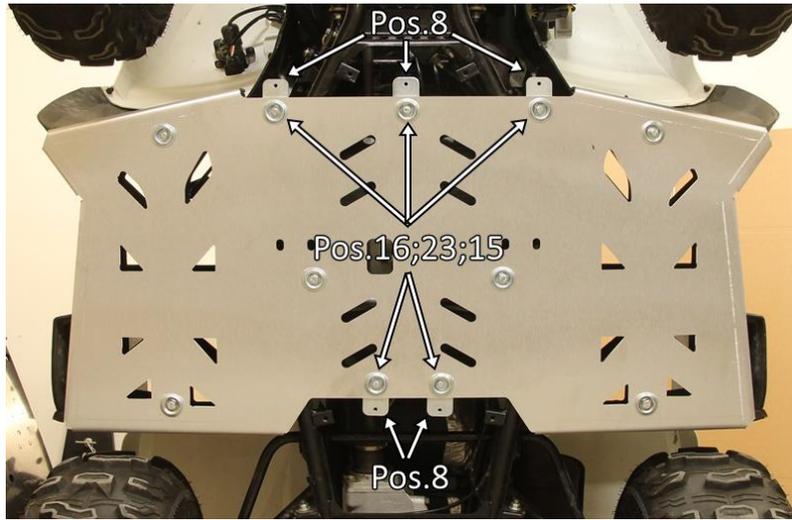

Step 4

Install skid plate front part 02.25301. Install distance plates 05.3902 (3 pcs) between the skid plate front part and original winch fairlead holder.

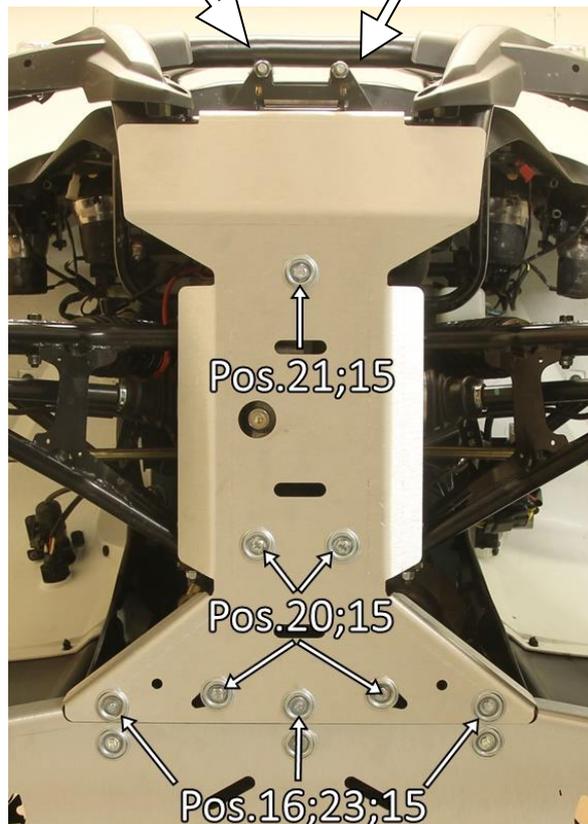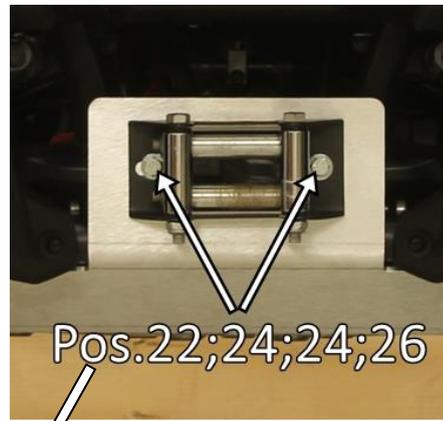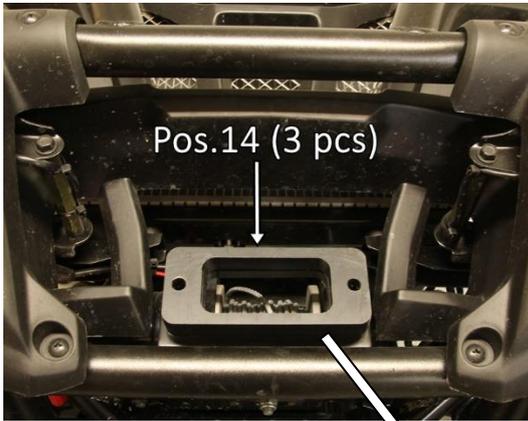



Step 5

Install skid plate rear part 02.25303K.





Step 6

Install front A-arms protections 02.14305-P and 02.14305-V.
Use brackets 02.14306-PK, 02.14306-VK, 02.14307-PK and 02.14307-VK.

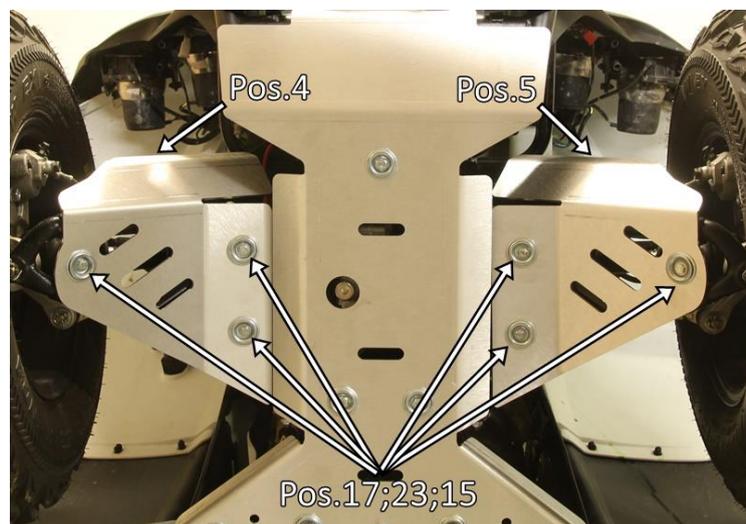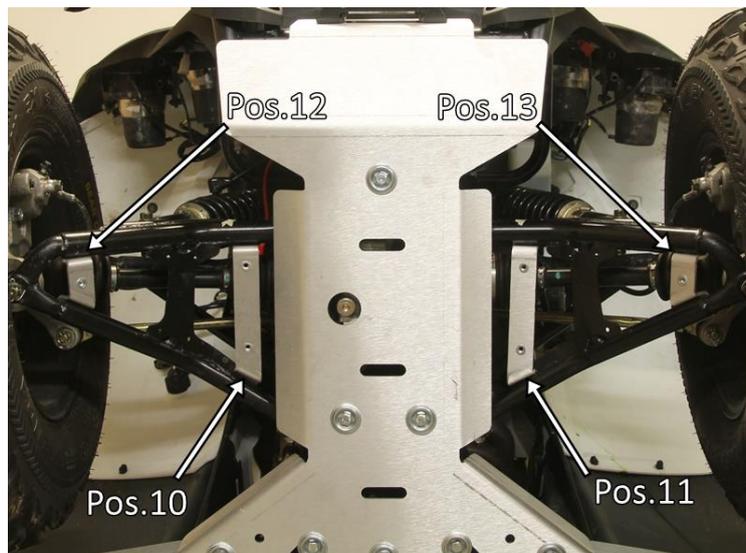

Step 7

Install rear A-arms protections 02.14306-P and 02.14306-V.
Use brackets 02.5709.

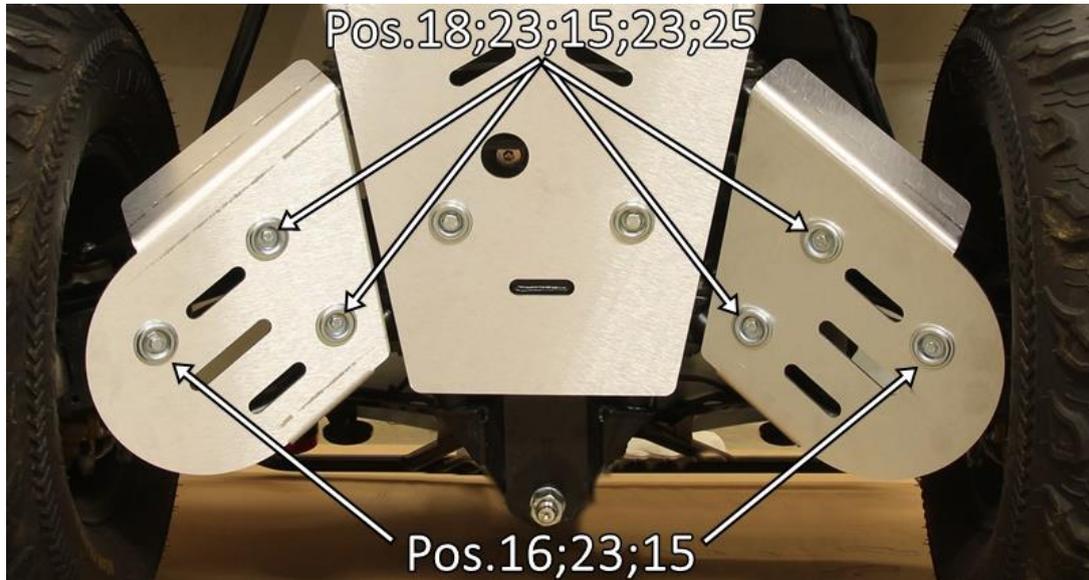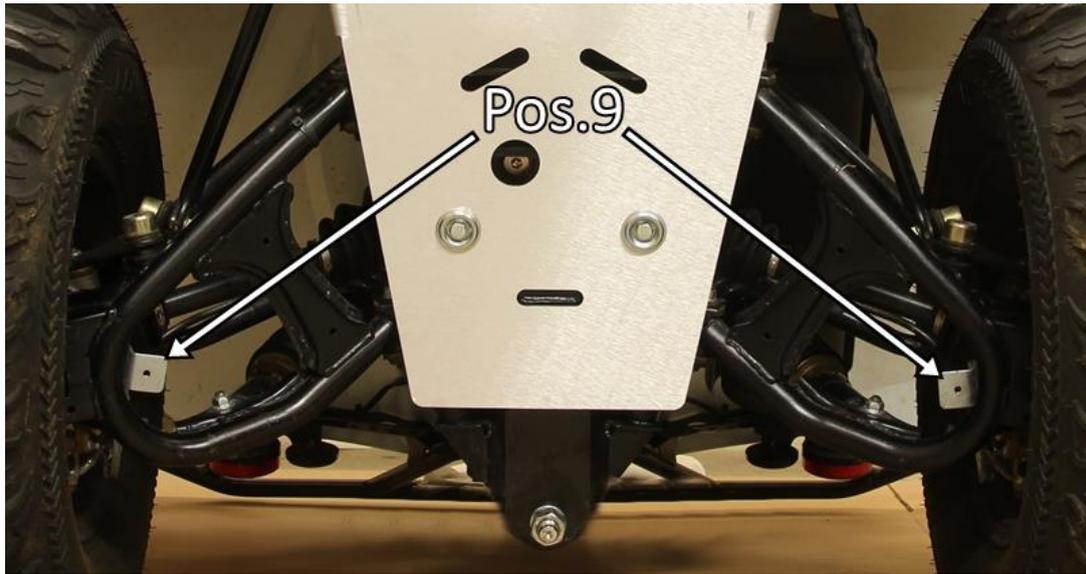

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

