

IRON BALTIC


PLASTIC SKID PLATE

ACCESS

AX 600/700/800 U

Code 02.25400

Version 05102023

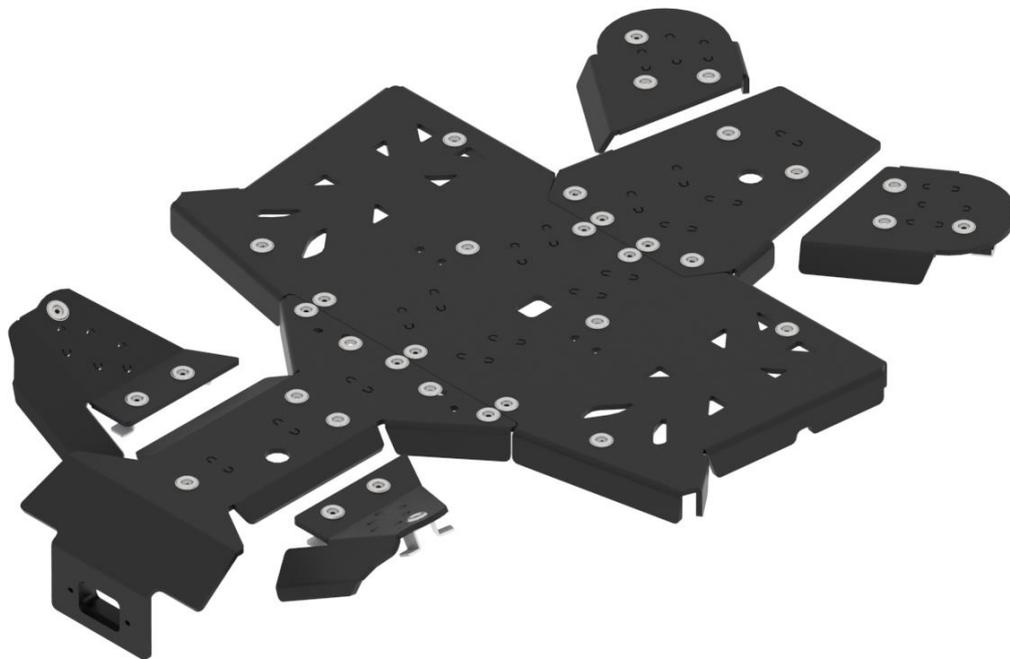

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/zQZ1IYUJ


SPECIFICATION

Pos.	Description	Code	Amount
1	Front part of the skid plate	02.25401	1
2	Middle part of the skid plate	02.25402	1
3	Rear part of the skid plate	02.25403	1
4	Front right A-arm protection	02.14405-P	1
5	Front left A-arm protection	02.14405-V	1
6	Rear right A-arm protection	02.14406-P	1
7	Rear left A-arm protection	02.14406-V	1
8	Connecting plate	02.5006	5
9	Rear A-arm bracket	02.5709	2
10	Front A-arm bracket right 1	02.14306-PK	1
11	Front A-arm bracket left 1	02.14306-VK	1
12	Front A-arm bracket right 2	02.14307-PK	1
13	Front A-arm bracket left 2	02.14307-VK	1
14	Distance plate	05.3902	3
15	Dished washer	14.503	39
16	Bolt M6x16 DIN933	OT.02.02.050	12
17	Bolt M6x25 DIN933	OT.02.02.070	6
18	Bolt M6x45 DIN933	OT.02.02.110	4
19	Bolt M6x50 DIN933	OT.02.02.120	2
20	Bolt M8x25 DIN933	OT.02.02.190	10
21	Bolt M8x40 DIN933	OT.02.02.220	1
22	Bolt M8x60 DIN933	OT.02.02.250	4
23	Washer Ø6/15 SFS3738	OT.04.03.020	30
24	Washer Ø8/20 SFS3738	OT.04.03.030	6
25	Nyloc nut M6 DIN985	OT.03.02.030	6
26	Nyloc nut M8 DIN985	OT.03.02.040	4

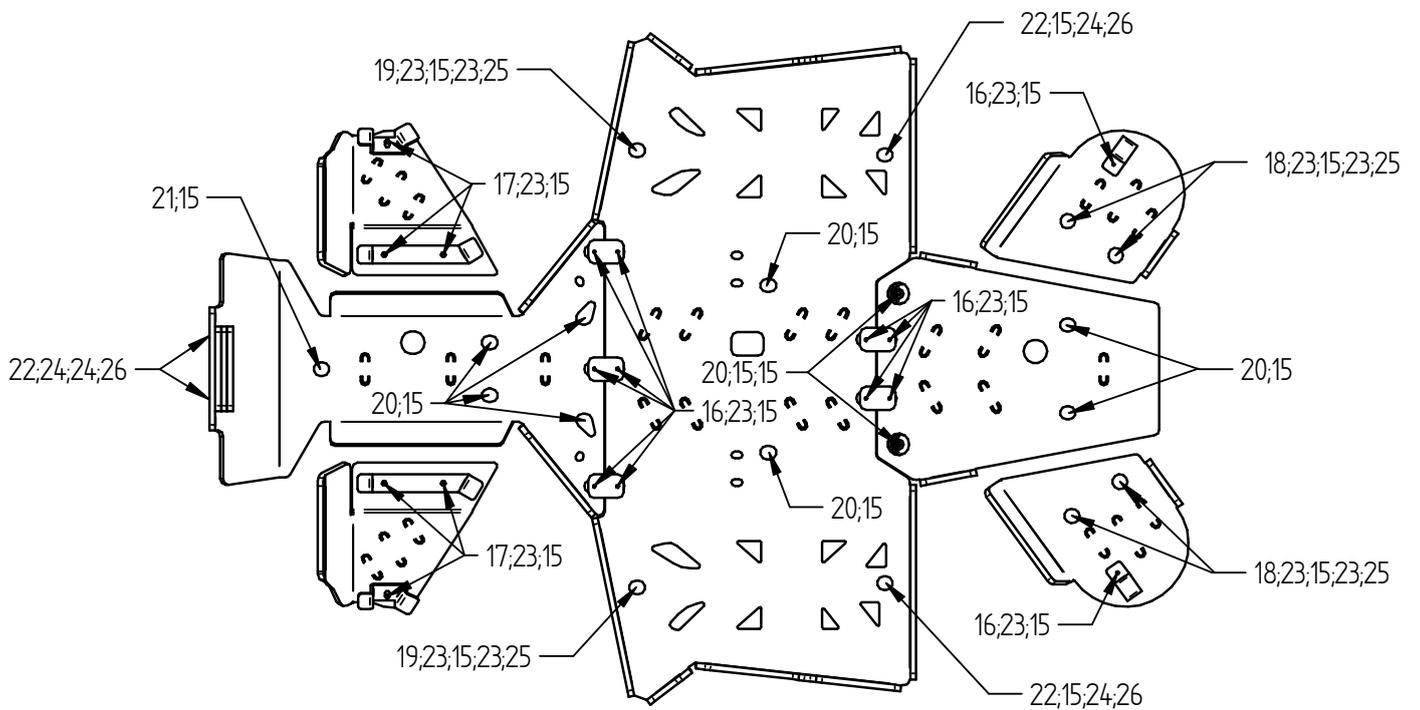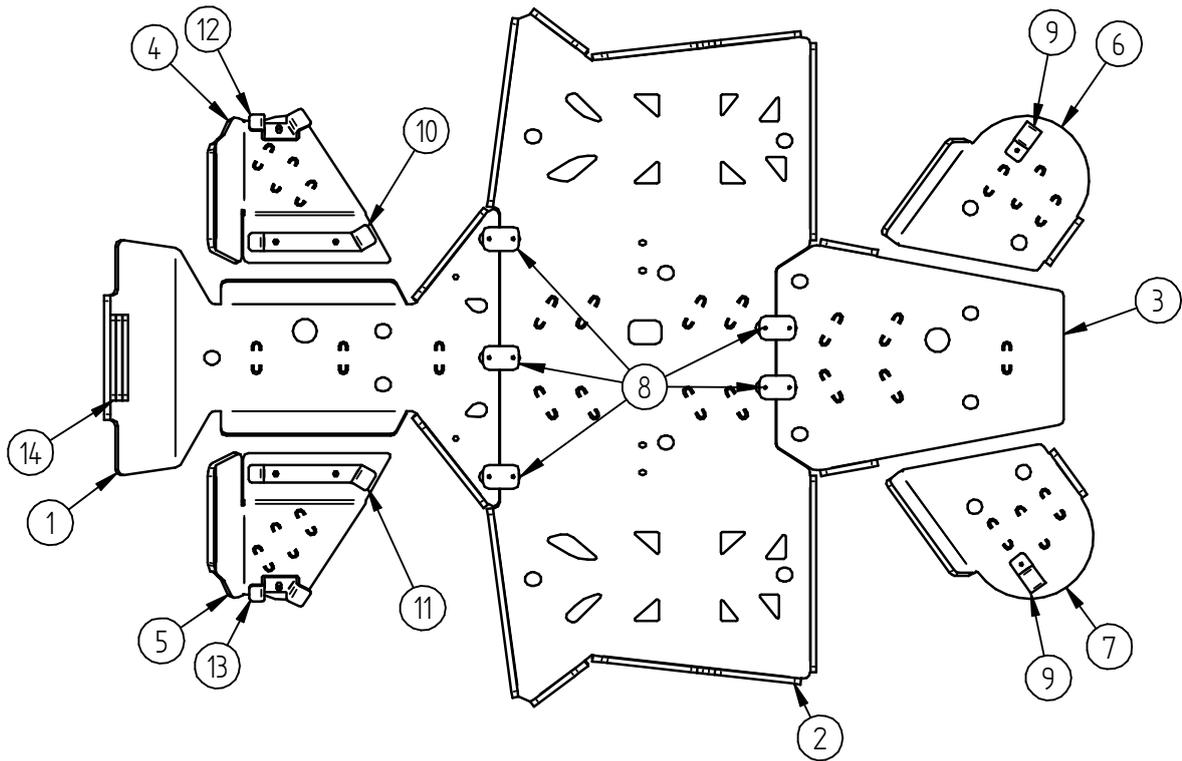


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers, winch fairlead and bolts indicated by arrow.

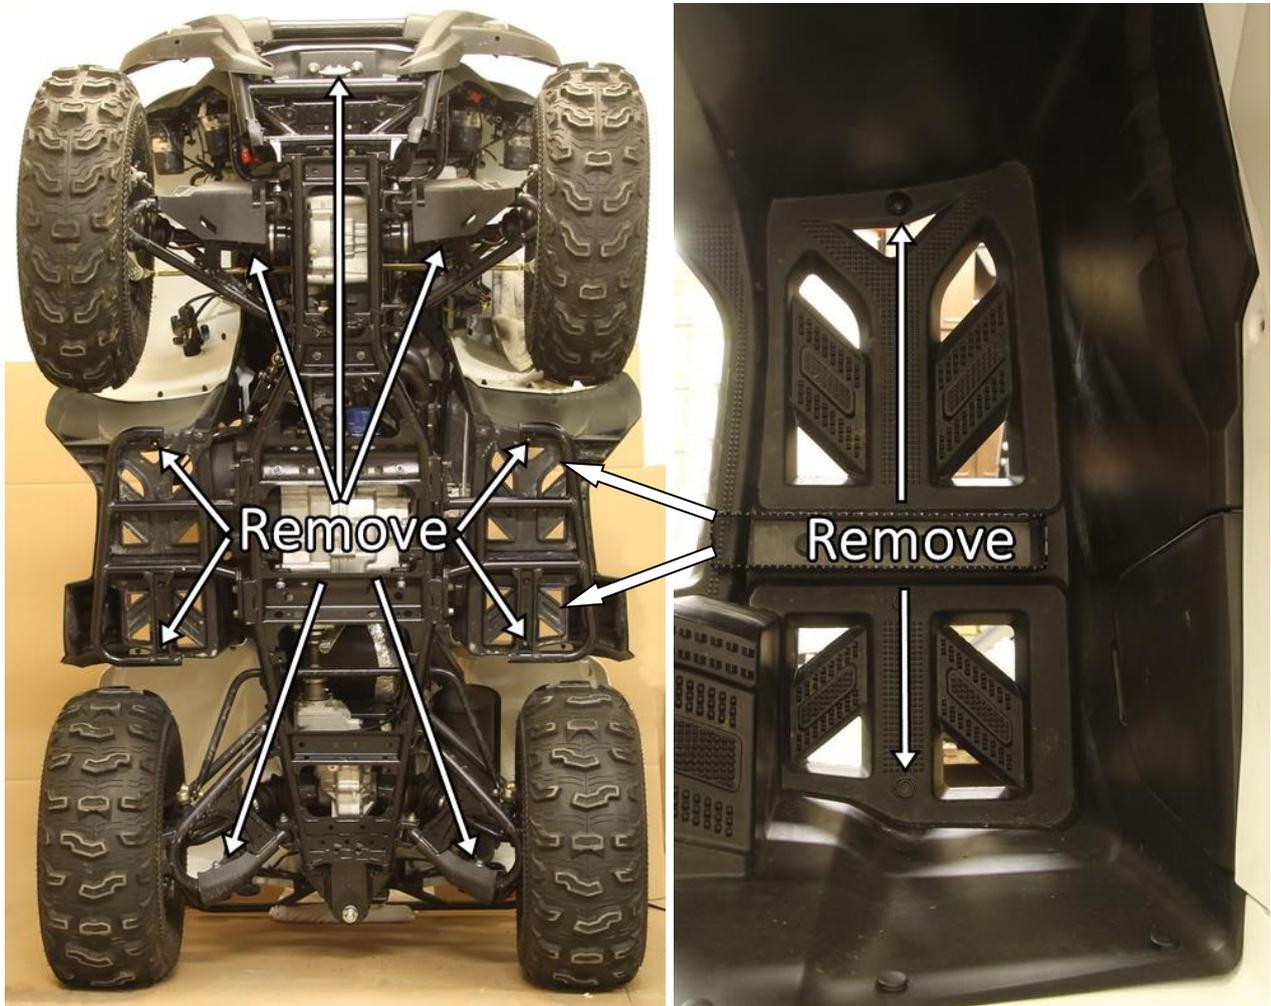


Step 2 Install middle part 02.25402.

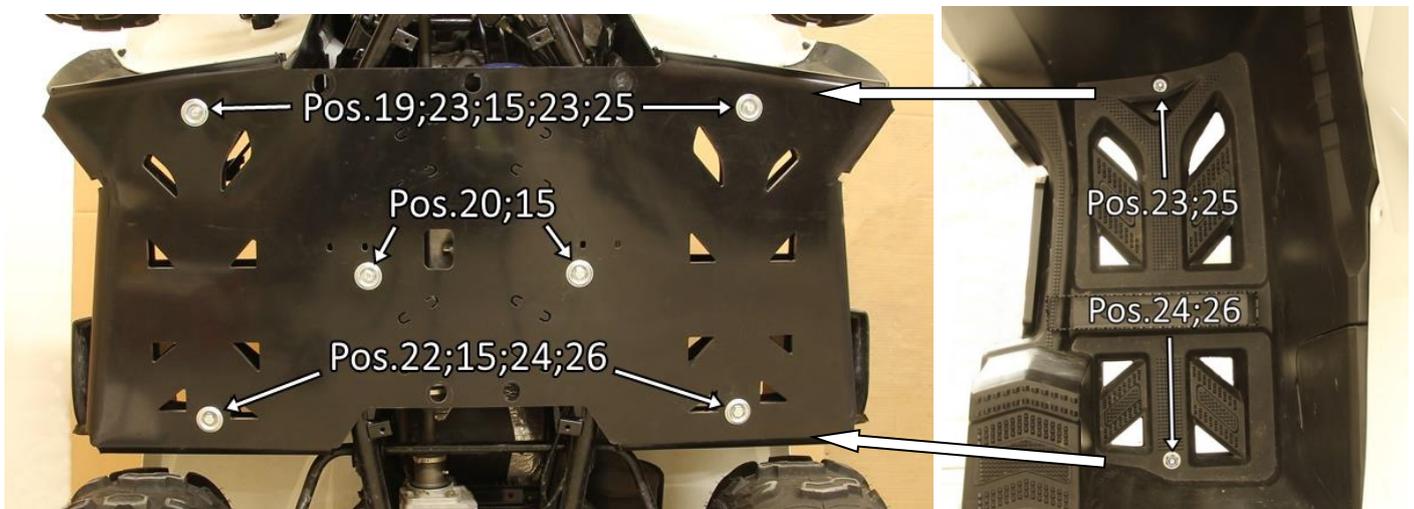




Step 3

Install plates 02.5006 to middle part.

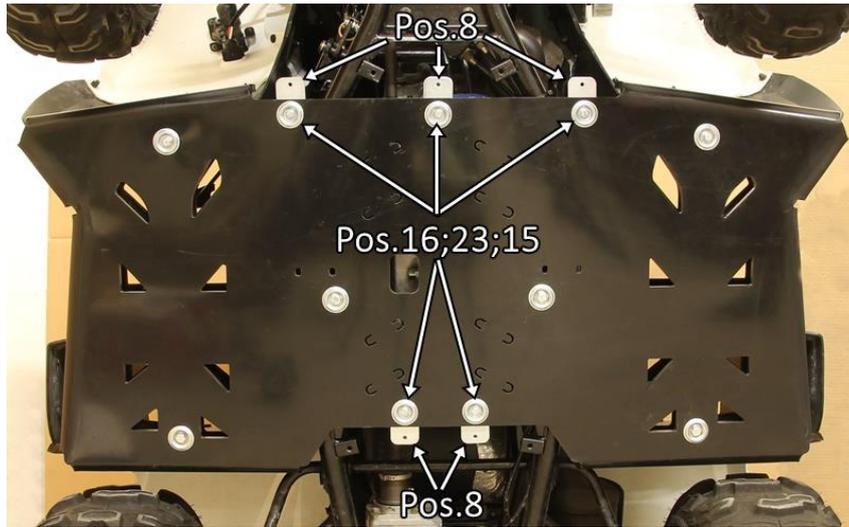


Step 4

Install skid plate front part 02.25401. Install distance plates 05.3902 (3 pcs) between the skid plate front part and original winch fairlead holder.

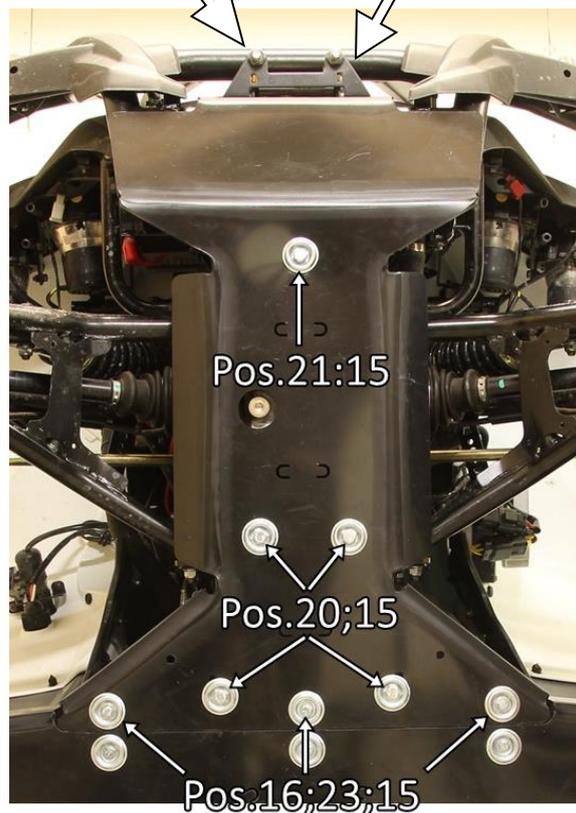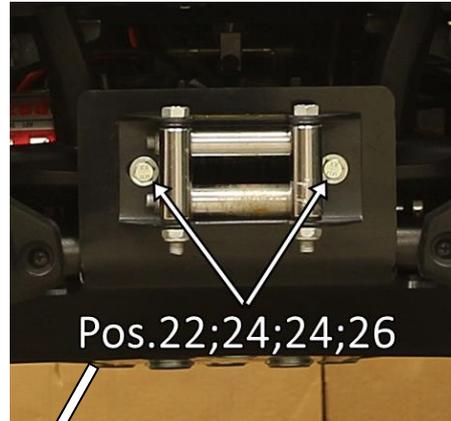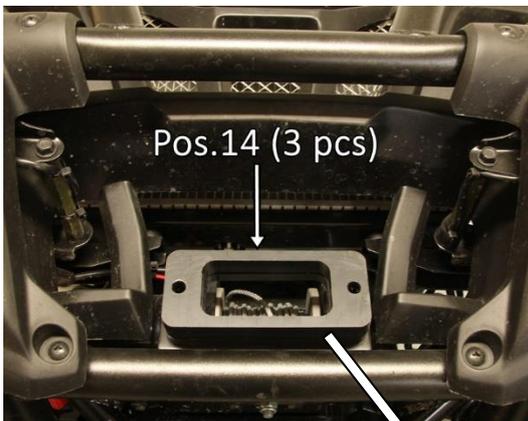


Step 5

Install skid plate rear part 02.25403. To the front Pos.20 bolts, put dished washer also between ATV frame and rear protection for distance. For easier installation we recommend using tape to fix dished washer to rear protection.

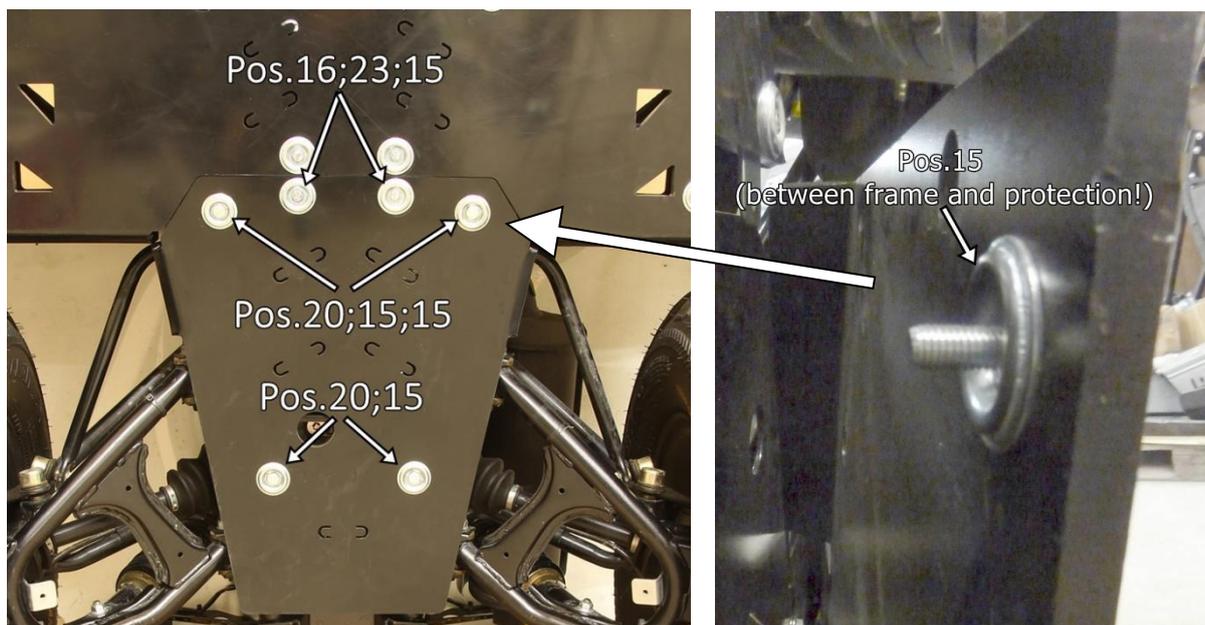



Step 6

Install front A-arms protections 02.14405-P and 02.14405-V. Use brackets 02.14306-PK, 02.14306-VK, 02.14307-PK and 02.14307-VK.

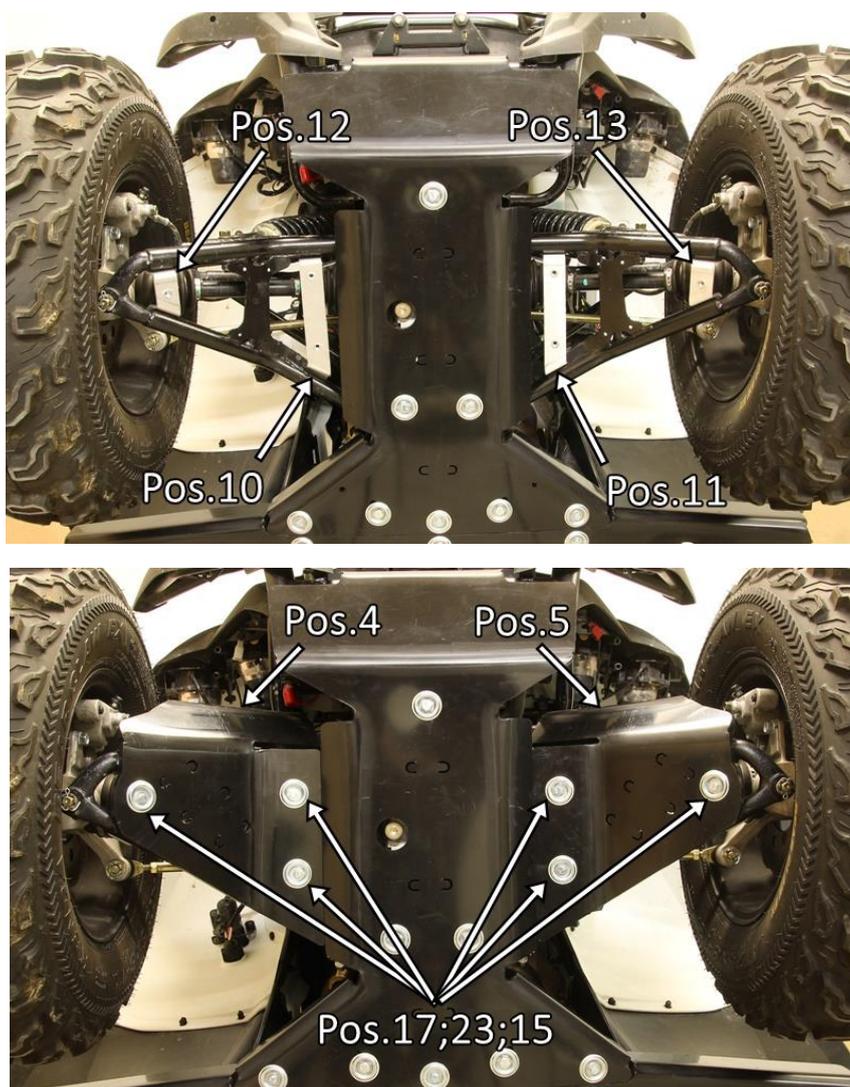

Step 7

Install rear A-arms protections 02.14406-P and 02.14406-V.
Use brackets 02.5709.

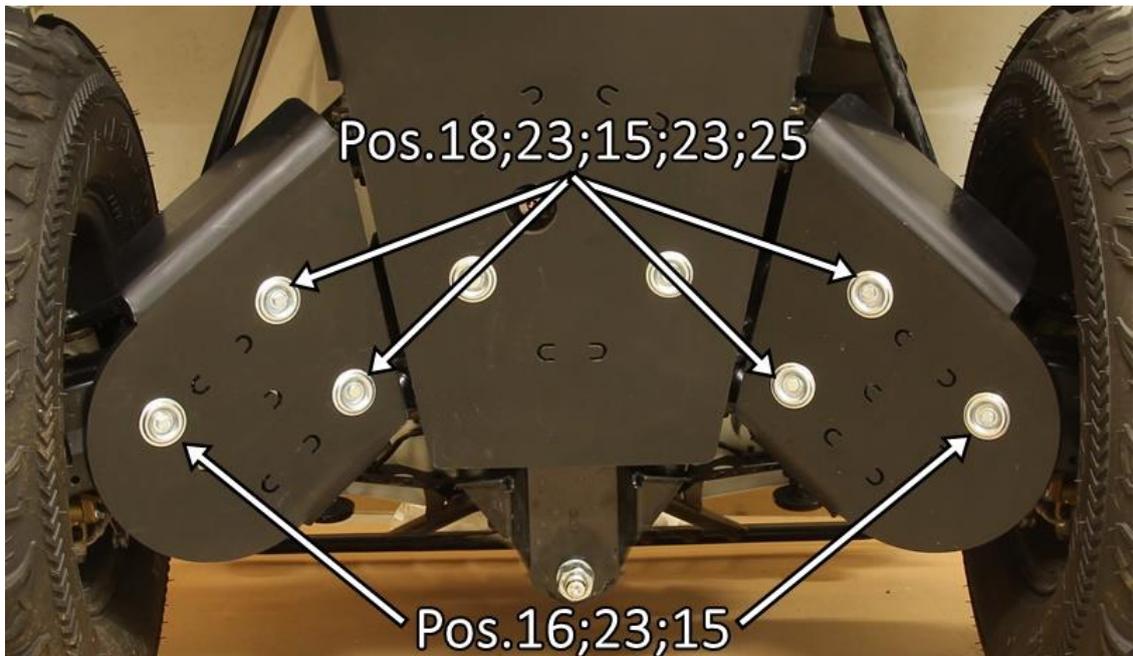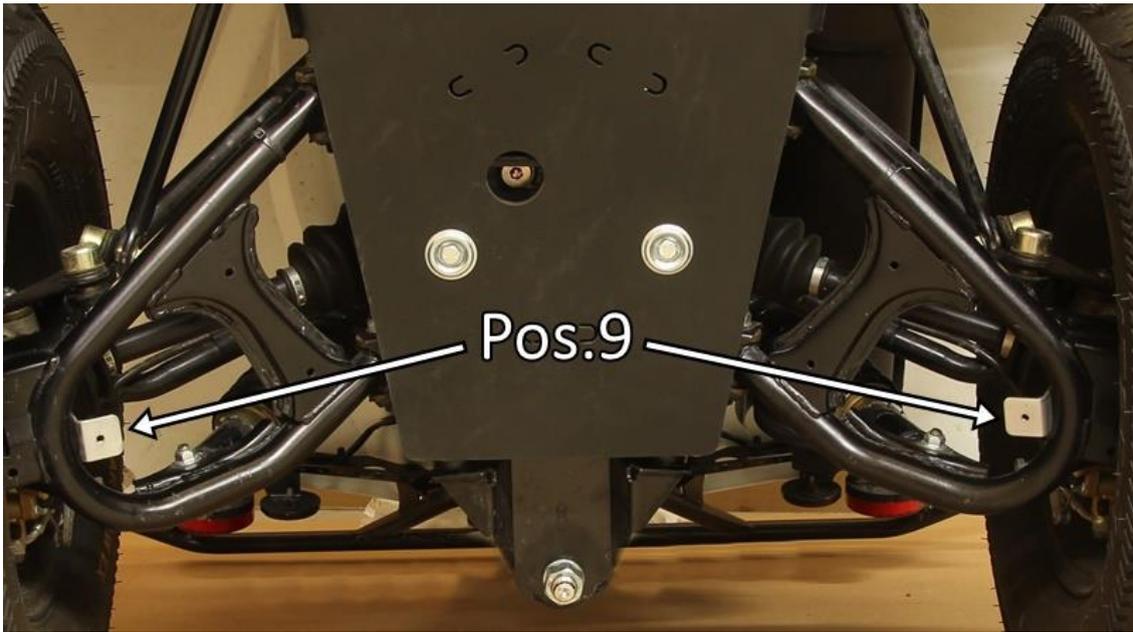

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

