

IRON BALTIC

PLASTIC SKID PLATE

LINHAI

M550L EPS

Code 02.25600

Version 06102023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/euVegEAD

SPECIFICATION

Pos.	Description	Code	Amount
1	Front part of the skid plate	02.25601	1
2	Middle part of the skid plate	02.25602	1
3	Rear part of the skid plate	02.25603	1
4	Front right A-arm protection	02.24304	1
5	Front left A-arm protection	02.24305	1
6	Rear right A-arm protection	02.24306	1
7	Rear left A-arm protection	02.24307	1
8	Rear part bracket	02.25504	1
9	Rear A-arm bracket	02.8210	8
10	Middle part bracket	02.5709	2
11	Connecting plate	02.5006	6
12	Installation bracket	02.4606	2
13	Dished washer	14.503	40
14	Bolt M6x16 DIN933	OT.02.02.050	12
15	Bolt M6x20 DIN933	OT.02.02.060	22
16	Bolt M6x30 DIN933	OT.02.02.080	2
17	Bolt M6x80 DIN933	OT.02.02.160	2
18	Washer Ø6/15 SFS3738	OT.04.03.020	40
19	Nyloc nut M6 DIN985	OT.03.02.030	2

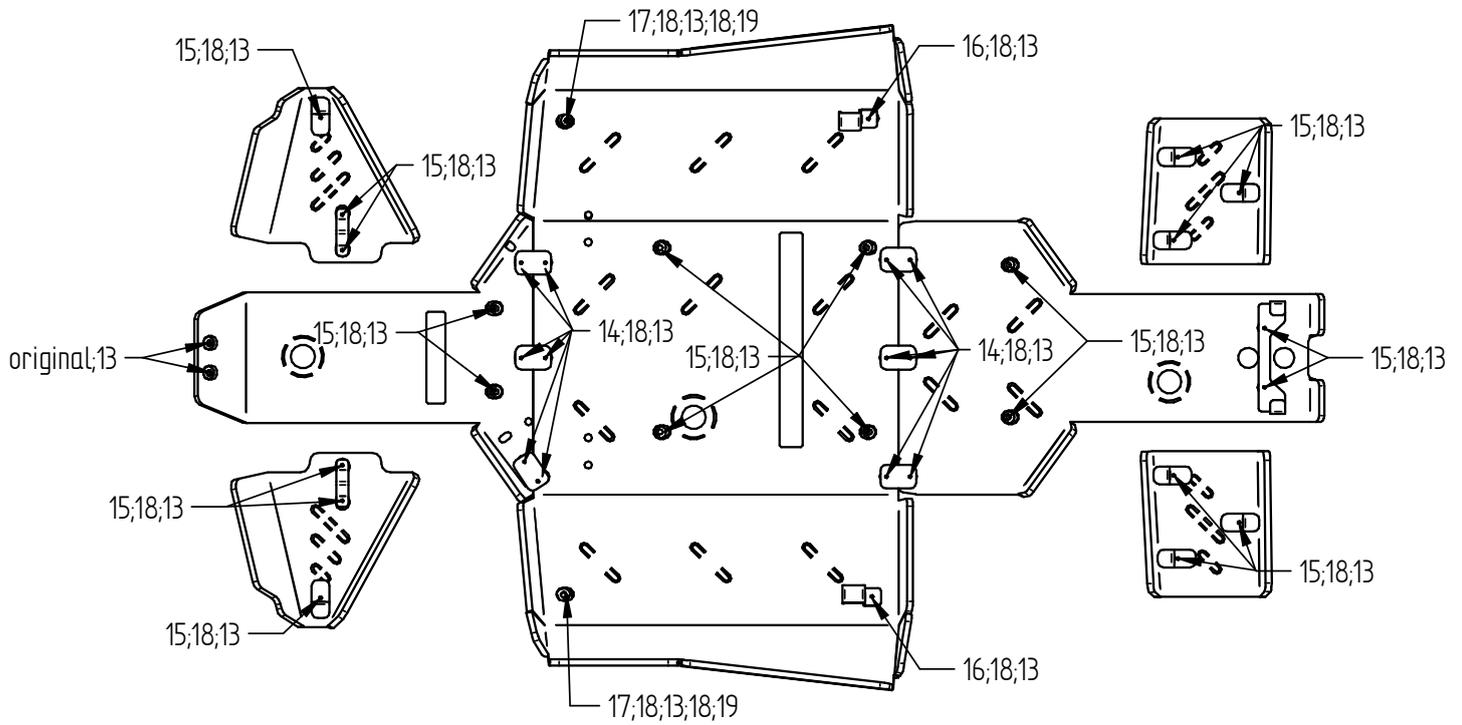
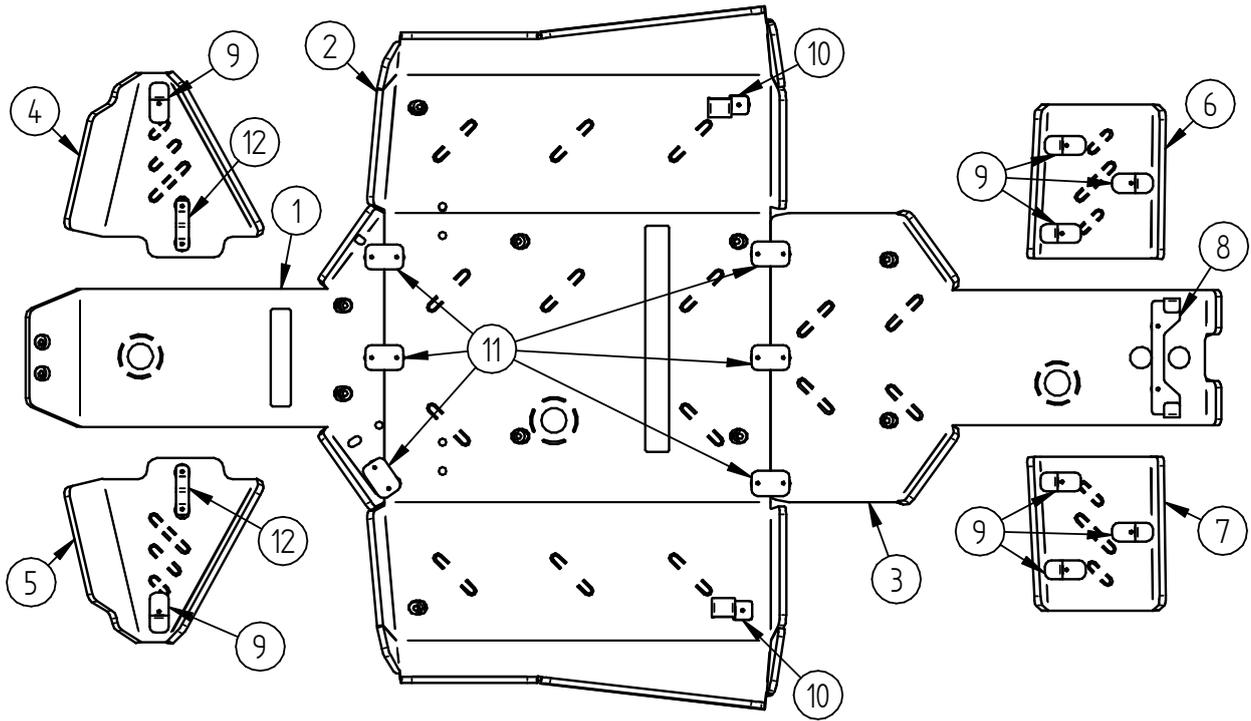


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install front A-arms protections 02.24304 and 02.24305

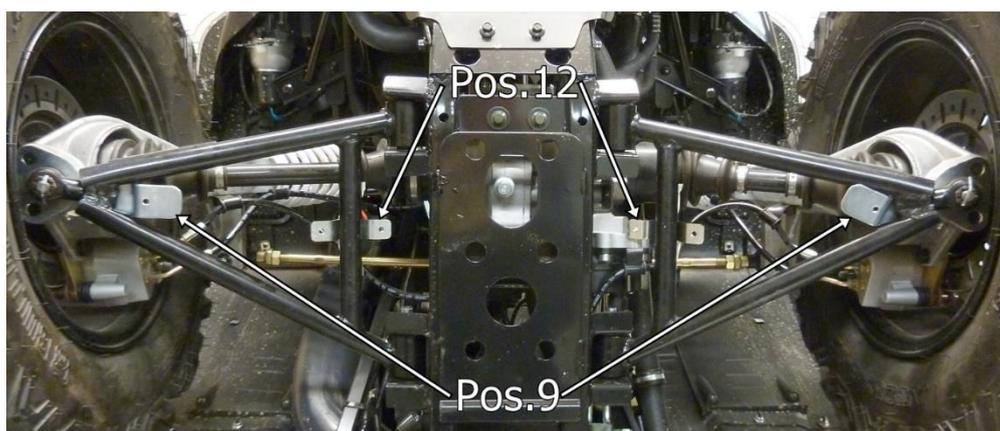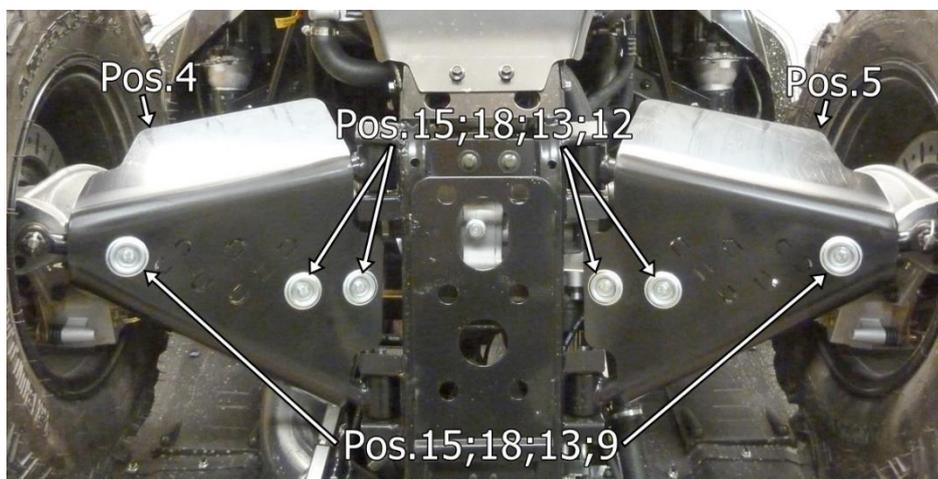

Step 3


Install rear A-arms protections 02.24306 and 02.24307.

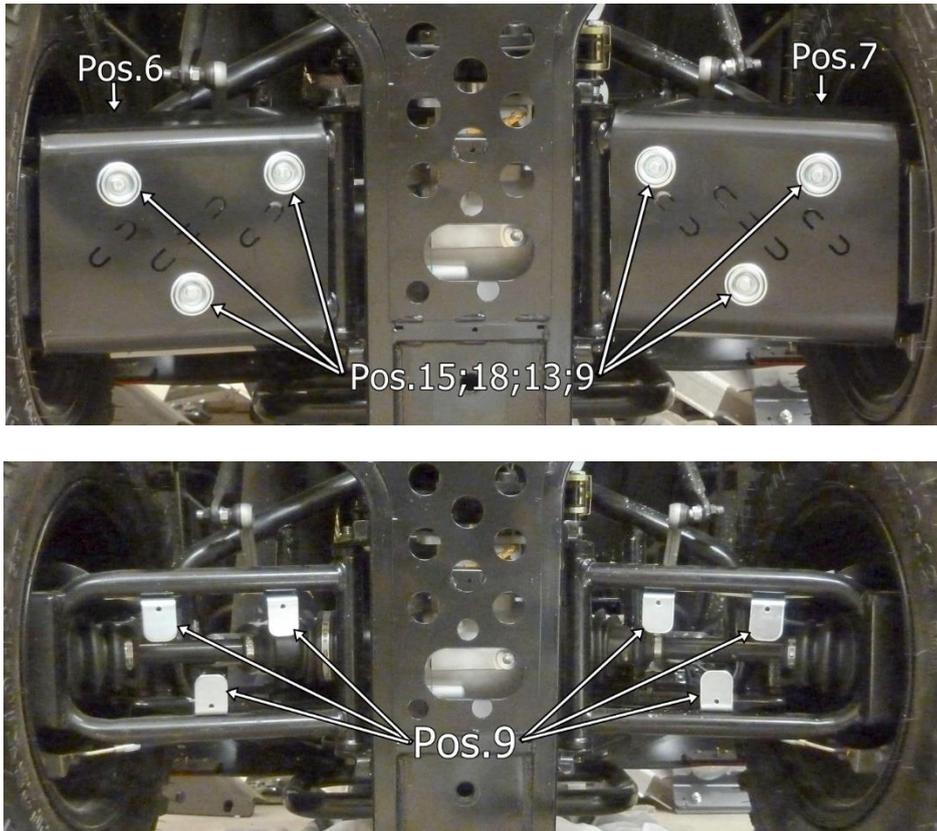

Step 4


Install middle part 02.25602.

First remove bolts indicated with arrows and put in place brackets 02.5709..

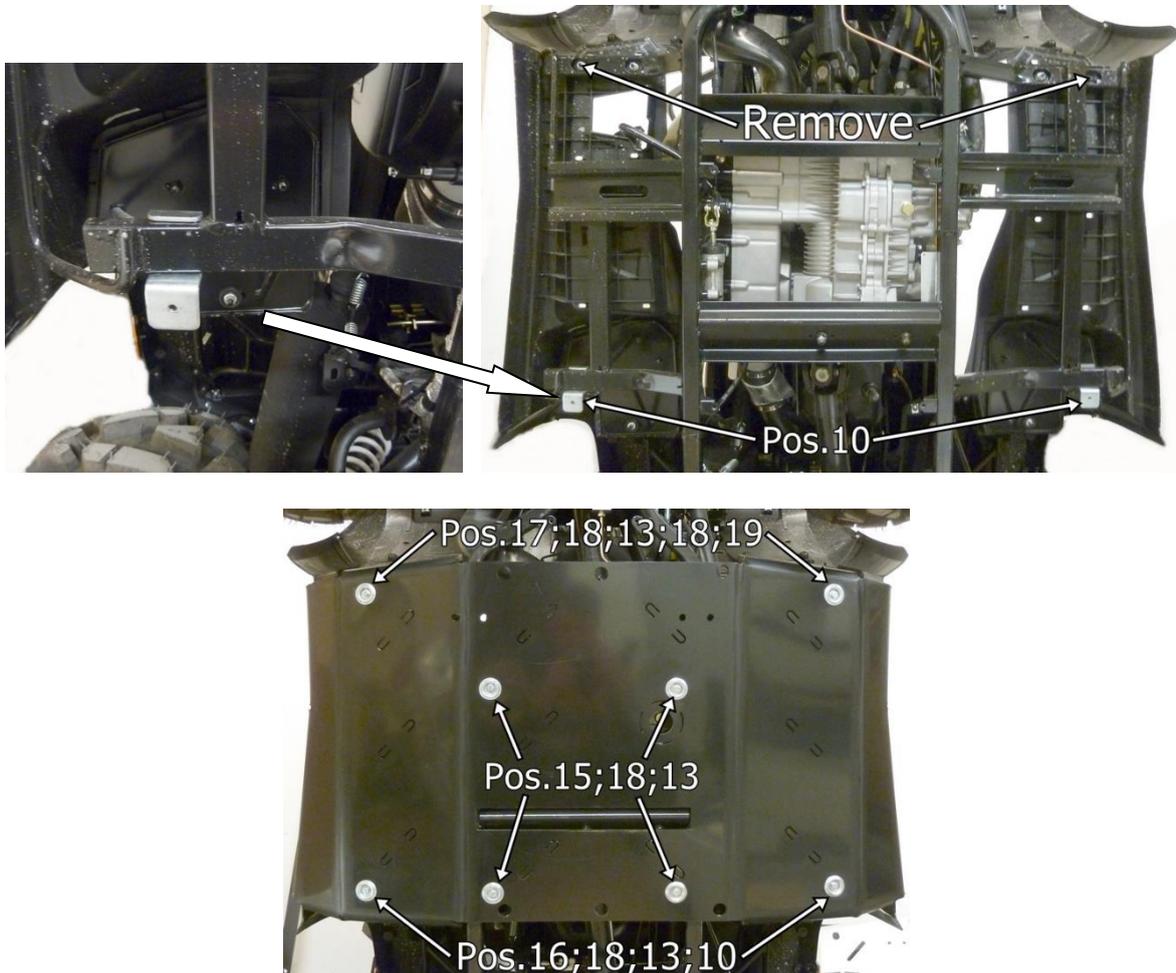

Step 5

Install plates 02.5006 to middle part.

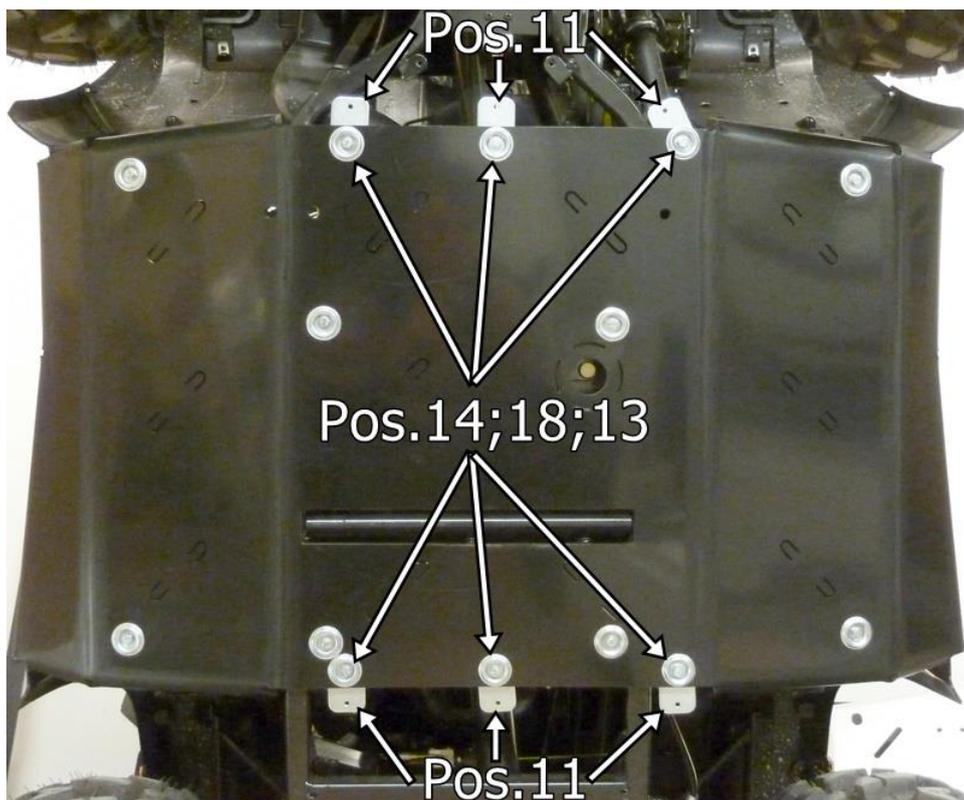

Step 6


Install skid plate front part 02.25601.



Step 7

Install skid plate rear part 02.25603.

If necessary remove hitch bolt so you can slide bracket 02.25504 into place.

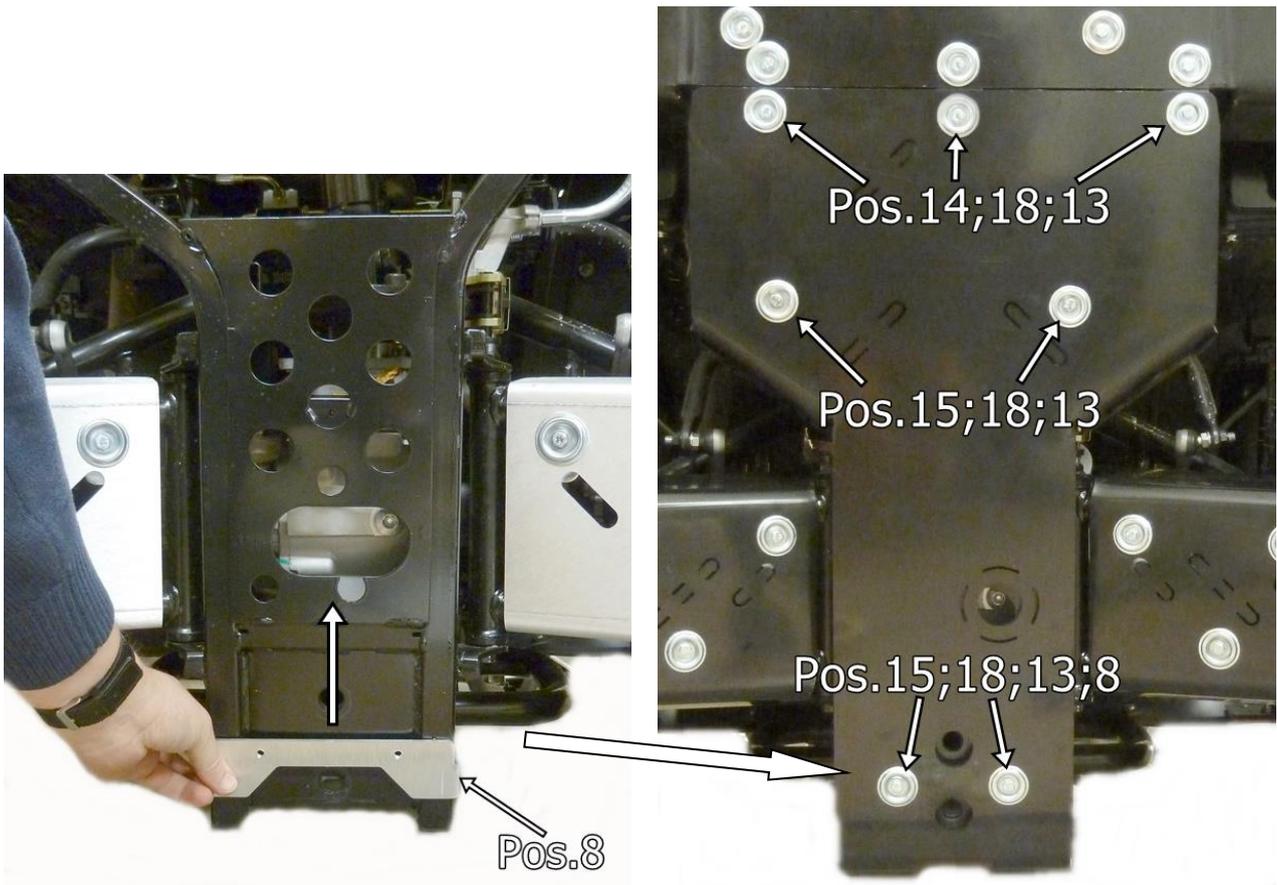

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

