

IRON BALTIC

FRONT A-ARM PROTECTIONS (ALUMINIUM)

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/A4Cclr3

POLARIS

Sportsman XP1000 S (2020)

Code 02.25908VP

Version 06102023

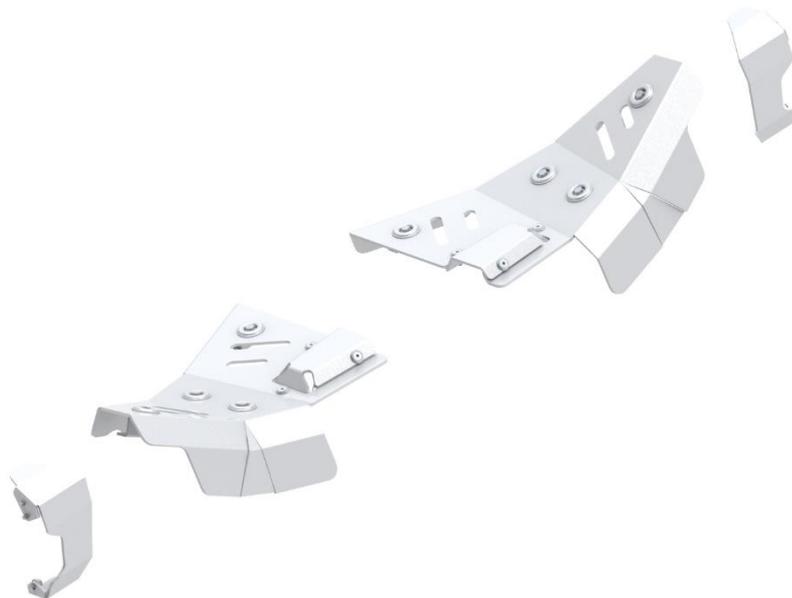


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front right arm protection	02.25908K	1
2	Right drive shaft protection	02.25909	1
3	Front left arm protection	02.25910K	1
4	Left drive shaft protection	02.25911	1
5	Caliper protection right	02.25919	1
6	Caliper protection left	02.25920	1
7	Installation bracket	02.5710	2
8	Installation bracket 2	02.8210	2
9	Conical washer 6	14.502	6
10	Dished washer	14.503	8
11	Bolt M6x12 DIN933	OT.02.02.030	6
12	Bolt M6x14 DIN933	OT.02.02.040	4
13	Bolt M6x30 DIN933	OT.02.02.080	4
14	Bolt M6x20 DIN7991	OT.02.04.030	6
15	Washer Ø6/15 SFS3738	OT.04.03.020	14
16	Washer Ø6/18 DIN9021	OT.04.02.020	4
17	Nyloc nut M6 DIN985	OT.03.02.030	10

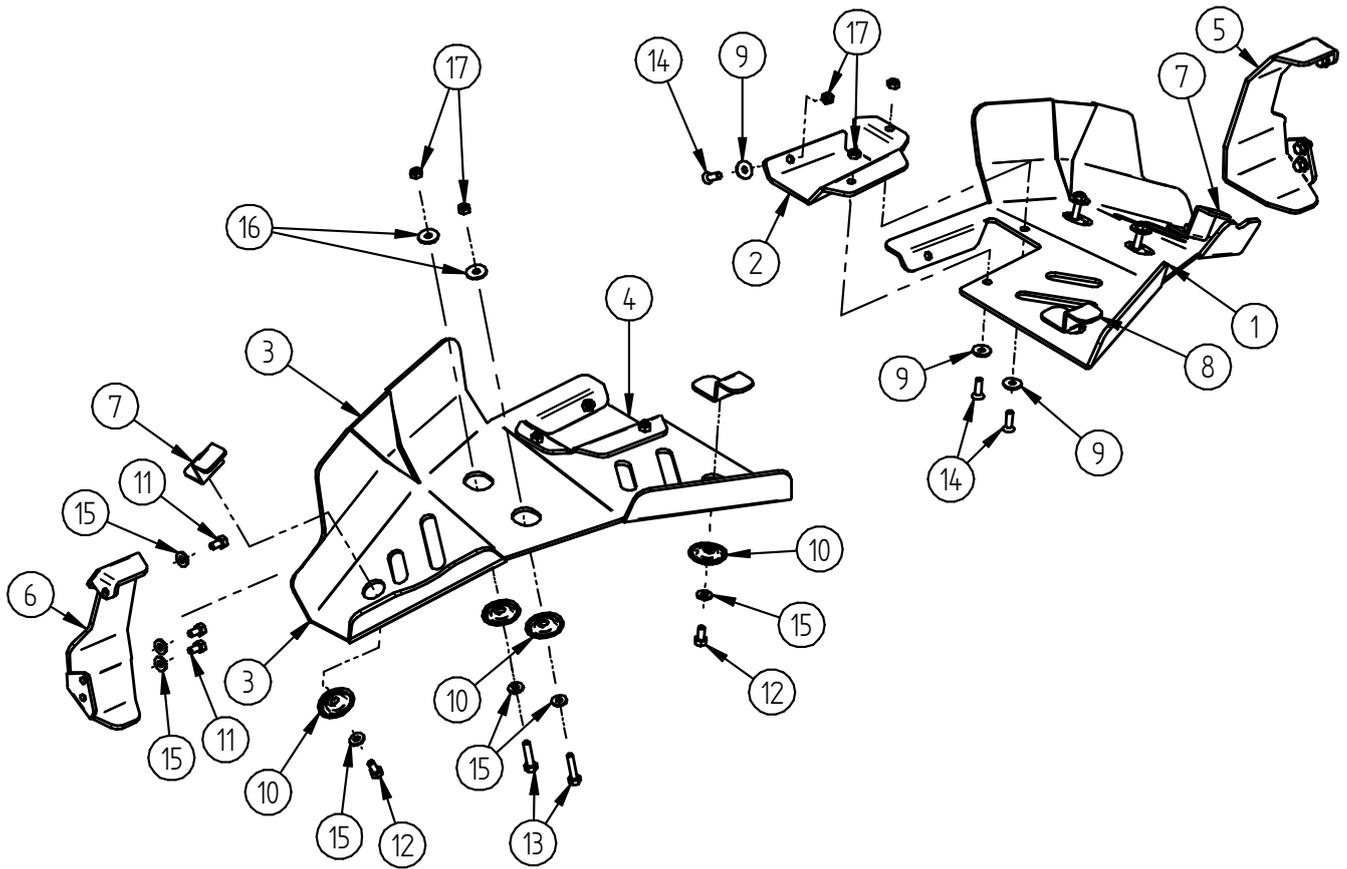

FITTING INSTRUCTIONS







NB!

**We recommend using thread lock fluid on the bolts.
Bolts tend to loosen with vibration from ATV.**



Step 1

Install right drive shaft protection (Pos.1) to the front right arm protection (Pos.2).
Install left drive shaft protection (Pos.3) to the front left arm protection (Pos. 4)

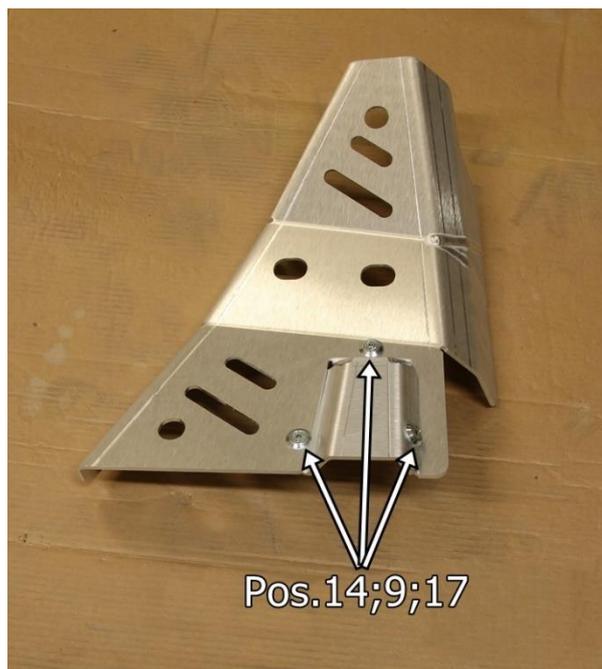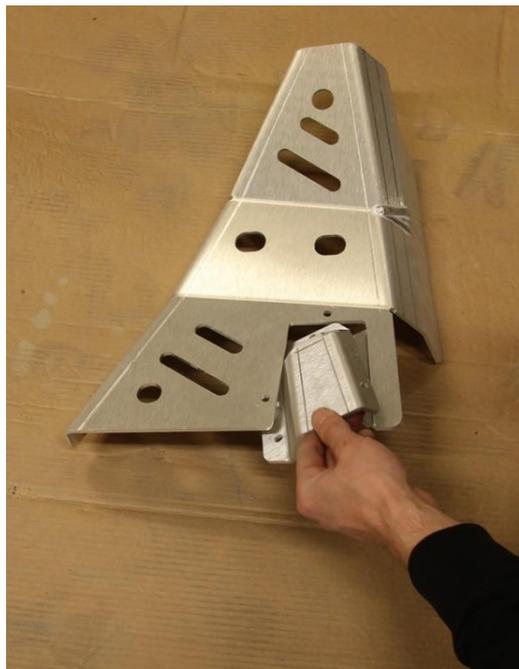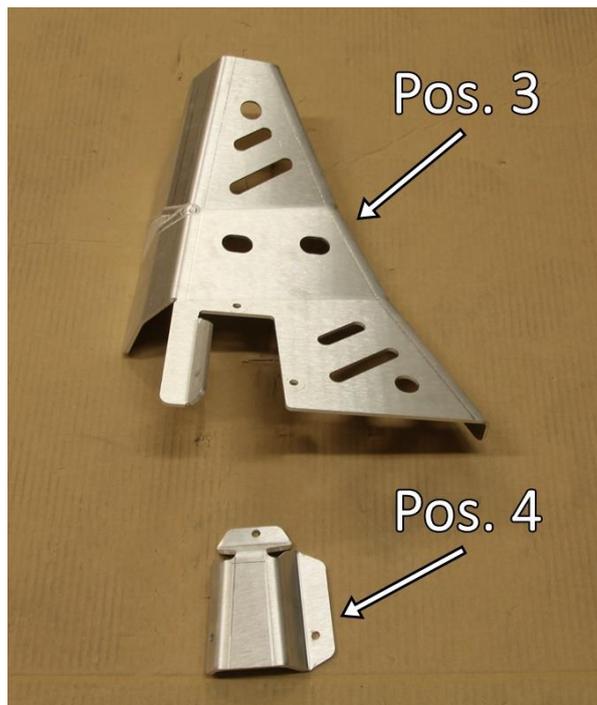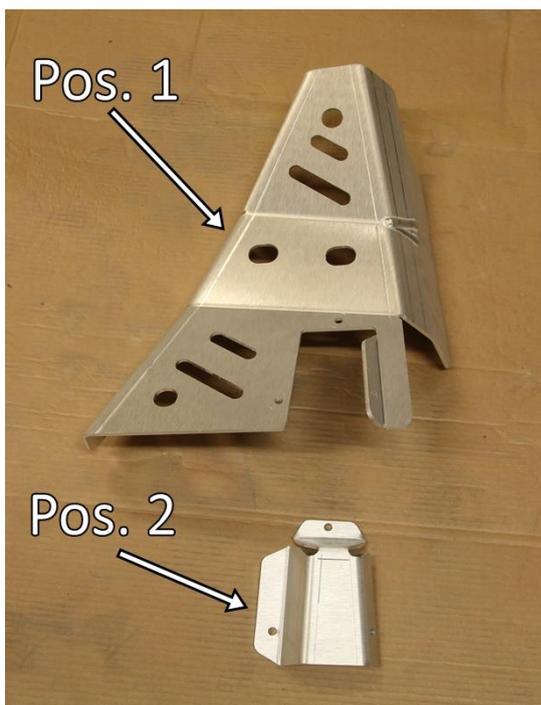

Step 2

Install front arm protections (Pos. 1 and Pos. 3).
Use installation brackets (Pos.5) for fastening.

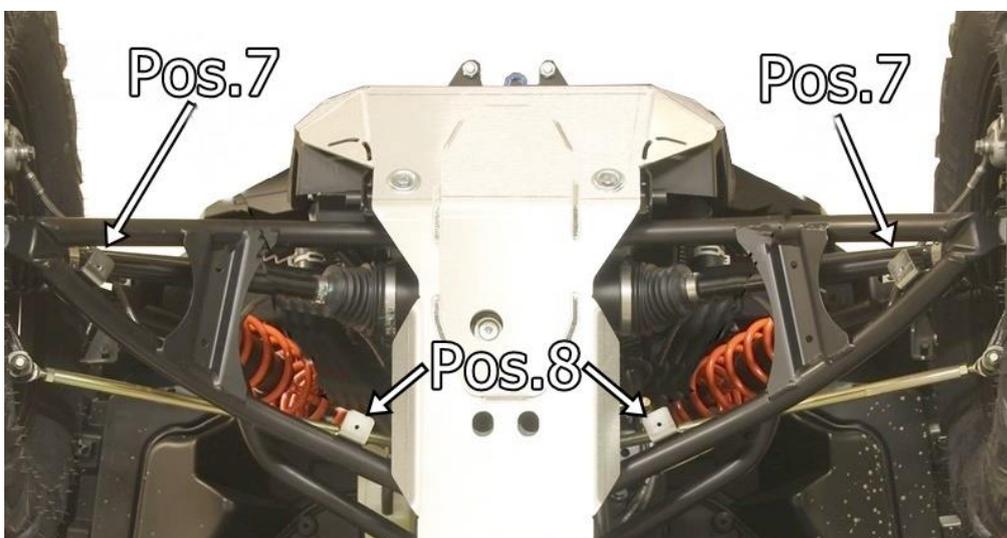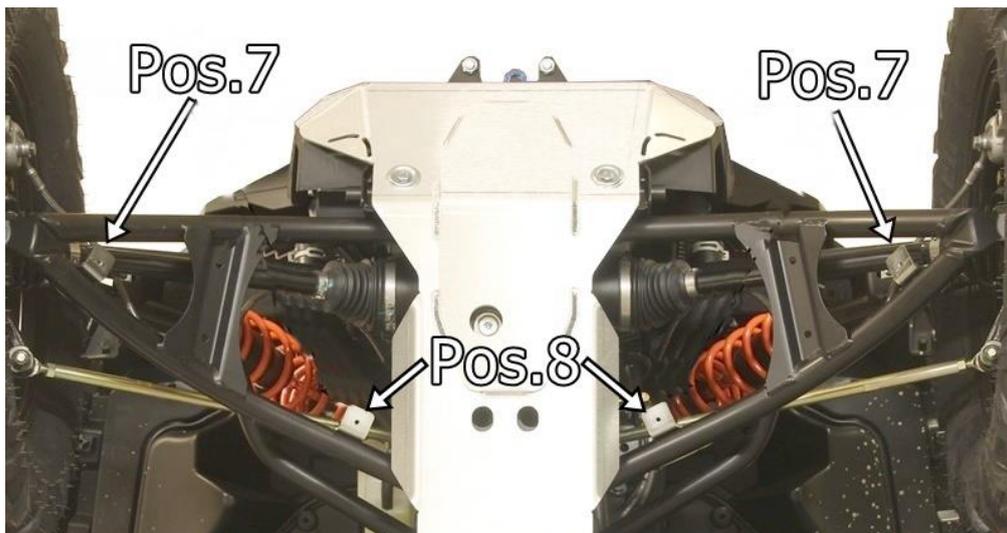

Step 3

Install protectors to ATV.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

