

IRON BALTIC

REAR A-ARM PROTECTIONS (ALUMINIUM)

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/tgRVH88h

POLARIS

Sportsman XP1000 S (2020)

Code 02.25912VP

Version 06102023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right arm protection	02.25912K	1
2	Rear left arm protection	02.25913K	1
3	Installation bracket	02.5710	2
4	Dished washer	14.503	8
5	Bolt M6x14 DIN933	OT.02.02.040	2
6	Bolt M6x20 DIN933	OT.02.02.060	4
7	Bolt M6x40 DIN933	OT.02.02.100	2
8	Washer Ø6/15 SFS3738	OT.04.03.020	8
9	Washer Ø6/18 DIN9021	OT.04.02.020	6
10	Nyloc nut M6 DIN985	OT.03.02.030	6

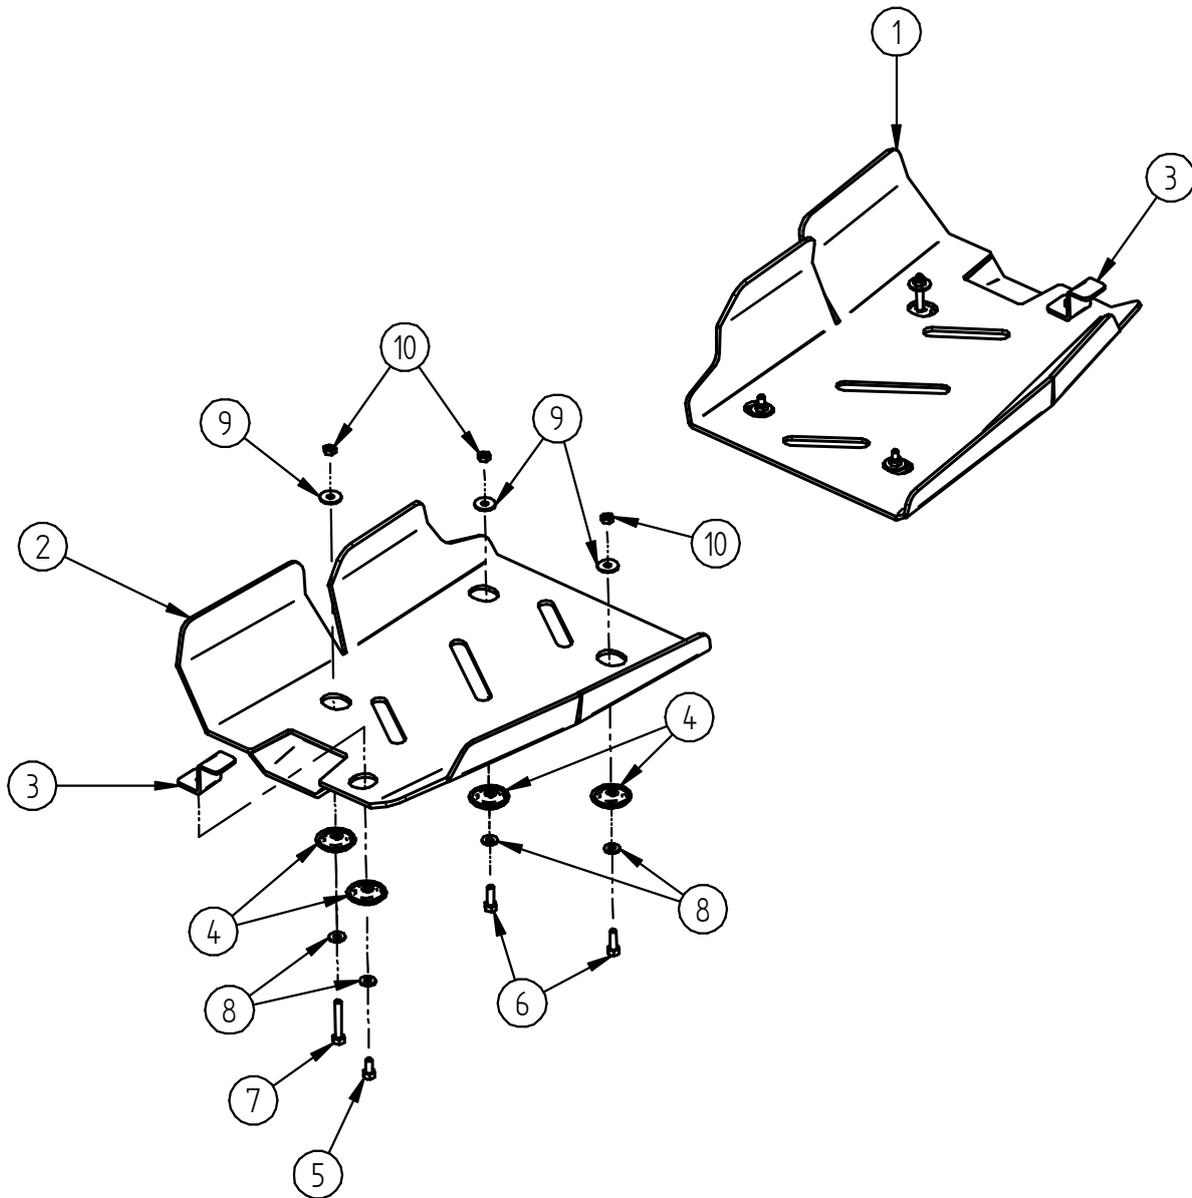

FITTING INSTRUCTIONS





NB!

**We recommend using thread lock fluid on the bolts.
Bolts tend to loosen with vibration from ATV.**

Step 1

Paigalda tagaõõtshoova kaitsmed (Pos.1 ja Pos.2).
Kinnitamiseks kasuta kinnitusklambreid (Pos.3)

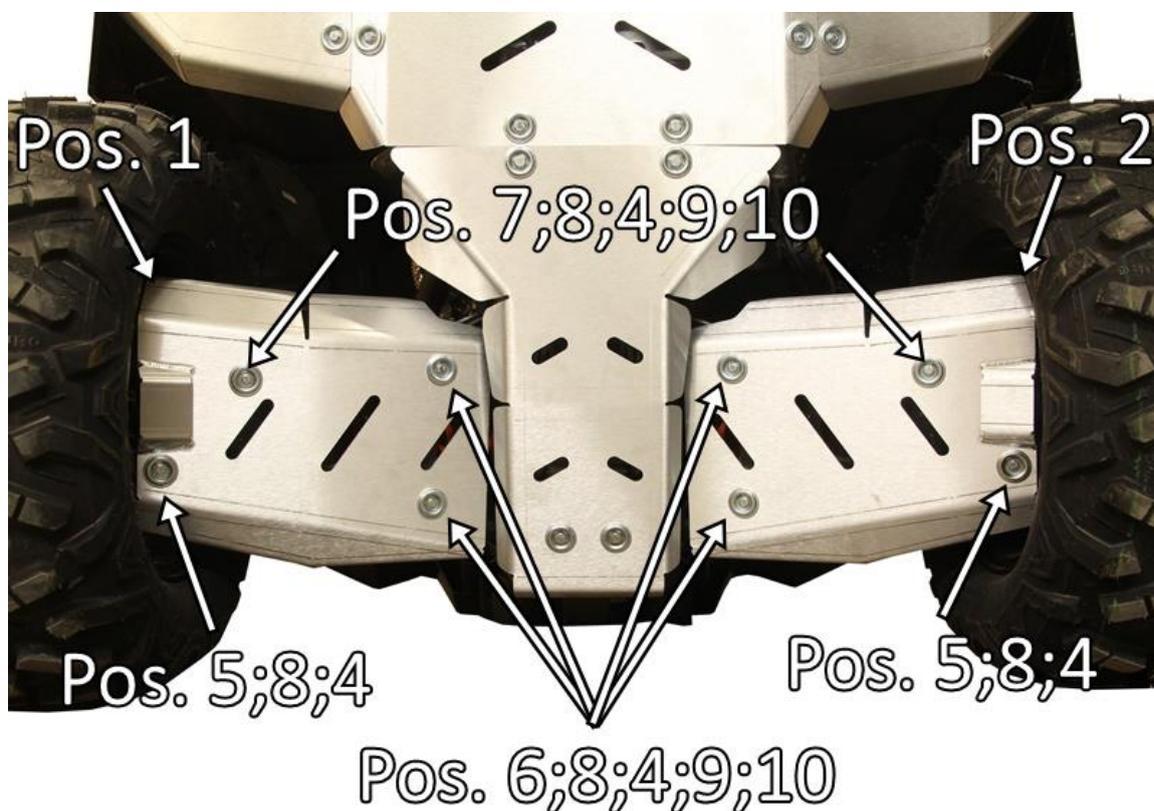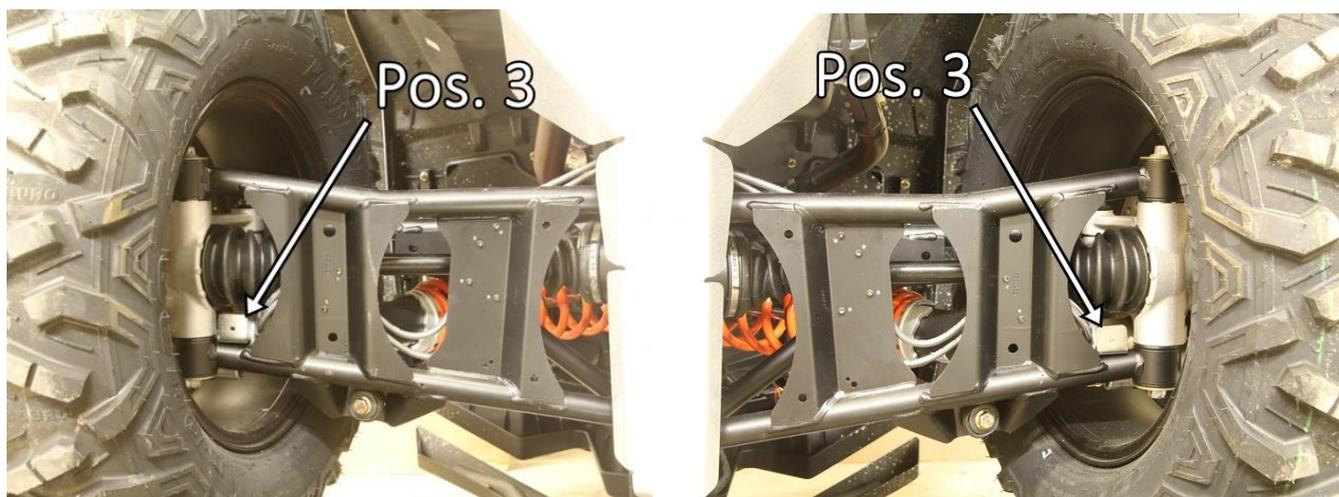

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

