

IRON BALTIC

FRONT A-ARM PROTECTIONS (PLASTIC)

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/OIZlcwJq

POLARIS

Sportsman XP1000 S (2020)

Code 02.26008VP

Version 06102023

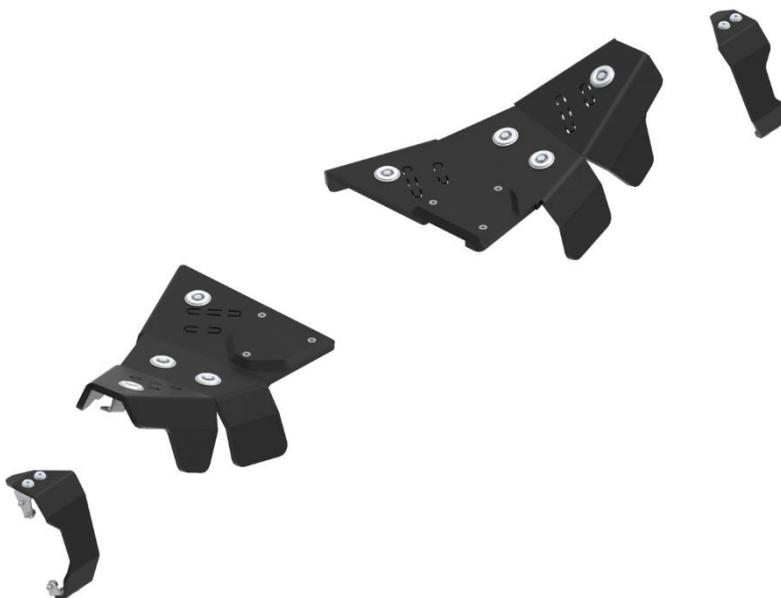


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front right arm protection	02.26008K	1
2	Front left arm protection	02.26010K	1
3	Caliper protection left	02.26015	1
4	Caliper protection right	02.26016	1
5	Upper bracket left	02.26017	1
6	Upper bracket right	02.26018	1
7	Lower bracket left	02.26019	1
8	Lower bracket right	02.26020	1
9	Installation bracket	02.5710	2
10	Installation bracket 2	02.8210	2
11	Conical washer Ø6	14.502	8
12	Dished washer	14.503	8
13	Bolt M6x12 DIN933	OT.02.02.030	6
14	Bolt M6x16 DIN933	OT.02.02.050	4
15	Bolt M6x35 DIN933	OT.02.02.090	4
16	Bolt M6x16 DIN7991	OT.02.02.050	8
17	Washer Ø6/15 SFS3738	OT.04.03.020	14
18	Washer Ø6/18 DIN9021	OT.04.02.020	4
19	Nyloc nut M6 DIN985	OT.03.02.030	4

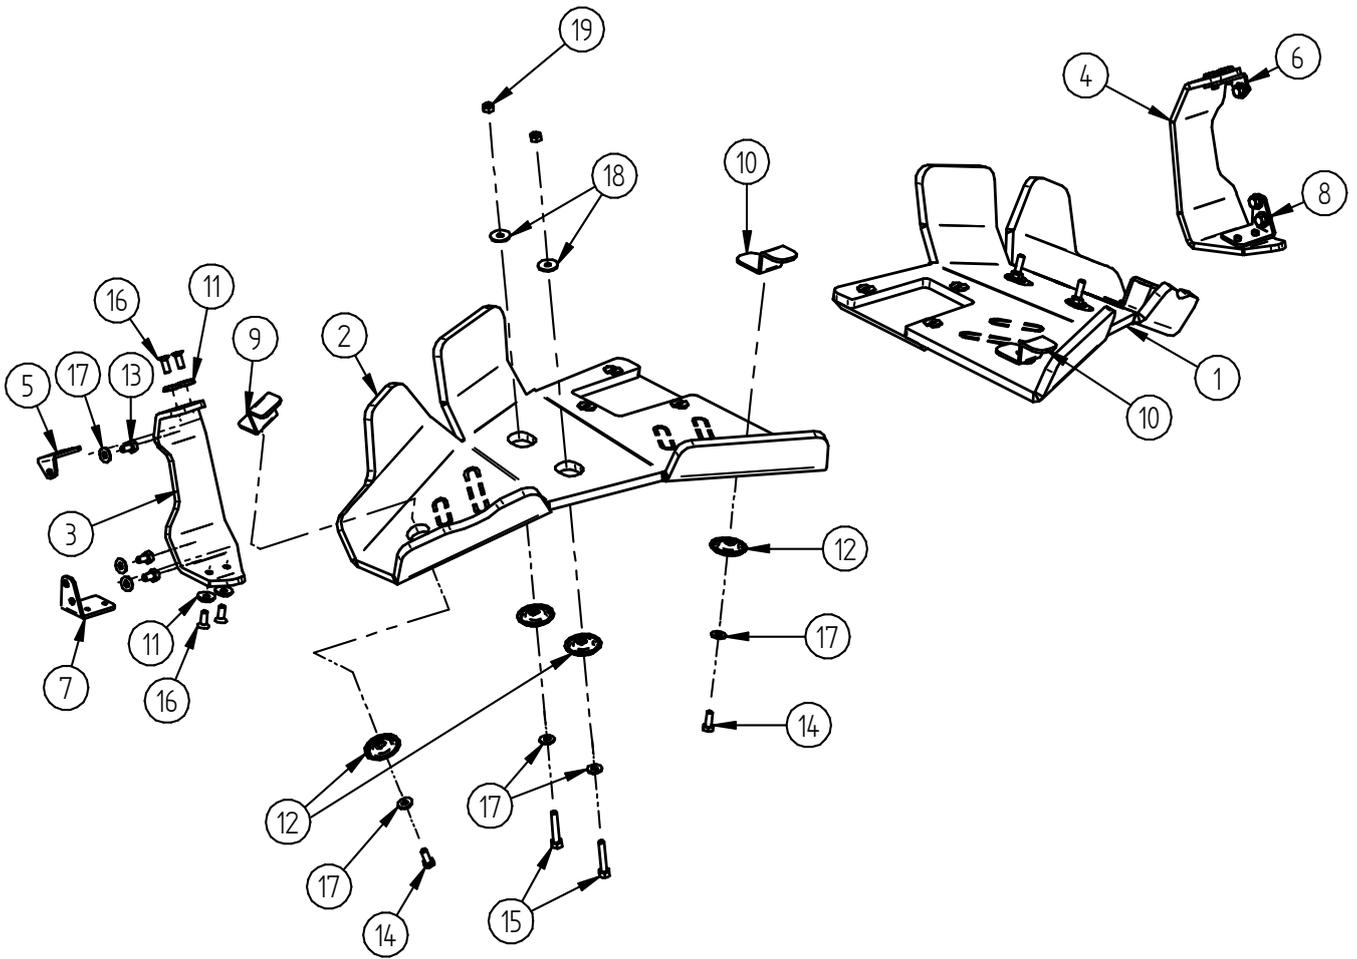

FITTING INSTRUCTIONS





NB!

**We recommend using thread lock fluid on the bolts.
Bolts tend to loosen with vibration from ATV.**


Step 1

Install front arm protections (Pos.1 and Pos. 2).
Use installation brackets (Pos.3) for fastening.

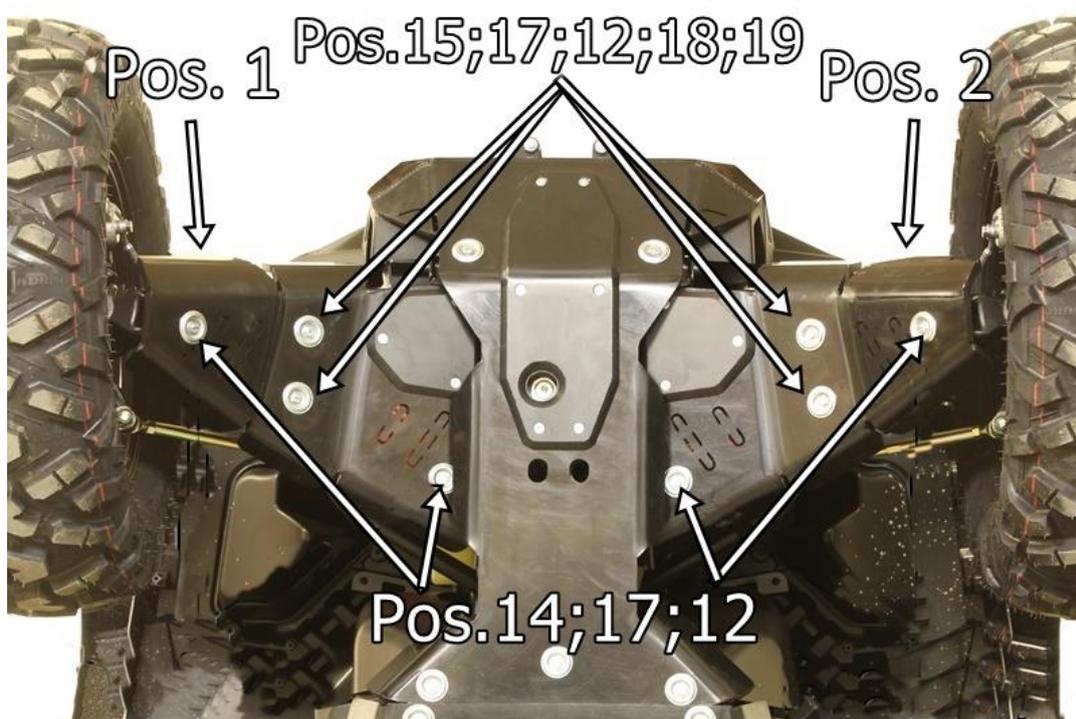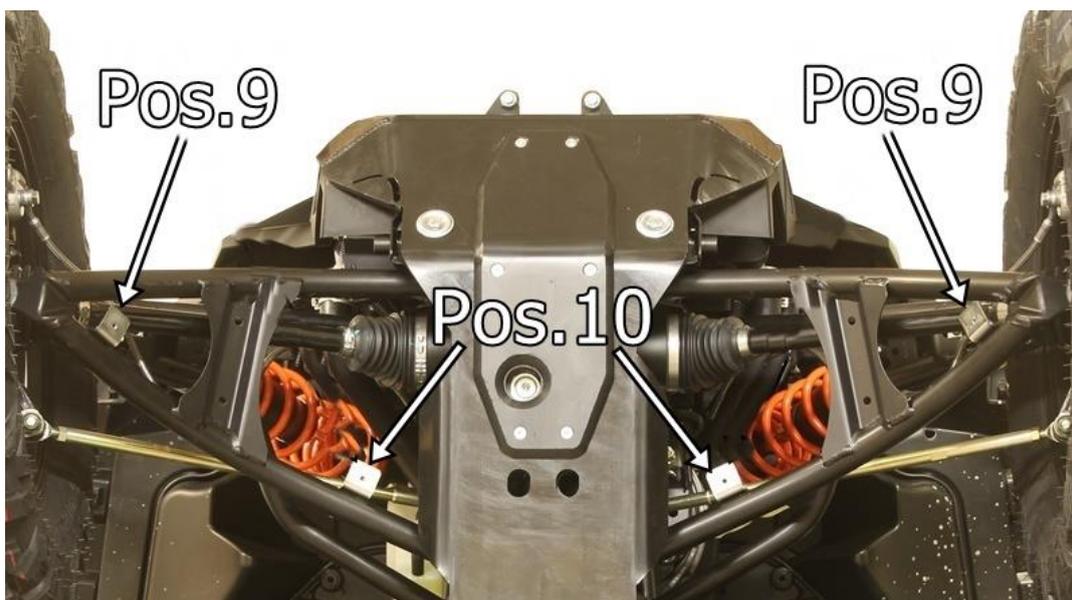


Step 2



Install brackets to front caliper protections. Notice the positioning of the brackets.

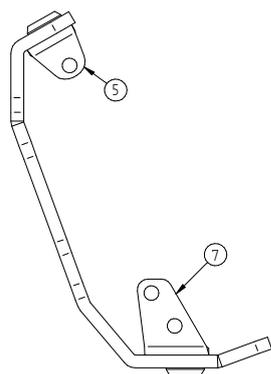

LEFT / VASAK

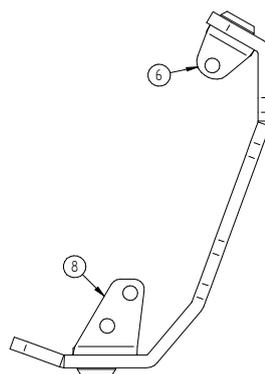

RIGHT / PAREM

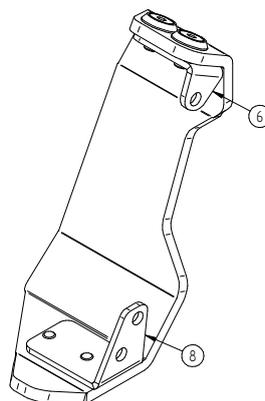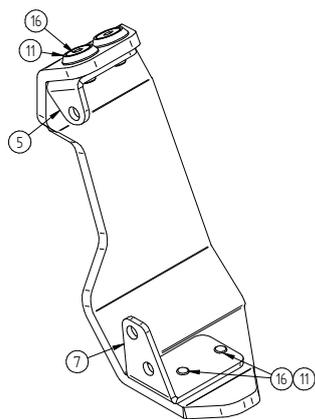

Step 3

Install protectors to ATV.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

