

SKID PLATE




code.ironbaltic.com/u/jwlBCS5h

CFMOTO

ZForce 950 / 1000 Sport

Code 02.26100

Version 06102023


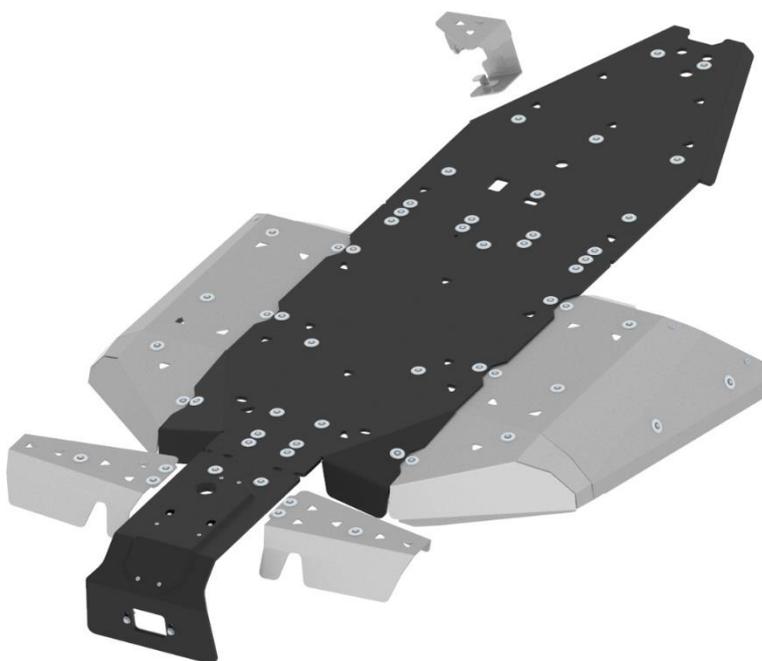


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Front protection	02.26101K	1
2	Middle protection	02.26102	1
3	Rear protection	02.26103	1
4	Right sideprotection	02.26104	1
5	Right sideprotection rear part	02.26105K	1
6	Left sideprotection	02.26106	1
7	Left sideprotection rear part	02.26107K	1
8	Front left arm protection	02.26110	1
9	Front right arm protection	02.26111	1
10	Rear left arm protection	02.26112	1
11	Rear right arm protection	02.26113	1
12	Sideprotection bracket 1	02.26114	2
13	Sideprotection bracket 2	02.26115	1
14	Sideprotection bracket 3	02.26116	1
15	Installation bracket	02.719	2
16	Connecting plate	02.5006	12
17	Conic washer Ø6	14.502	8
18	Dished washer	14.503	57
19	Bolt M6x16 DIN933	OT.02.02.050	30
20	Bolt M6x20 DIN933	OT.02.02.060	10
21	Bolt M6x25 DIN933	OT.02.02.070	23
22	Bolt M6x35 DIN933	OT.02.02.090	4
23	Bolt M8x35 DIN933	OT.02.02.210	2
24	Bolt M6x25 DIN7991	OT.02.04.040	4
25	Bolt M6x35 DIN7991	OT.02.04.060	4
26	Washer Ø6/15 SFS3738	OT.04.03.020	73
27	Washer Ø8/20 SFS3738	OT.04.03.030	4
28	Nyloc nut M6 DIN985	OT.03.02.030	6
29	Nyloc nut M8 DIN985	OT.03.02.040	2

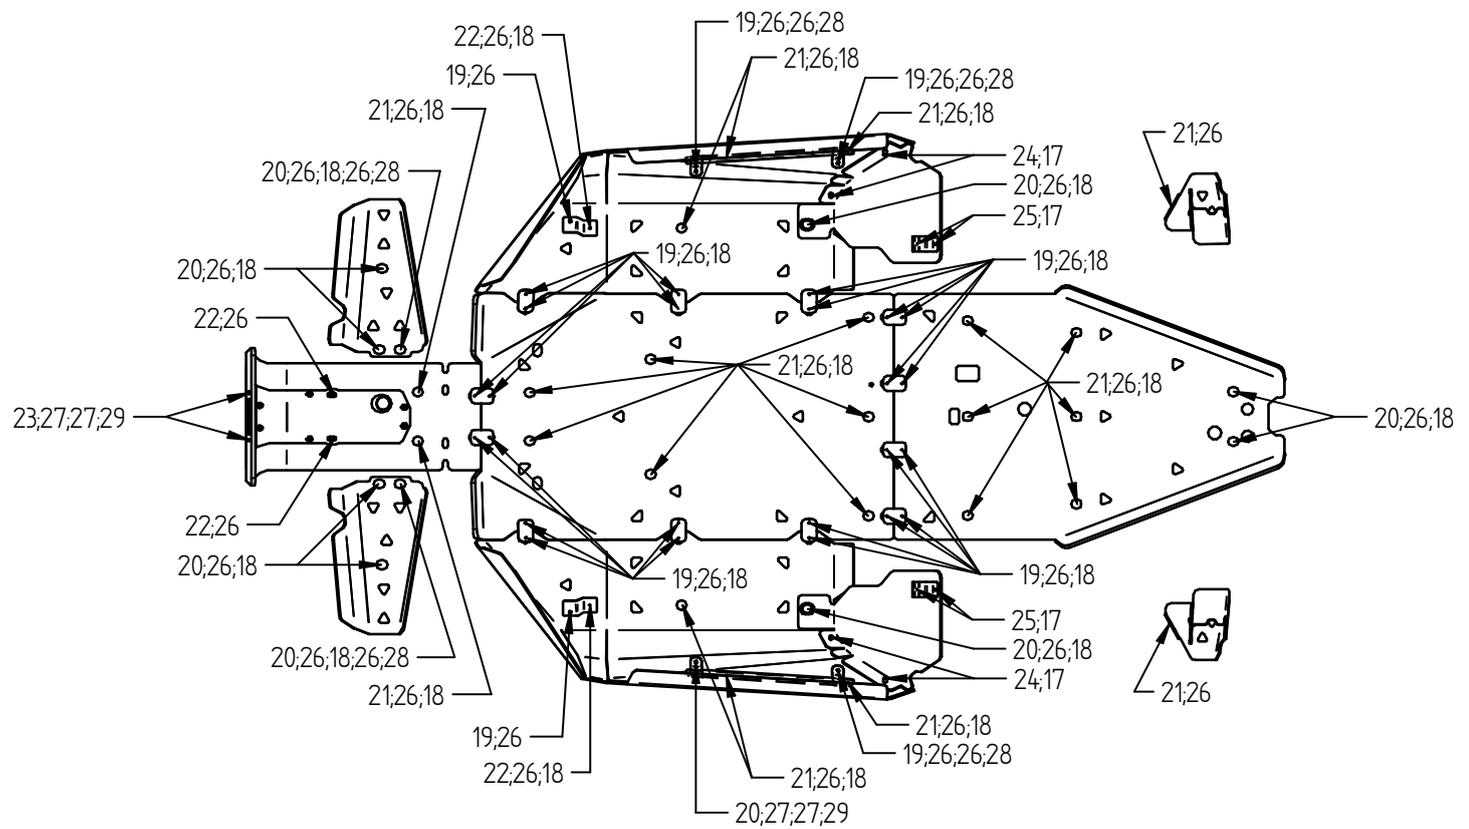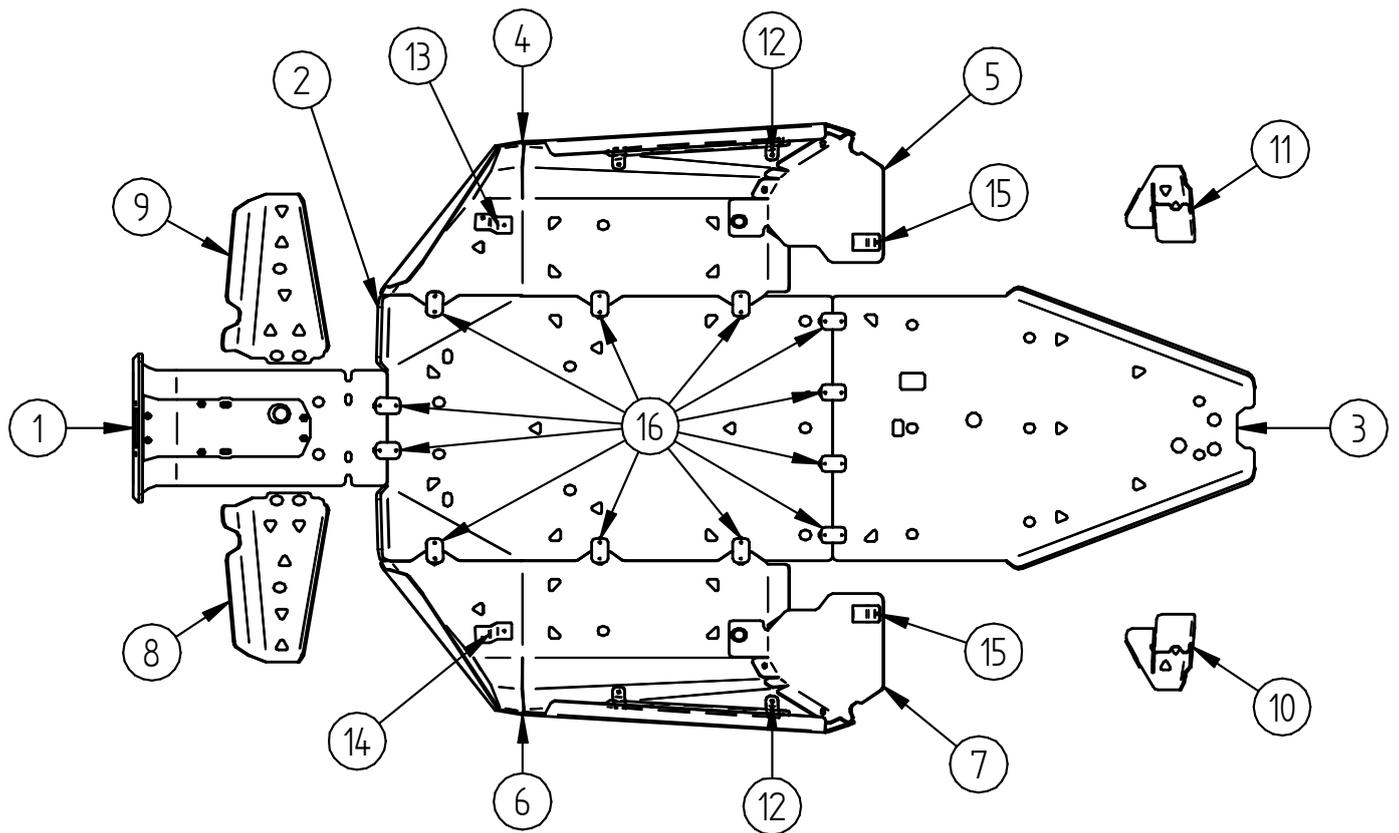

FITTING INSTRUCTIONS



Step 1

Remove original skid plate, front and rear A-arms protections, front brake caliper protectors, front plastic cover with brackets and winch fairlead. After removing the rear A-arm protections, reattach the brake pipe with the original bolt.

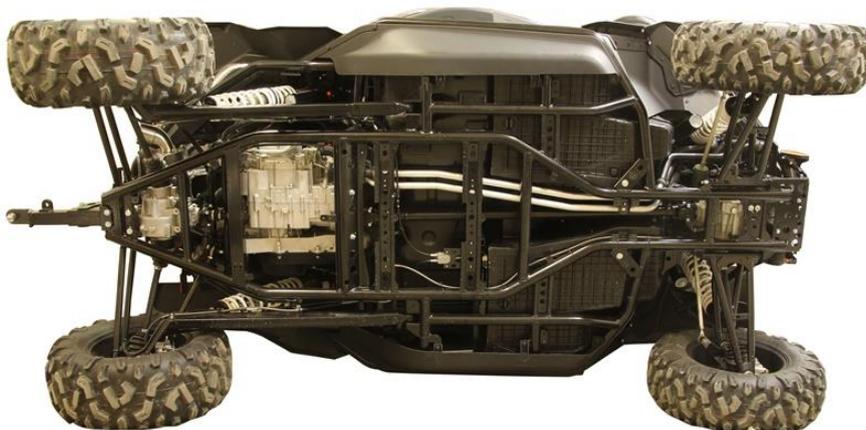

Step 2

Remove the original side protections. To do this, remove the bolts and plastic retainer clips shown in the pictures. The bolts shown in the second picture are located under the frame tube (for easier access, it is recommended to remove the retainer clips shown in the picture).

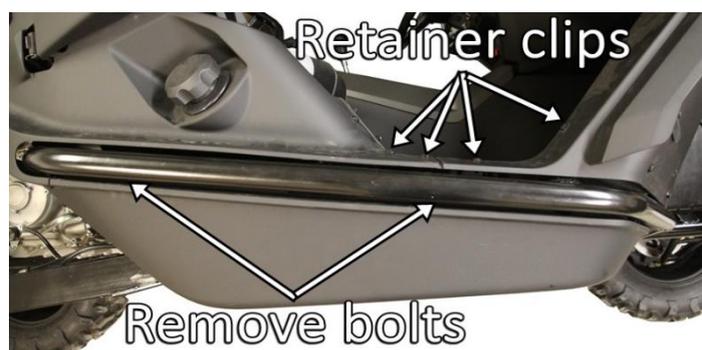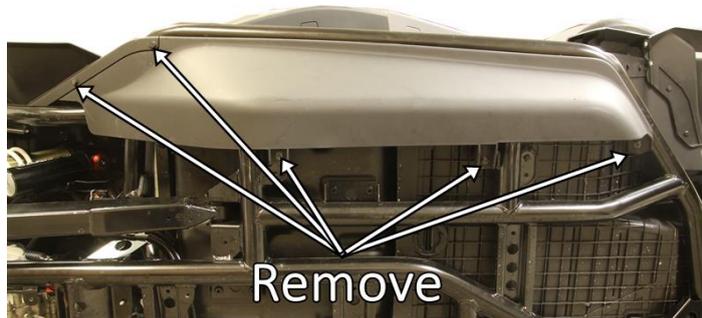

Step 3

Install the rear A-arm protections 02.26112 (Pos.10) and 02.26113 (Pos.11). Remove nut from upper strut mounting bolt and push the bolt even with the edge of strut but **DO NOT REMOVE BOLT**. Then install the A-arm protections to the machine, before final tightening of the bolts/nuts, install all bolts/nuts. Tighten Pos.21 bolt (M6x25) last!



WHEEL REMOVED FOR BETTER VISIBILITY




BOTTOM VIEW




Step 4

Install front A-arm protections 02.26110 (Pos.8) and 02.26111 (Pos.9).

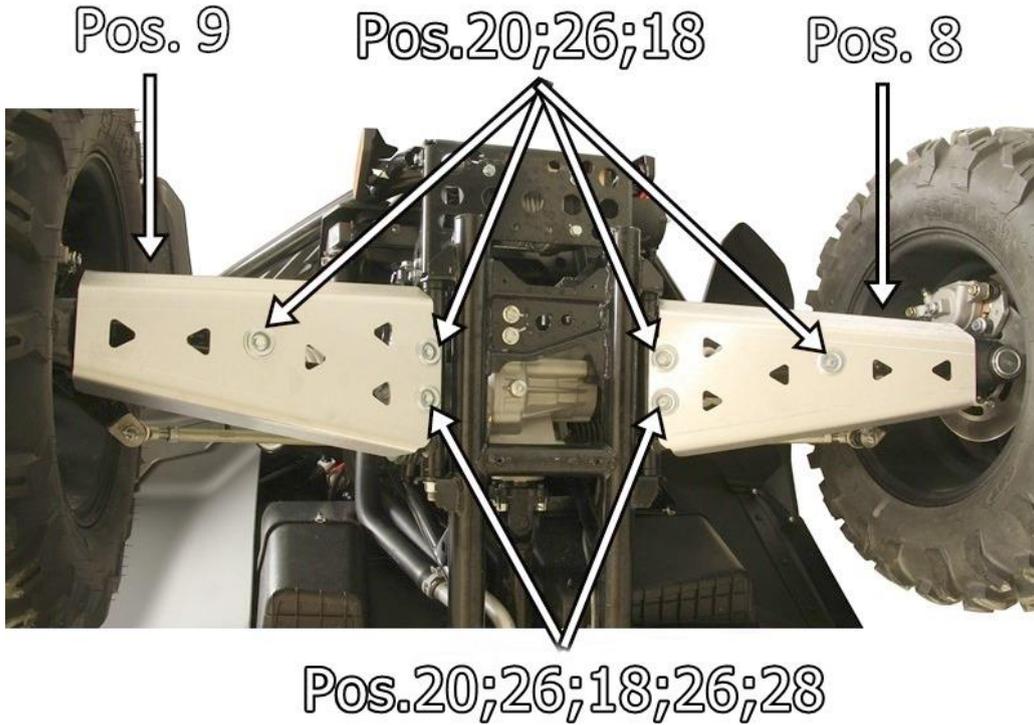


Step 5

Install skid plate rear part 02.26103 (Pos. 3).

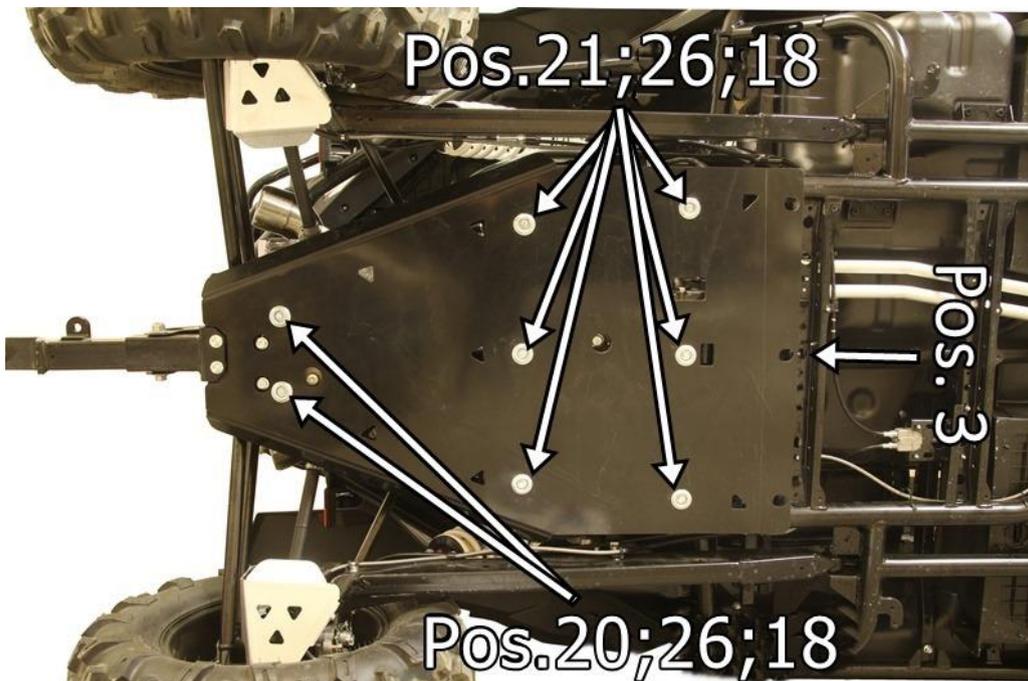


Step 6

Install connecting plates 02.5006 (Pos. 16) to rear part.

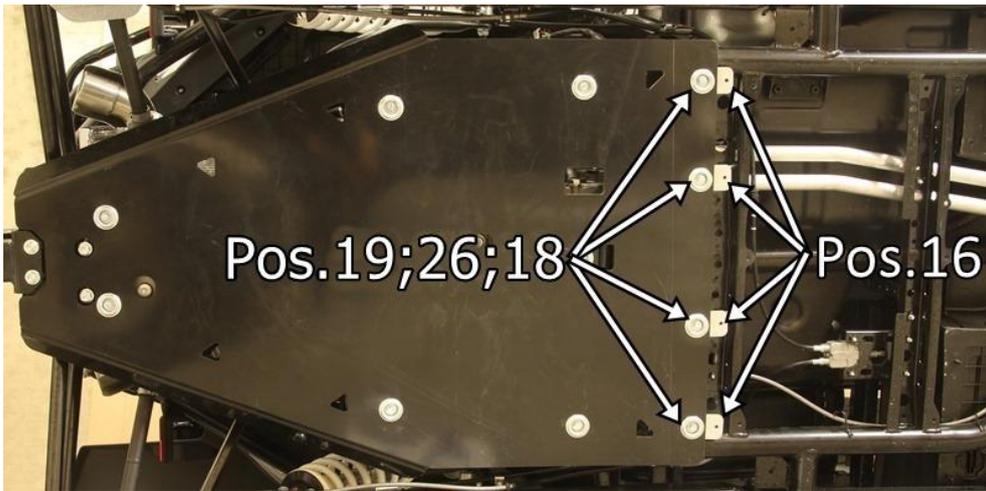


Step 7

Install skid plate middle part 02.26102 (Pos. 2).

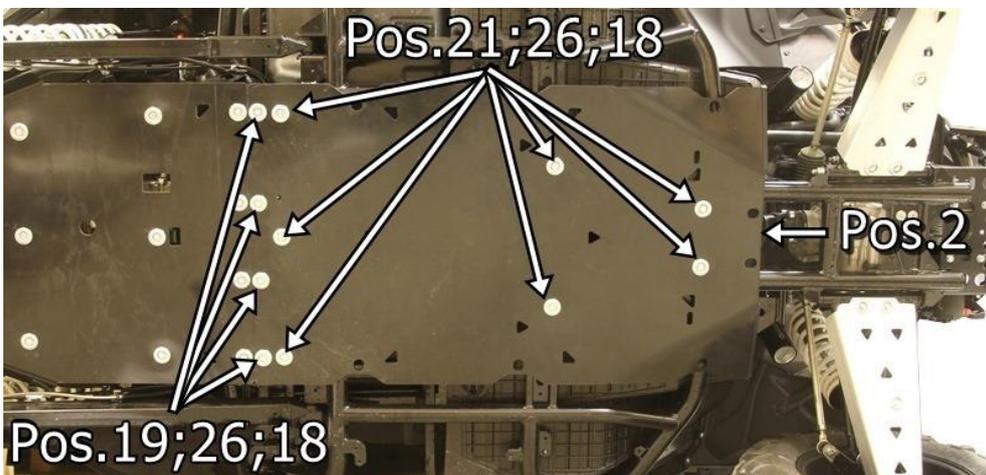


Step 8

Install connecting plates 02.5006 (Pos. 16) to middle part.

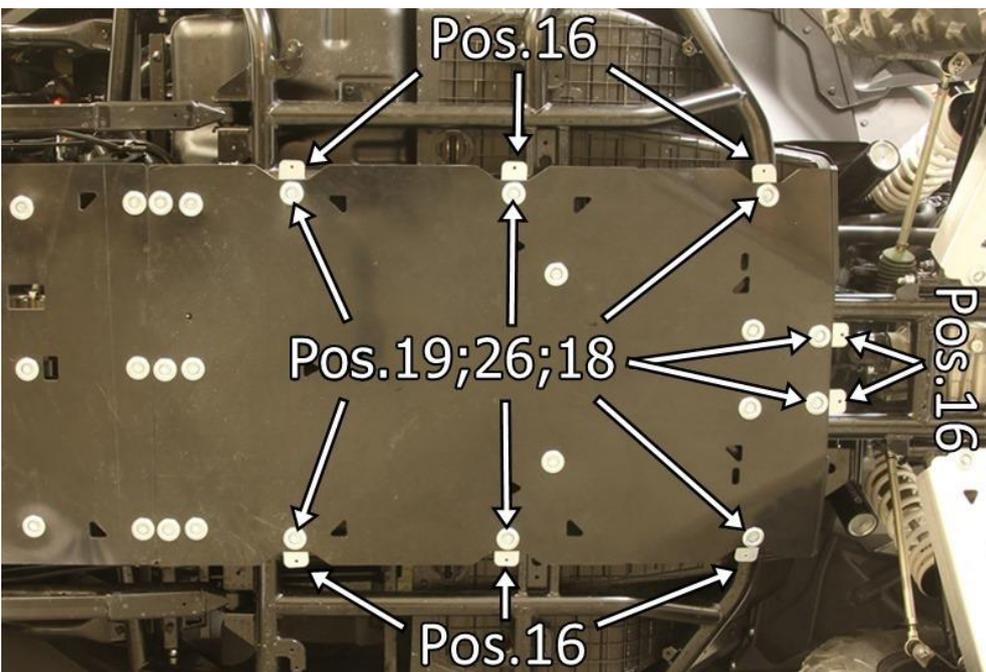


Step 9

Install skid plate front part 02.26101K (Pos.1) and original winch fairlead.

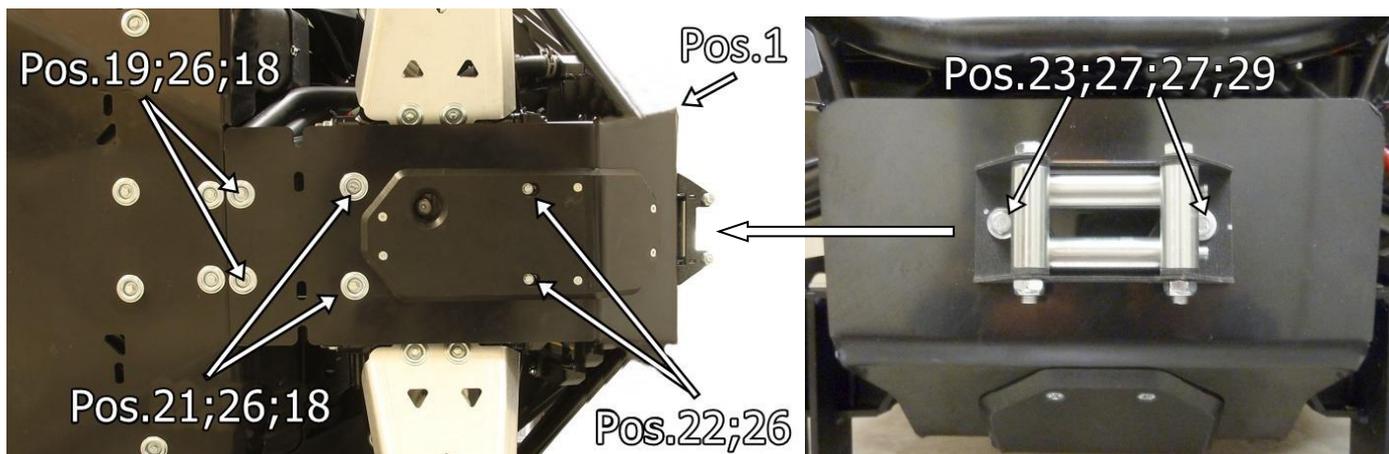




Step 10

Install side protection brackets 02.26114 (Pos.12), 02.26115 (Pos.13) and 02.26116 (Pos.14).

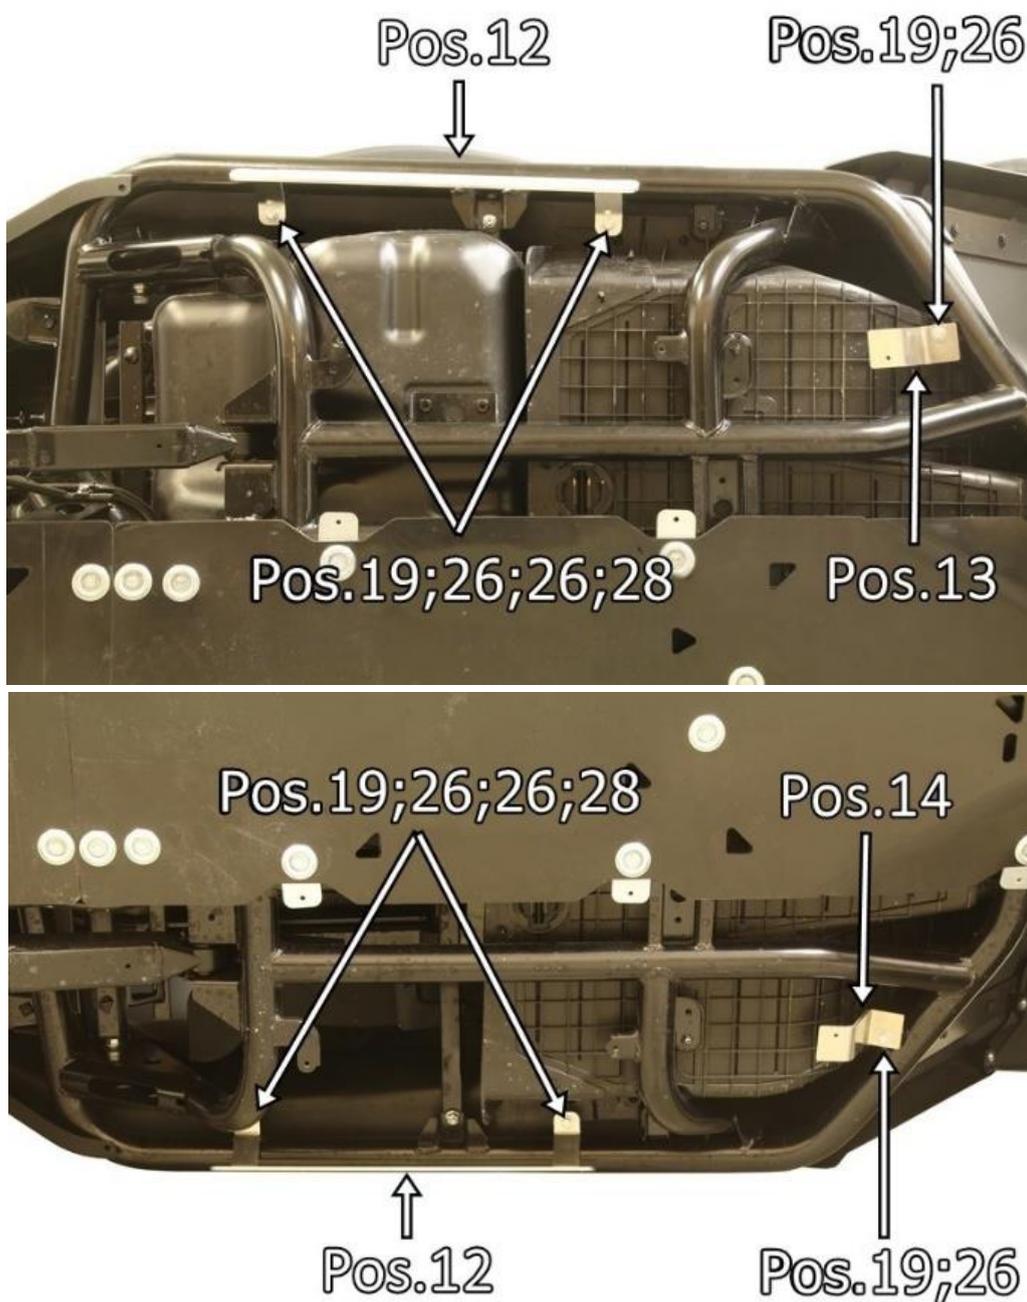



Step 11

Install side protections rear parts 02.26105K (Pos.5) and 02.26107K (Pos.7).
For fastening use installation bracket 02.719 (Pos.15)

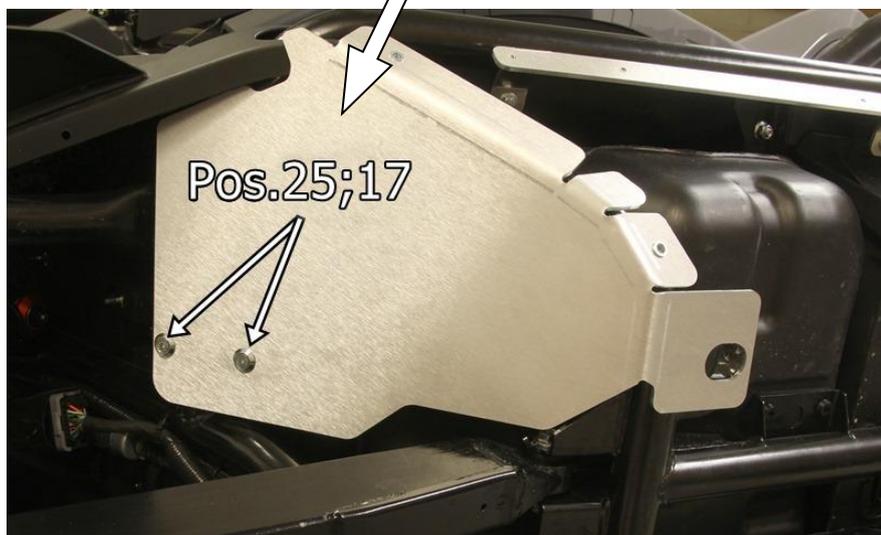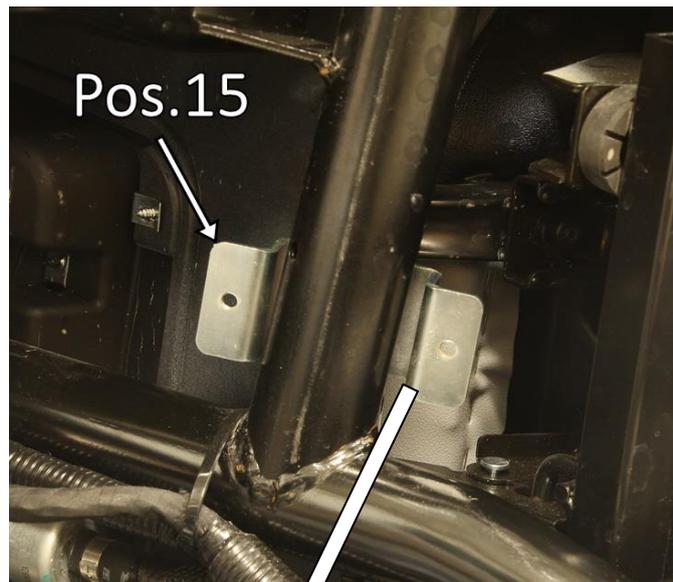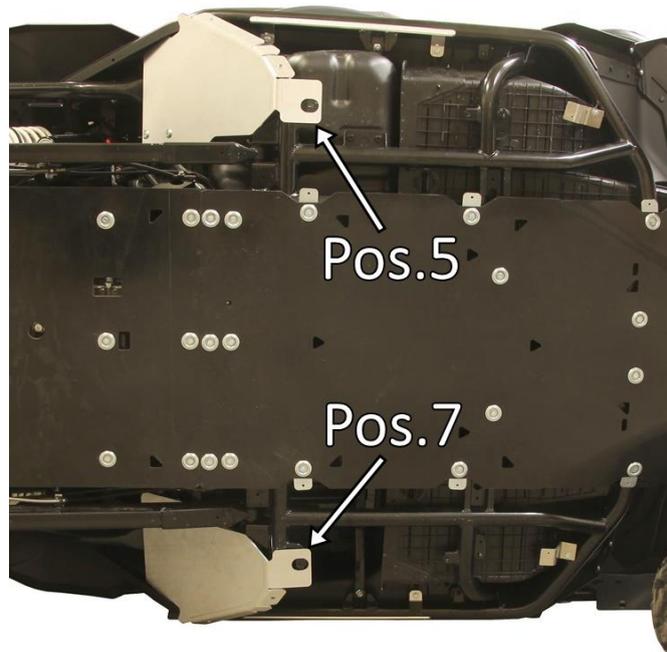

Step 12

Install side protections 02.26104 (Pos.4) and 02.26106 (Pos.6).

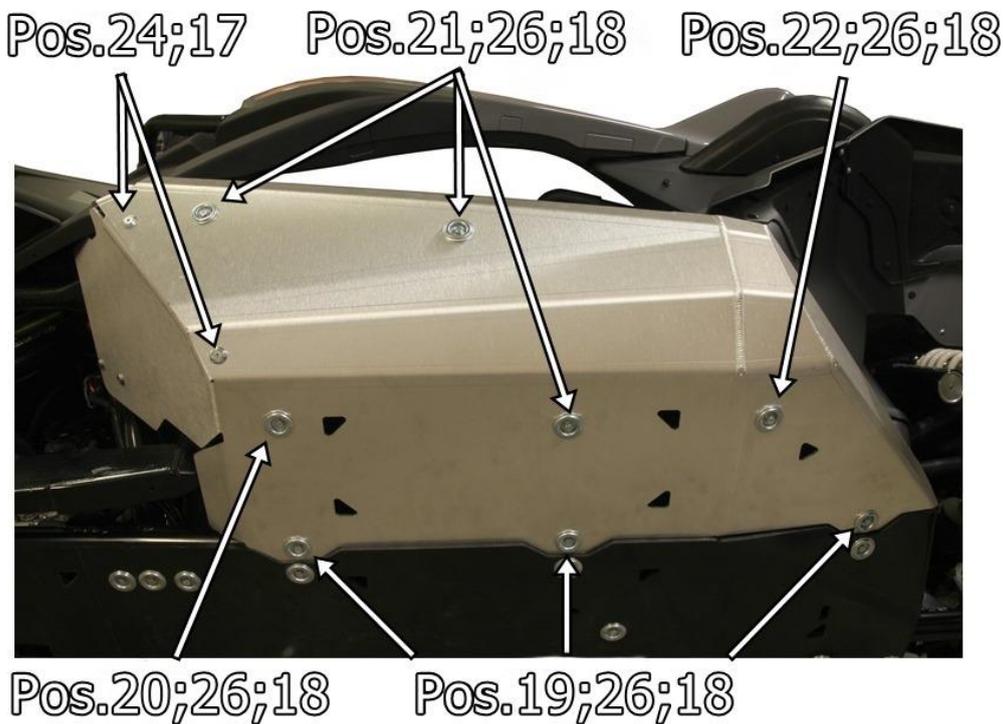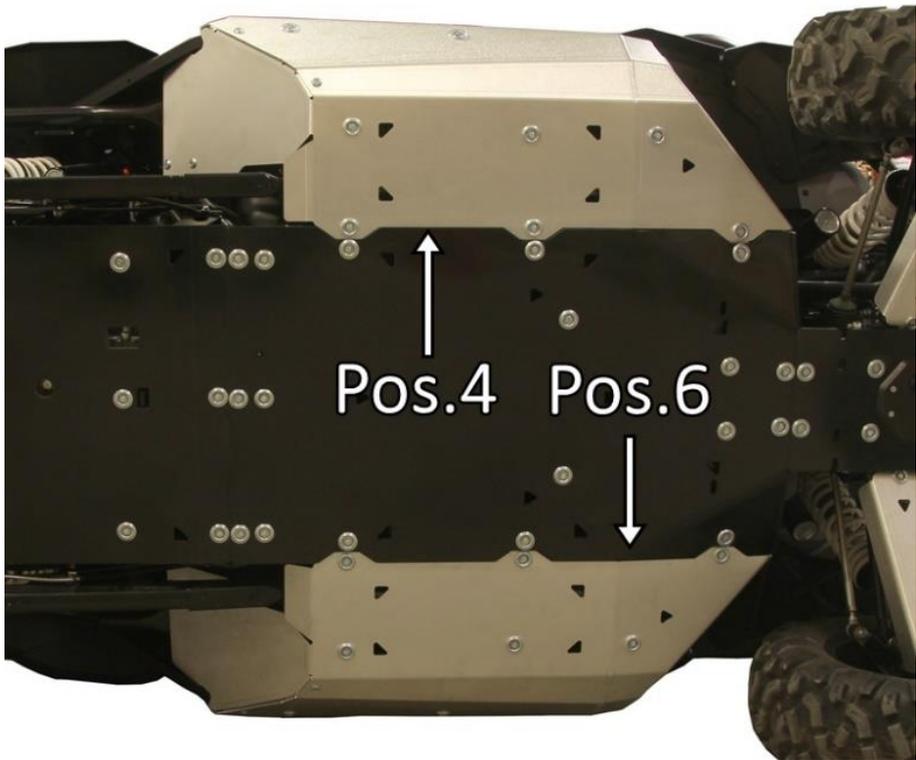

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

