



code.ironbaltic.com/u/9zgCOIR9

ALUMINIUM SKID PLATE

CAN AM

Outlander 6x6 450T

Code 02.26200

Version 06102023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Rear part 1	02.20301K	1
2	Rear part 1	02.20302K	1
3	Rear right trailing arm protection	02.18801	2
4	Rear left trailing arm protection	02.18802	2
5	Front part	02.15801K	1
6	Middle part	02.8401K	1
7	Front right arm protection	02.8204	1
8	Front left arm protection	02.8205	1
9	Rear part bracket	02.20303	1
10	Rear arm protection clamp	02.18803	4
11	Bracket	02.18804	4
12	Bracket (80)	02.18805	4
13	Bracket (100)	02.18806	4
14	Clamp for front arm protection	02.8210	4
15	Plate	02.5006	6
16	Plate	02.2305	3
17	Bracket	03.3502	4
18	Dished washer	14.503	47
19	Bolt M6x12 DIN 933	OT.02.02.030	16
20	Bolt M6x16 DIN 933	OT.02.02.050	6
21	Bolt M6x20 DIN 933	OT.02.02.060	4
22	Bolt M6x35 DIN 933	OT.02.02.090	2
23	Bolt M6x50 DIN 933	OT.02.02.120	4
24	Bolt M8x16 DIN 933	OT.02.02.170	18
25	Bolt M8x35 DIN 933	OT.02.02.210	1
26	Bolt M10x30 DIN 933	OT.02.02.320	4
27	Bolt M8x25 DIN 7991	OT.02.04.160	4
28	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
29	Washer Ø6/15 SFS 3738	OT.04.03.020	38
30	Washer Ø8/20 SFS 3738	OT.04.04.030	12
31	Washer Ø10/20 DIN 125	OT.04.01.040	8
32	Conical washer Ø8	14.502	4
33	Nyloc nut M6 DIN 985	OT.03.02.030	6
34	Nyloc nut M8 DIN 985	OT.03.02.040	12
35	Nyloc nut M10 DIN 985	OT.03.02.050	2

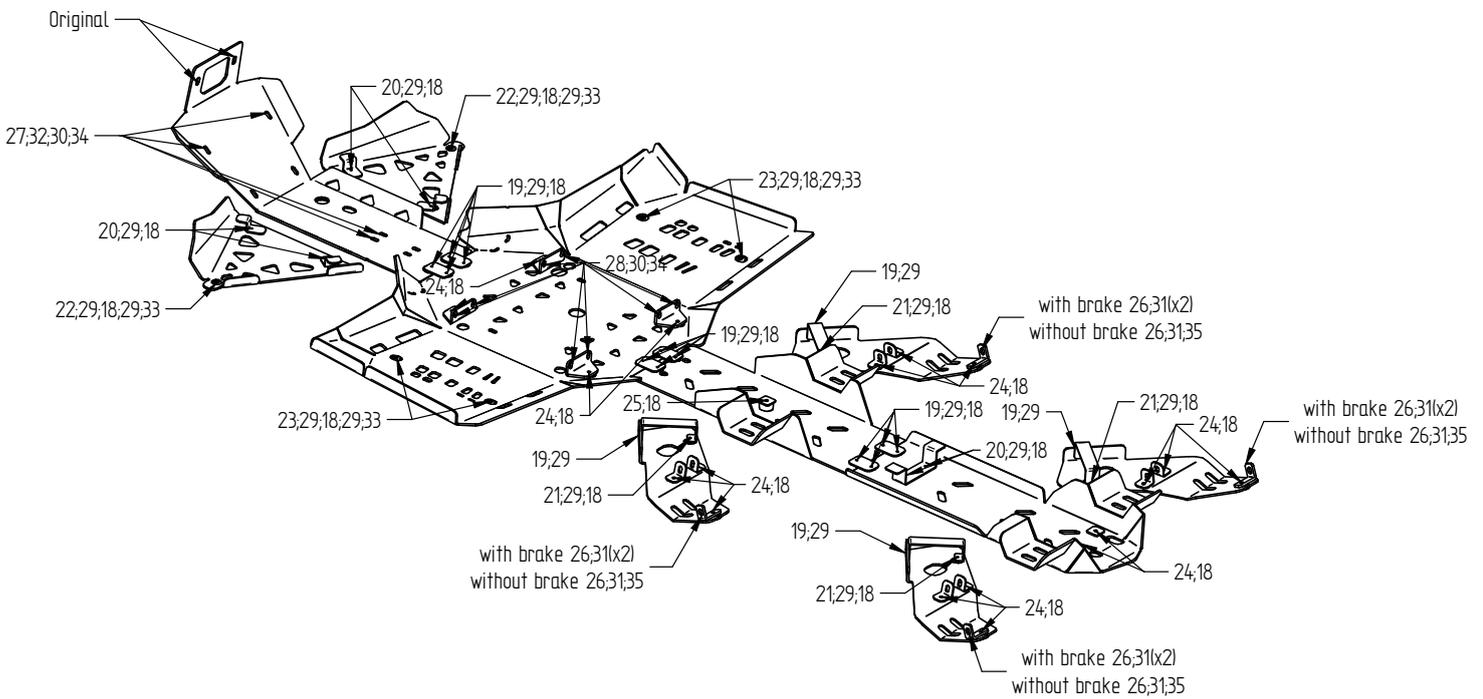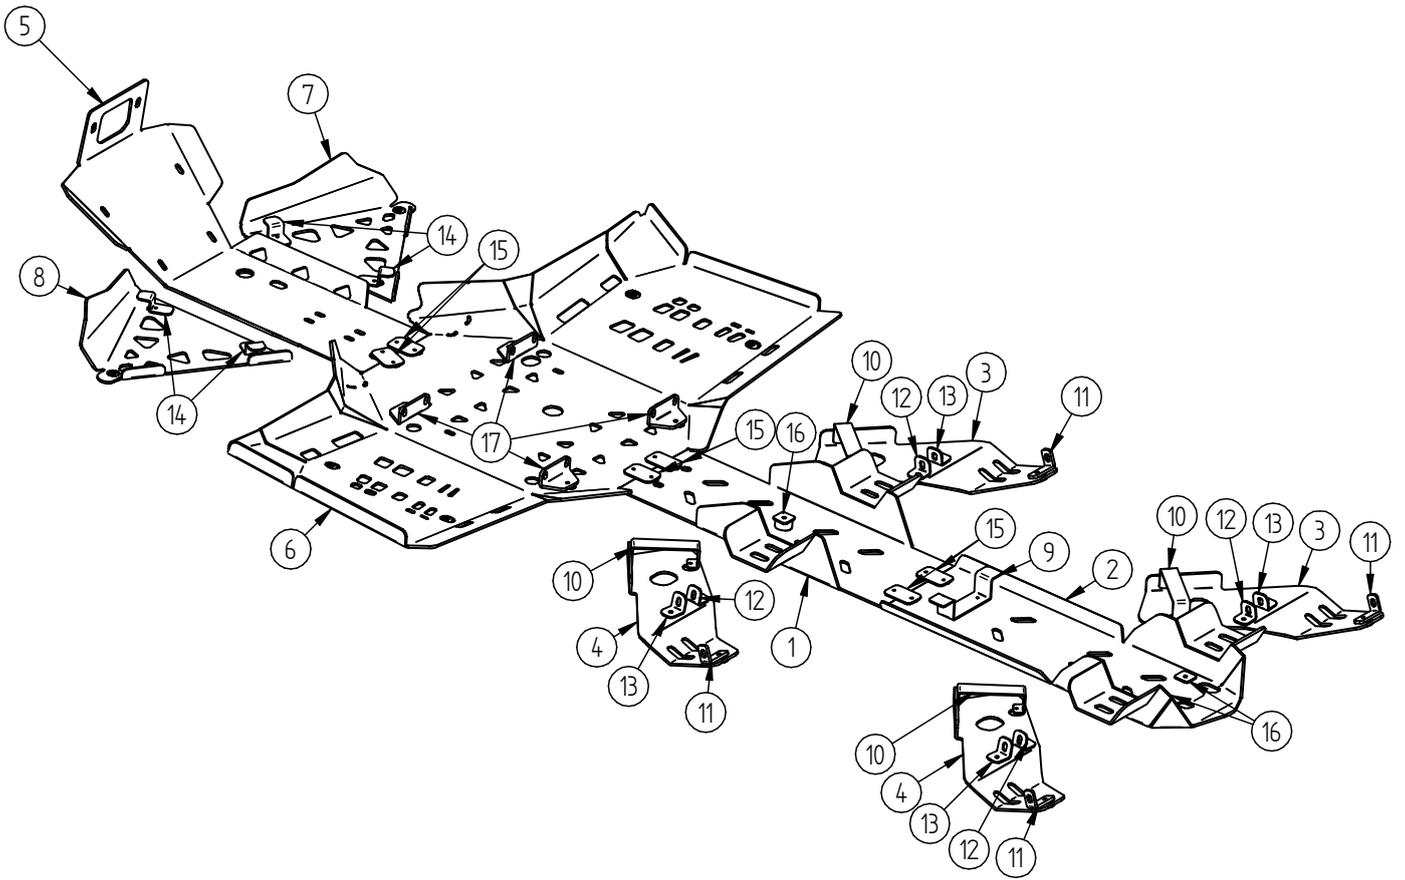




FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

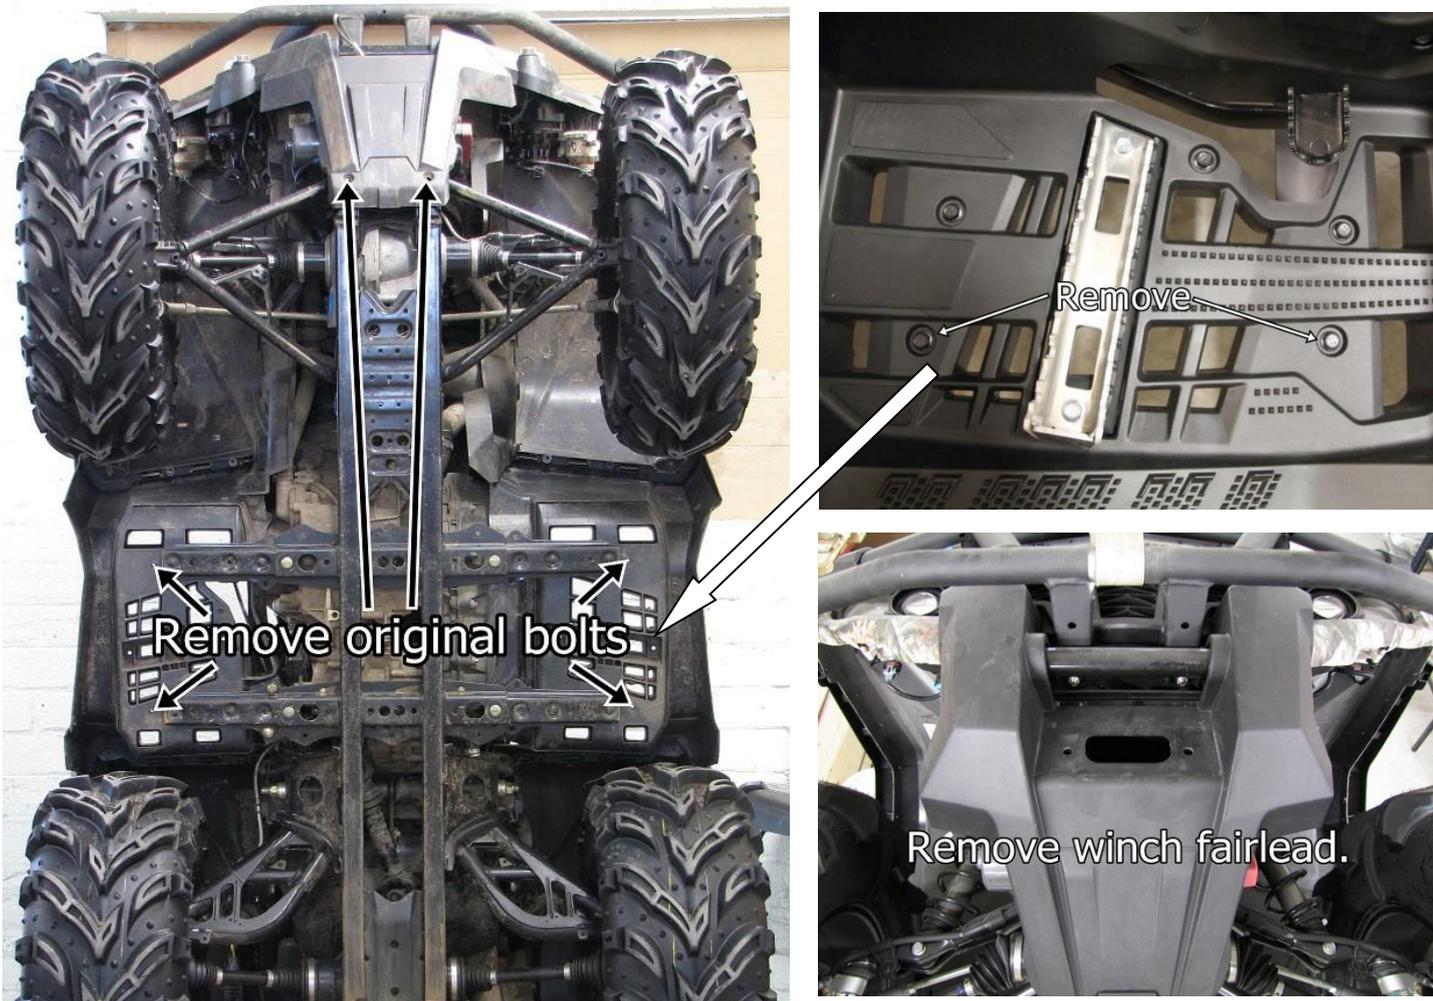


Step 2 Install brackets 03.3502. Adjust brackets level with the frame. If you have two bolts on ATV at the same place where bracket should go then secure the bracket only with one bolt!

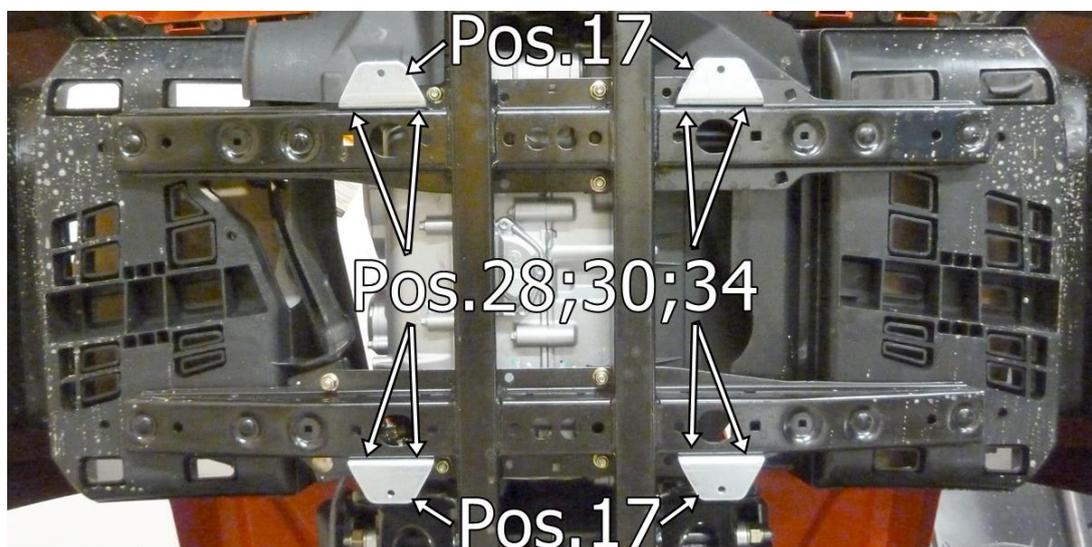

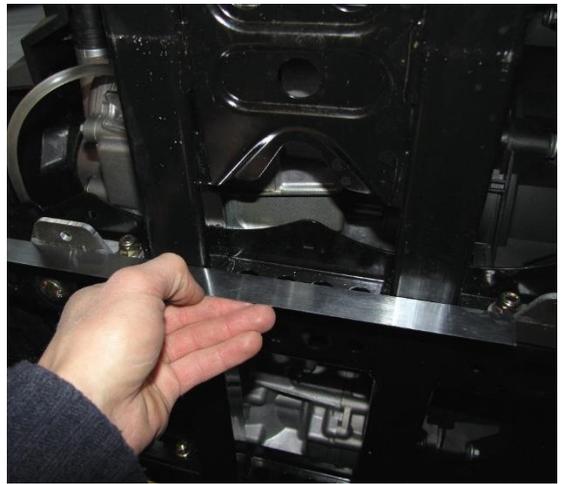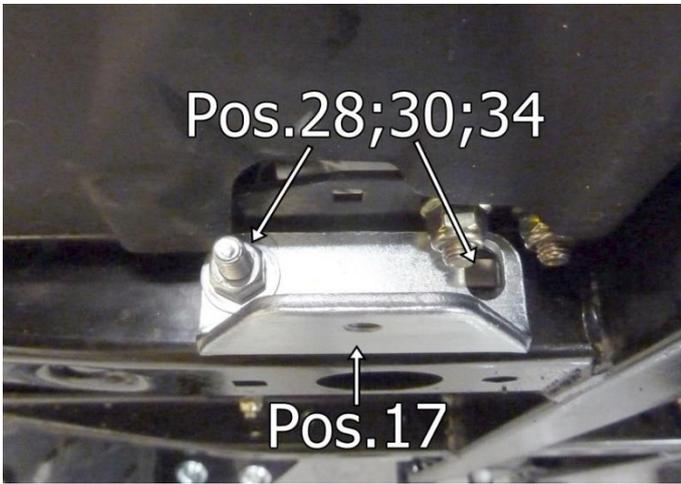


Step 3

Install middle part 02. 8401K.

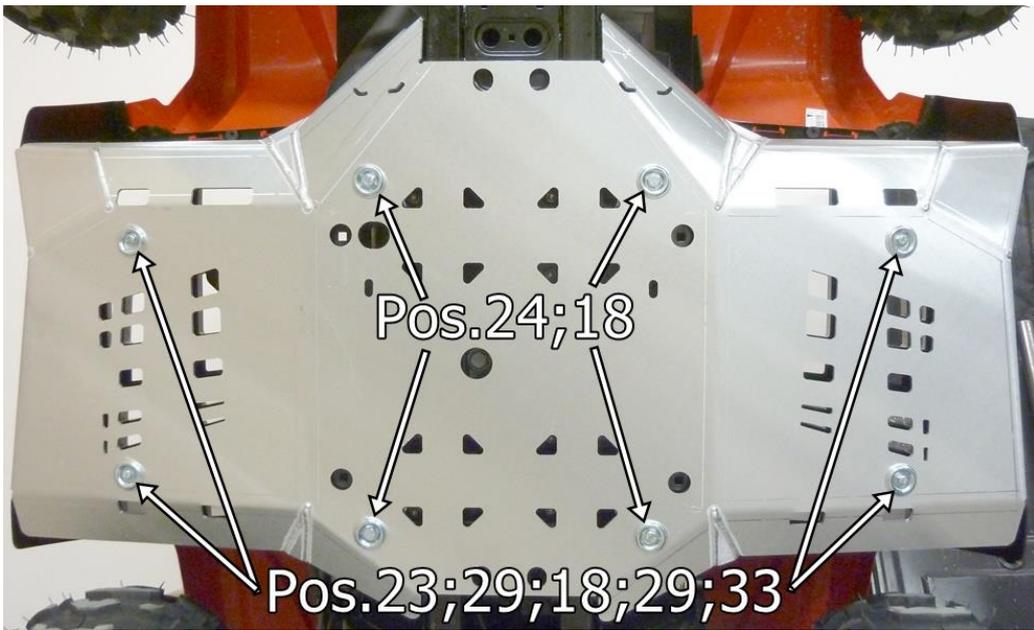




Step 4

Install plates 02.5006.

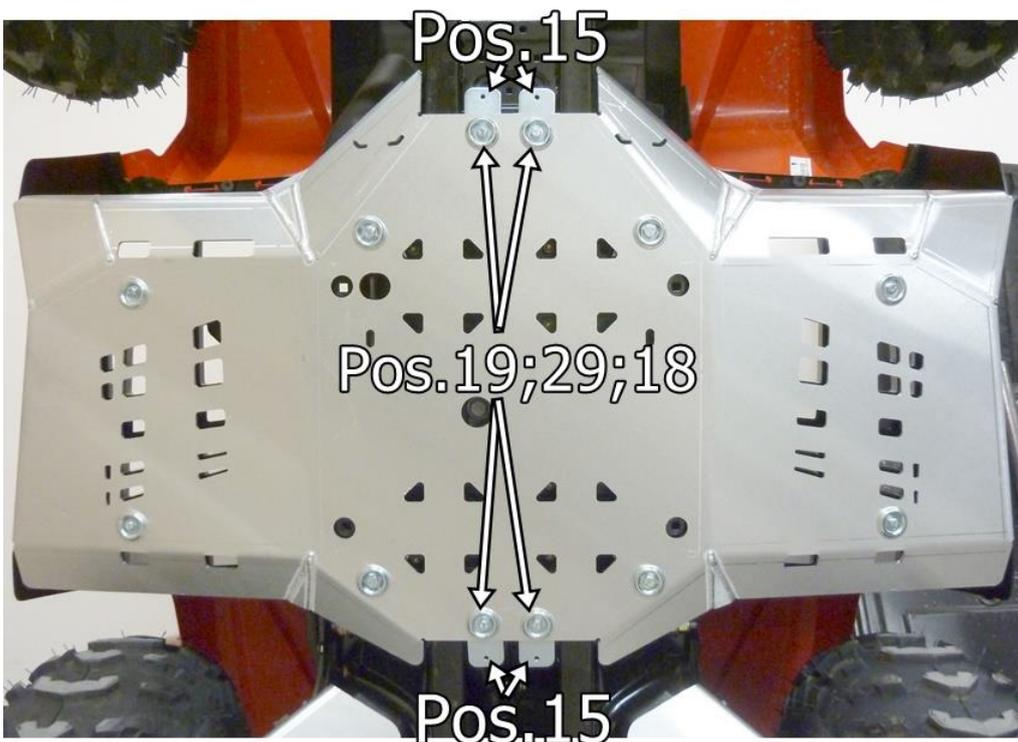


Step 5

Install front part 02.15801K. If you are using CanAm OE mounting plate (P/N 715004338), cut front protection side bends and use plow OE bolts (see Pictures).

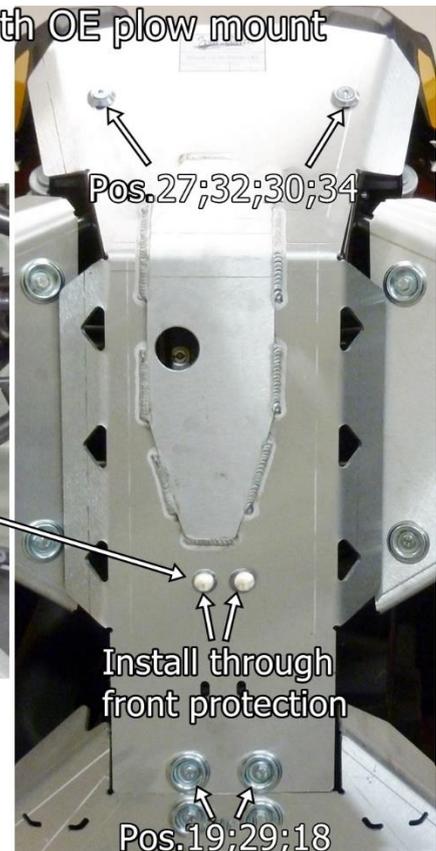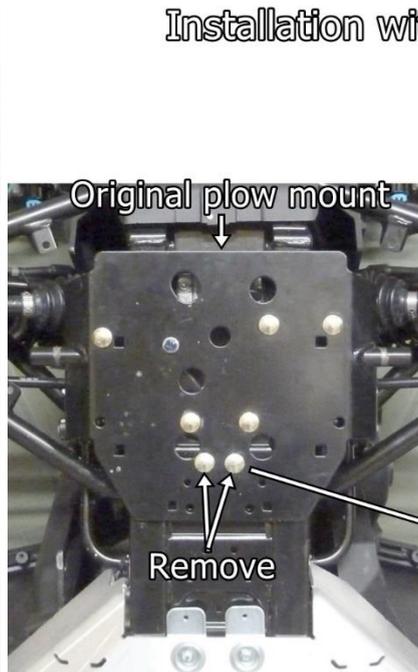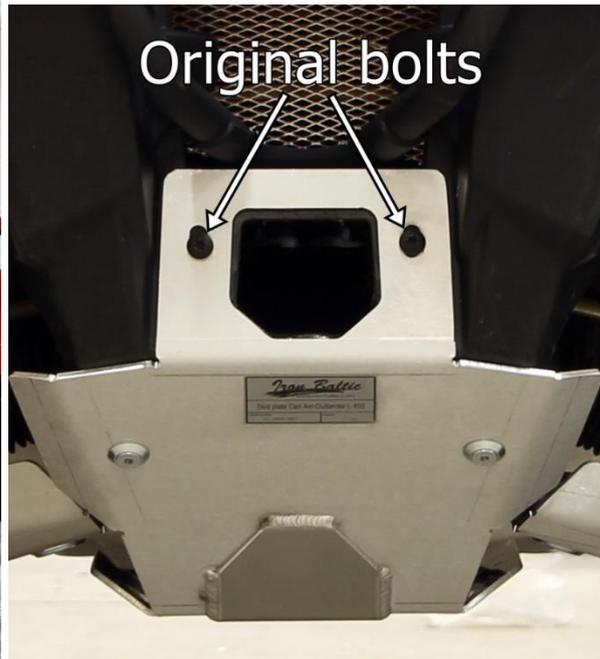



Step 6

Install rear part 02.20301K and plates 02.5006.
For easier installation, we recommend removing one wheel.

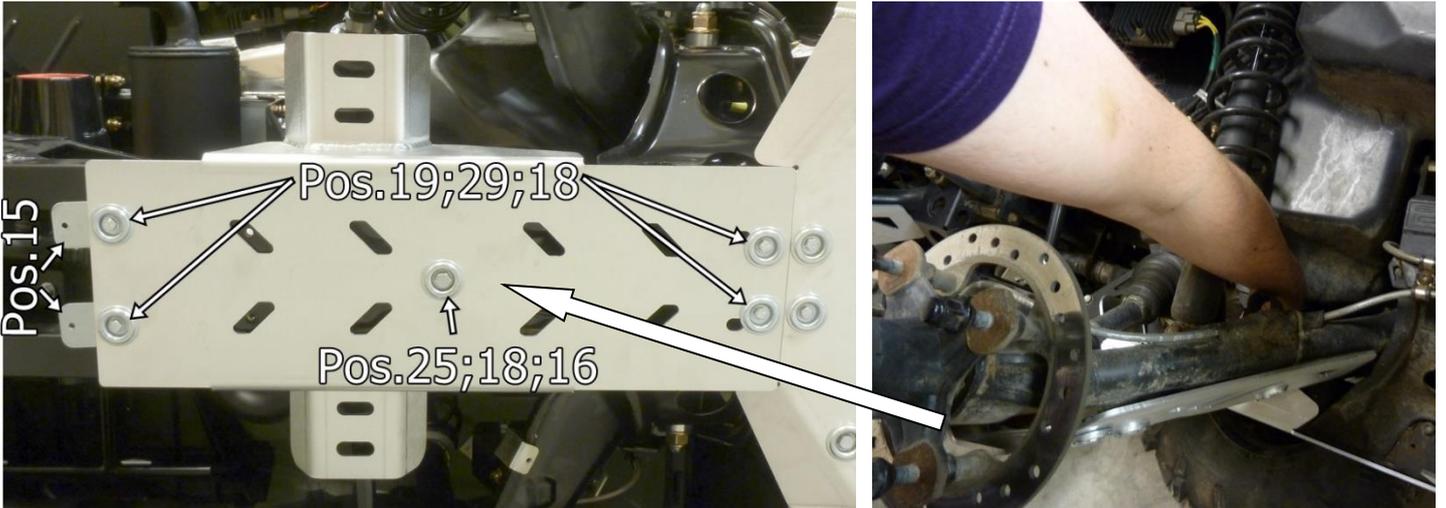



Step 7

Install second rear protection 02.20302K.

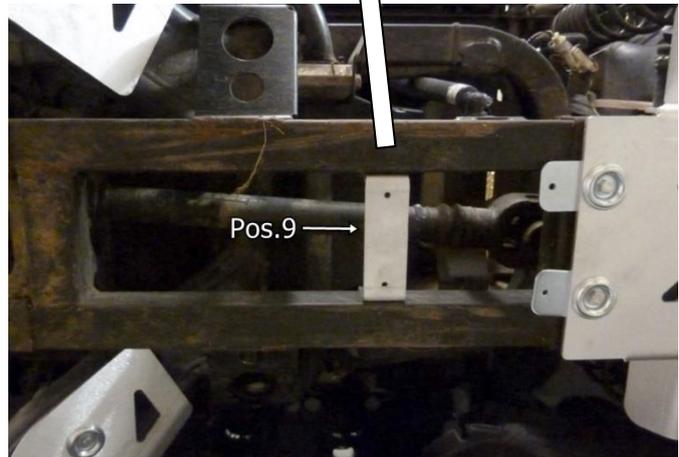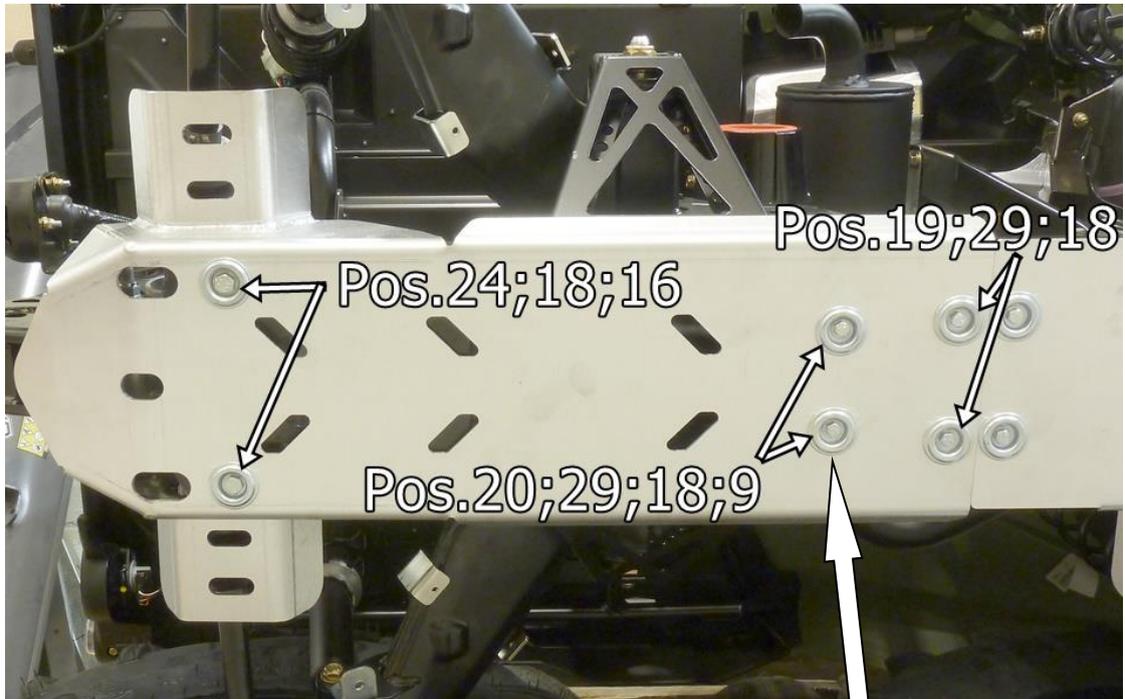

Step 8

Install front arms protections 02.8204 and 02.8205.

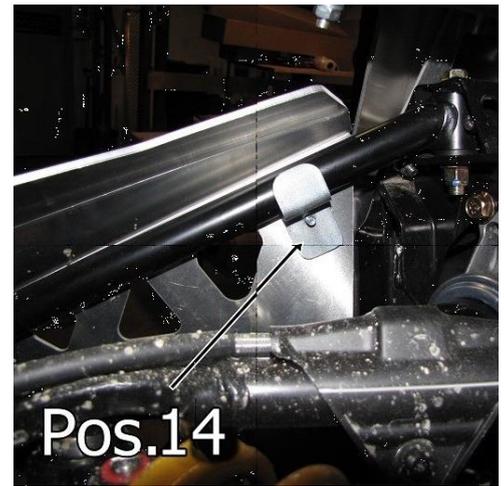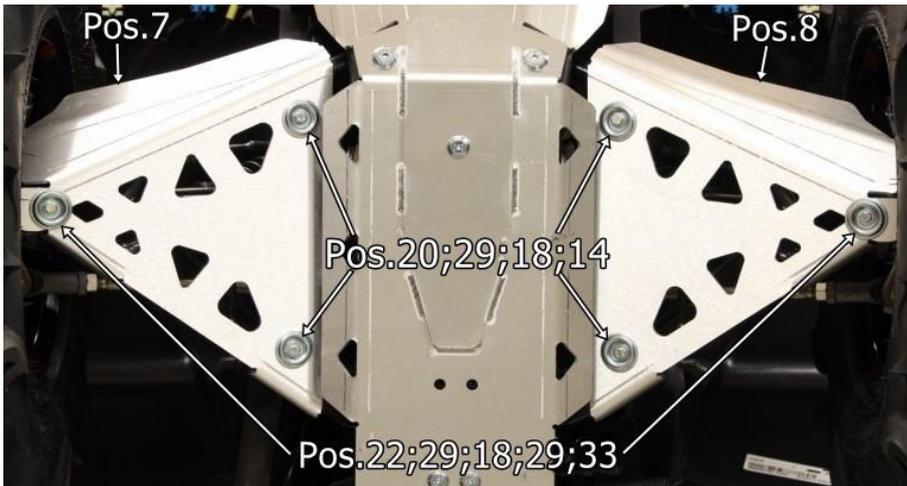


Step 9

Install brackets 02.18804, 02.18805, 02.18806.




NB!

NB! On one wheel, it might not be possible to install bracket Pos.11, install rear arm guard without Pos.13 bracket!

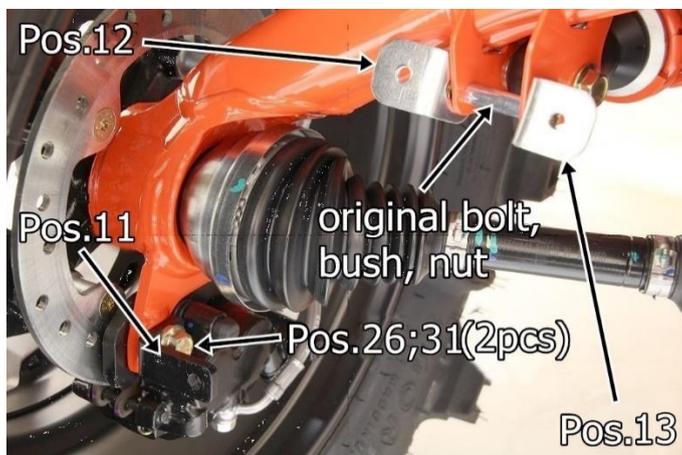

WHEEL WITH BRAKE

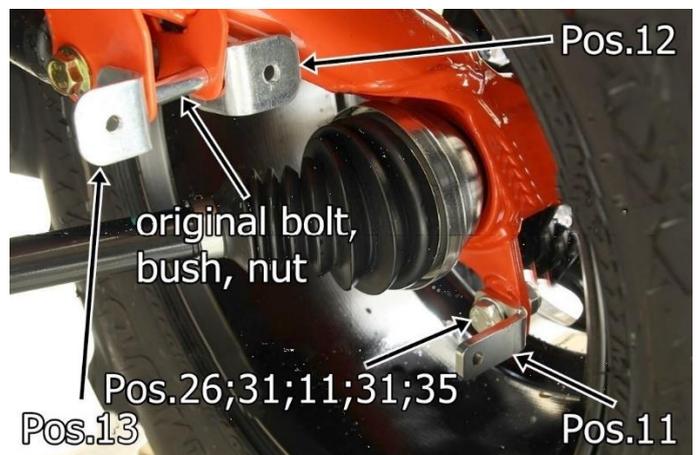

WHEEL WITHOUT BRAKE





NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.26 and brake disc.

Step 10

Install rear arm protections 02.18801 and 02.18802.

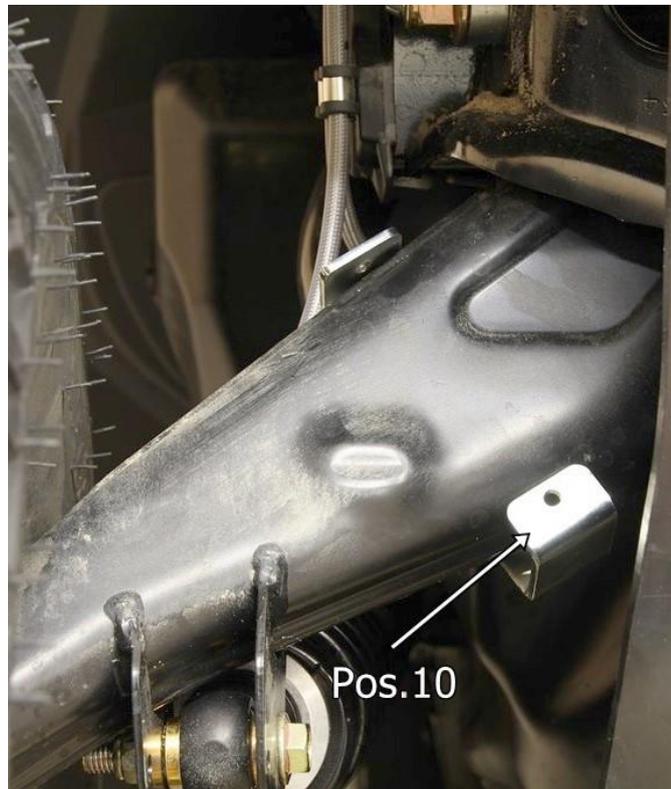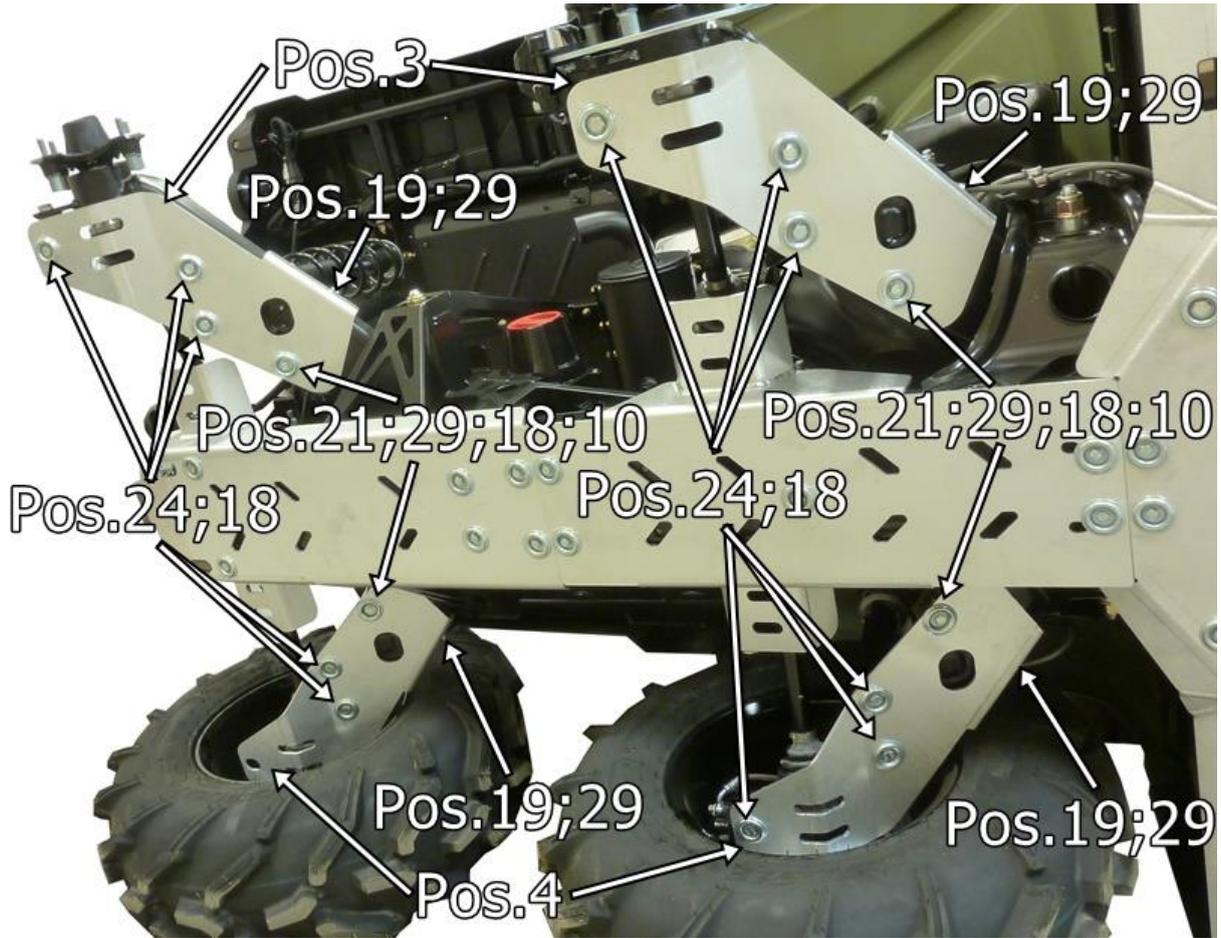

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

