

# IRON BALTIC

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/cF6yw7h6](https://code.ironbaltic.com/u/cF6yw7h6)

## PLASTIC SKID PLATE

# POLARIS

## Scrambler XP1000 S

Code 02.26500

Version 07102023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.26501K	1
2	Middle protection	02.26502	1
3	Rear protection	02.26003	1
4	Right sideprotection	02.26504K	1
5	Left sideprotection	02.26505K	1
6	Front right arm protection	02.26008K	1
7	Front left arm protection	02.26010K	1
8	Rear right arm protection	02.26012K	1
9	Rear left arm protection	02.26013K	1
10	Caliper protector right (BLACK)	02.26407	1
11	Caliper protector left (BLACK)	02.26408	1
12	Connecting plate	02.5006	8
13	Installation bracket 1	02.5710	4
14	Installation bracket 2	02.8210	2
15	Middle part bracket	02.25916	1
16	Rear part bracket	02.25917	1
17	Dished washer	14.503	45
18	Bolt M6x12 DIN933	OT.02.02.030	6
19	Bolt M6x16 DIN933	OT.02.02.050	20
20	Bolt M6x25 DIN933	OT.02.02.070	14
21	Bolt M6x35 DIN933	OT.02.02.090	6
22	Bolt M6x45 DIN933	OT.02.02.110	2
23	Bolt M6x75 DIN933	OT.02.02.155	4
24	Bolt M8x30 DIN933	OT.02.02.200	2
25	Washer Ø6/15 SFS3738	OT.04.03.020	51
26	Washer Ø6/18 DIN9021	OT.04.02.020	16
27	Nyloc nut M6 DIN985	OT.03.02.030	15


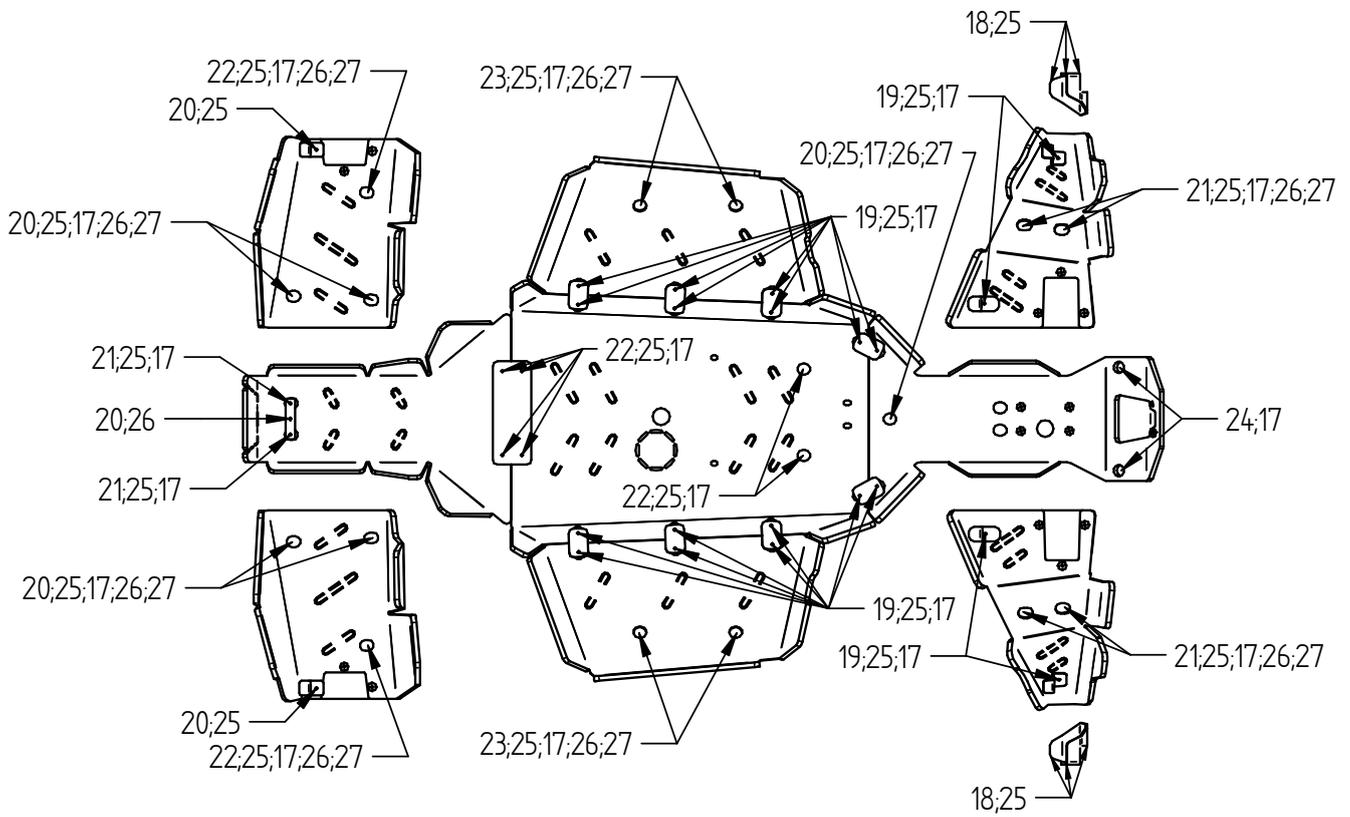
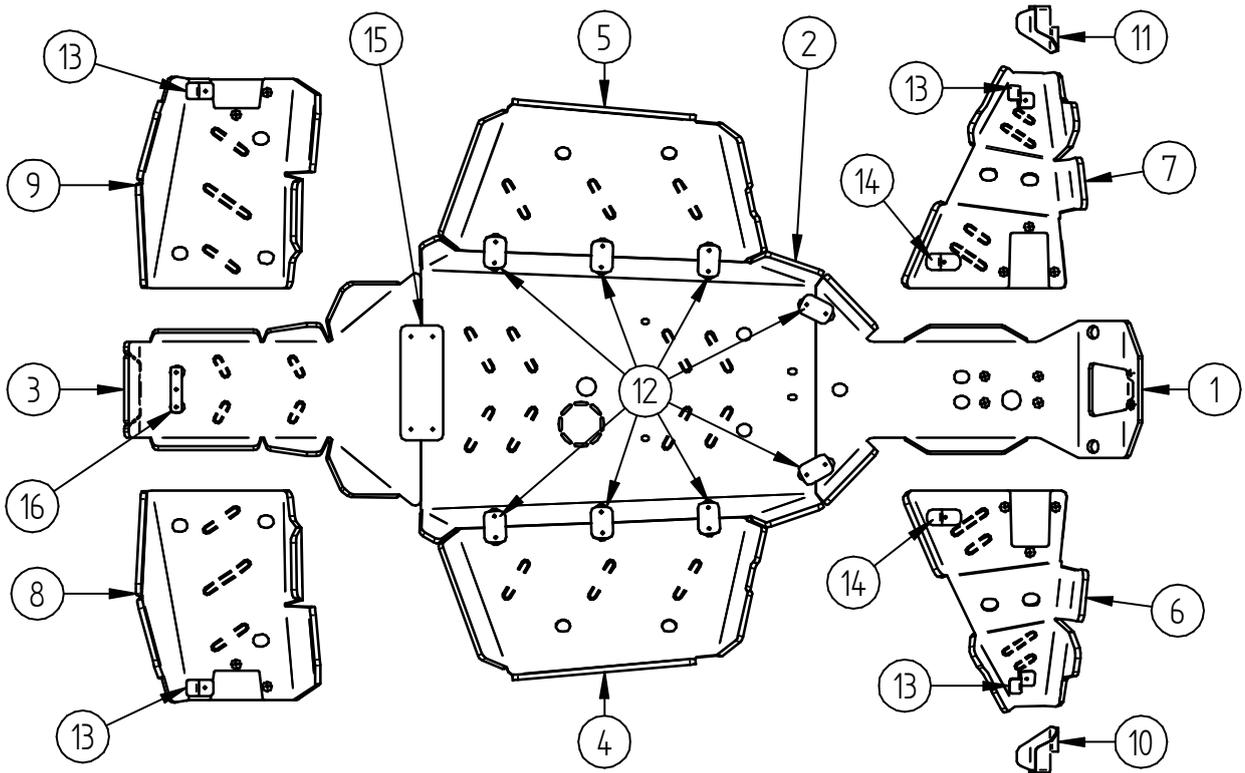


# FITTING INSTRUCTIONS

**Step 1** Remove standard plastic cover, oil filter plate and bolts / nuts shown in picture.




**Step 2** Install skid plate middle part (Pos. 2).  
Use middle part bracket (Pos. 15) for fastening.

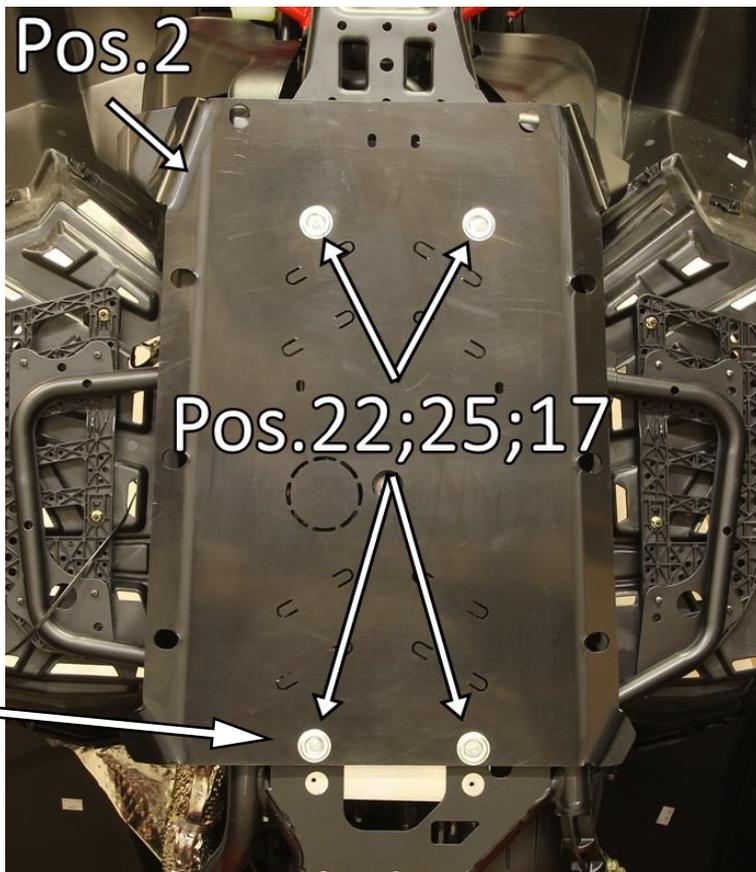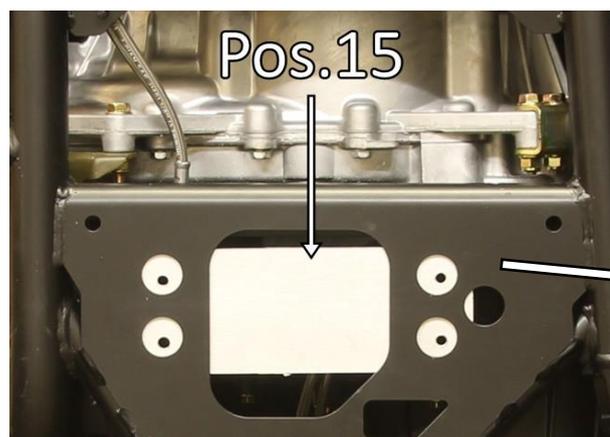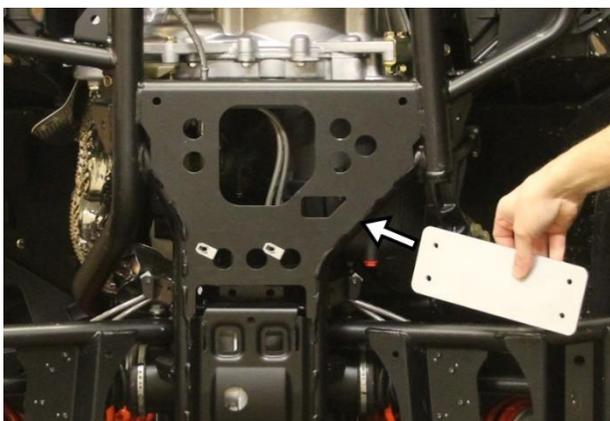


### Step 3

Install connecting plates (Pos. 12) to middle part.

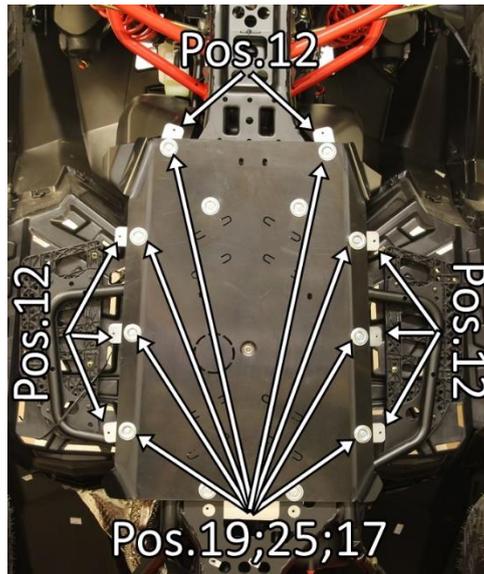


### Step 4

Install rear part bracket (Pos. 16).

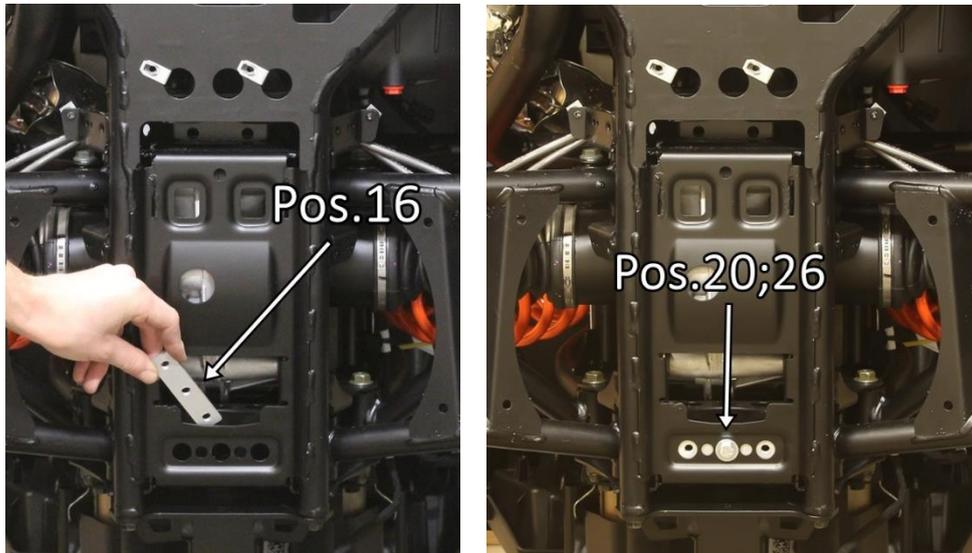



### Step 5

Install skid plate rear part (Pos. 3).

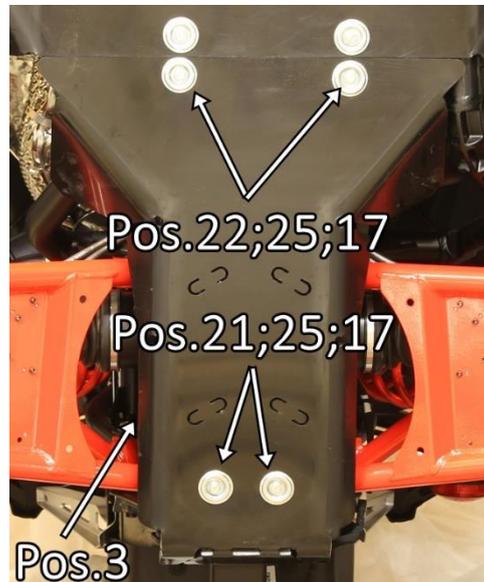


**Step 6**

Install skid plate front part (Pos. 1).  
To use ATV towing eye, remove the reinforcement from the front part.

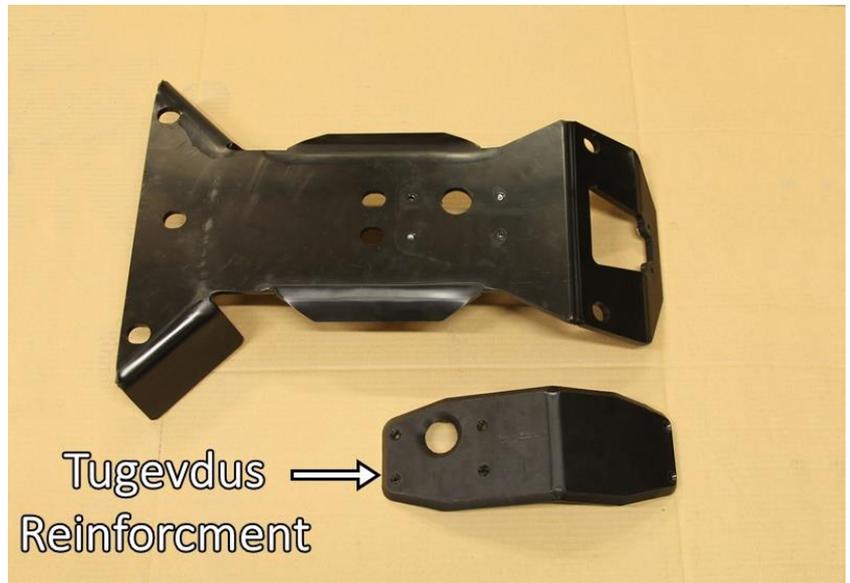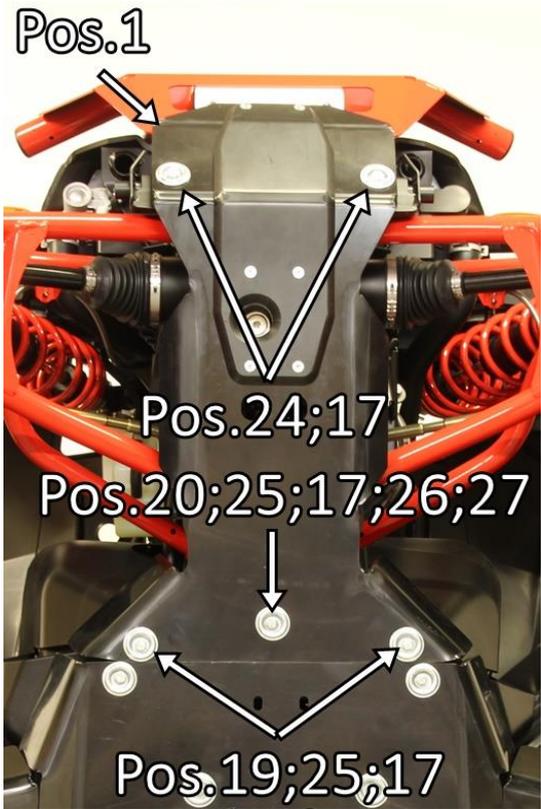


**Step 7**

Install right sideprotection (Pos. 4) and left sideprotection (Pos. 5).

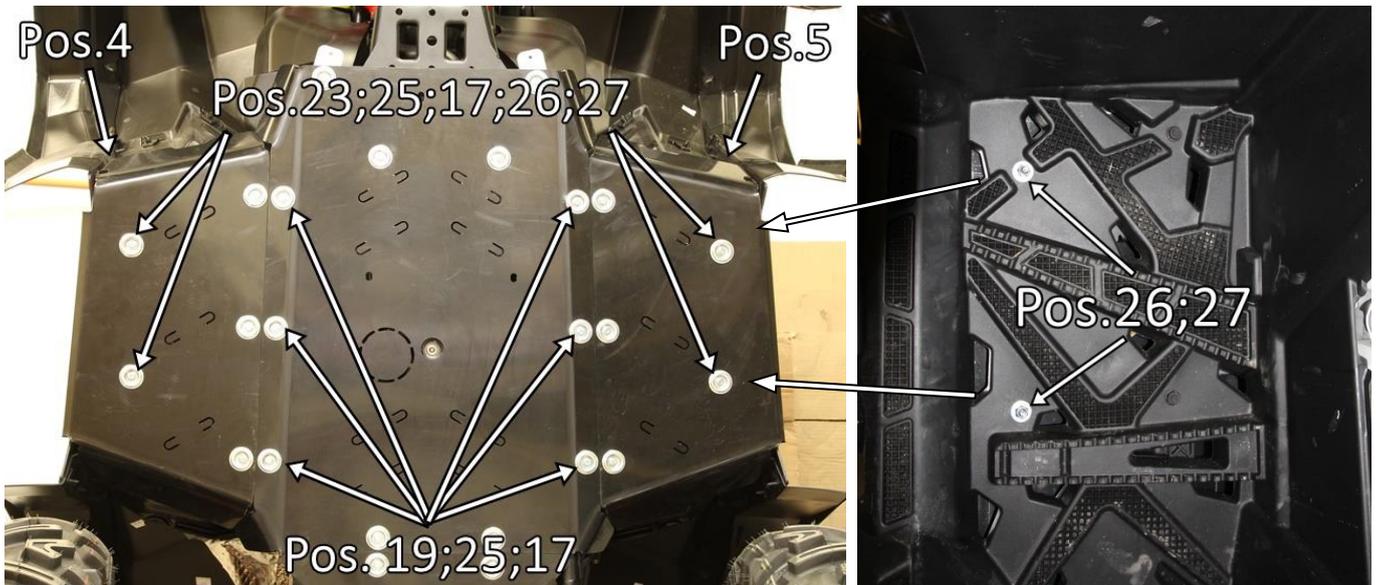

## Step 8

Install front arm protections (Pos. 6 and Pos. 7).  
Use installation brackets (Pos.13 and Pos.14) for fastening.

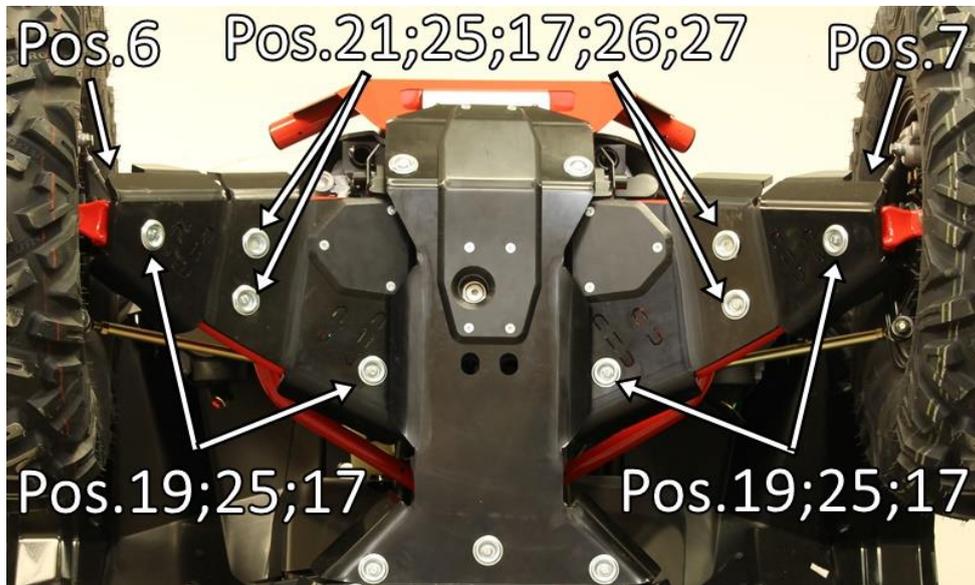



## Step 9

Install front calipers protectors (Pos.10 and Pos.11).



**Step 10**

Install rear arm protections (Pos.8 and Pos.9).  
Use installation brackets (Pos.13) for fastening.

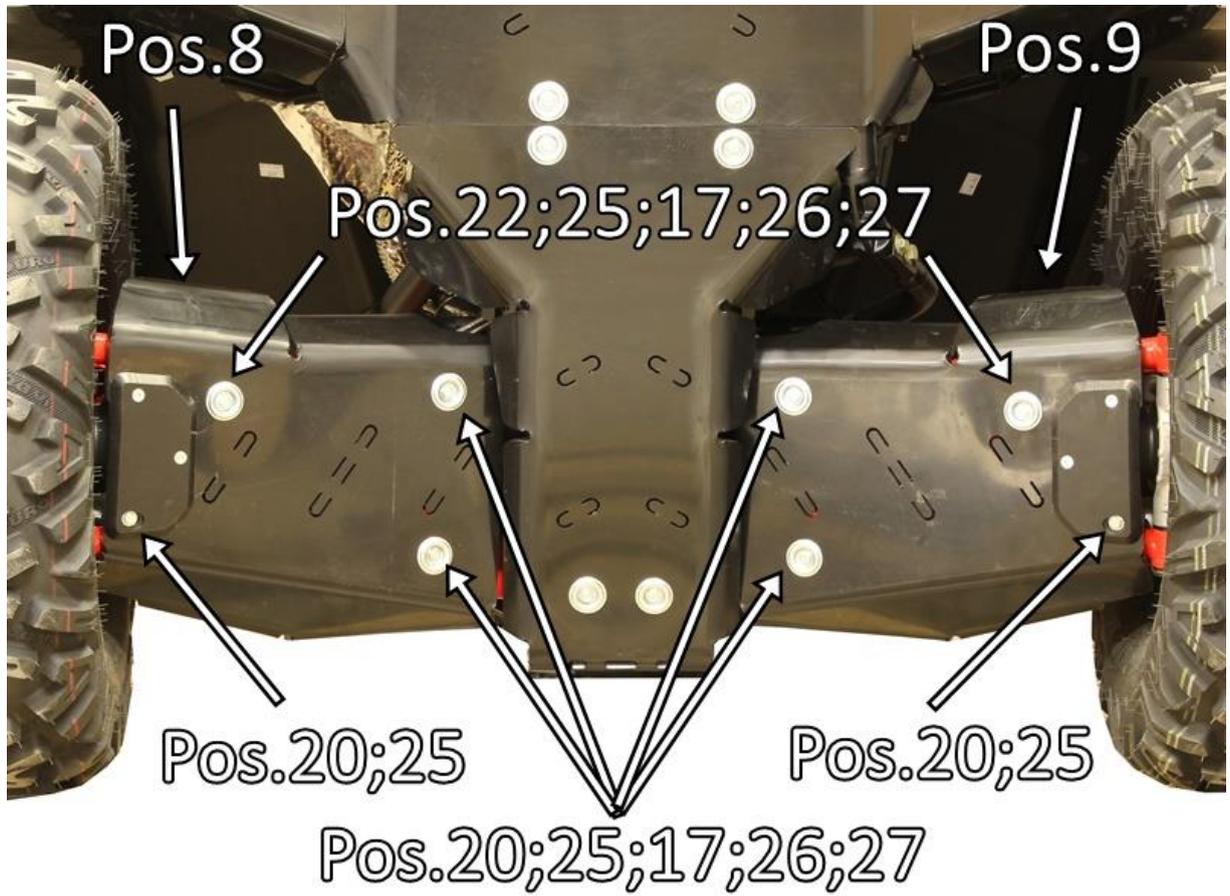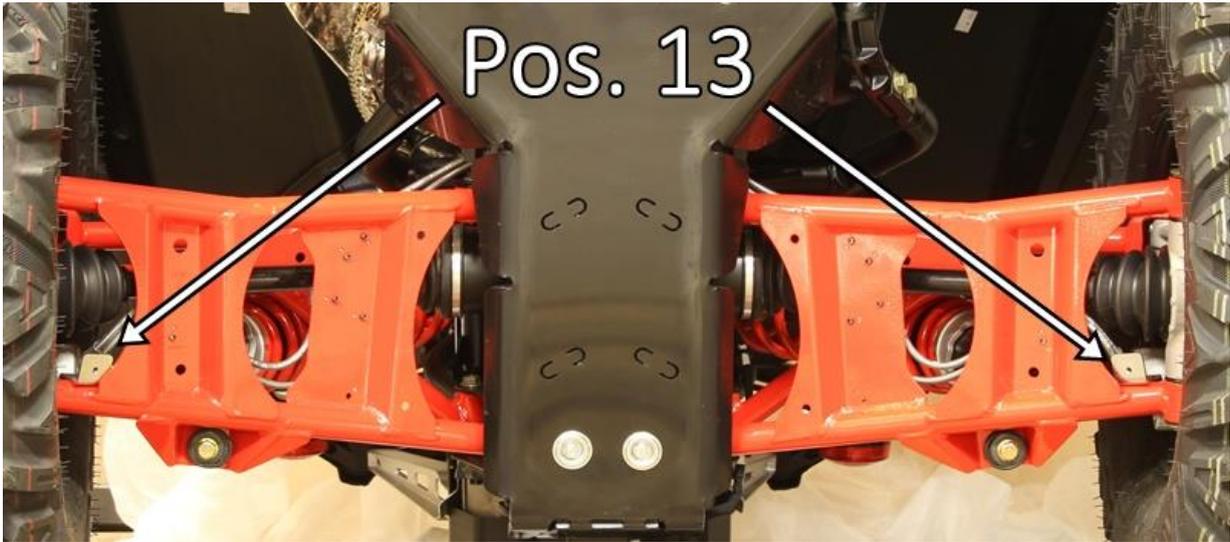







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

