


IRON BALTIC

SKID PLATE

POLARIS RZR PRO XP

Code 02.26600

Version 07102023

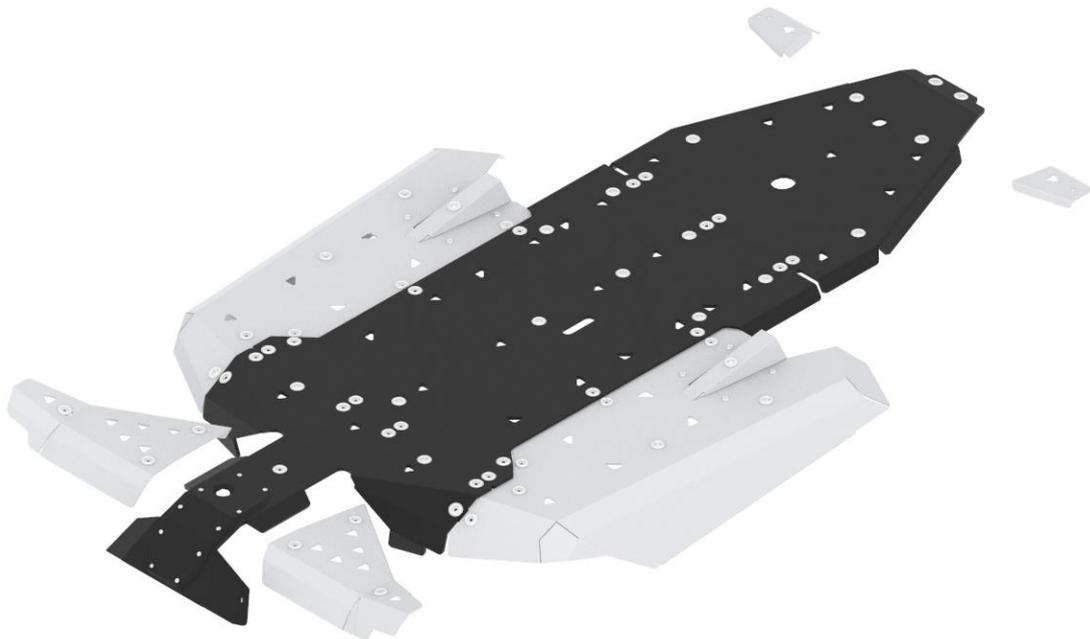

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/NwbN8NnF

SPECIFICATION


Pos.	Description	Code	Amount
1	Front protection	02.26601K	1
2	Middle protection	02.26602	1
3	Rear protection	02.26603	1
4	Right side protection	02.26604K	1
5	Left side protection	02.26605K	1
6	Side protection additional protection	02.26606	2
7	Front left arm protection	02.26607K	1
8	Front right arm protection	02.26608K	1
9	Rear left arm protection	02.26610	1
10	Rear right arm protection	02.26611	1
11	Rear part bracket	02.26615	1
12	Installation plate	02.2305	2
13	Connecting plate	02.5006	11
14	Installation bracket	02.8210	4
15	Connecting plate (10°)	02.8312	4
16	Installation plate 2	02.12909	1
17	Conic washer Ø6	14.502	14
18	Dished washer	14.503	61
19	Bolt M6x12 DIN933	OT.02.02.030	6
20	Bolt M6x16 DIN933	OT.02.02.050	28
21	Bolt M6x45 DIN933	OT.02.02.110	2
22	Bolt M8x16 DIN933	OT.02.02.170	2
23	Bolt M8x35 DIN933	OT.02.02.210	1
24	Bolt M6x20 DIN7991	OT.02.04.030	8
25	Bolt M6x35 DIN7991	OT.02.04.060	6
26	Thread forming bolt M6x25 DIN7500D	OT.02.06.010	22
27	Washer Ø6/15 SFS3738	OT.04.03.020	43
28	Nyloc nut M6 DIN985	OT.03.02.030	8

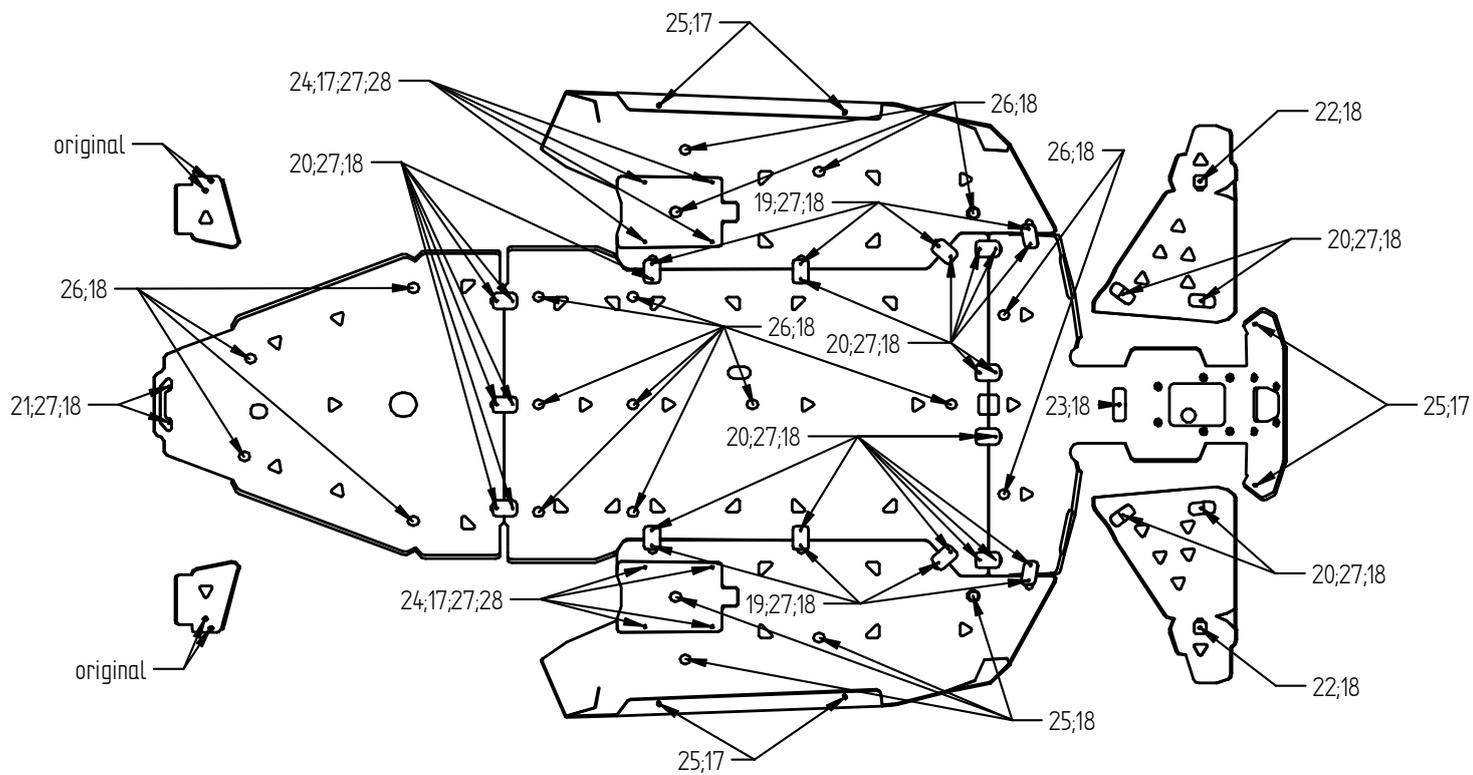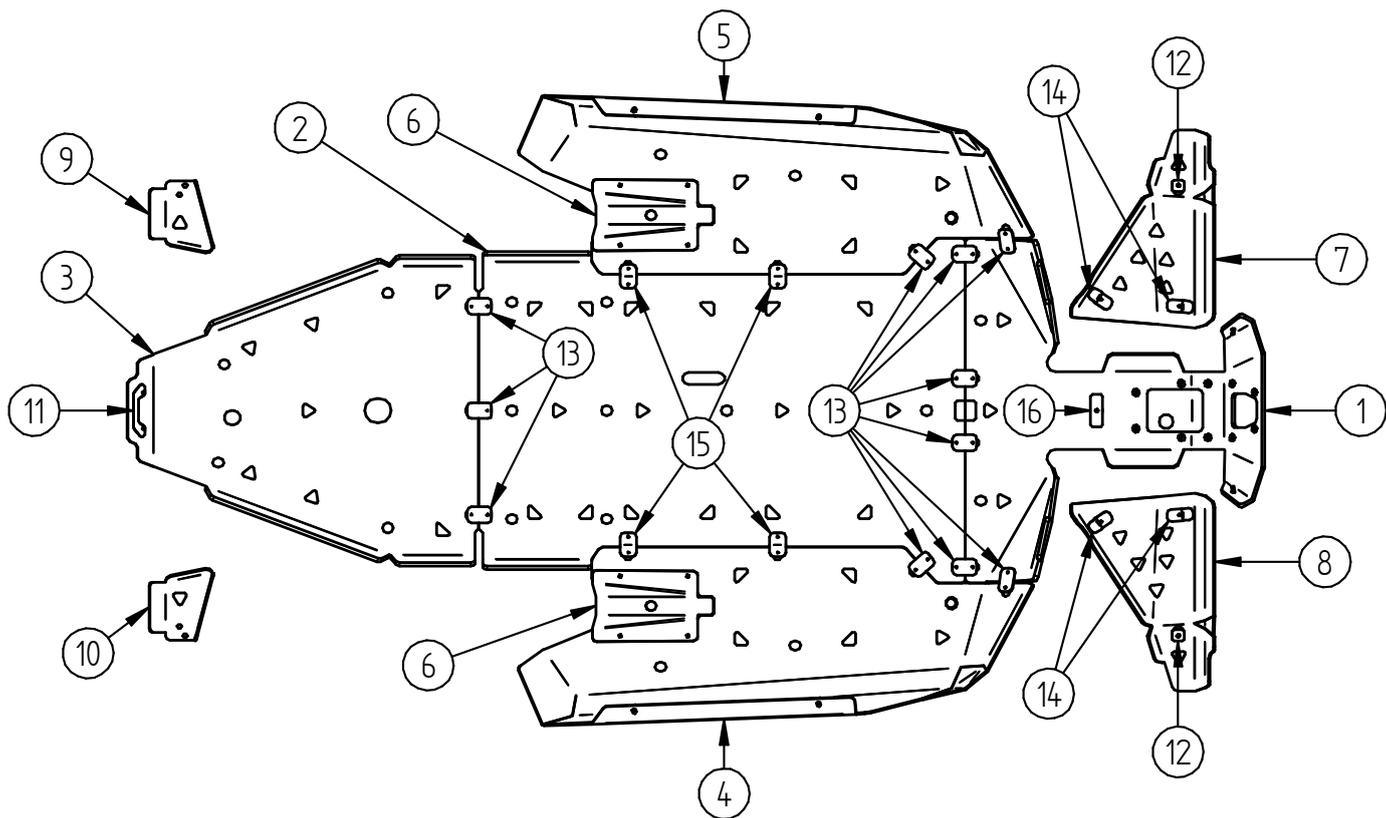

FITTING INSTRUCTIONS



Step 1

Remove original skid plate, front and side plastics fastening bolts shown in picture and rear wheel scrapers together with brackets.

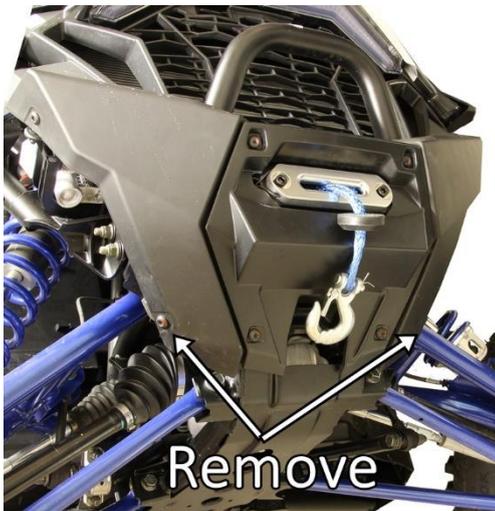


Step 2

Install front A-arm protections 02.26607K (Pos.7) and 02.26608K (Pos.8).

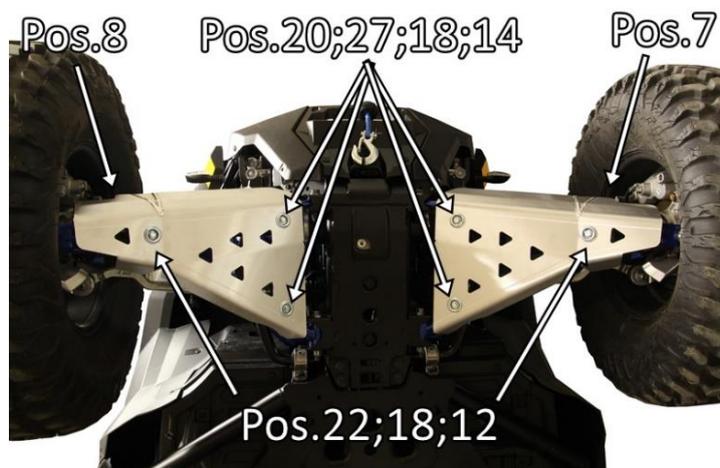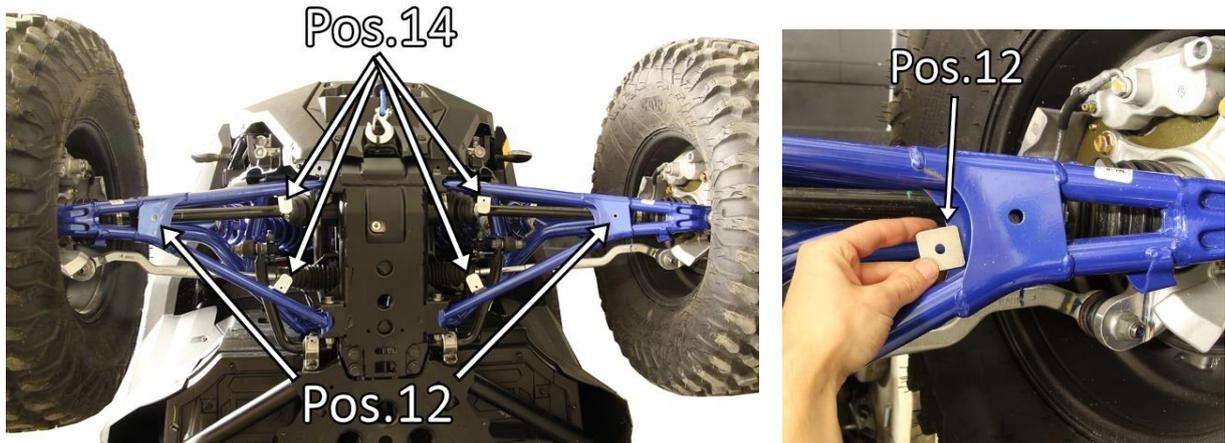



Step 3

Install rear A-arm protections 02.26610 (Pos.) and 02.26611 (Pos.) together with original rear wheel scrapers. For fastening use wheel scrapers original fasteners.

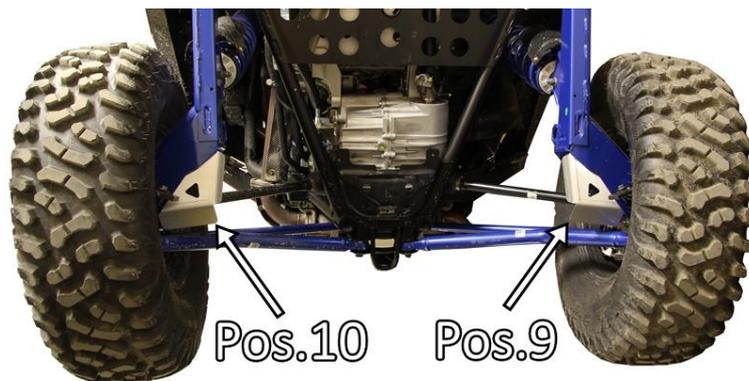


Step 4

Install rear part bracket 02.26615 (Pos.11) and skid plate rear part 02.26603 (Pos.3).

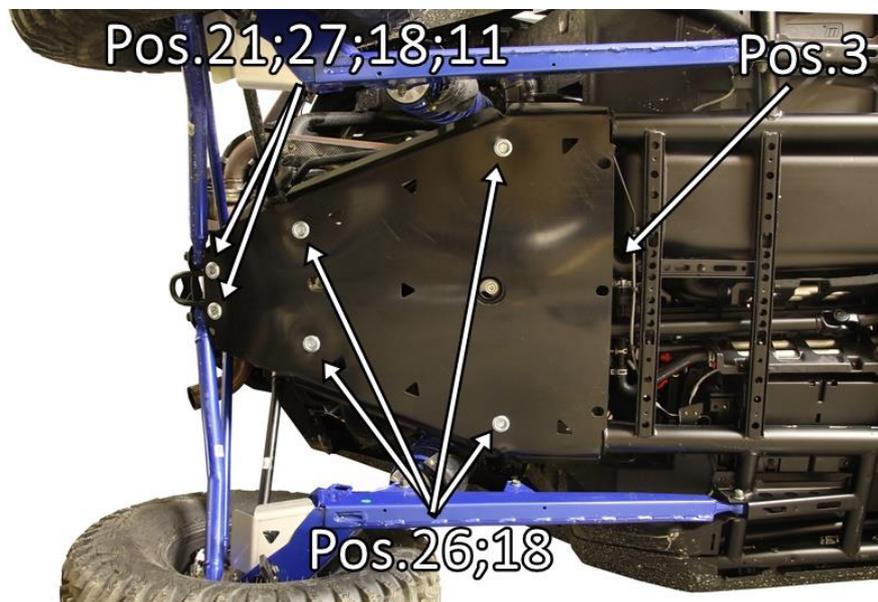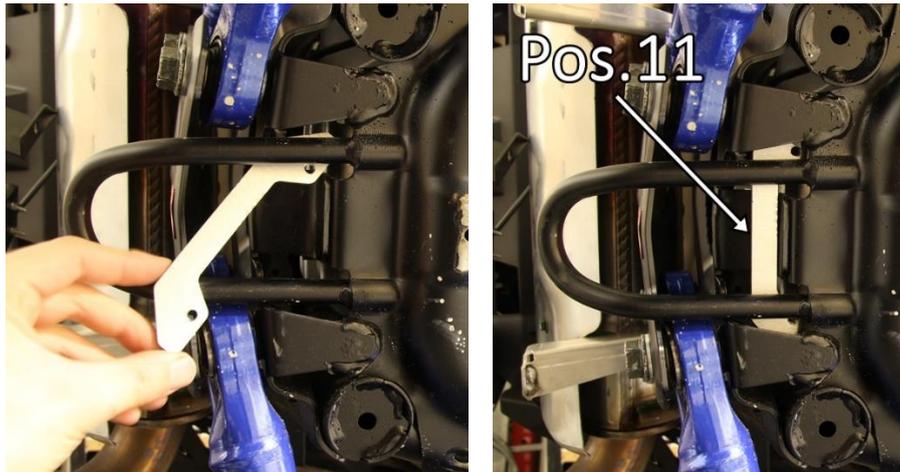


Step 5

Install connecting plates 02.5006 (Pos.13) to the rear part.

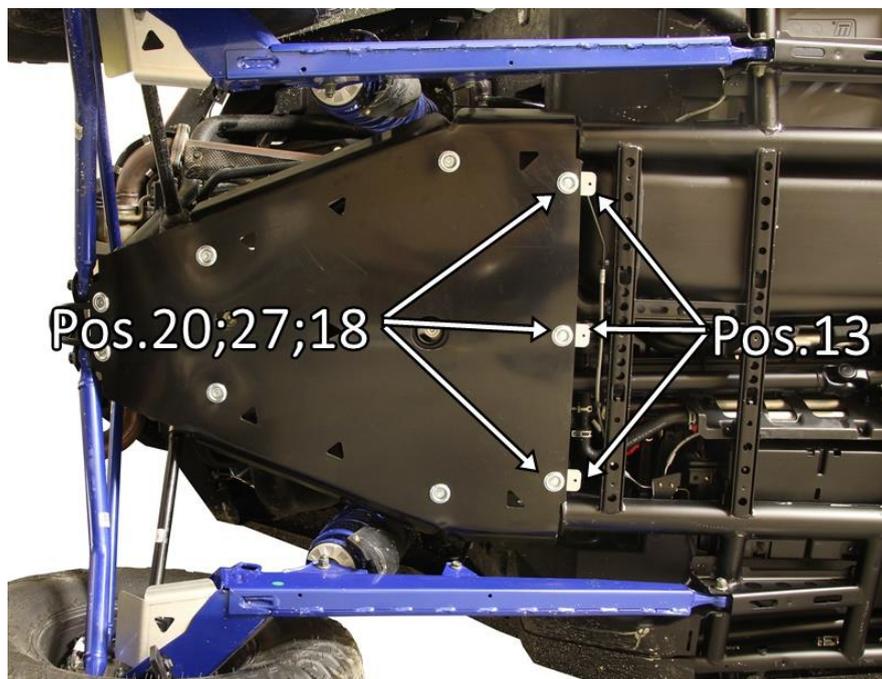


Step 6

Install skid plate middle part 02.26602 (Pos.2).

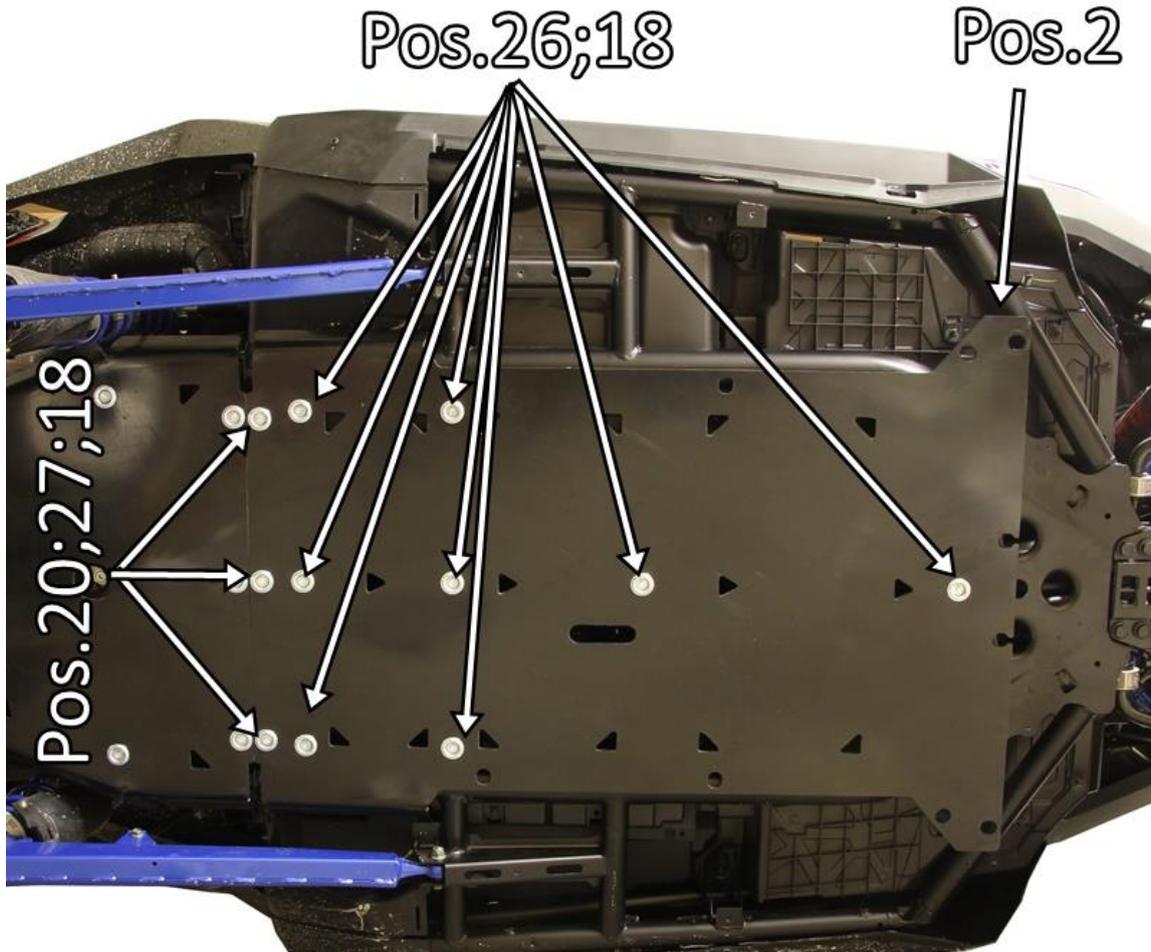



Step 7

Install connecting plates 02.5006 (Pos.13) and 02.8312 (Pos.15) to the middle part.

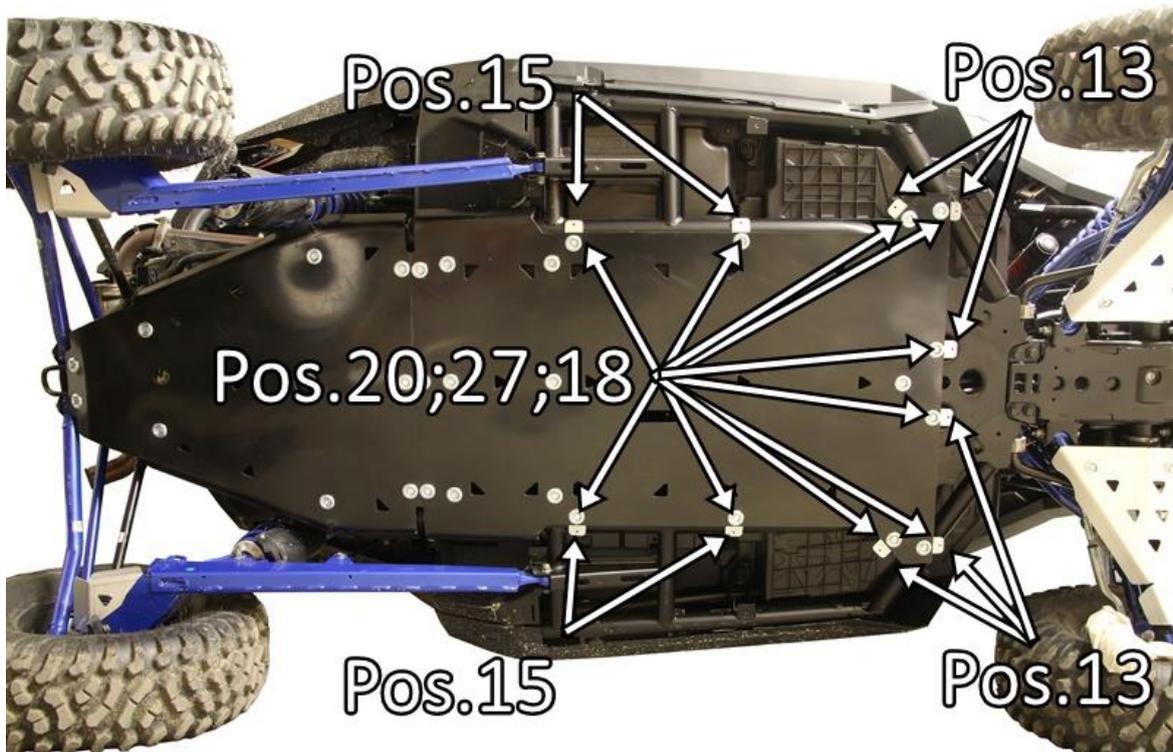


Step 8

Install skid plate front part 02.26601K (Pos.1). Place the installation plate 2, 02.12909 (Pos.16), as shown in the picture but on the other side of the frame.

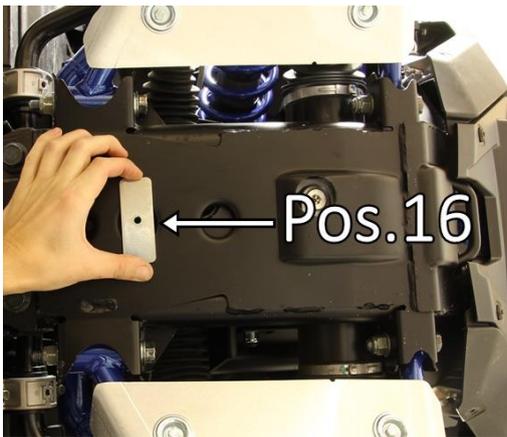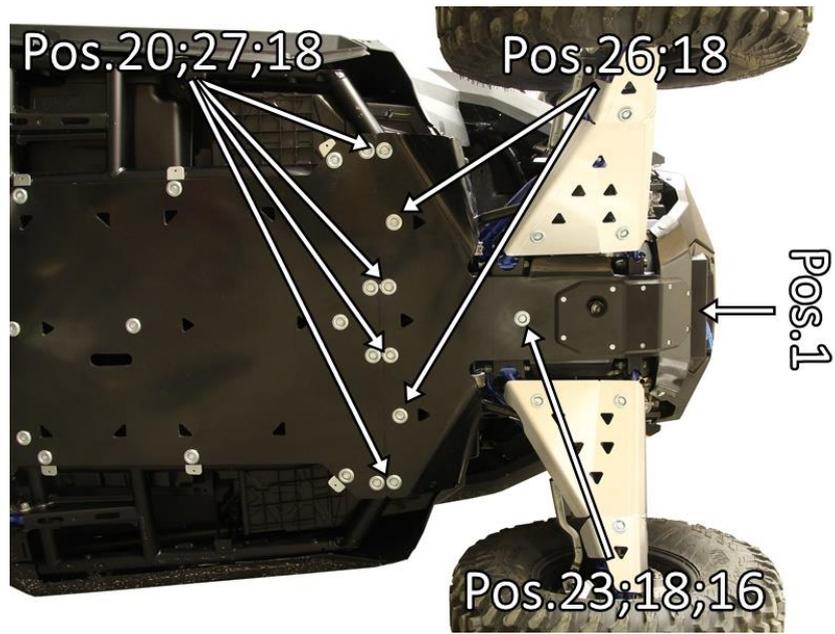


Step 9

Install connecting plates 02.5006 (Pos.13) to the front part

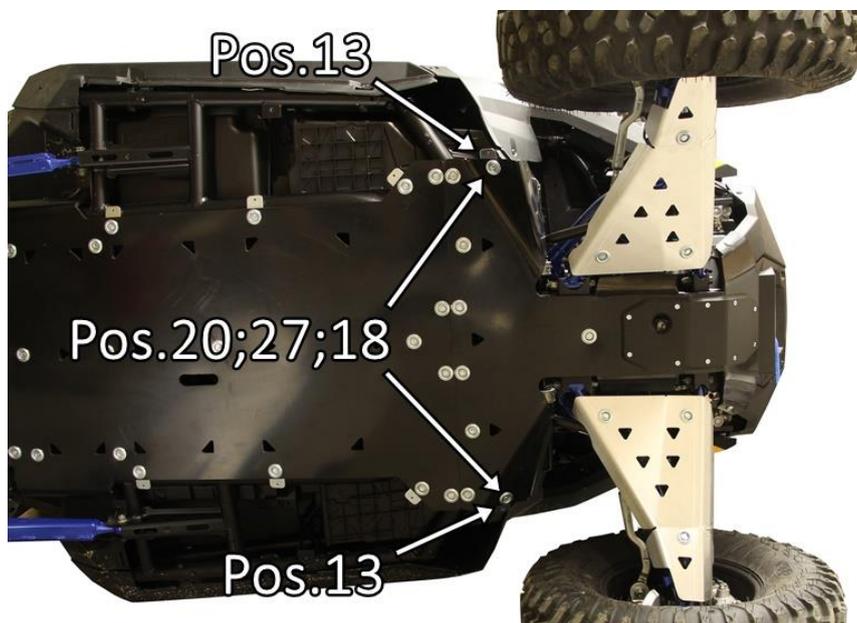



Step 10

Install additional protection 02.26606 (Pos.6) to the side protections 02.26604K (Pos.4) and 02.26605K (Pos.5).

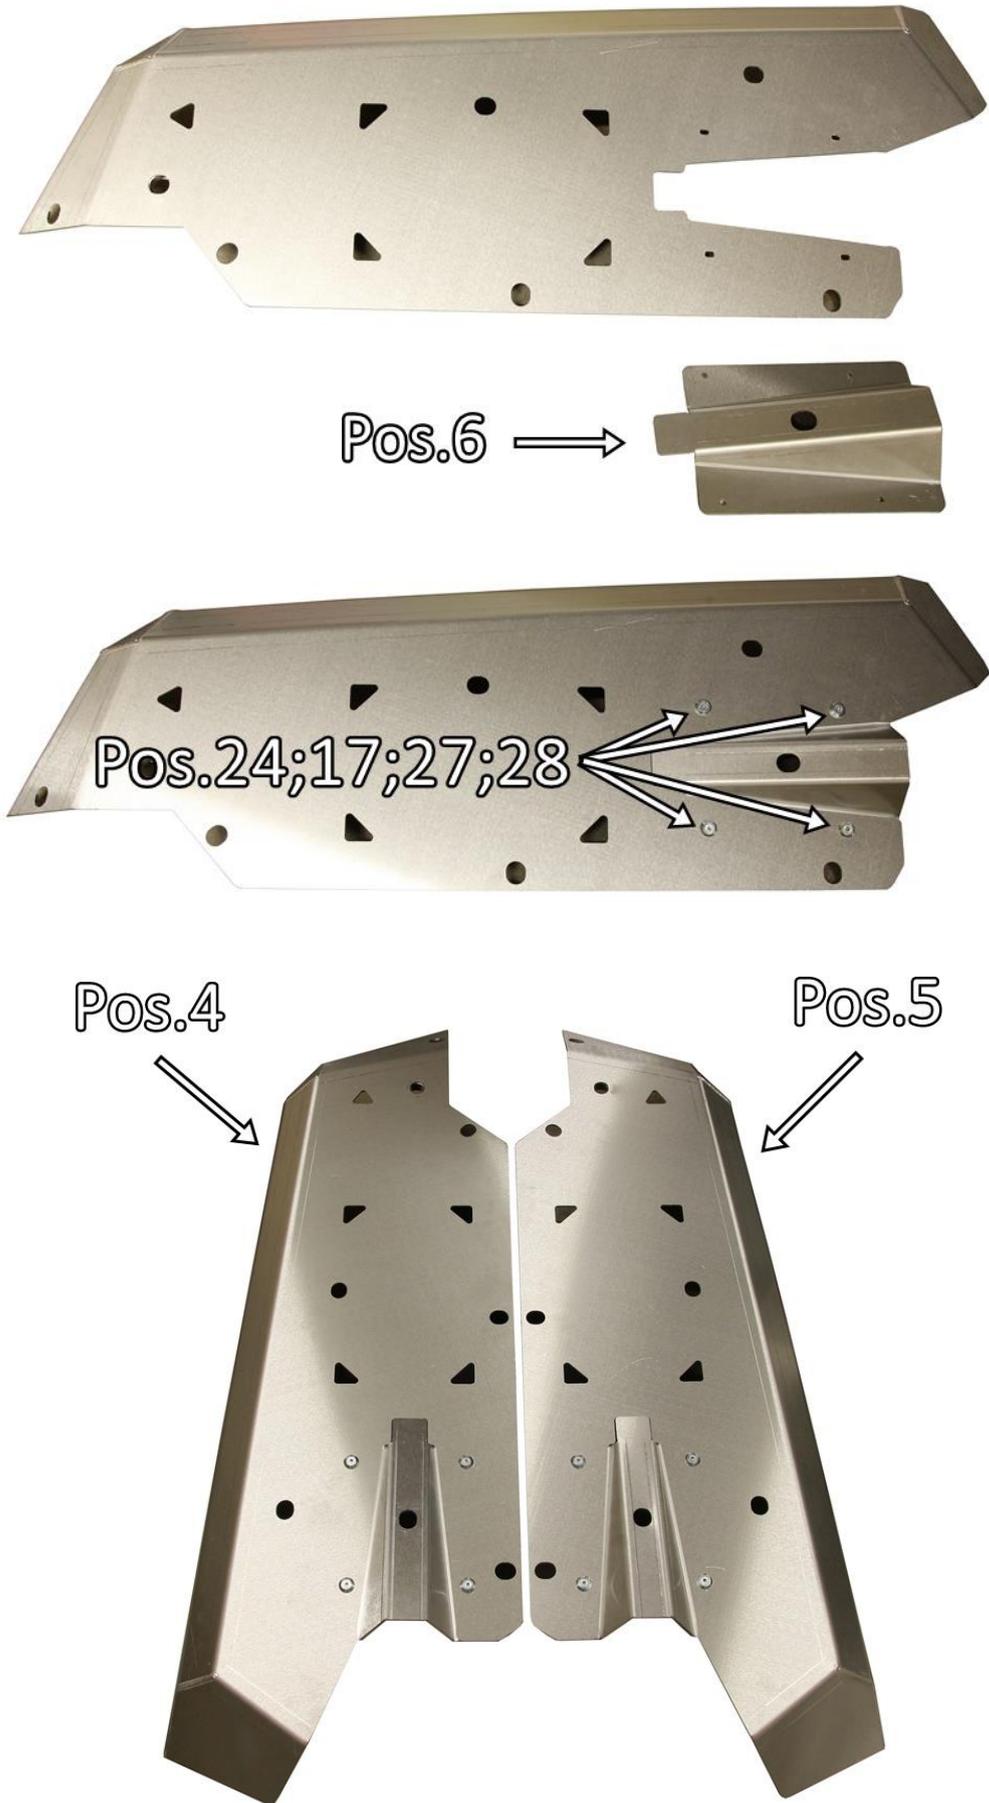

Step 11

Install side protections 02.26604K (Pos.4) and 02.26605K (Pos.5).

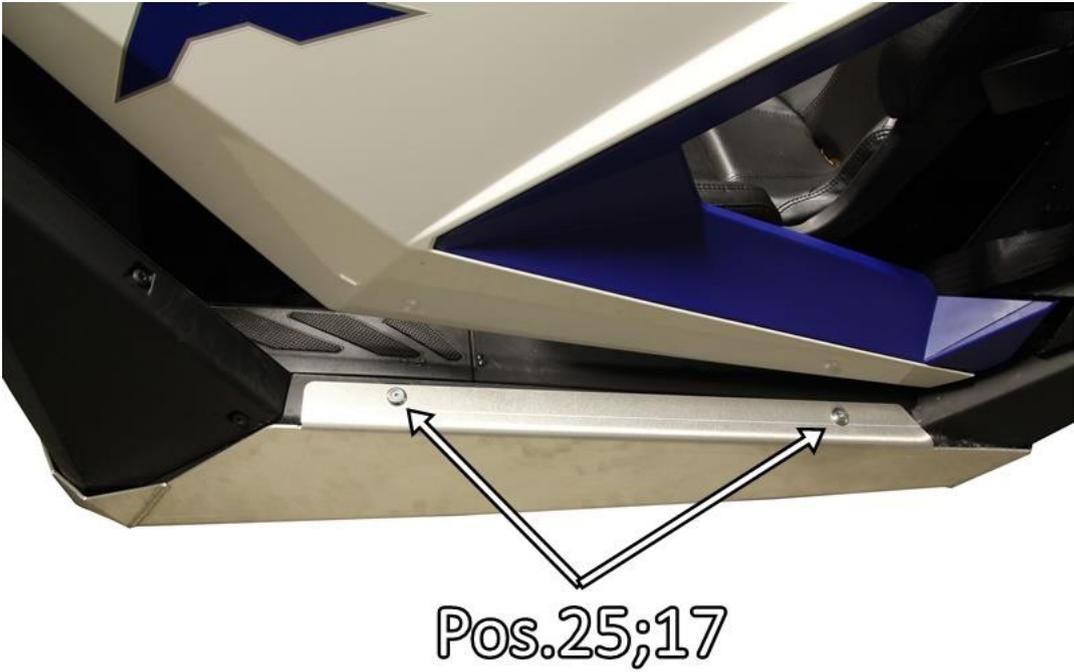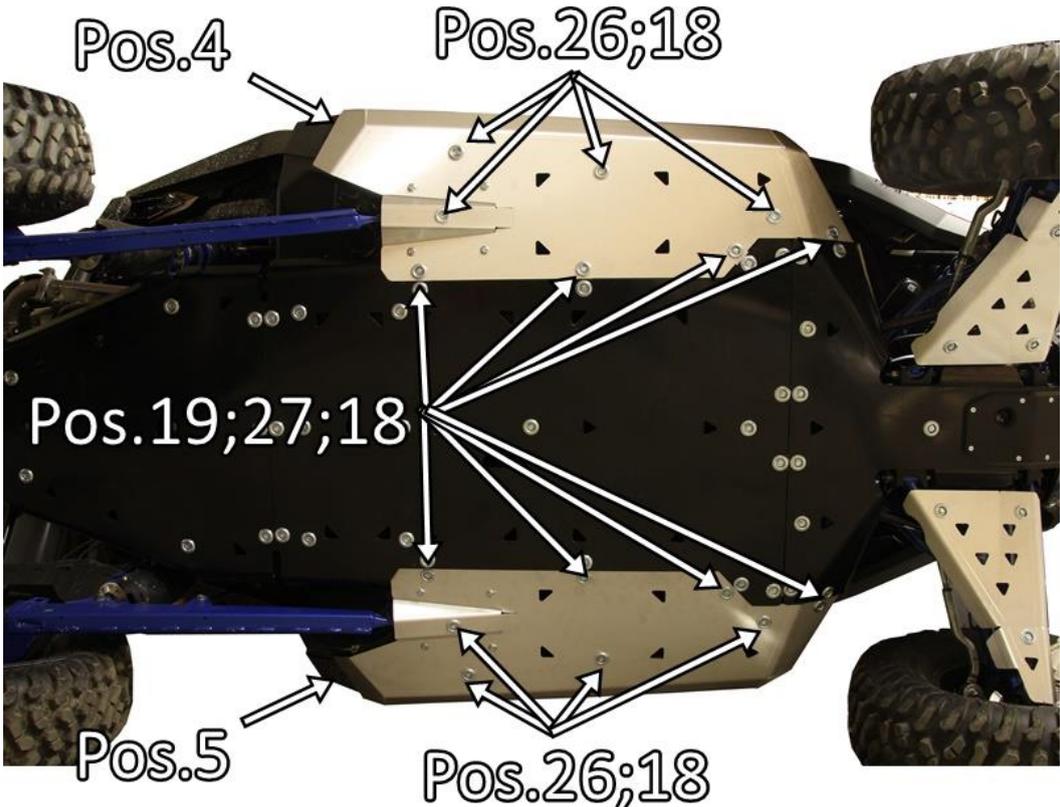

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

