



ALUMINIUM SKID PLATE

POLARIS

Sportsman 570 SP (2021-...)

Code 02.26700

Version 07102023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL

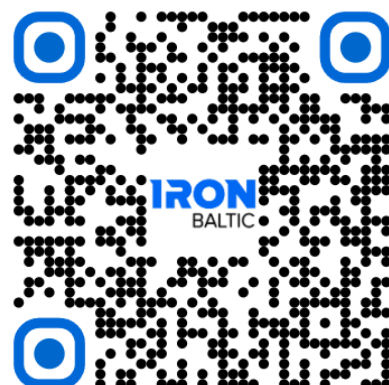

code.ironbaltic.com/u/iEhQ6wiY

SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.26701	1
2	Front right arm protection	02.26702K	1
3	Front left arm protection	02.26703K	1
4	Middle part	02.12501	1
5	Rear part	02.12503	1
6	Rear right arm protection	02.1404	1
7	Rear left arm protection	02.1405	1
8	Front part bracket	02.26706	1
9	Front A-arm bracket	02.15210	2
10	Mounting plate right	02.12505K	1
11	Mounting plate left	02.12504K	1
12	Installation bracket	02.5710	2
13	Installation plate	02.5006	6
14	Installation strip	02.4011	2
15	Installation plate	02.2305	3
16	Clamp for rear arm protection	02.1418	2
17	Dished washer	14.503	31
18	Conical washer Ø6	14.502	4
19	Conical washer Ø8	14.501	2
20	Bolt M6x12 DIN 933	OT.02.02.030	14
21	Bolt M6x25 DIN 933	OT.02.02.070	4
22	Bolt M8x20 DIN 933	OT.02.02.180	9
23	Bolt M8x25 DIN 933	OT.02.04.030	4
24	Bolt M6x20 DIN 7991	OT.02.04.150	11
25	Bolt M8x20 DIN 7991	OT.02.06.010	2
26	Self-tapping bolt M6x25 DIN 7500D	OT.04.03.020	2
27	Washer Ø6/15 SFS 3738	OT.04.03.020	29
28	Nyloc nut M6 DIN 985	OT.03.02.030	11


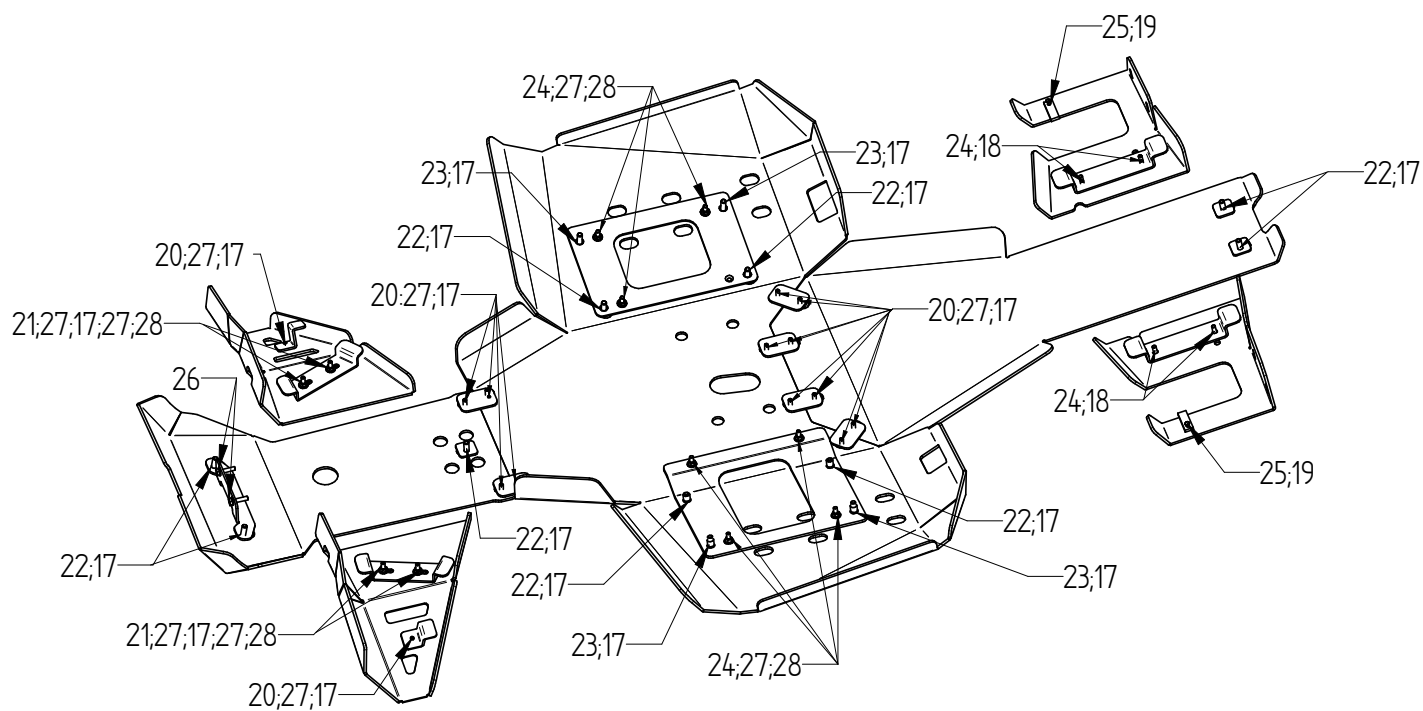
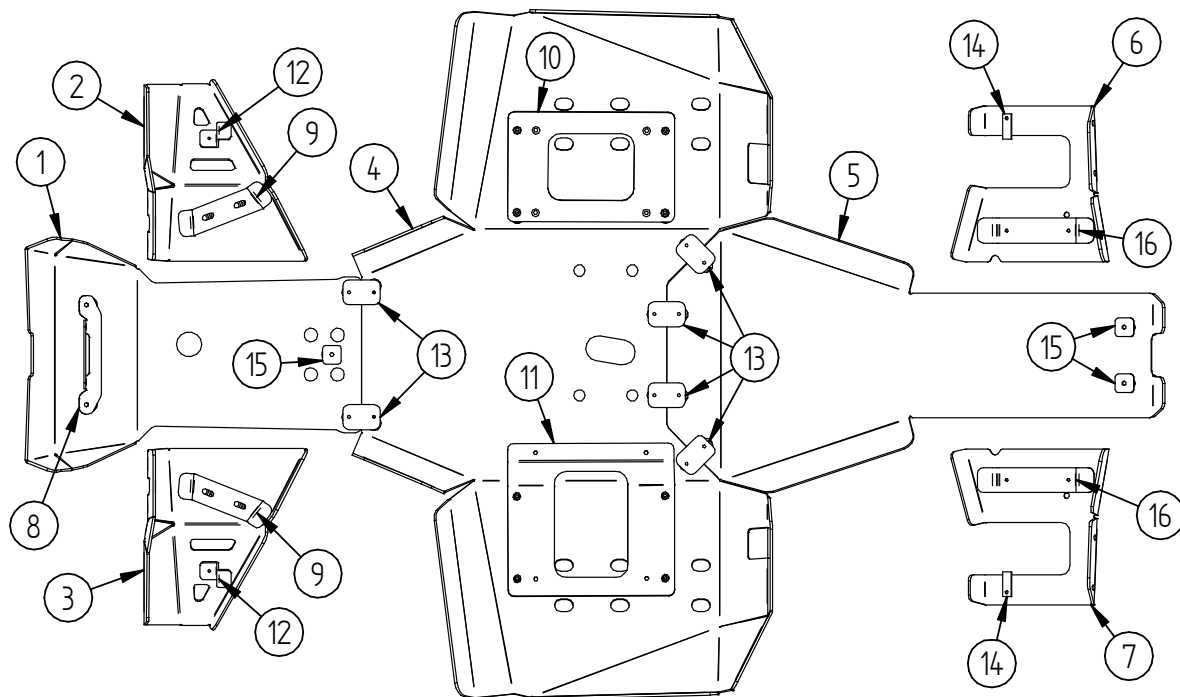


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.





Step 2 Install bracket 02.26706 and mounting plates 02.12504K and 02.12505K (use 10mm spanner, 10mm socket wrench and 4mm hex key). **NB!** Mounting plates are universal parts, so their installation may vary depending on the vehicle model. Please use the holes shown in the photos.

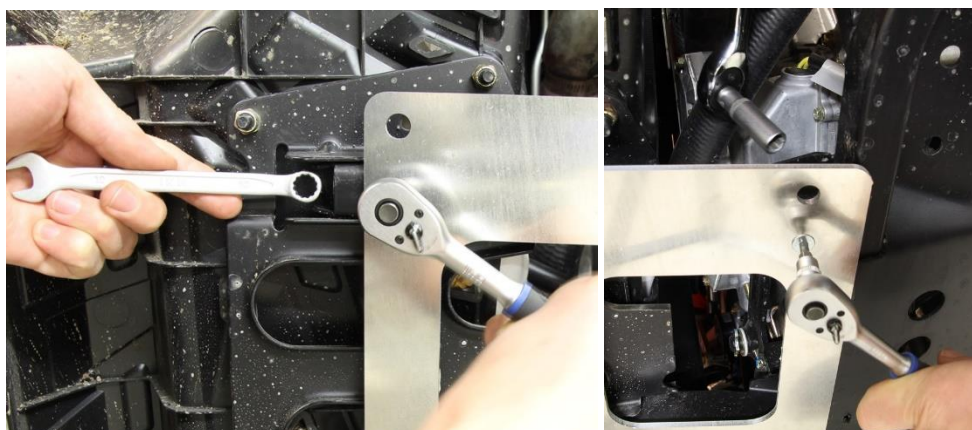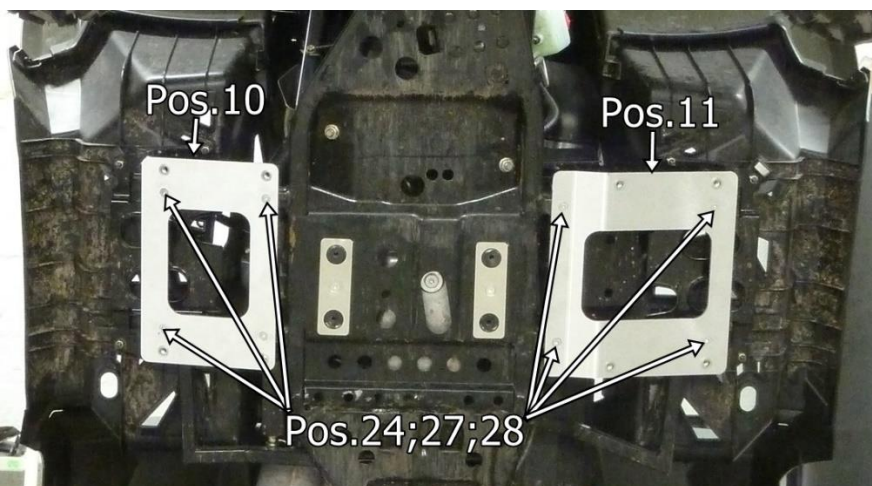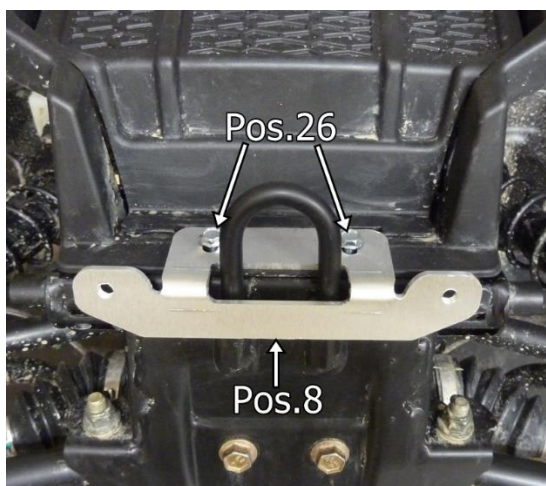


Step 3

Install front arm protections 02.26702K and 02.26703K.
Tighten Pos.9 bracket bolts until the bracket touches A-arm protector.
Bracket is intended to deform while installing!

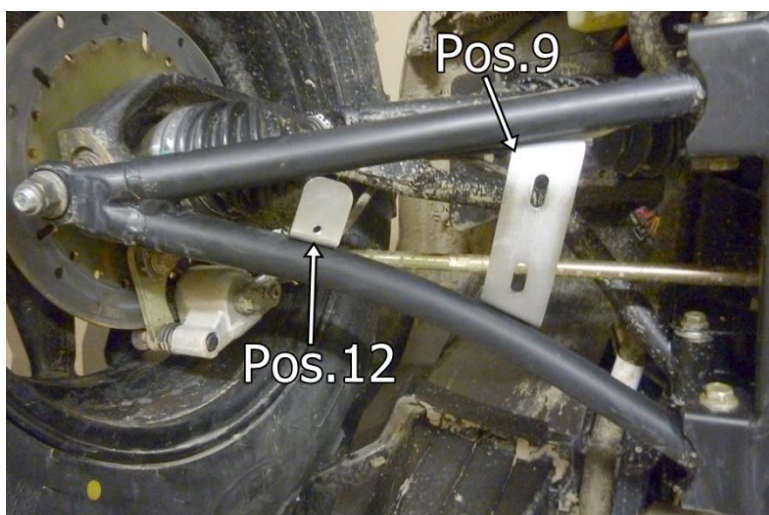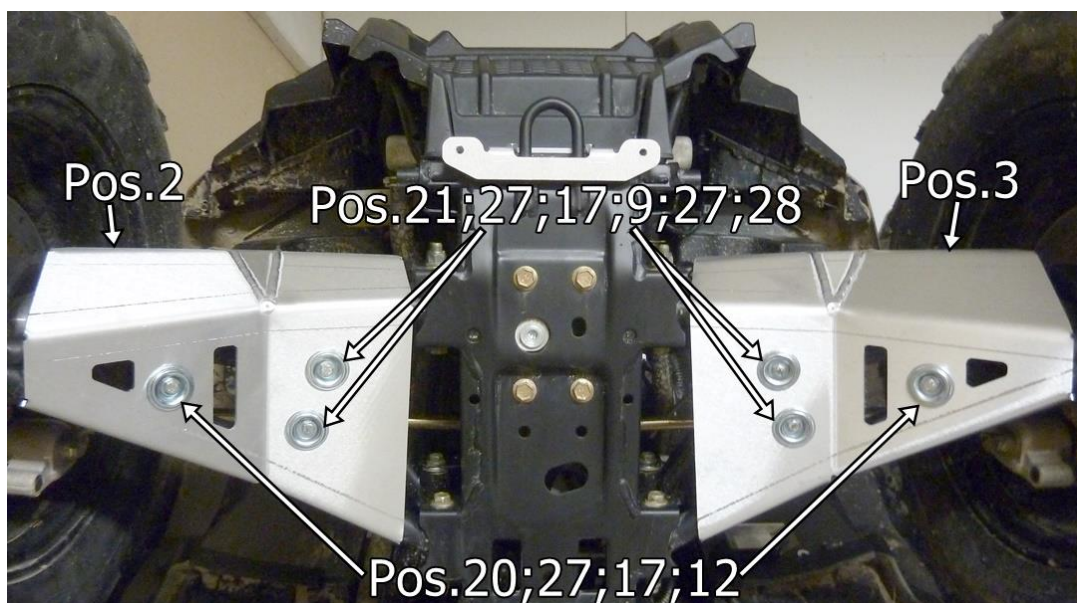


Step 4

Install rear arm protections 02.1404 and 02.1405.

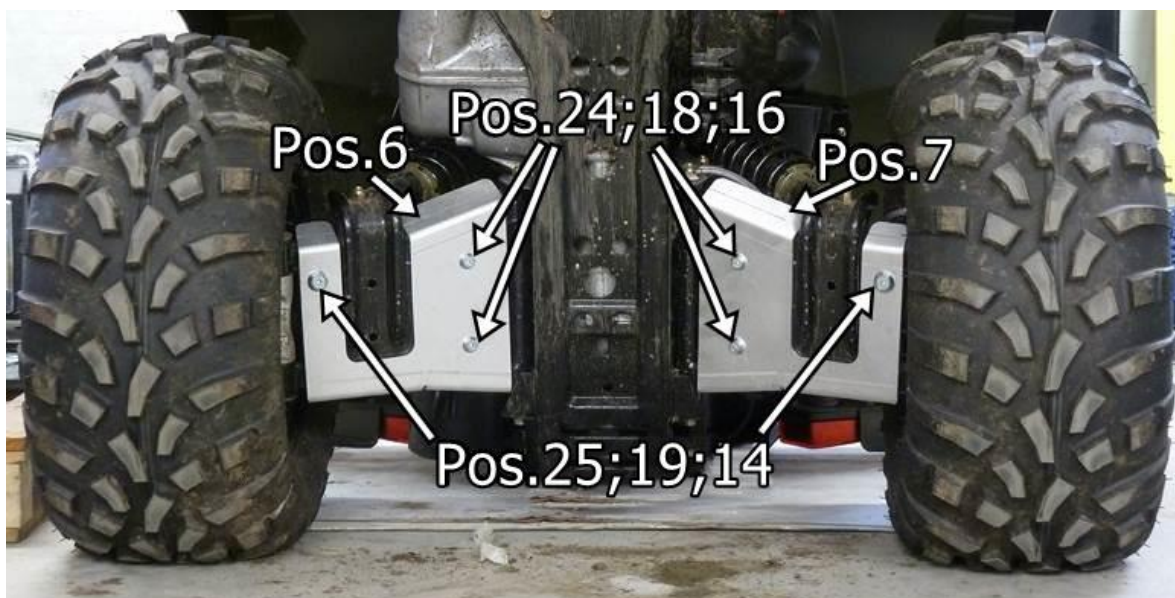


NB!

On some models, bracket holding the brake line, may be in the way of installing Pos.16 bracket. In that case install Pos.16 bracket to the second hole, as show on the picture below.

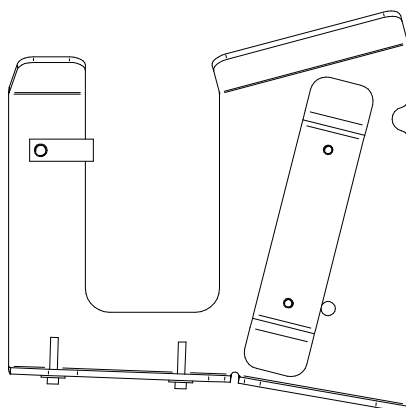

Installation with brake line in the way

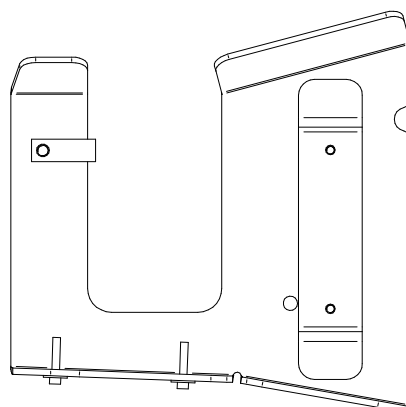

Original installation


Step 5

Install middle protection 02.12501.



Step 6

Install plates 02.5006 to middle part.

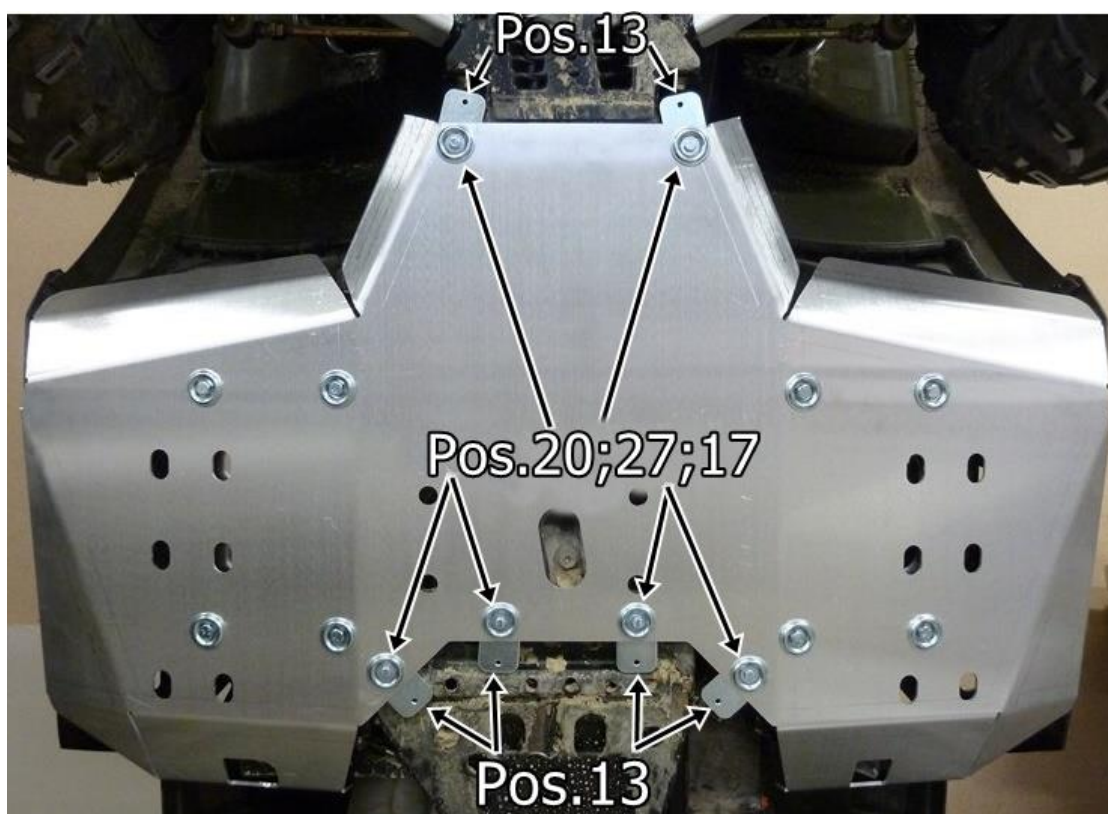


Step 7

Install front protection 02.26701.



Step 8

Install rear protection 02.12503.

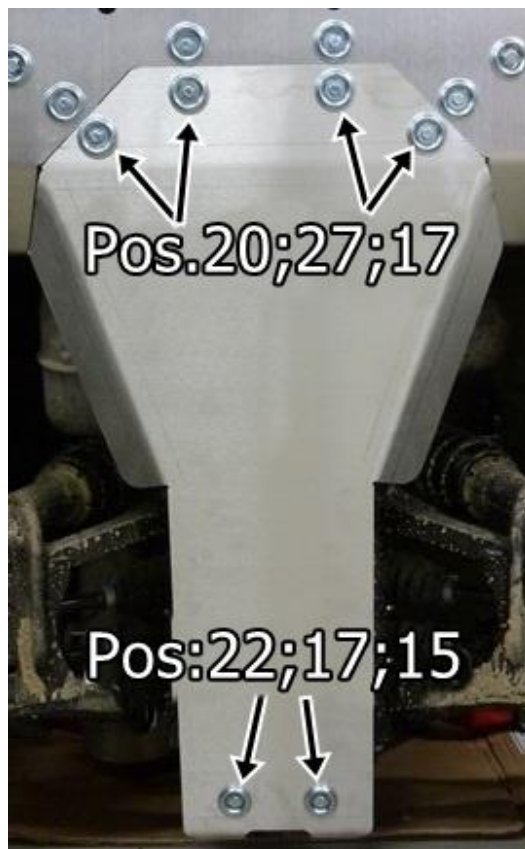

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

