


# IRON BALTIC

## FRONT A-ARM GUARDS (ALUMINIUM)

DOWNLOAD MULTILINGUAL  
USER MANUAL

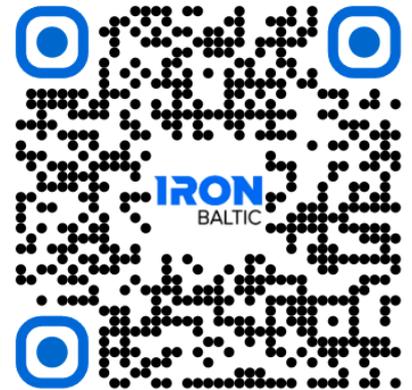

[code.ironbaltic.com/u/SLg4UWDt](https://code.ironbaltic.com/u/SLg4UWDt)

# POLARIS

## Sportsman 570 SP (2021-...)

Code 02.26702VP

Version 07102023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front left arm protection	02.26703K	1
2	Front right arm protection	02.26702K	1
3	Front A-arm bracket	02.15210	2
4	Installation bracket	02.5710	2
5	Dished washer	14.503	6
6	Bolt M6x12 DIN 933	OT.02.02.030	2
7	Bolt M6x25 DIN 933	OT.02.02.070	4
8	Washer Ø6/15 SFS 3738	OT.04.03.020	10
9	Nyloc nut M6 DIN 985	OT.03.02.030	4

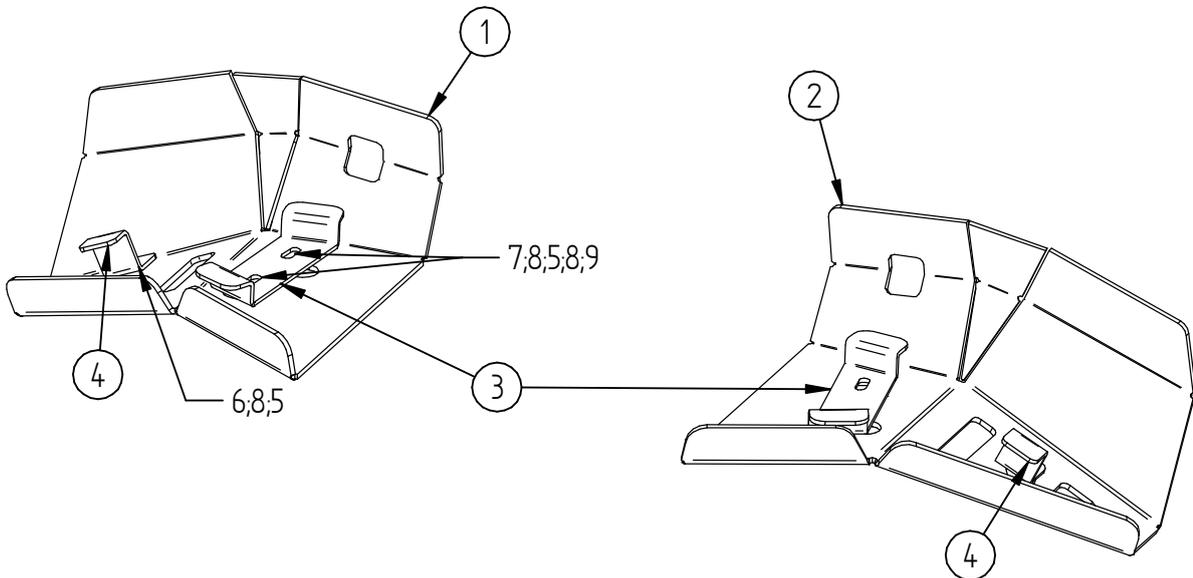

# FITTING INSTRUCTIONS





## NB!

We recommend using thread lock fluid on the bolts. Bolts tend to loosen with vibration from ATV.

### Step 1

Install front arm protections 02.26702K and 02.26703K. Tighten Pos.3 bracket bolts until the bracket touches A-arm protector. Bracket is intended to deform while installing!

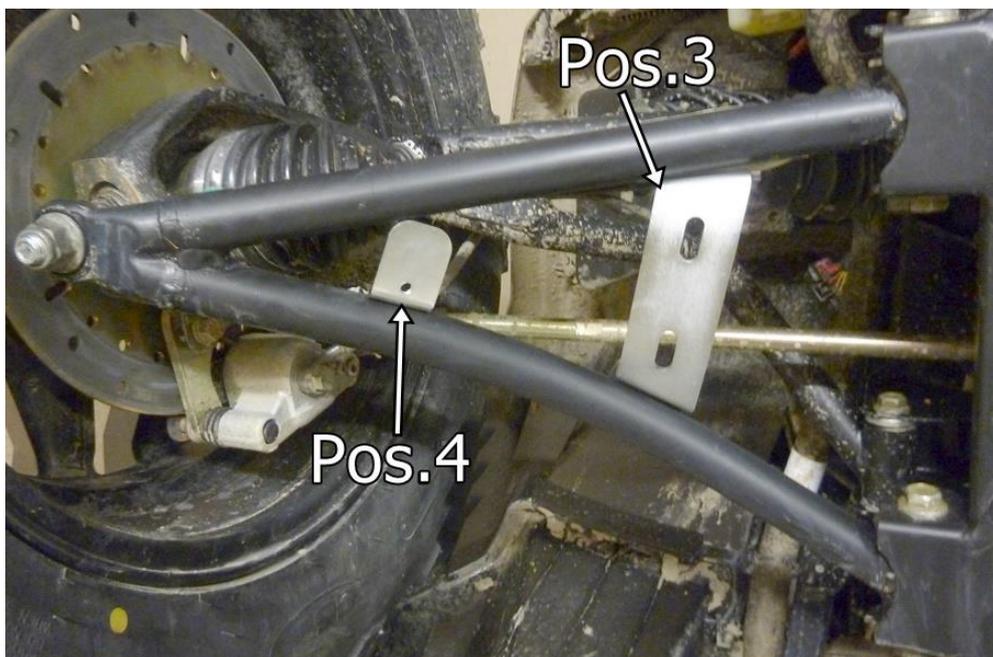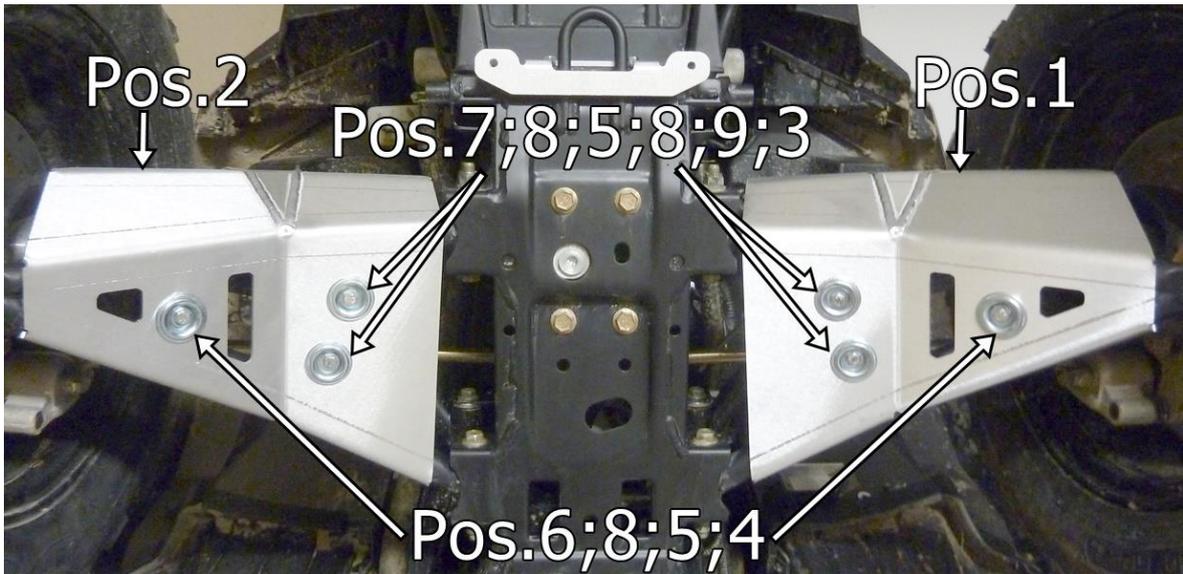

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

