

# IRON BALTIC


## PLASTIC SKID PLATE

# POLARIS

## Sportsman 570 SP (2021-...)

Code 02.26800

Version 07102023

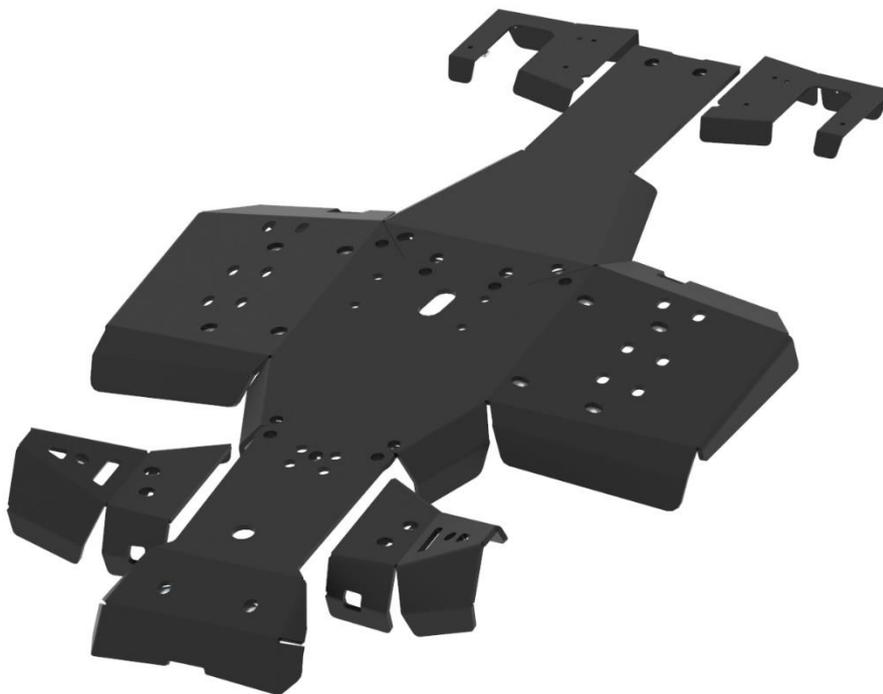

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/SBGwf9xt](http://code.ironbaltic.com/u/SBGwf9xt)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.26801	1
2	Front right arm protection	02.26802	1
3	Front left arm protection	02.26803	1
4	Middle part	02.12601	1
5	Rear part	02.12603	1
6	Rear right arm protection	02.1414	1
7	Rear left arm protection	02.1415	1
8	Front part bracket	02.26706	1
9	Front A-arm bracket	02.15210	2
10	Mounting plate right	02.12505K	1
11	Mounting plate left	02.12504K	1
12	Installation bracket	02.5710	2
13	Installation plate	02.5006	6
14	Installation strip	02.4011	2
15	Installation plate	02.2305	3
16	Clamp for rear arm protection	02.1418	2
17	Dished washer	14.503	31
18	Conical washer Ø6	14.502	4
19	Conical washer Ø8	14.501	2
20	Bolt M6x16 DIN 933	OT.02.02.050	14
21	Bolt M6x30 DIN 933	OT.02.02.080	4
22	Bolt M8x25 DIN 933	OT.02.02.190	9
23	Bolt M8x30DIN 933	OT.02.02.200	4
24	Bolt M6x25 DIN 7991	OT.02.04.040	11
25	Bolt M8x25 DIN 7991	OT.02.04.160	2
26	Self-tapping bolt M6x25 DIN 7500D	OT.04.03.020	2
27	Washer Ø6/15 SFS 3738	OT.04.03.020	29
28	Nyloc nut M6 DIN 985	OT.03.02.030	11

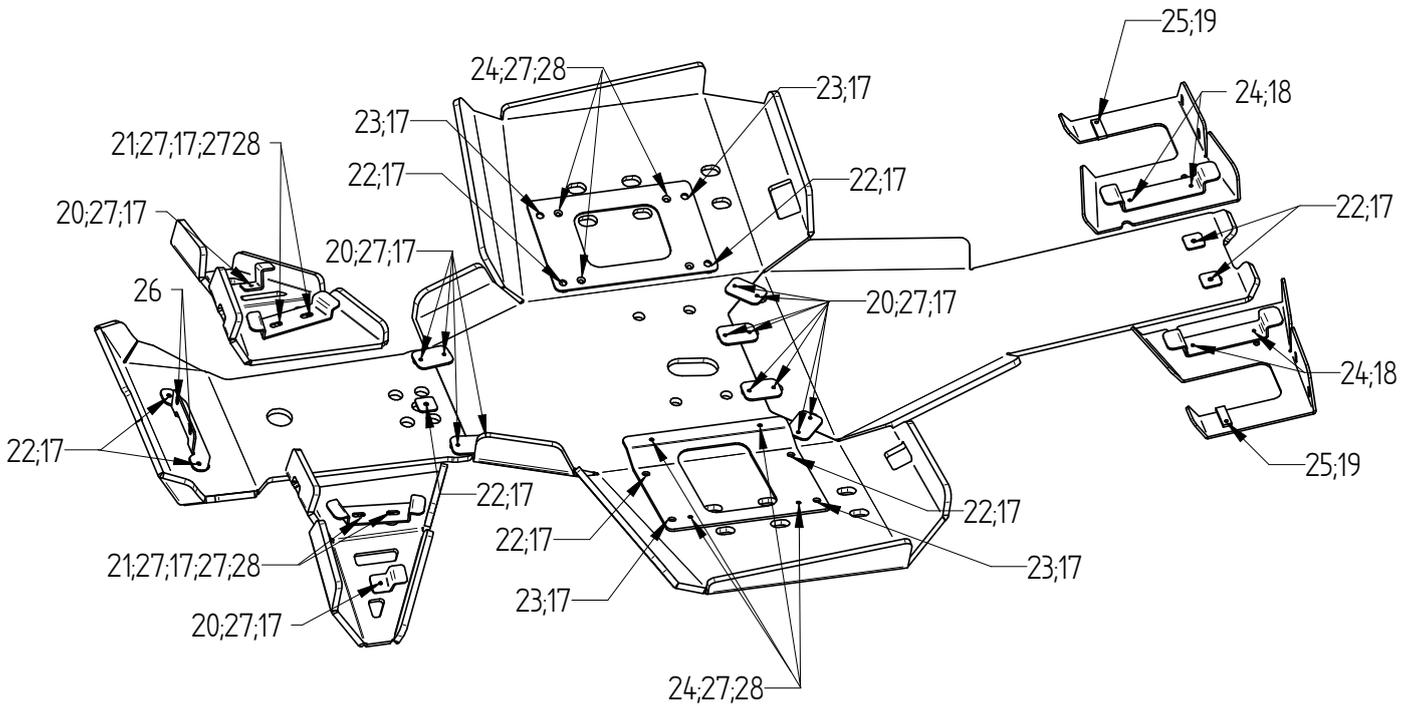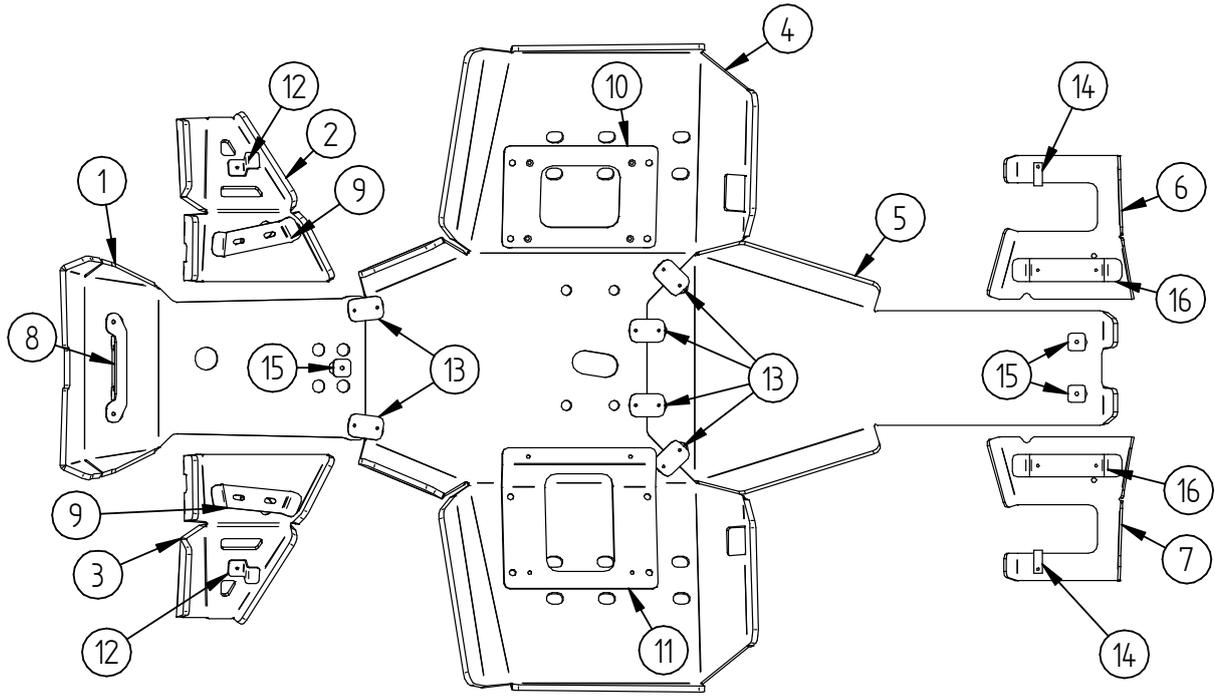


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.





**Step 2** Install bracket 02.26706 and mounting plates 02.12504K and 02.12505K (use 10mm spanner, 10mm socket wrench and 4mm hex key). **NB!** Mounting plates are universal parts, so their installation may vary depending on the vehicle model. Please use the holes shown in the photos.

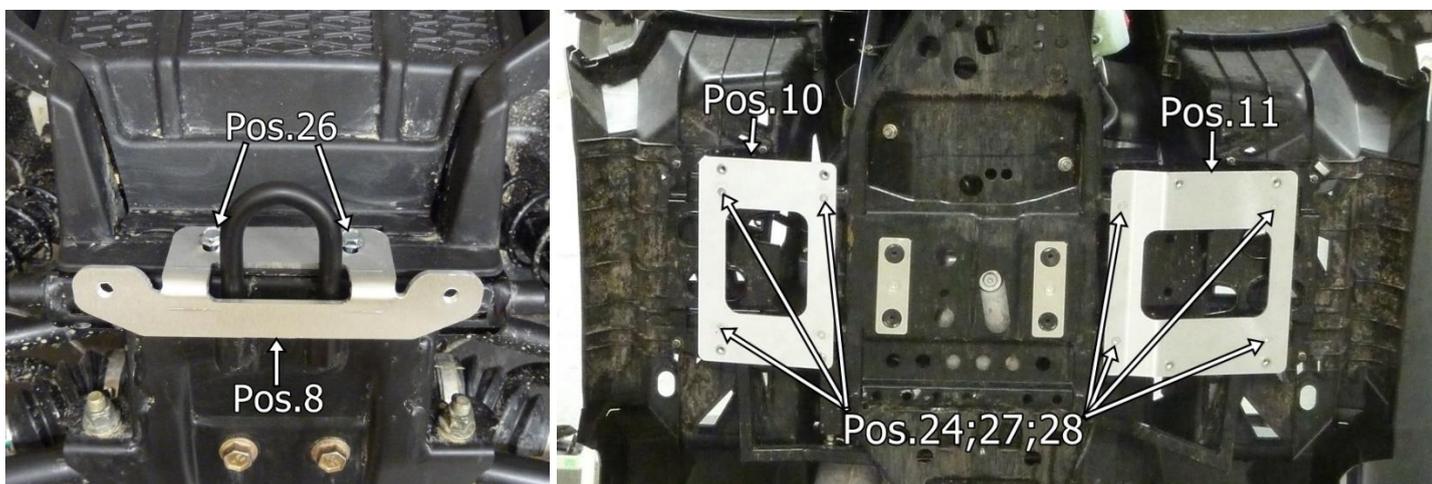


**Step 3**

Install front arm protections 02.26802 and 02.26803.

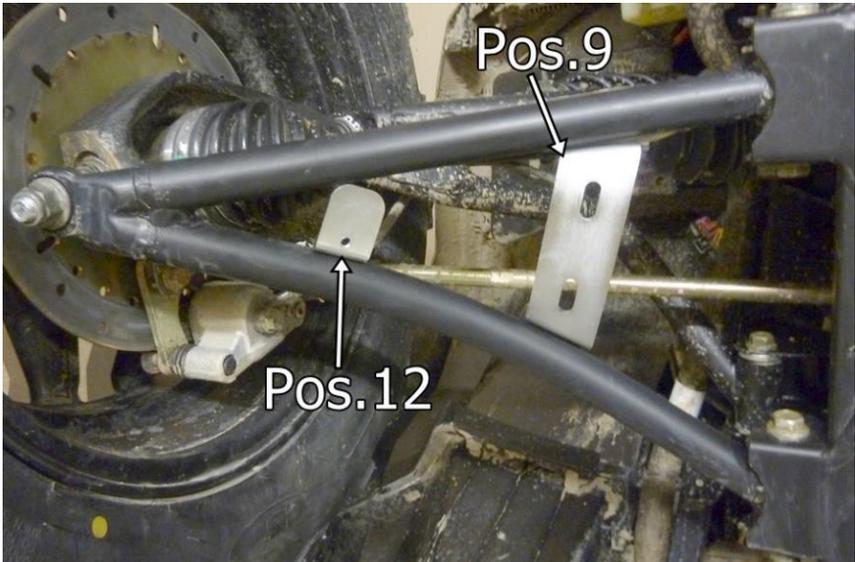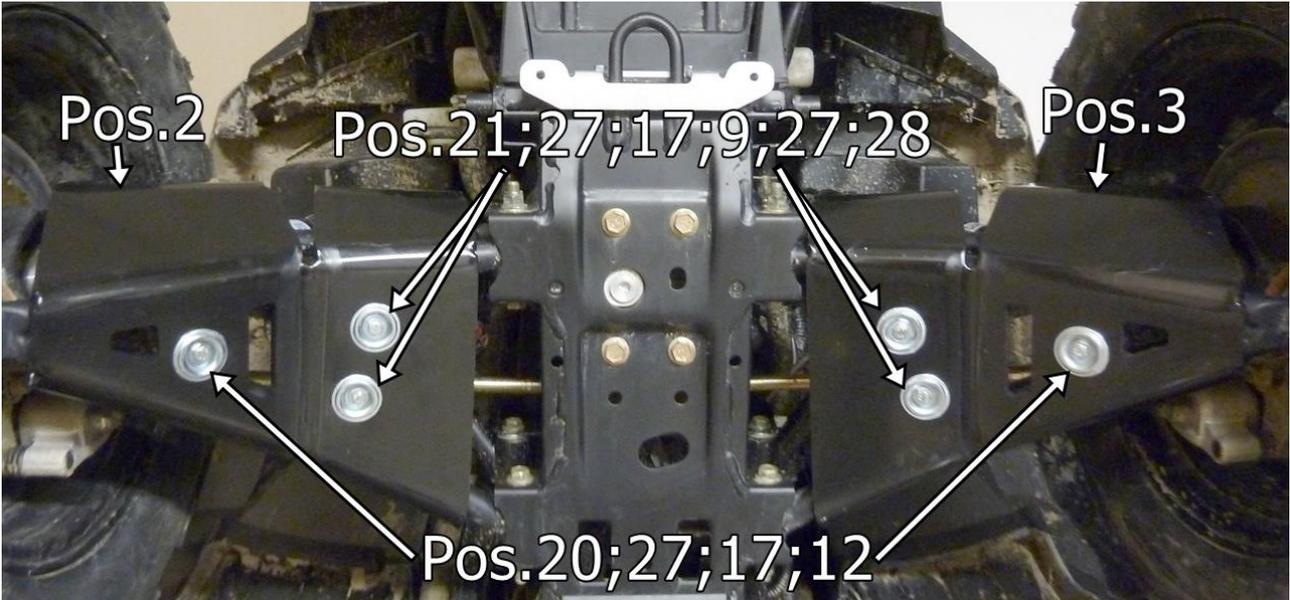


## Step 4

Install rear arm protections 02.1414 and 02.1415.

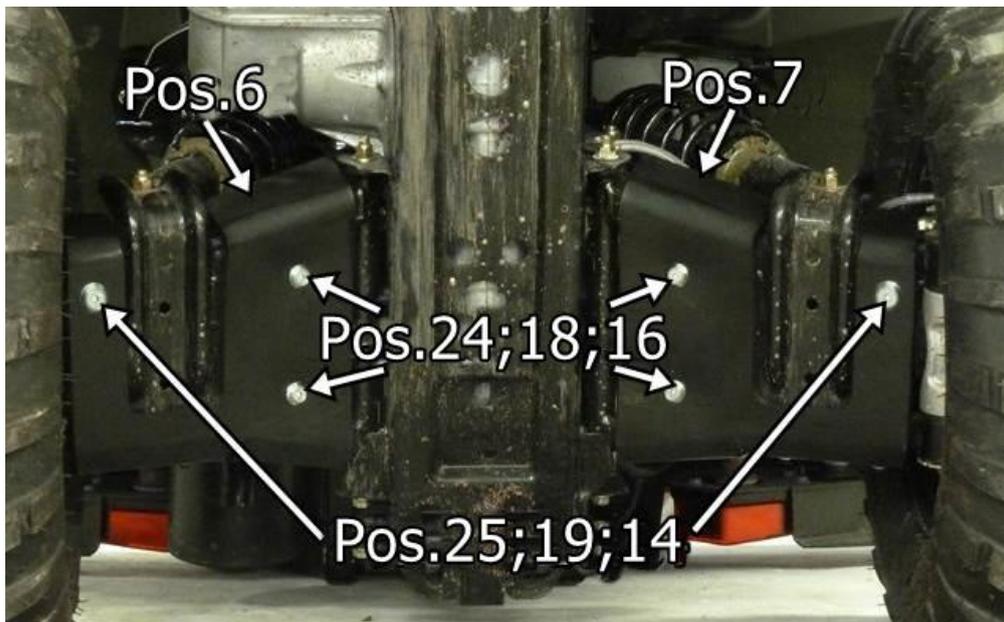


### NB!

On some models, bracket holding the brake line, may be in the way of installing Pos.16 bracket. In that case install Pos.16 bracket to the second hole, as show on the picture below.

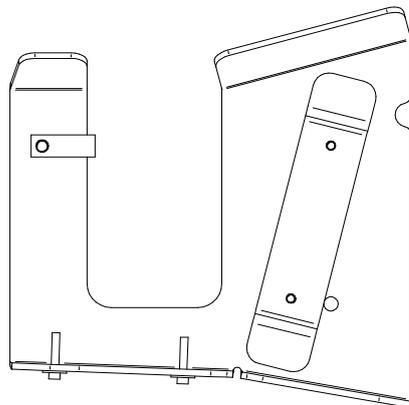


*Installation with brake line in the way*

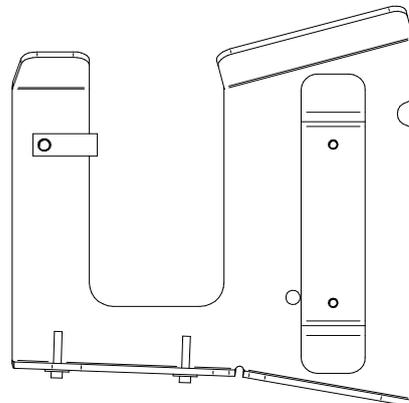

*Original installation*


## Step 5

Install middle protection 02.12601.

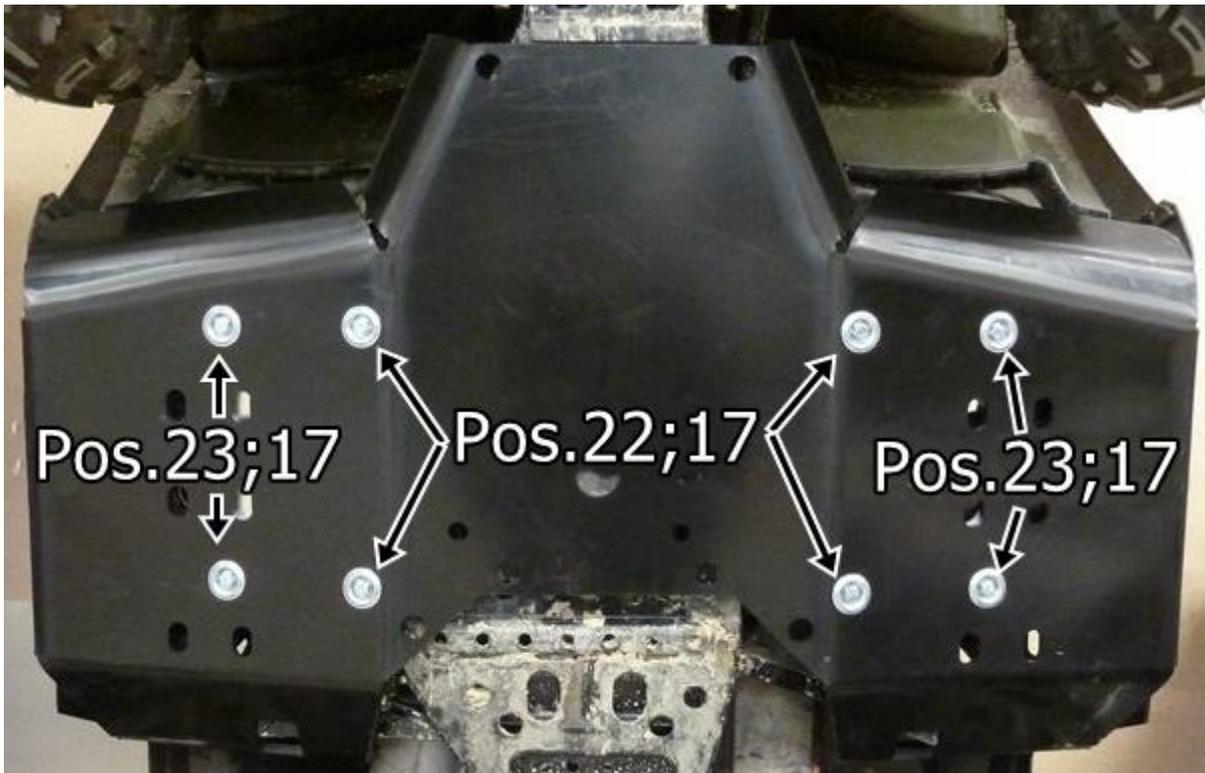


## Step 6

Install plates 02.5006 to middle part.

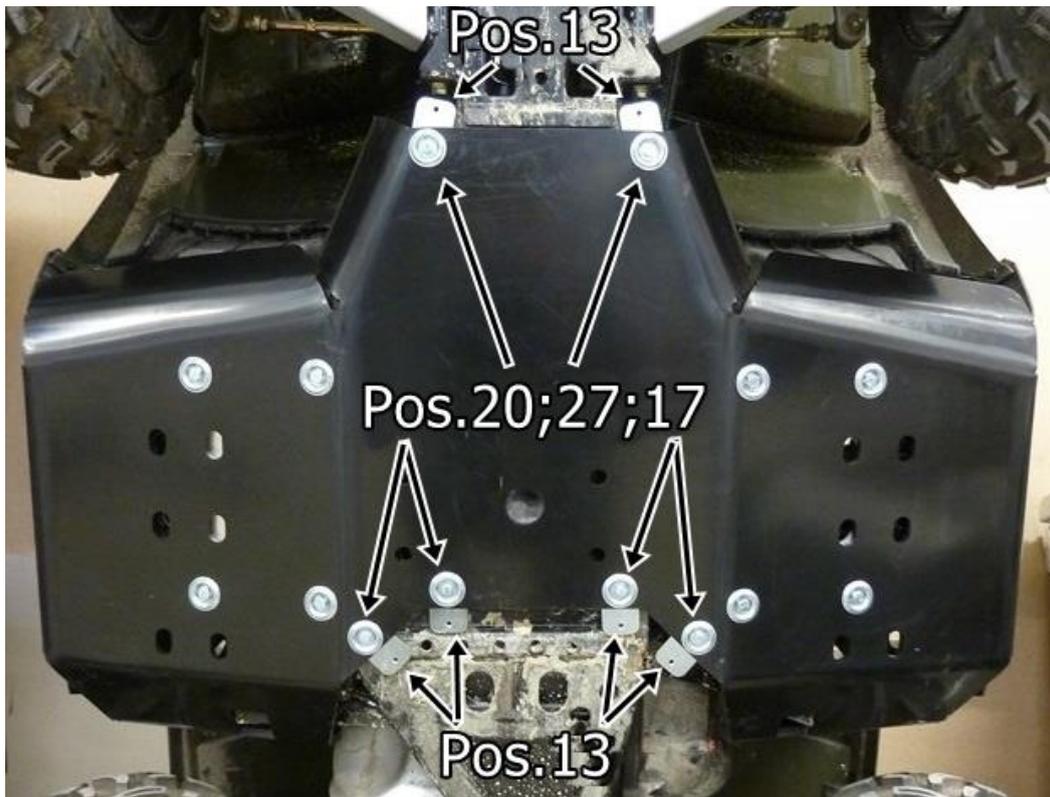


## Step 7

Install front protection 02.26801.

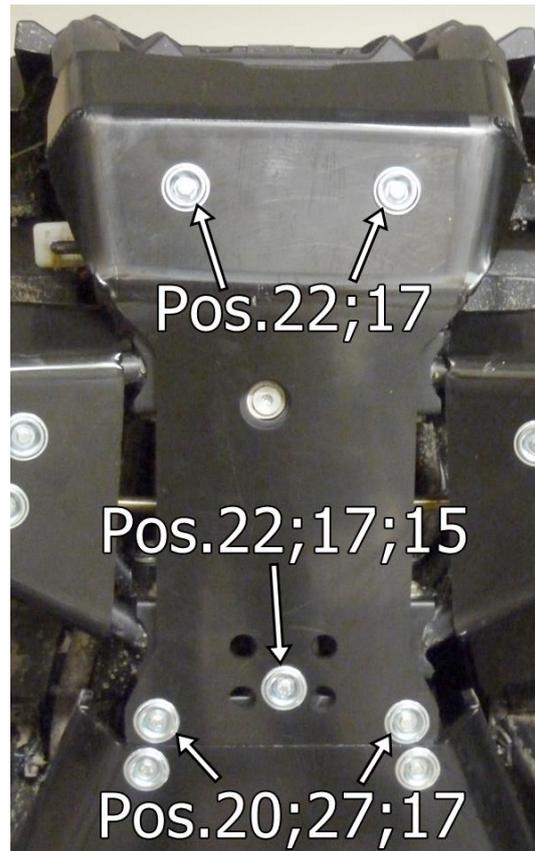

## Step 8

Install rear protection 02.12603.

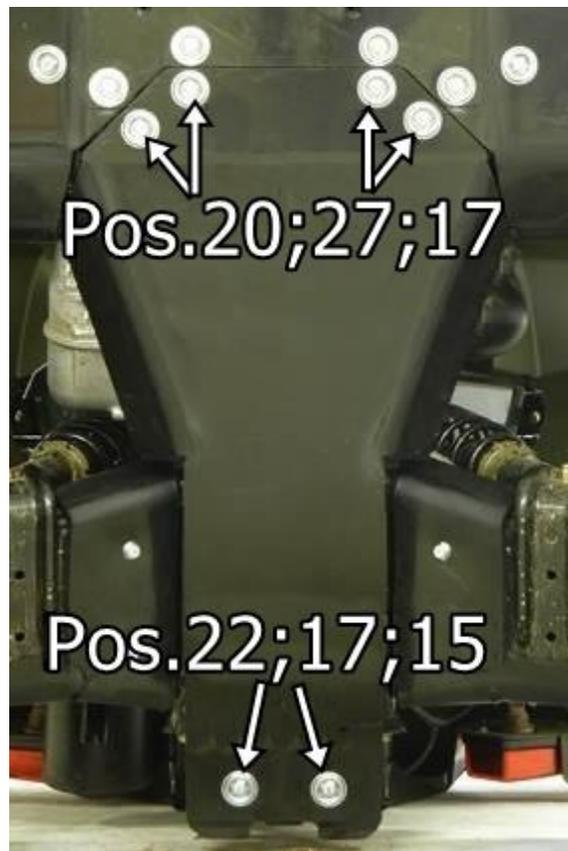







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

