

# IRON BALTIC

## FRONT A-ARM GUARDS (PLASTIC)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/dUednTnV](https://code.ironbaltic.com/u/dUednTnV)

## POLARIS

Sportsman 570 SP (2021-...)

Code 02.26802VP

Version 07102023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

| Pos. | Description                | Code         | Amount |
|------|----------------------------|--------------|--------|
| 1    | Front left arm protection  | 02.26803     | 1      |
| 2    | Front right arm protection | 02.26802     | 1      |
| 3    | Front A-arm bracket        | 02.15210     | 2      |
| 4    | Installation bracket       | 02.5710      | 2      |
| 5    | Dished washer              | 14.503       | 6      |
| 6    | Bolt M6x16 DIN 933         | OT.02.02.050 | 2      |
| 7    | Bolt M6x30 DIN 933         | OT.02.02.080 | 4      |
| 8    | Washer Ø6/15 SFS 3738      | OT.04.03.020 | 10     |
| 9    | Nyloc nut M6 DIN 985       | OT.03.02.030 | 4      |

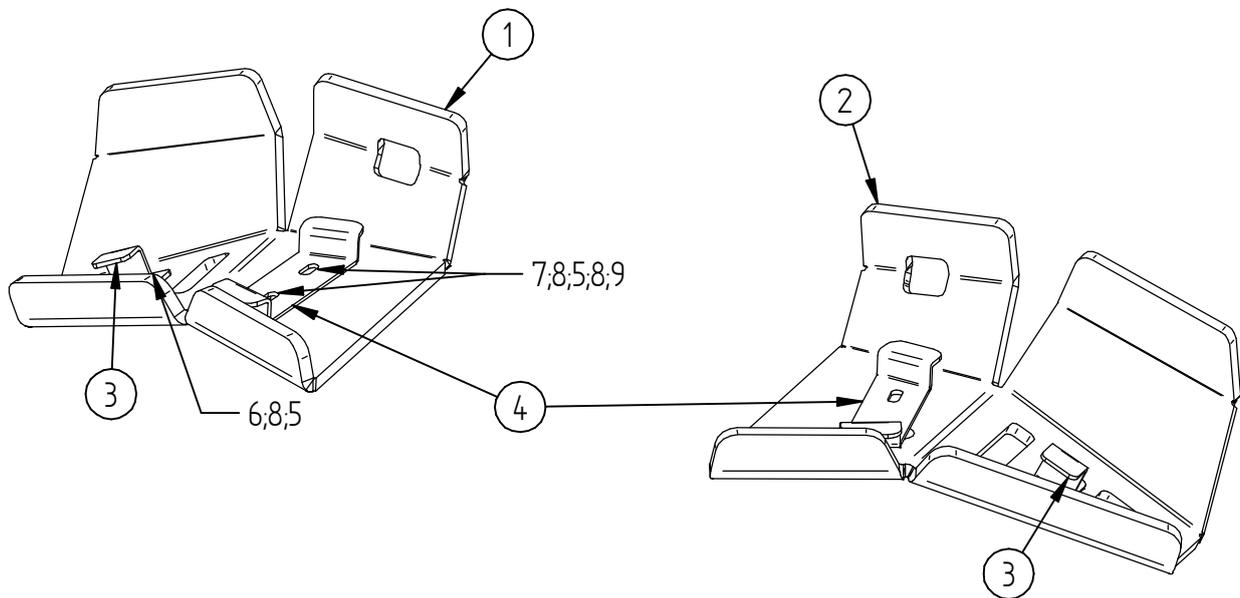

# FITTING INSTRUCTIONS





## NB!

We recommend using thread lock fluid on the bolts. Bolts tend to loosen with vibration from ATV.

### Step 1

Install front arm protections 02.26802 and 02.26803.  
Tighten Pos.3 bracket bolts until the bracket touches A-arm protector.  
Bracket is intended to deform while installing!

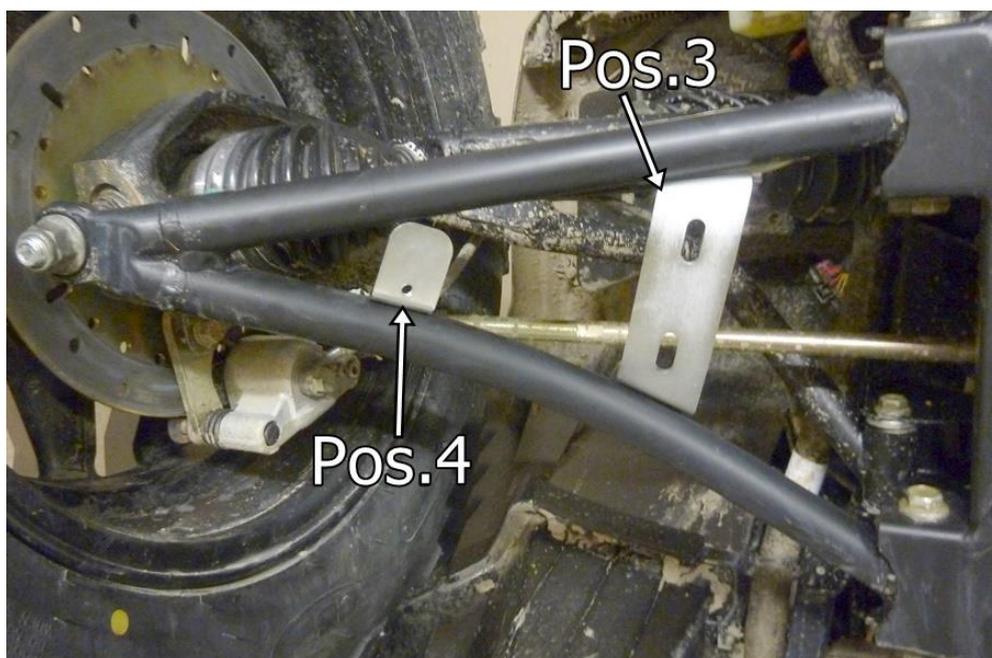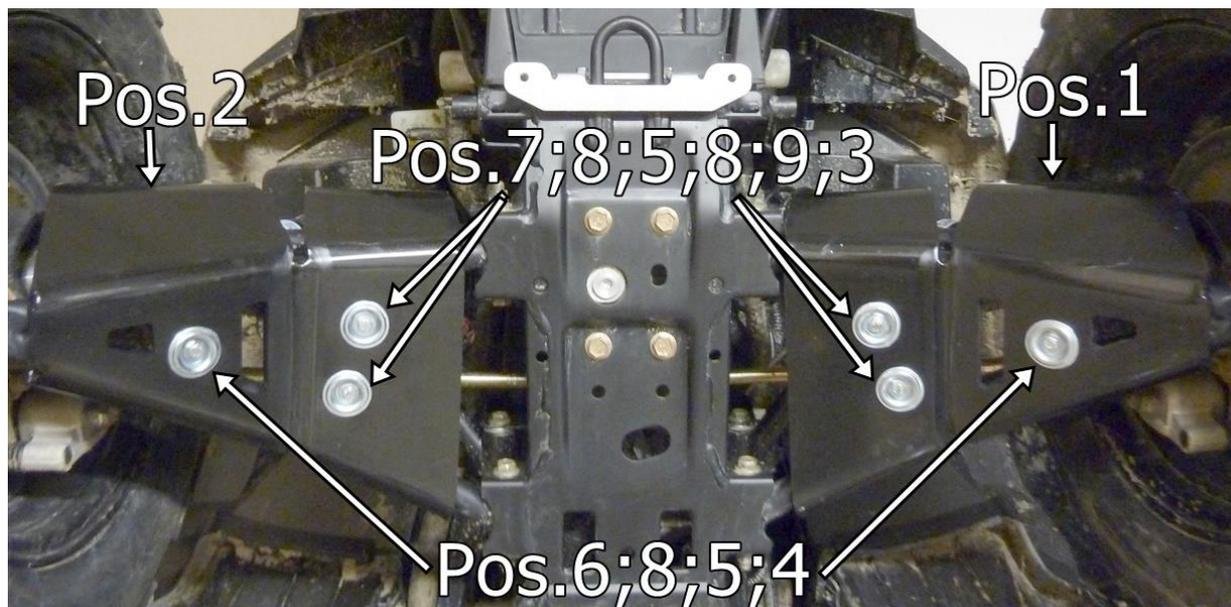

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

