

IRON BALTIC


PLASTIC SKID PLATE

KYMCO

MXU 700 (2020-...)

Code 02.27400

Version 09102023

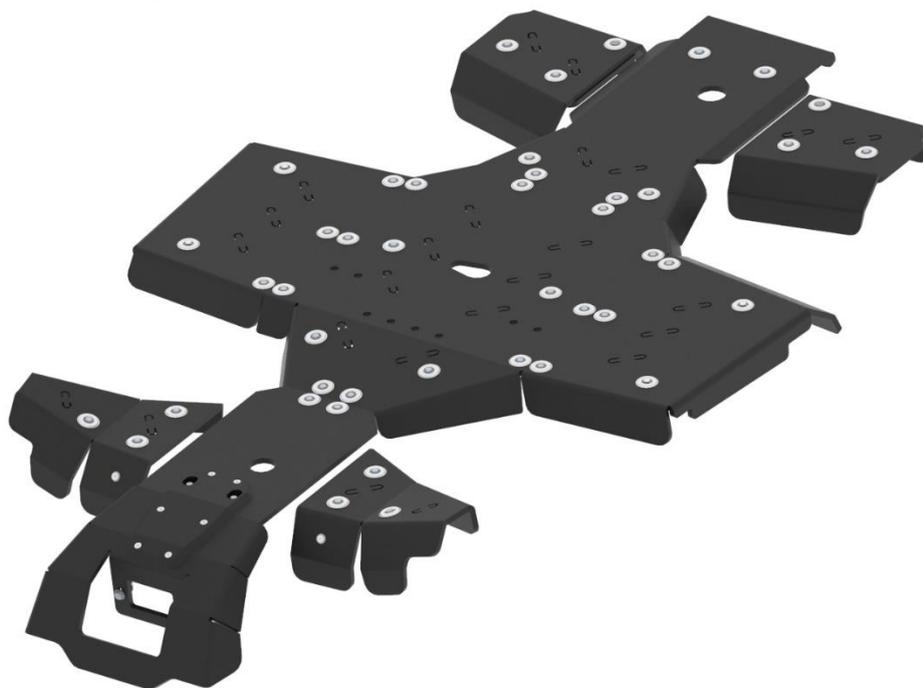

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/bVeXRqnh


SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.27401K	1
2	Front left arm protection	02.27403	1
3	Front right arm protection	02.27404	1
4	Middle protection	02.22102	1
5	Right side protection	02.22103	1
6	Left side protection	02.22104	1
7	Rear protection	02.22105	1
8	Rear right arm protection	02.22108	1
9	Rear left arm protection	02.22109	1
10	Distance plate for rear arm protection	02.22010	2
11	Installation bracket	02.1018	2
12	Installation bracket	02.1419	2
13	Installation plate	02.5006	8
14	Installation bracket	02.5710	2
15	Installation bracket	02.8210	2
16	Installation plate 10	02.8312	2
17	Dished washer	14.503	44
18	Bolt M6x16 DIN 933	OT.02.02.050	20
19	Bolt M6x25 DIN 933	OT.02.02.070	18
20	Bolt M6x30 DIN 933	OT.02.02.080	2
21	Bolt M6x45 DIN 933	OT.02.02.110	4
22	Bolt M8x30 DIN 933	OT.02.02.200	2
23	Bolt M8x40 DIN 933	OT.02.02.220	2
24	Bolt M6x30 DIN7991	OT.02.04.050	4
25	Conical washer Ø6	14.502	4
26	Washer Ø6/15 SFS 3738	OT.04.03.020	44
27	Washer Ø6/18 DIN9021	OT.04.02.020	12
28	Washer Ø8/20 SFS 3738	OT.04.03.030	6
29	Nyloc nut M6 DIN 985	OT.03.02.030	12
30	Nyloc nut M8 DIN 985	OT.03.02.040	4

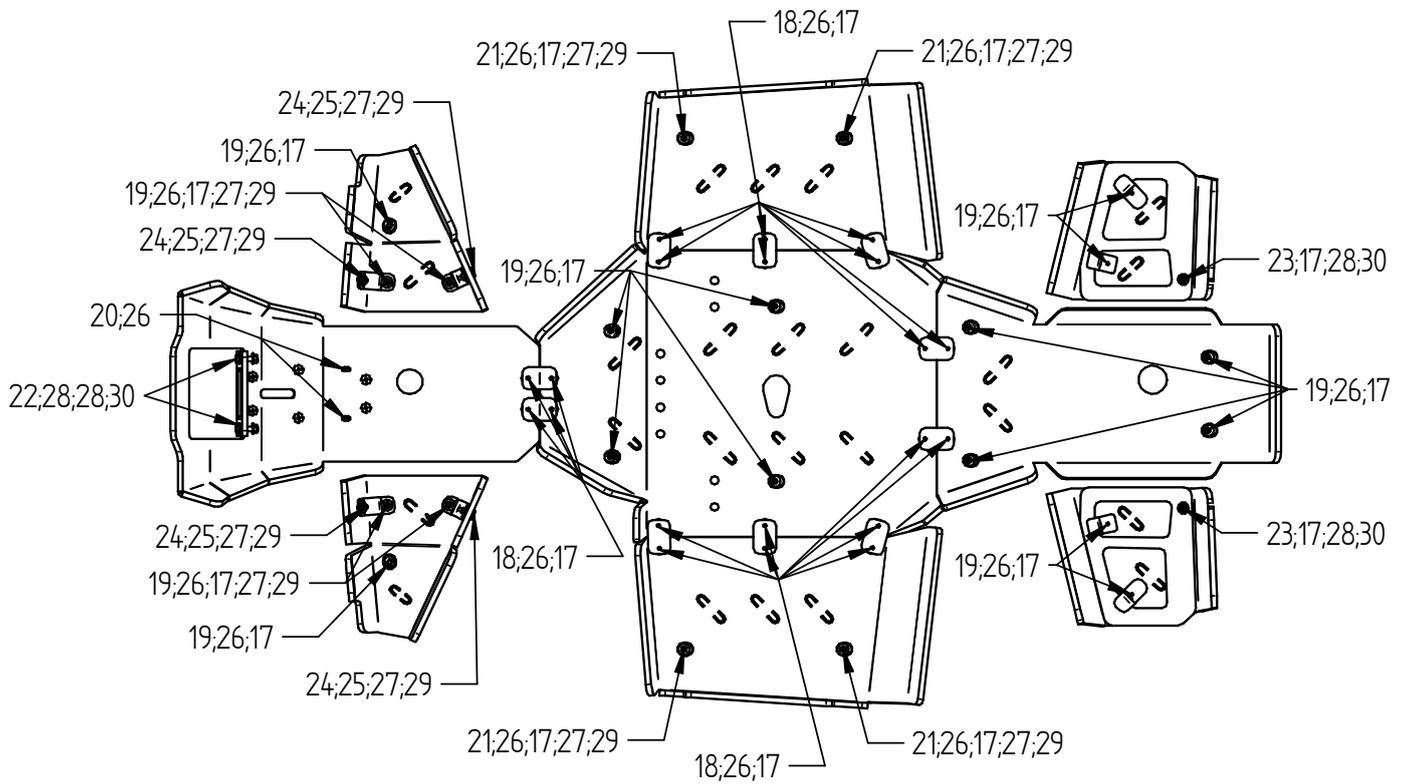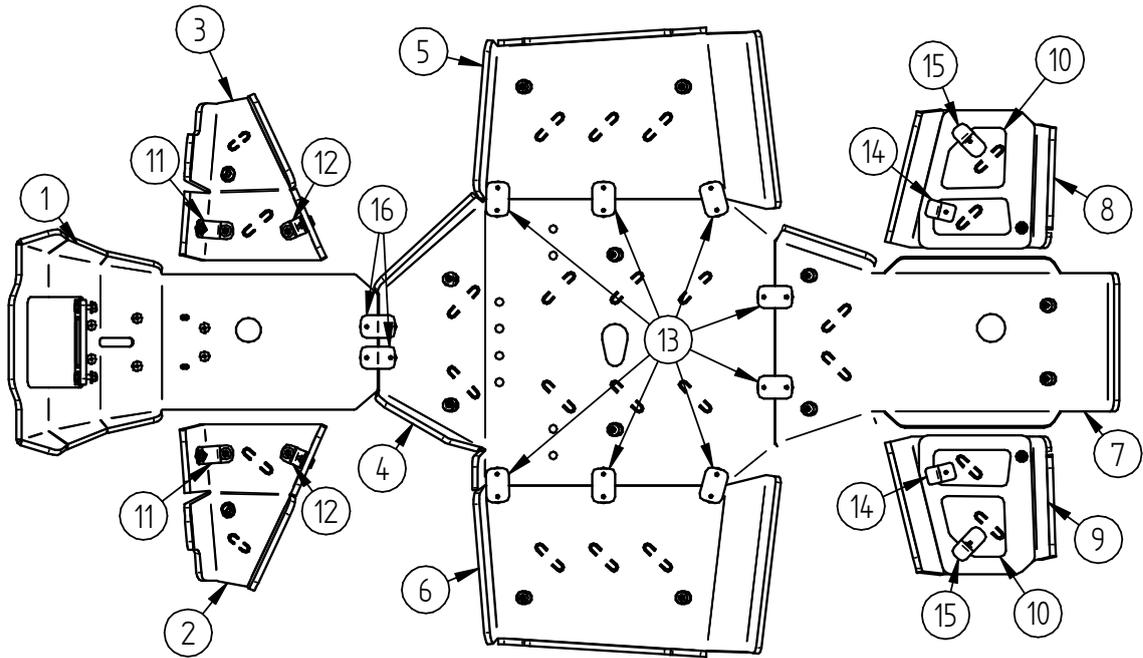


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers, winch fairlead and original bolts (shown in the picture).

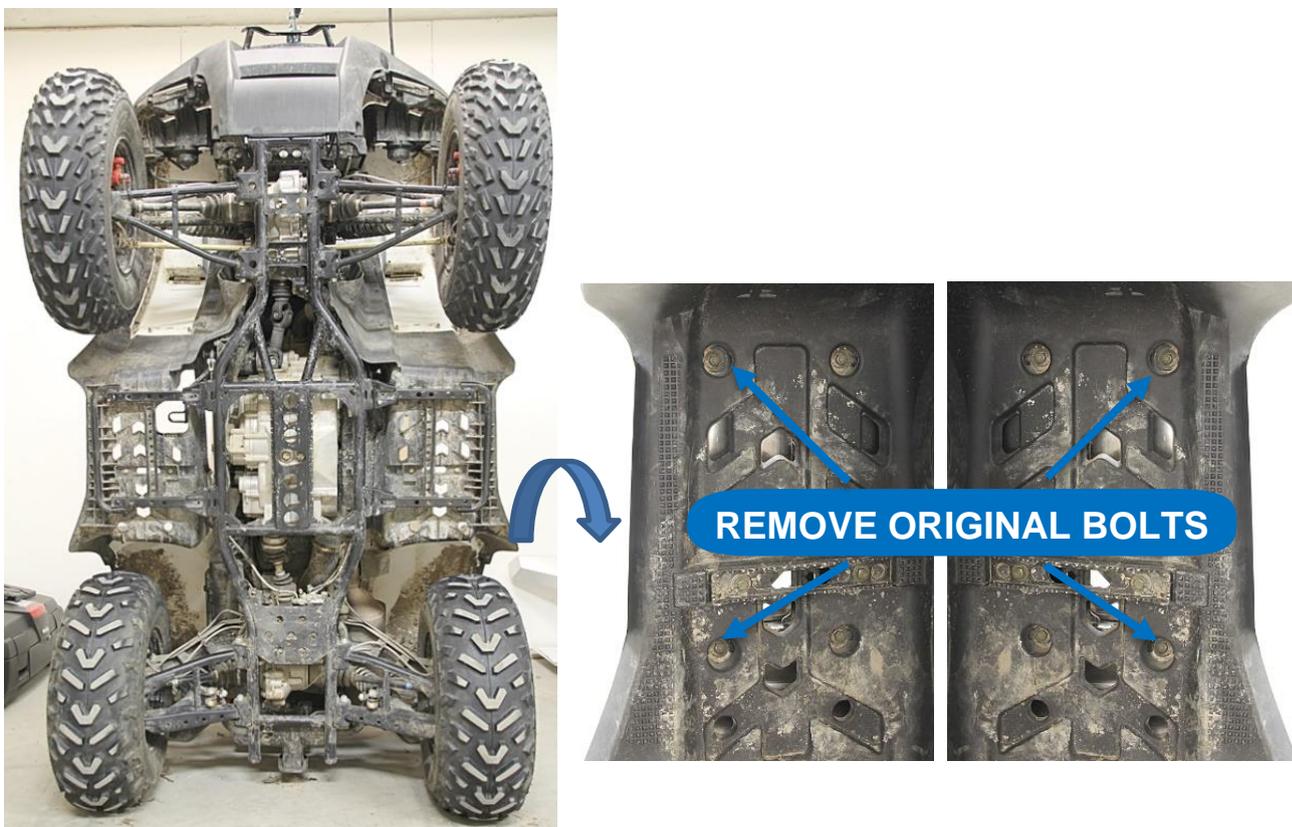


Step 2 Install middle part 02.22102 and install plates 02.5006 / 02.8312 to middle part.

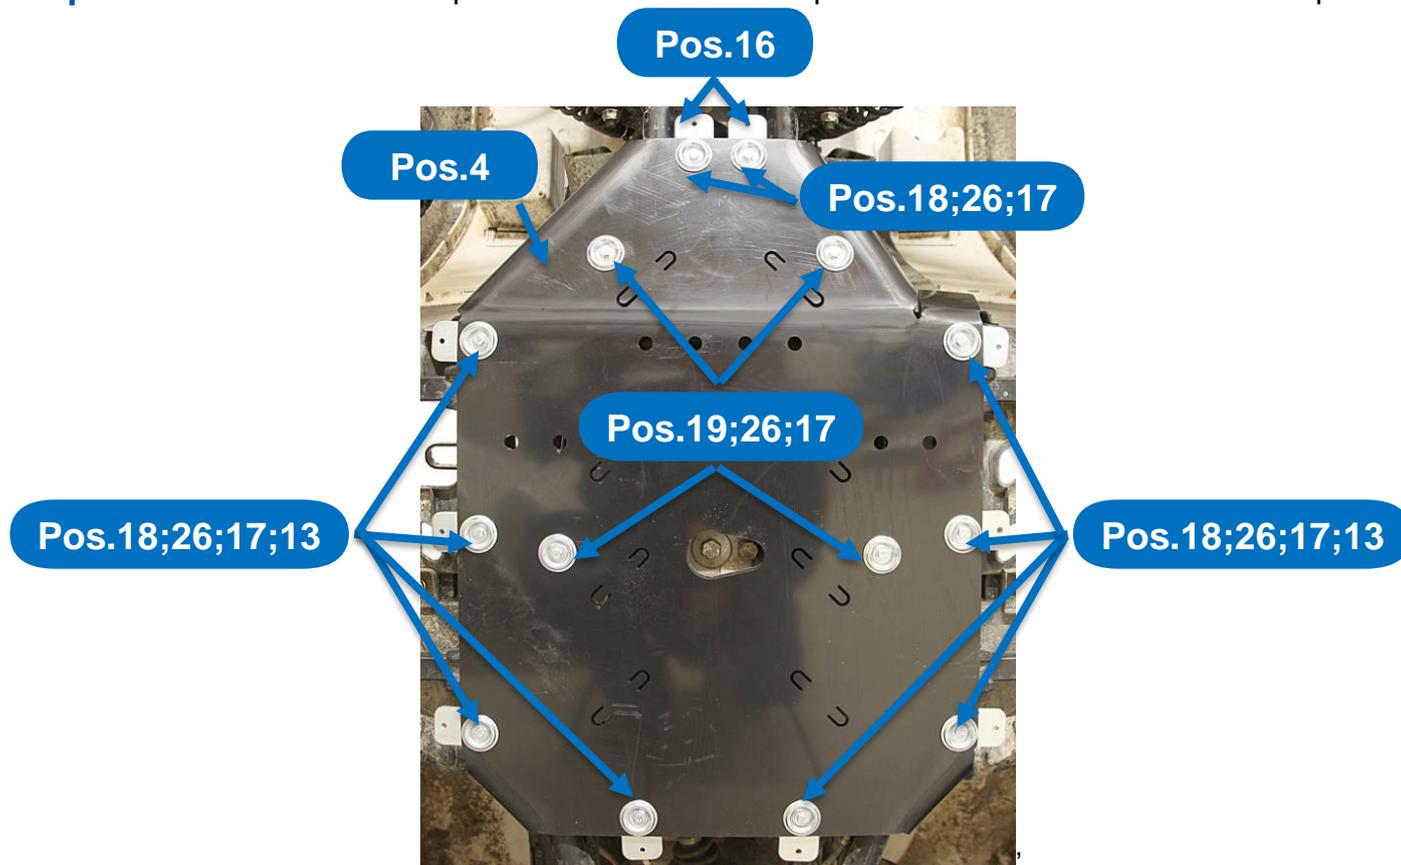


Step 3

Install the front protection 02.27401K.

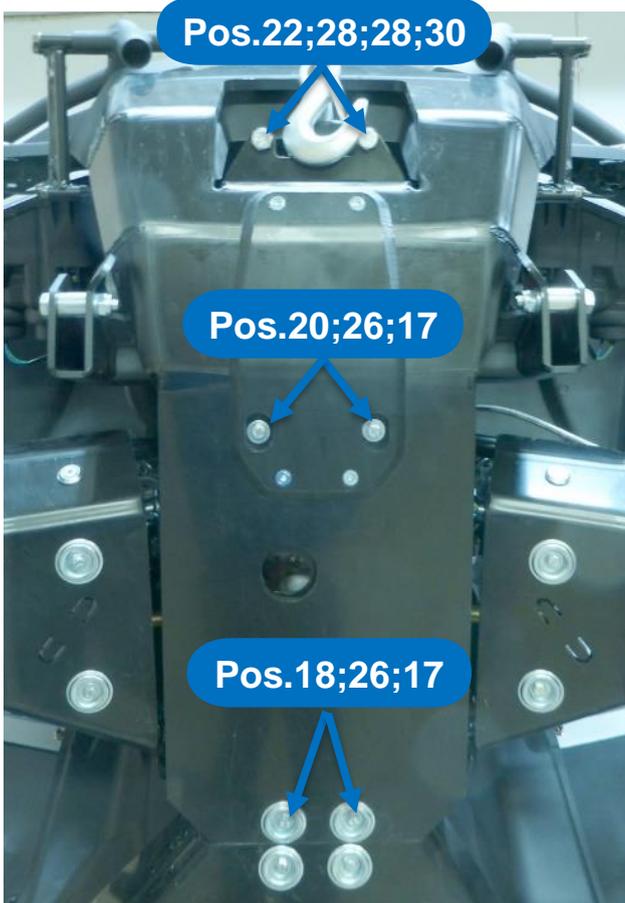



Step 4

Install rear part 02.22105.

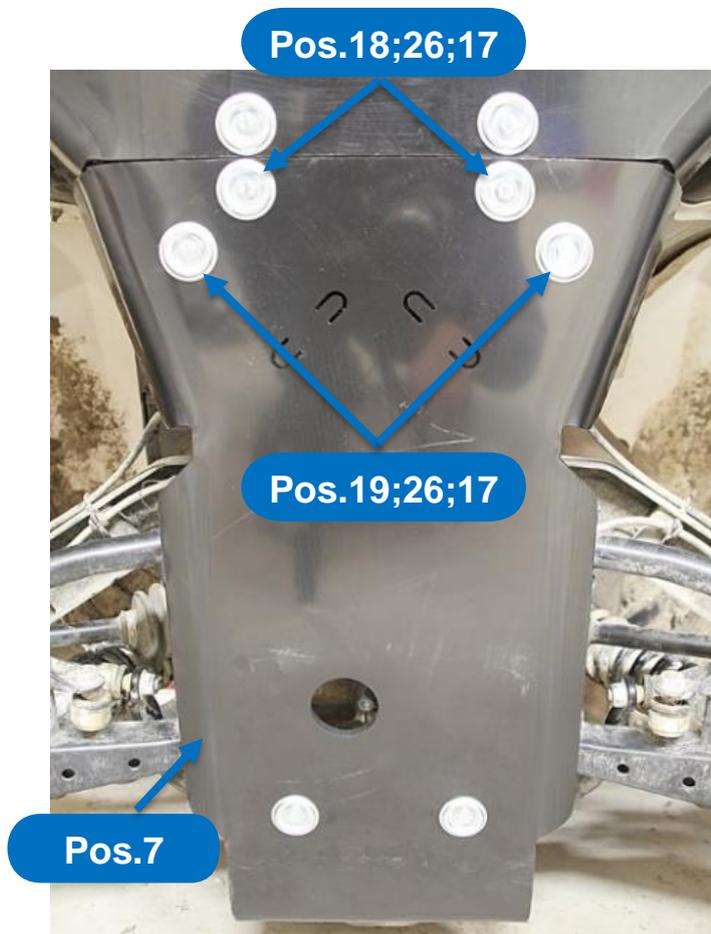


Step 5


Install side protections 02.22103 and 02.22104.

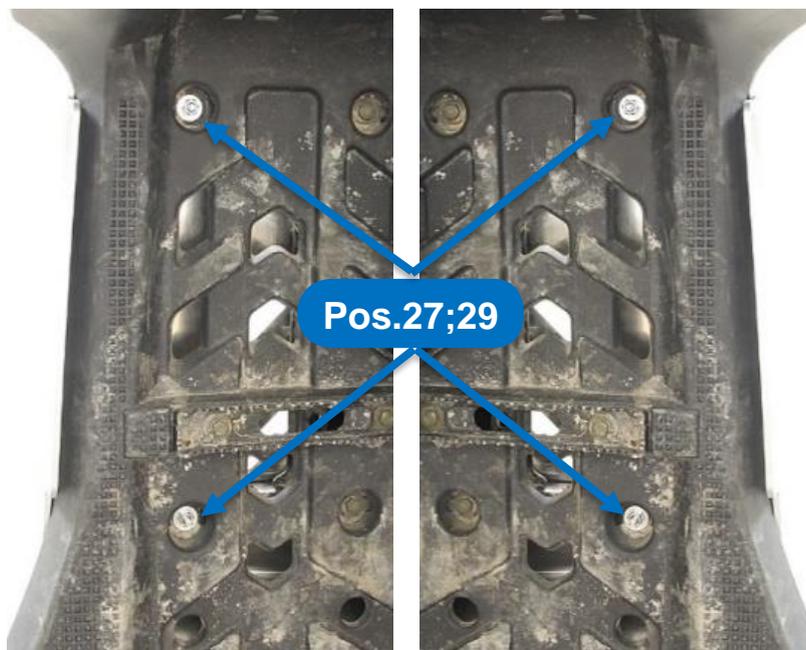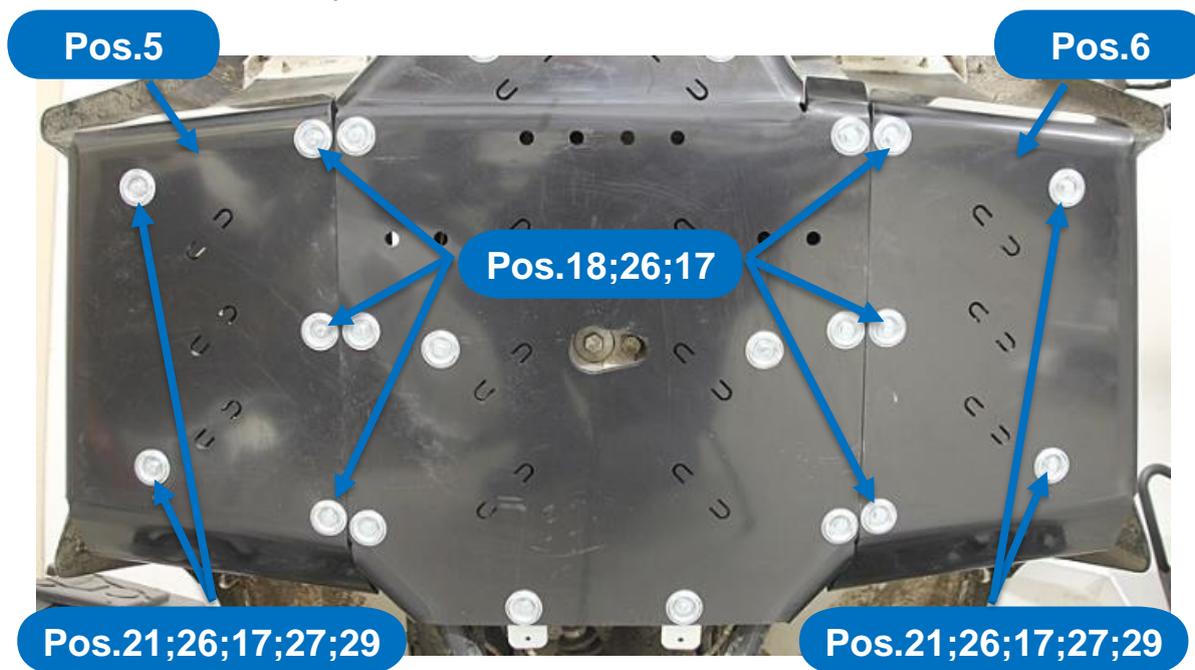

Step 6


Install front arm protections 02.27403 and 02.27404.

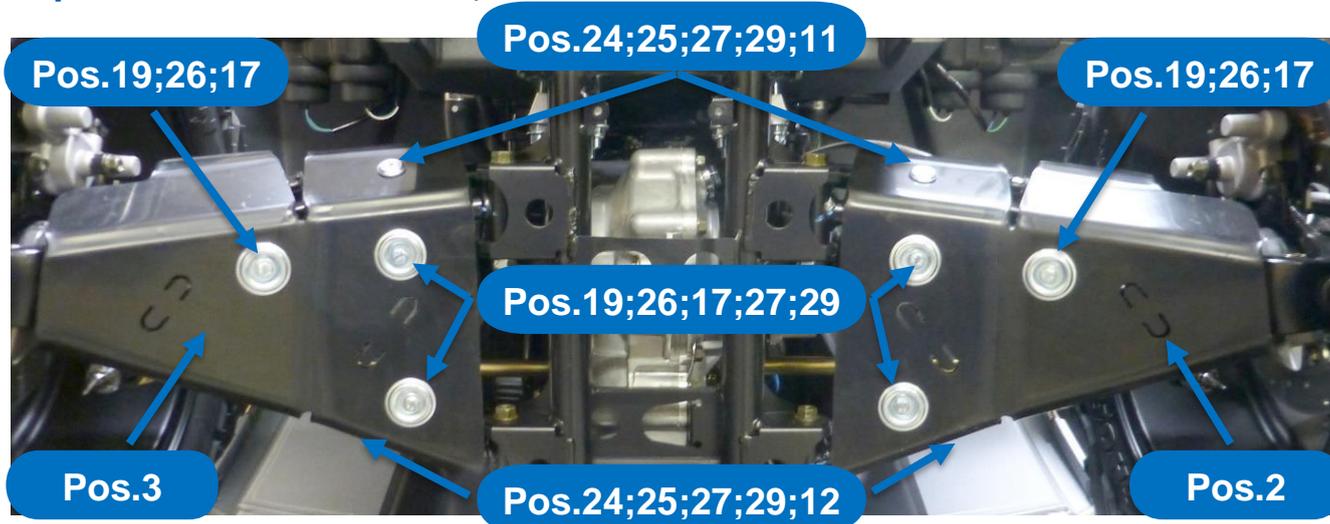

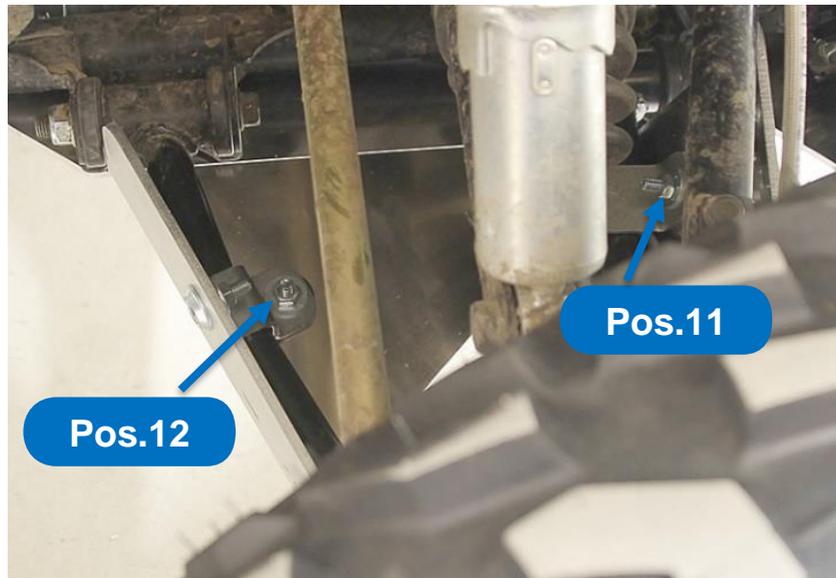

Step 7

Install rear arm protectors 02.22108, 02.22109 and distance plate 02.22010 between a-arm and a-arm protection.

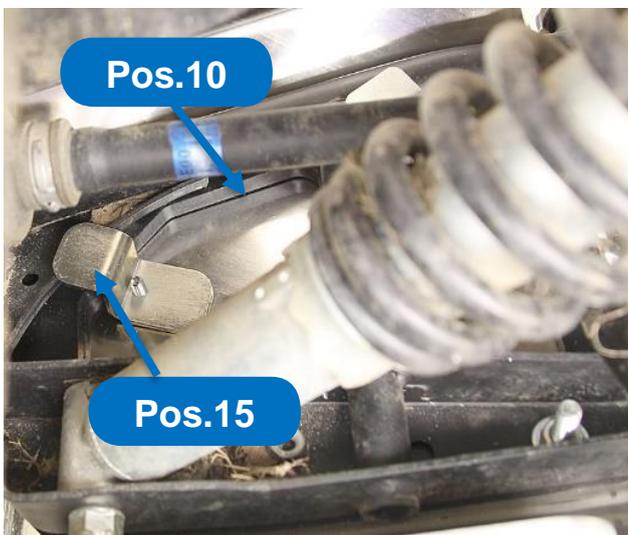

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

