

IRON BALTIC


PLASTIC SKID PLATE

POLARIS

Ranger 1000 (2021-...)

Code 02.27900

Version 09102023

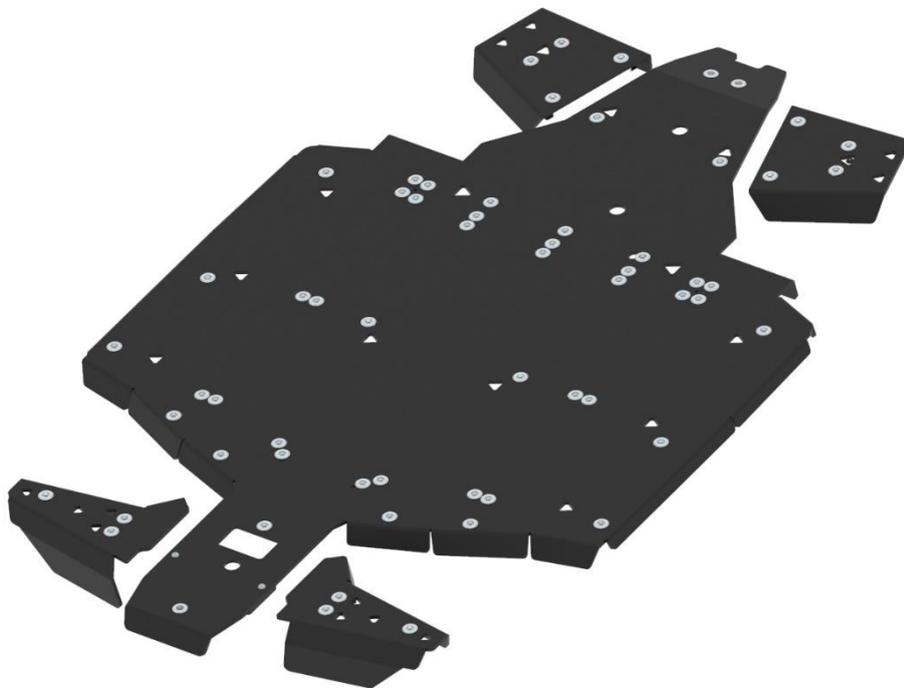

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/i9HX0P5o

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate front part	02.27901	1
2	Skid plate middle part	02.27902	1
3	Skid plate rear part	02.27903	1
4	Right sideprotection	02.27904	1
5	Left sideprotection	02.27905	1
6	Front left arm protection	02.27906	1
7	Front right arm protection	02.27907	1
8	Front part distance plate	02.27908K	1
9	Rear left arm protection	02.12408	1
10	Rear right arm protection	02.12409	1
11	Front arm protection bracket	02.15210	2
12	Front part holder	02.12909	1
13	Bracket	02.8210	2
14	Rear arm protection bracket	02.5710	4
15	Connection plate	02.5006	13
16	Installation plate	02.2305	4
17	Installation angle	03.1502	2
18	Dished washer	14.503	63
19	Conical washer Ø6	14.502	2
20	Bolt M6x16 DIN 933	OT.02.02.050	26
21	Bolt M6x20 DIN 933	OT.02.02.060	8
22	Bolt M6x25 DIN 933	OT.02.02.070	10
23	Bolt M6x30 DIN 933	OT.02.02.080	8
24	Bolt M6x35 DIN 933	OT.02.02.090	4
25	Bolt M6x55 DIN 933	OT.02.02.130	4
26	Bolt M8x16 DIN 933	OT.02.02.170	2
27	Bolt M8x30 DIN 933	OT.02.02.200	4
28	Bolt M8x40 DIN 933	OT.02.02.220	3
29	Bolt M6x25 DIN 7991	OT.02.04.040	2
30	Washer Ø6/15 SFS 3738	OT.04.03.020	58
31	Washer Ø6/18 DIN 9021	OT.04.02.020	9
32	Washer Ø8/20 SFS 3738	OT.04.03.030	4
33	Nut M6 Nyloc DIN 985	OT.03.02.030	9
34	Nut M8 Nyloc DIN 985	OT.03.02.040	2

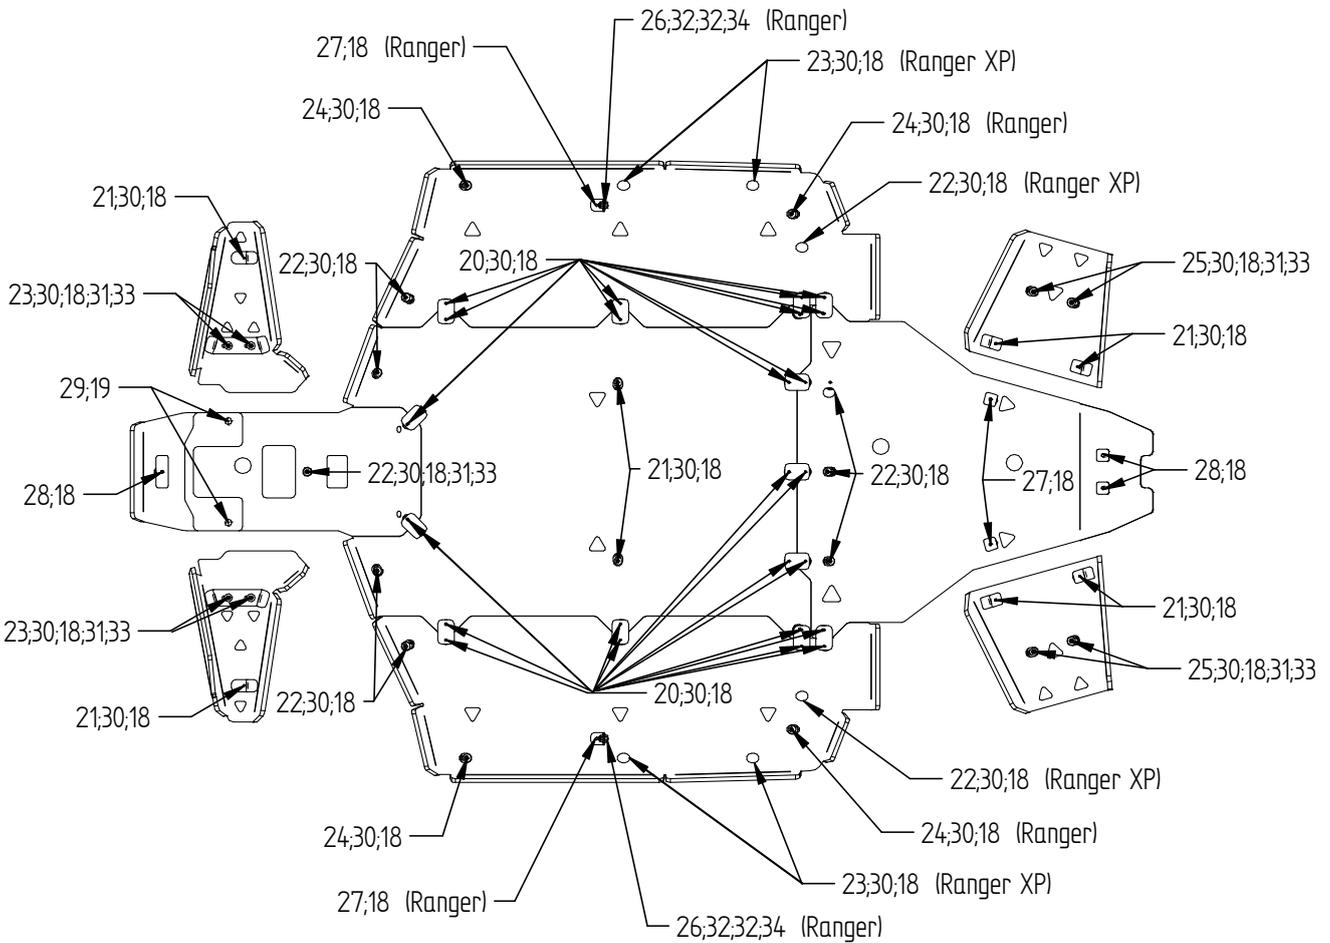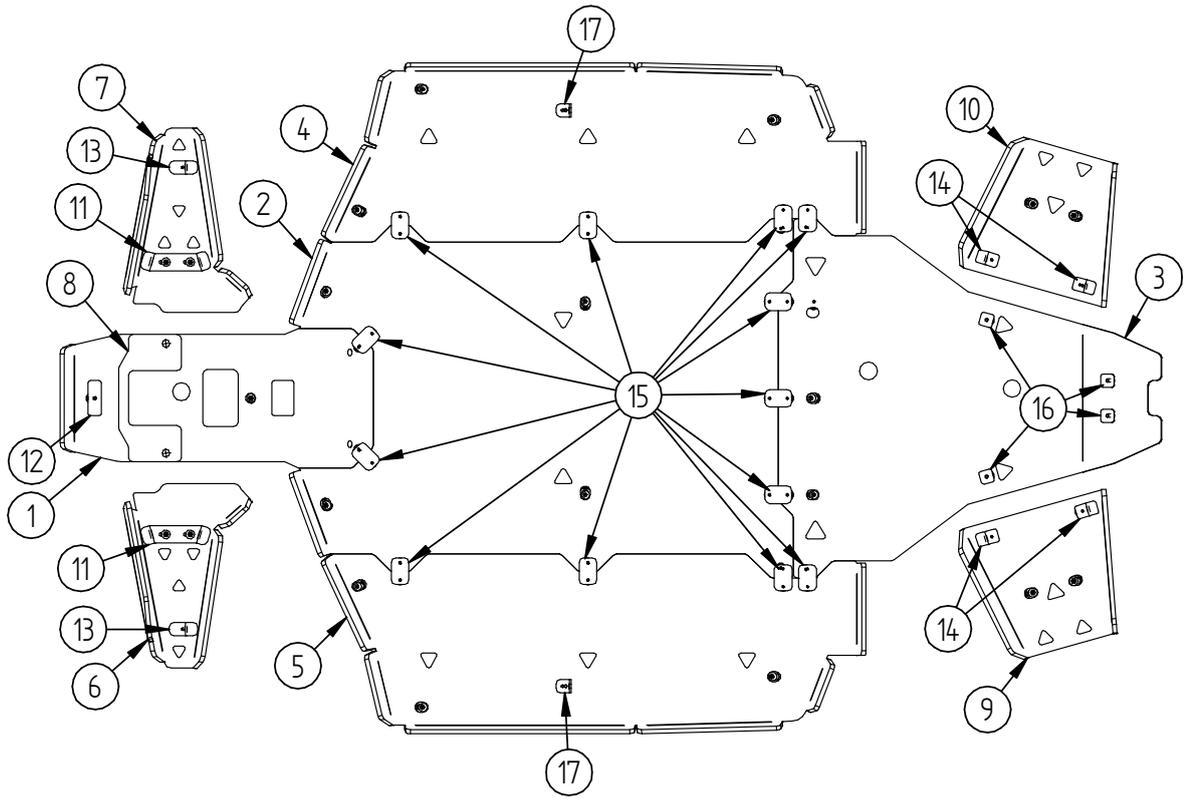


* Ranger in brackets means to be used only on Ranger model.

*Ranger XP in brackets means to be used only on Ranger XP model

FITTING INSTRUCTIONS

Step 1

Remove all standard plastic covers.
You can keep original front a-arm plastic protectors.

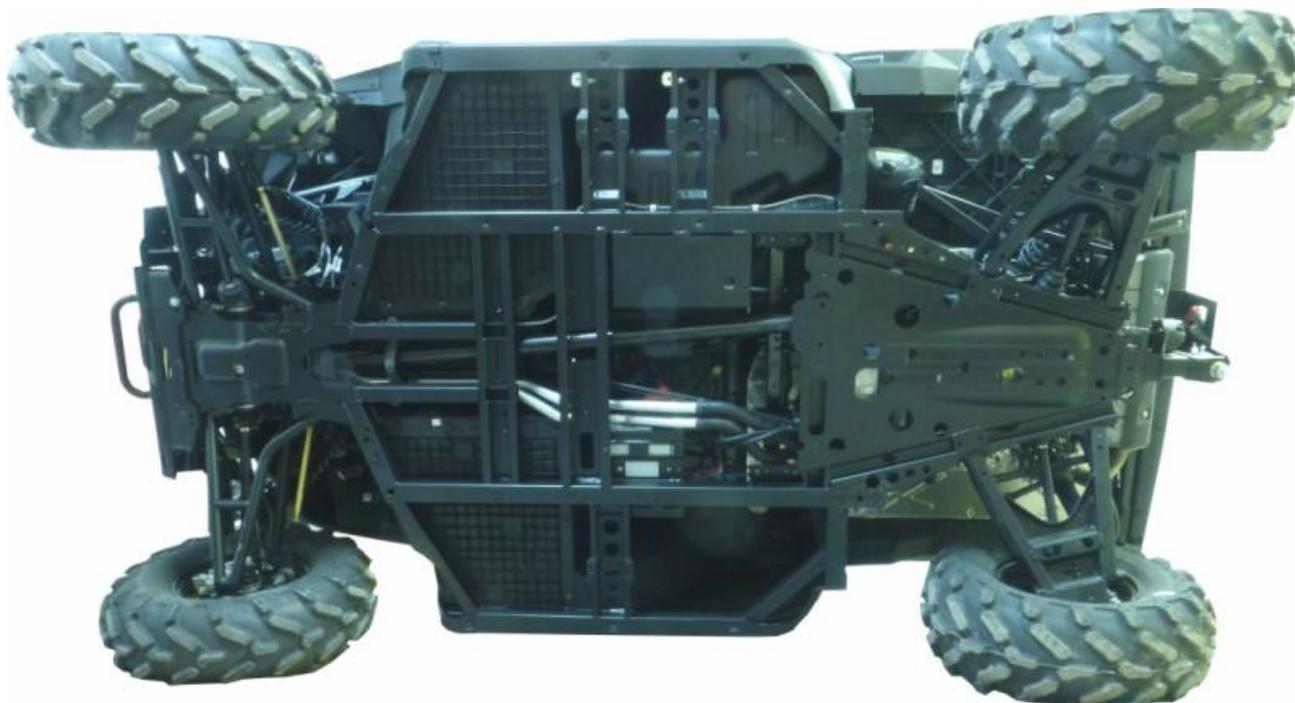


Step 2


Install front swingarm protections 02.27906 and 02.27907.
Original plastic can be left on!



NB!

Pos.13 bracket is meant to be deformed / bent a little during tightening of the bolts!

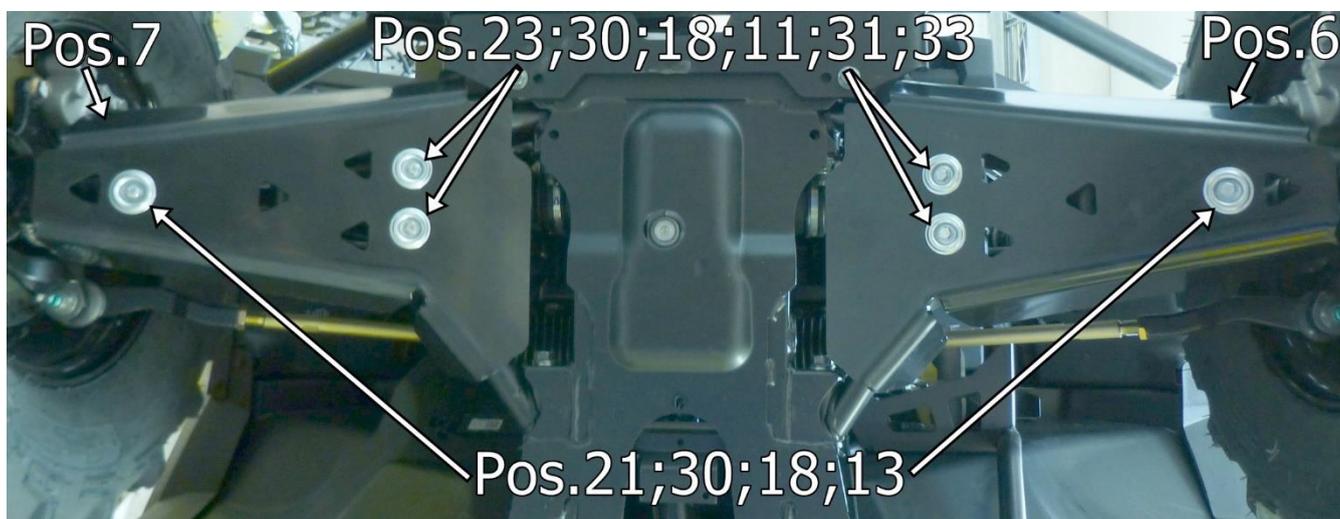

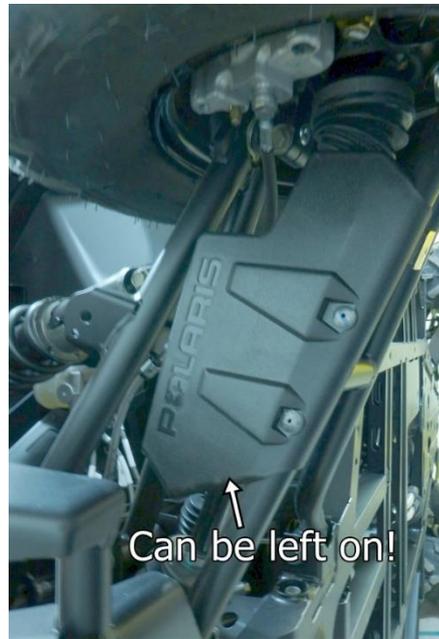



Step 3

Install rear swingarm protections 02.12408 and 02.12409.




NB!

Pos.25 bolts may stay/install at an angle, that does not interfere or change installation!

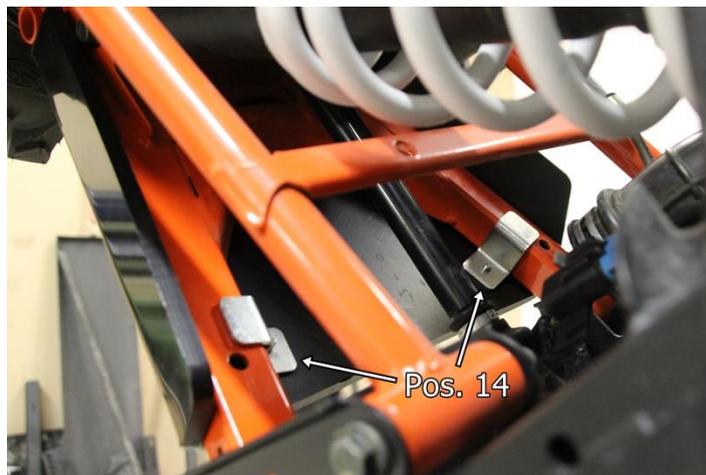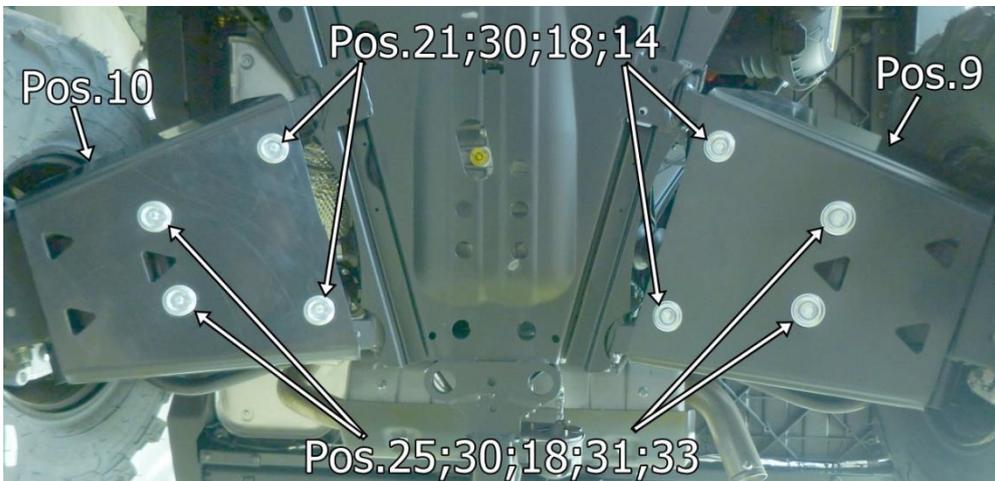


Step 4

Install middle protection 02.27902.

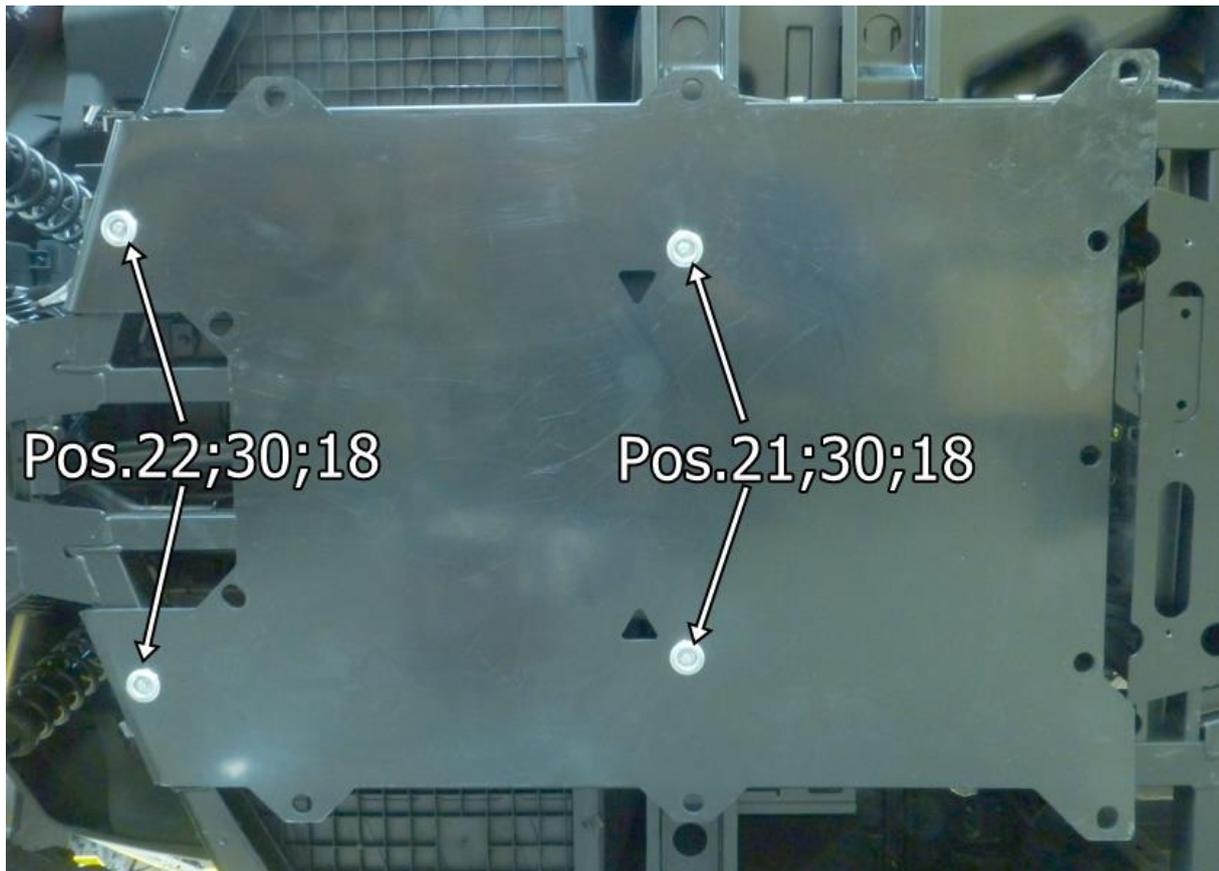



Step 5

Install plates 02.5006 to middle protection.

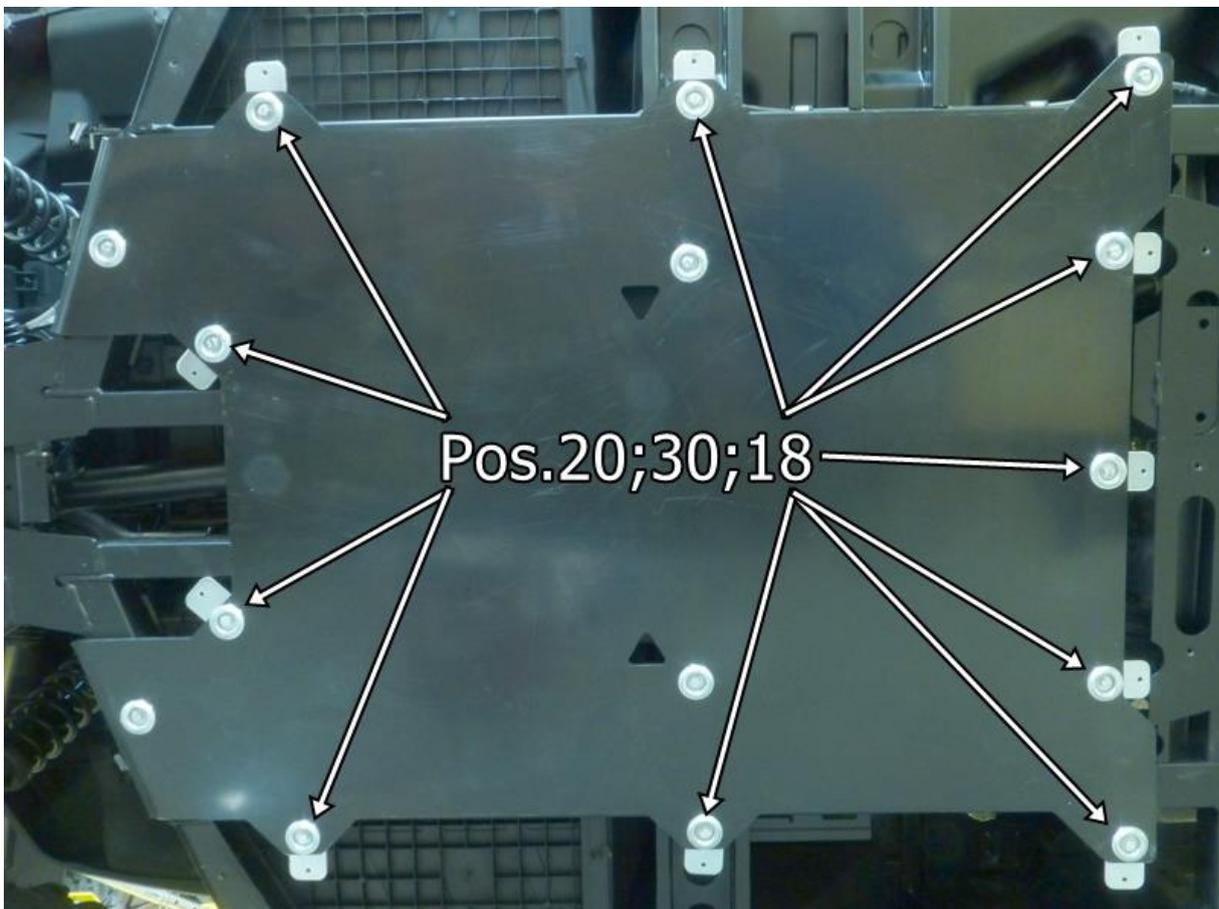



Step 6

Install rear protection 02.27903.

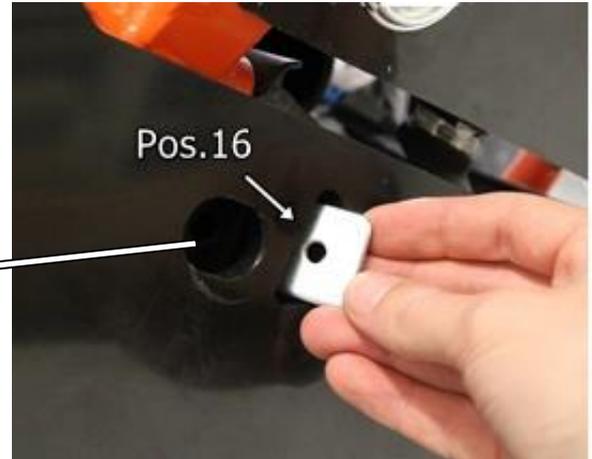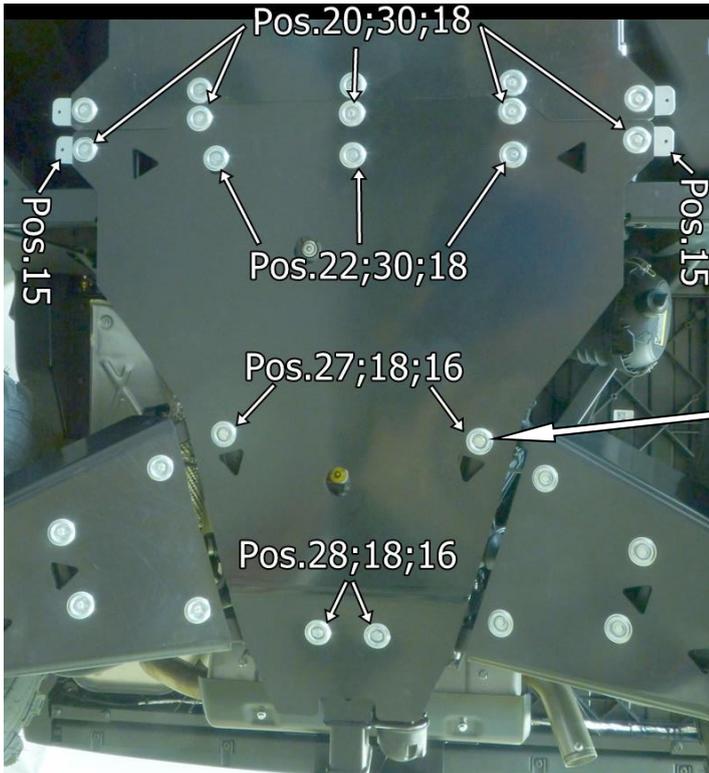

Step 7

Install distance plate 02.27908K to front protection 02.27901. Then install front protection to UTV.

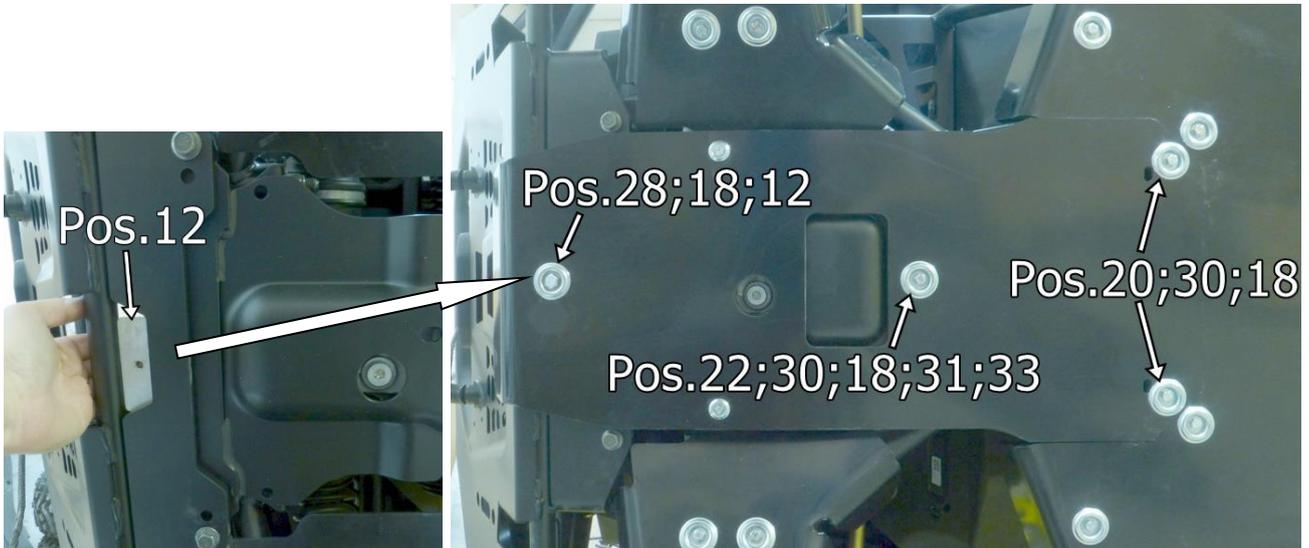
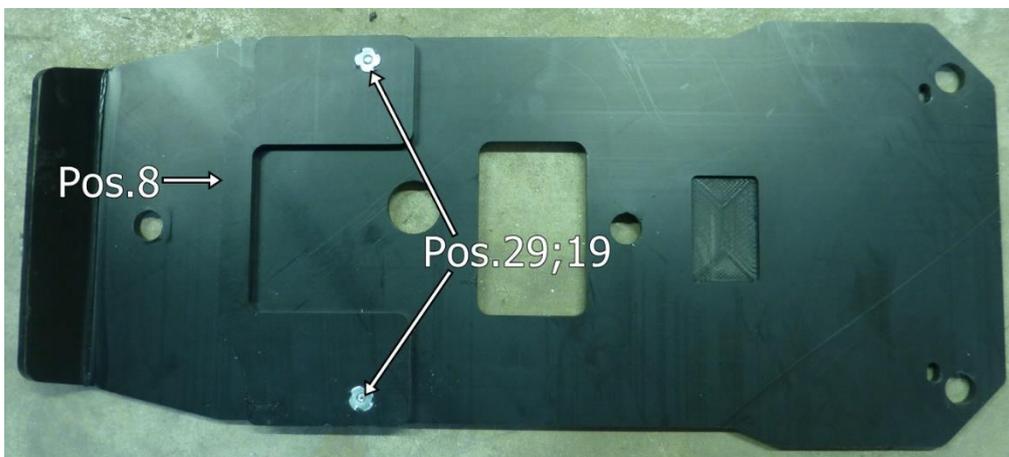


Polaris Ranger 1000

Ranger XP installation, see next page!

Step 8


Install sideprotection installation angles, if needed adjust the placement of angles. Install sideprotections 02.27904 and 02.27905.

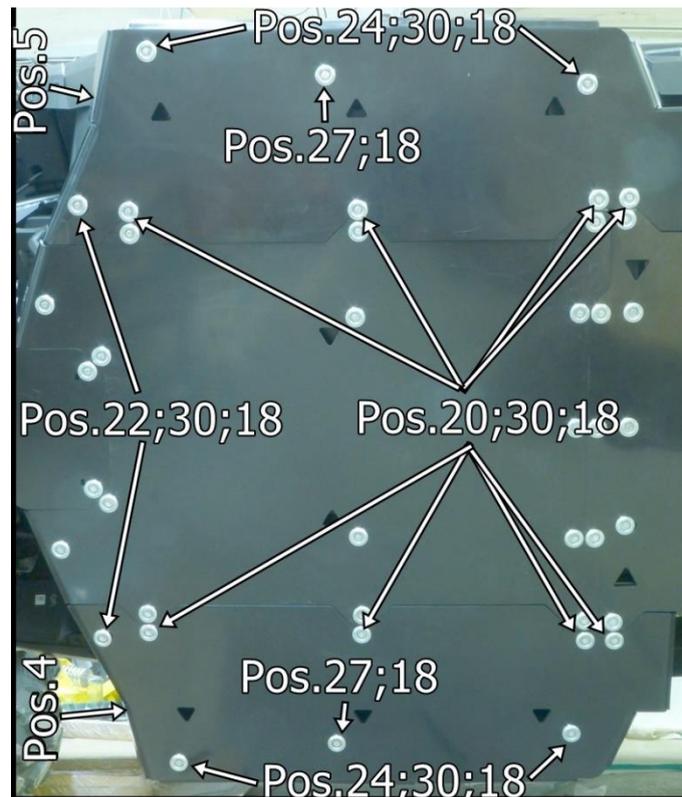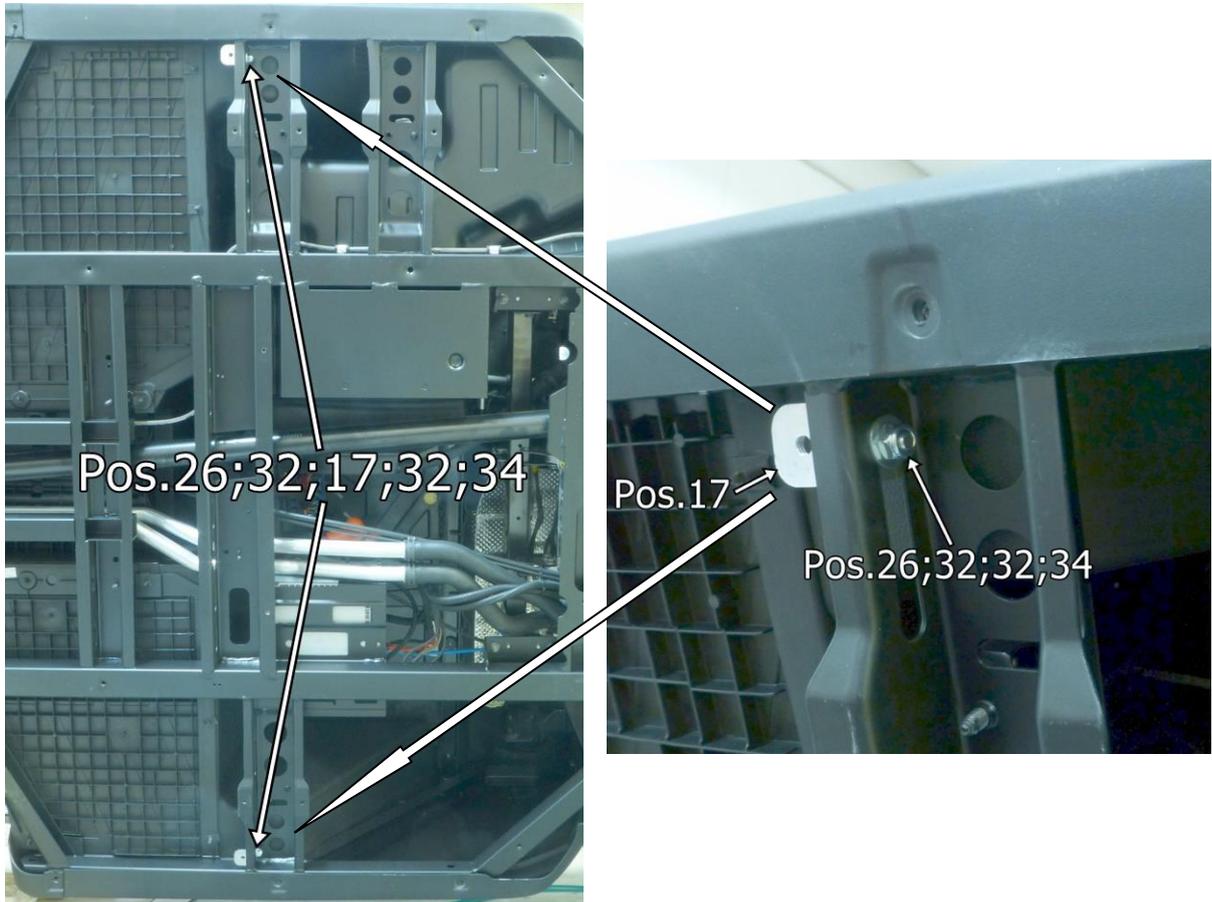

Polaris Ranger XP 1000

Step 9

Install sideprotections 02.27904 and 02.27905.

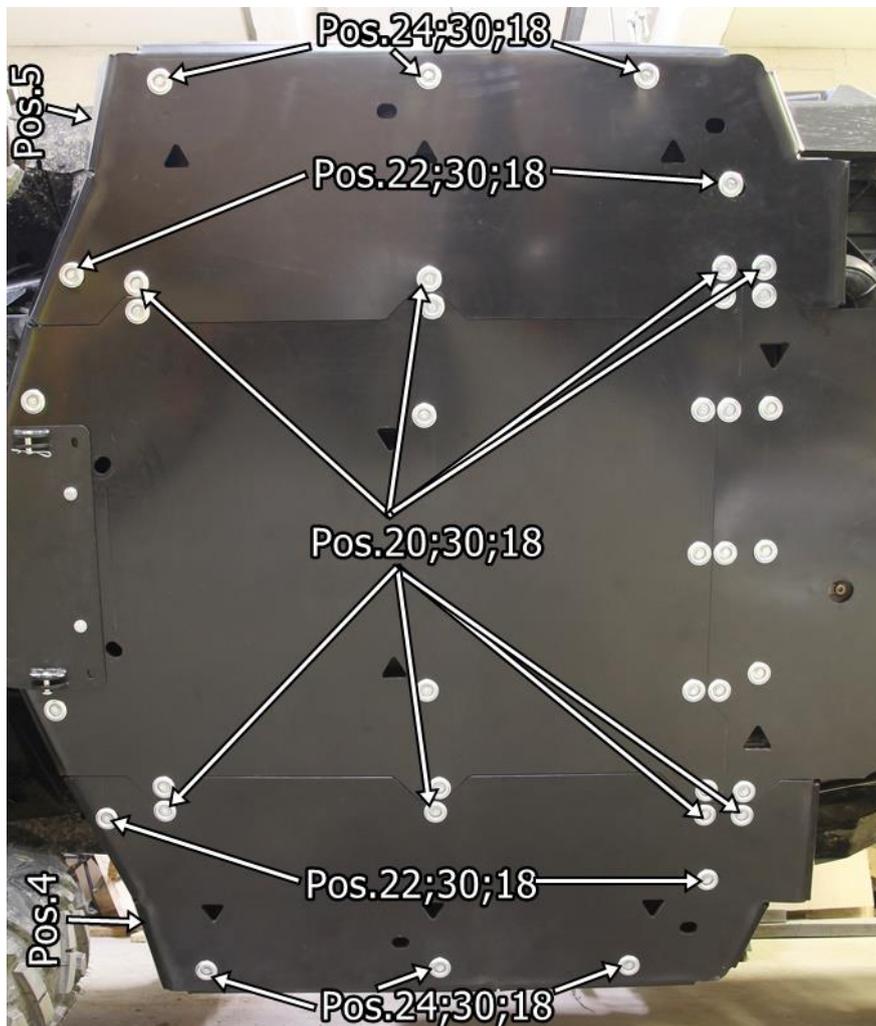

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

