




ALUMINIUM SKID PLATE

AODES

Pathcross 1000 L / 850 L / 650 L

Code 02.28100

Version 09102023


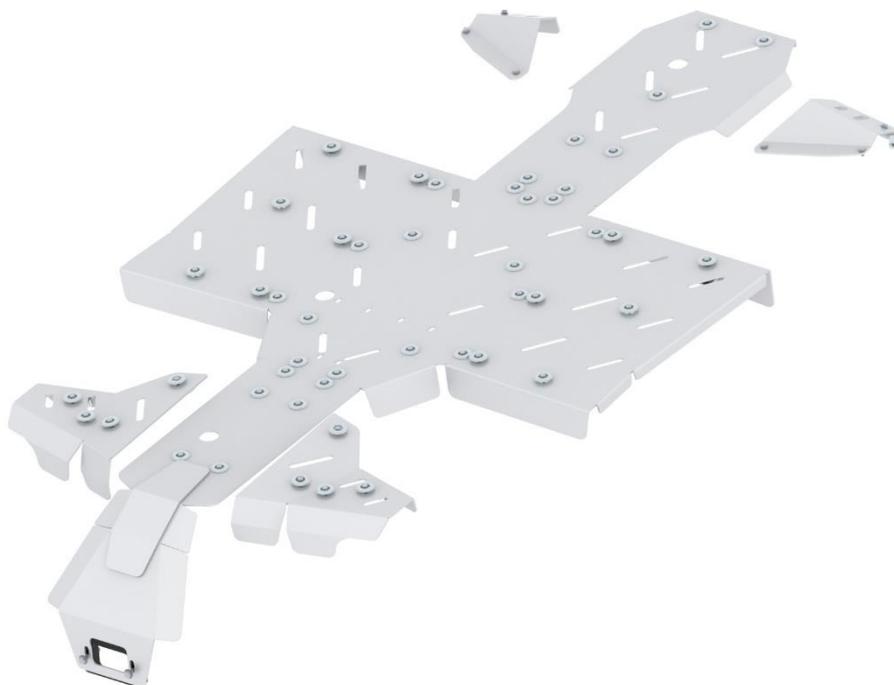


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.28101K	1
2	Middle protection	02.28102	1
3	Rear protection	02.28103K	1
4	Right sideprotection	02.28104K	1
5	Left sideprotection	02.28105K	1
6	Front right a-arm protection	02.28106K	1
7	Front left a-arm protection	02.28107K	1
8	Rear right a-arm protection	02.28108	1
9	Rear left a-arm protection	02.28109	1
10	Distance plate	02.28110	2
11	Fron a-arm bracket	02.1018	2
12	Front a-arm bracket 2	02.4606	2
13	Connecting plate	02.5006	10
14	Rear a-arm bracket	02.7508	2
15	Front a-arm bracket	02.8210	2
16	Sideprotection bracket	02.16005	2
17	Dished washer	14.503	48
18	Bolt M6x12 DIN933	OT.02.02.030	2
19	Bolt M6x14 DIN933	OT.02.02.040	30
20	Bolt M6x20 DIN933	OT.02.02.060	11
21	Bolt M6x25 DIN933	OT.02.02.070	11
22	Bolt M6x40 DIN933	OT.02.02.100	6
23	Bolt M8x50 DIN933	OT.02.02.240	2
24	Washer Ø6/15 SFS3738	OT.04.03.020	58
25	Washer Ø6/18 DIN9021	OT.04.02.020	12
26	Washer Ø8/20 SFS3738	OT.04.03.030	4
27	Nyloc nut M6 DIN985	OT.03.02.030	10
28	Nyloc nut M8 DIN985	OT.03.02.040	2

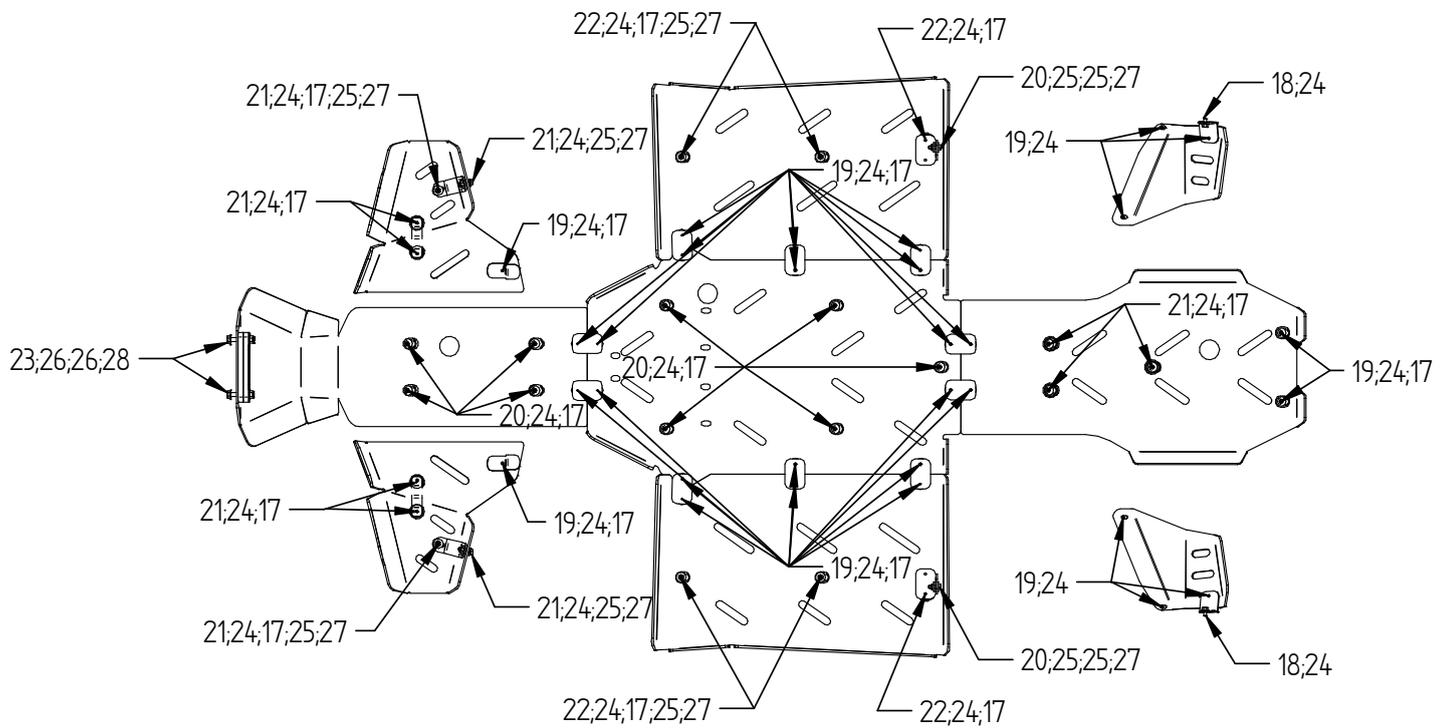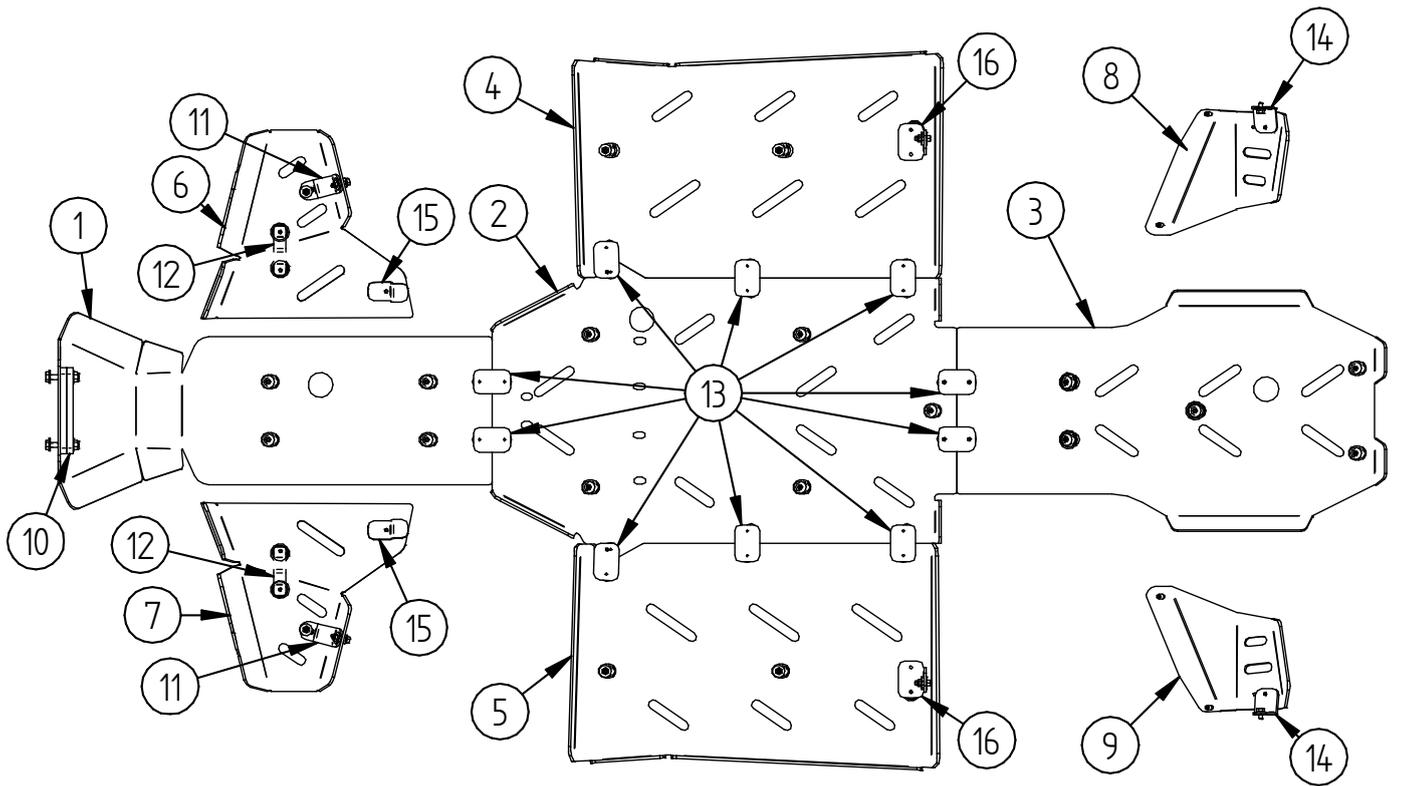

FITTING INSTRUCTIONS


Step 1

Remove standard skid plate and control arm protections.




Step 2

Install front control arm protections 02.28106K (Pos. 6) and 02.28107K (Pos. 7).

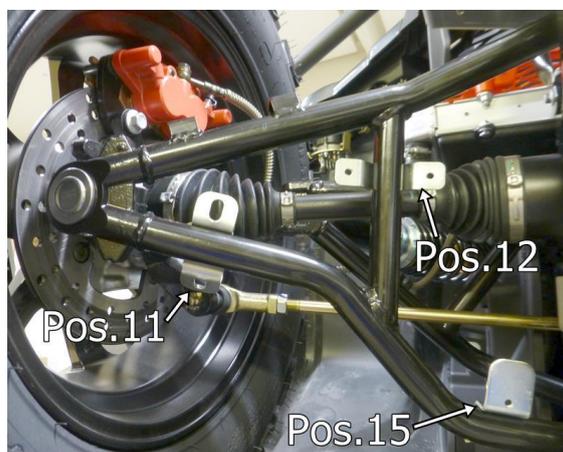


Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).
First install bracket 02.7508.

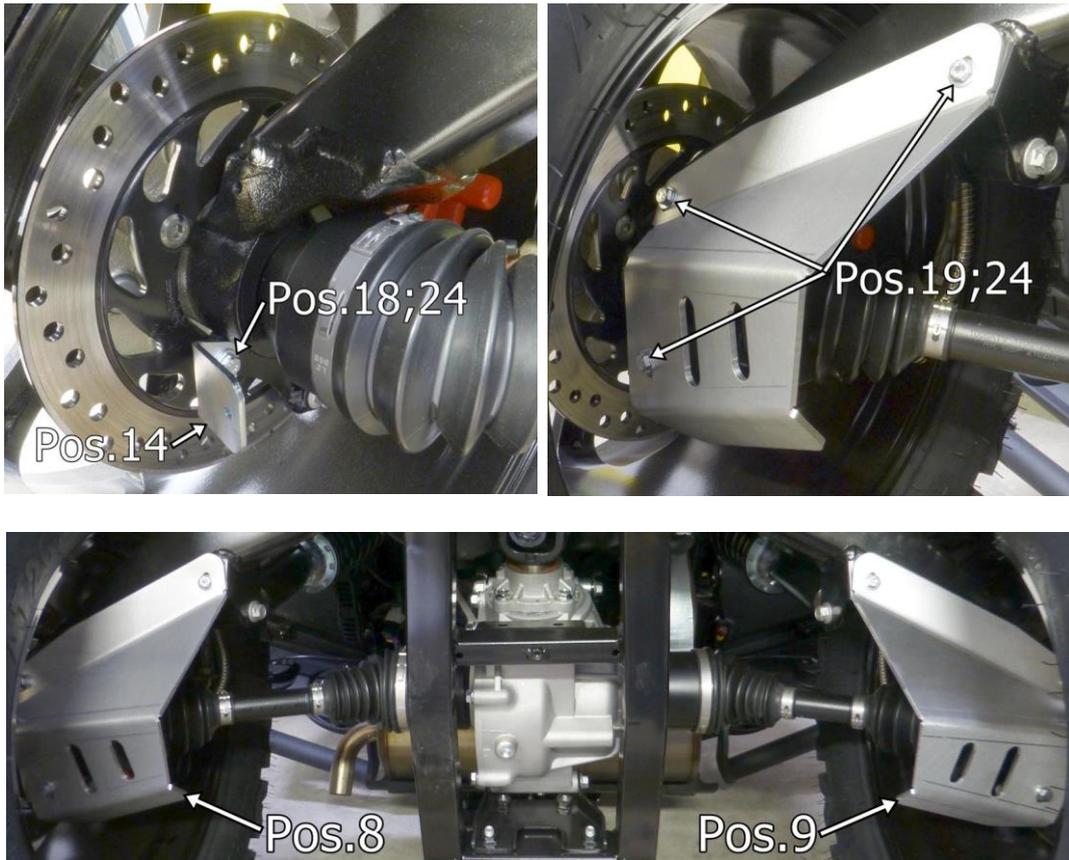


Step 4

Install rear protection 02.28103K (Pos. 3) and
connection plates 02.5006 (Pos.13).

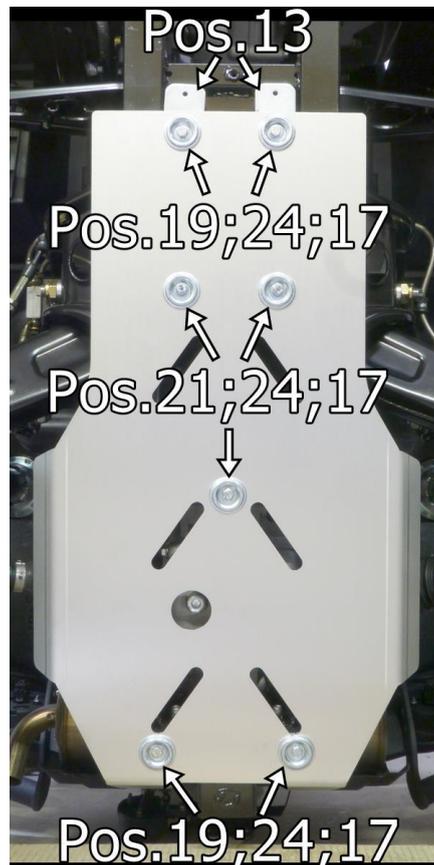



Step 5


Install middle protection 02.28102 (Pos. 2) and connecting plates 02.5006 (Pos.13).

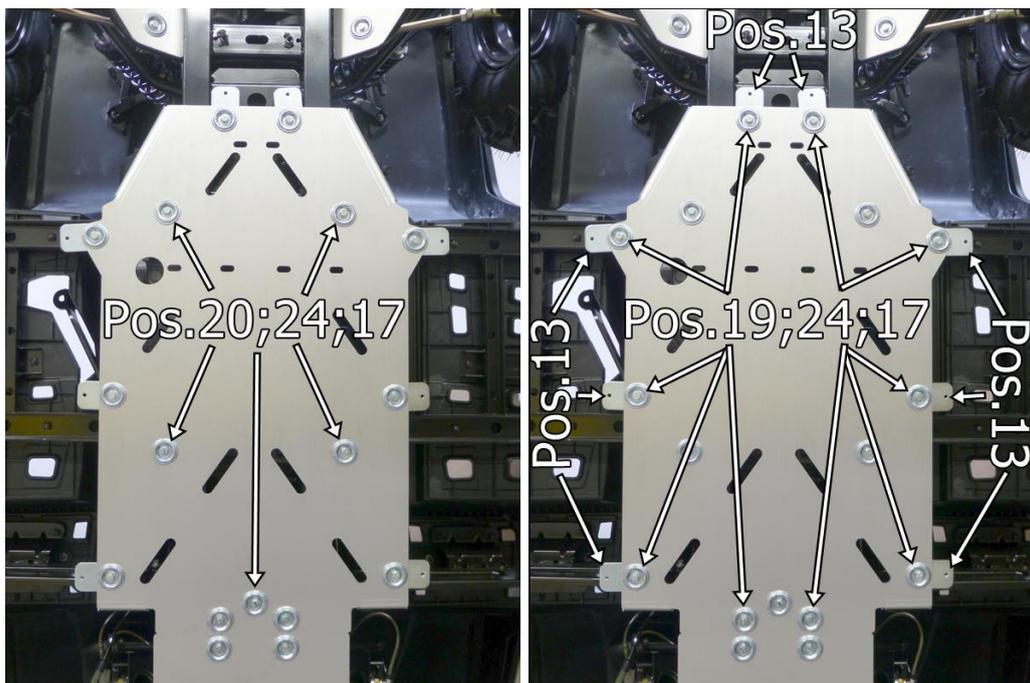

Step 6


Install side protections 02.28104K (Pos. 4) and 02.28105K (Pos. 5). First remove bolts indicated with arrows and install bracket 02.16005 (Pos. 16).

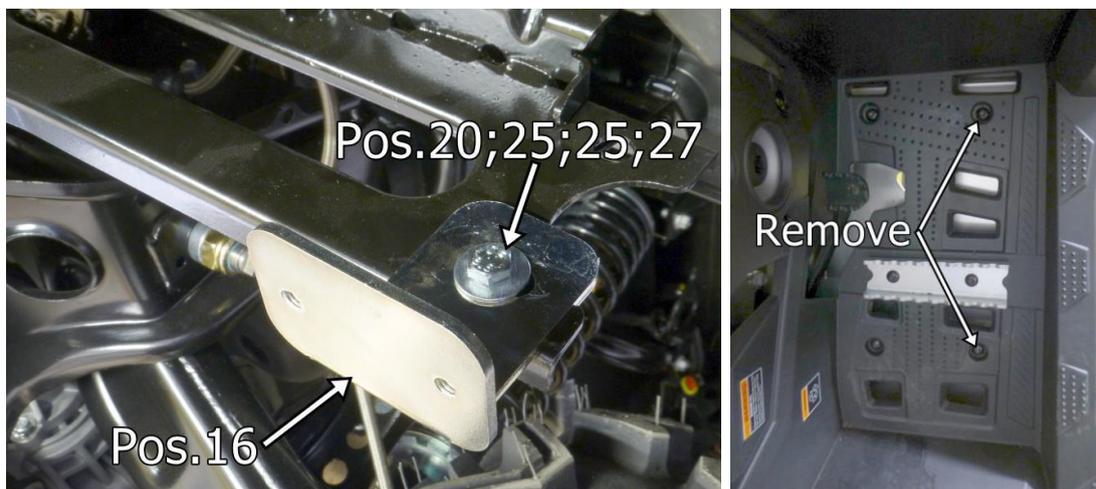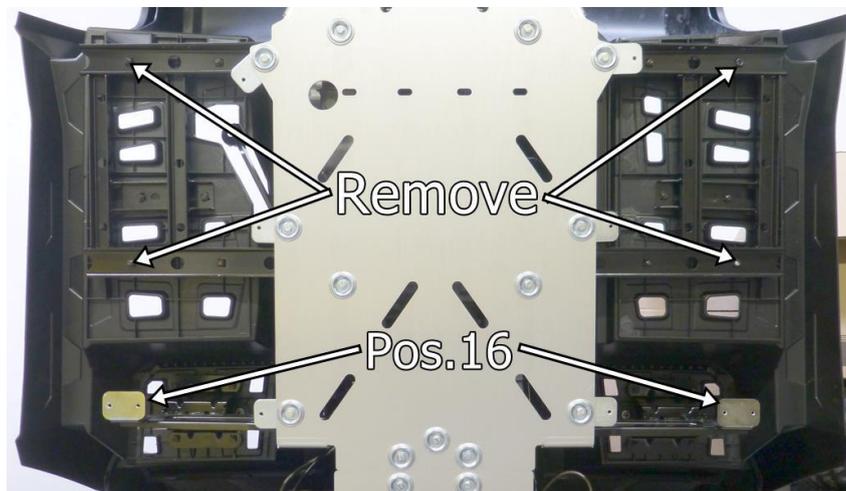

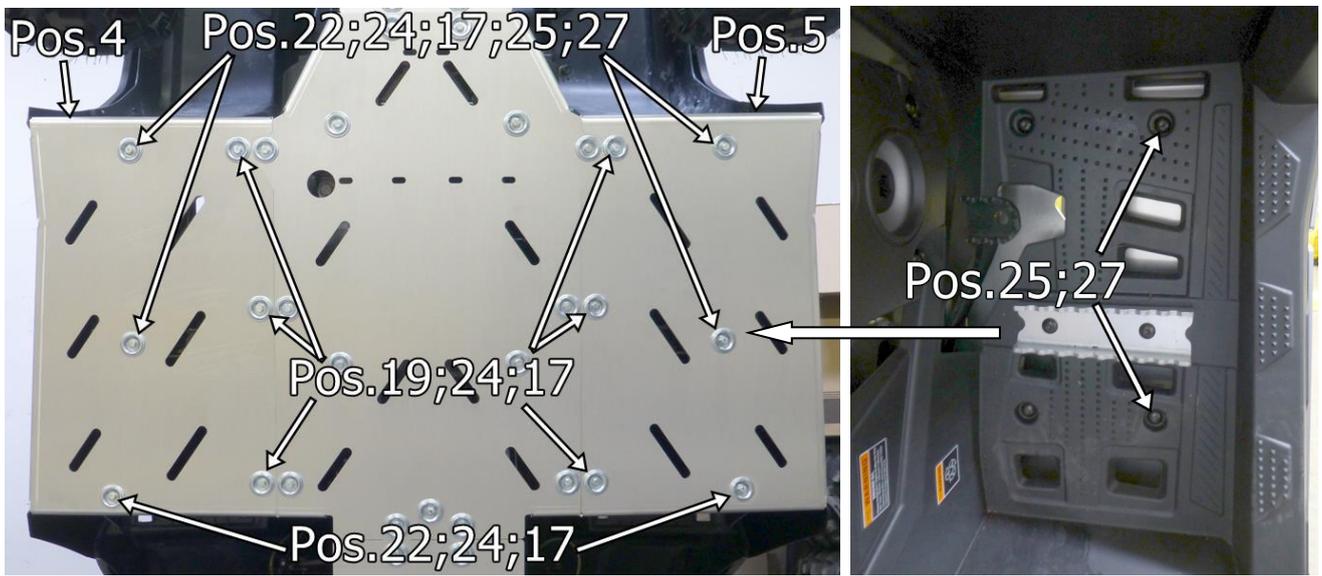

Step 7

Install front protection 02.28101K (Pos. 1) and distance plates 02.28110 (Pos.10).

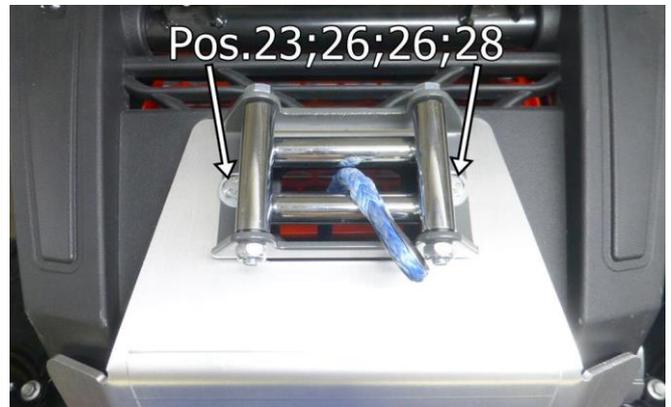

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

