




## ALUMINIUM SKID PLATE

# AODES

Pathcross 1000 L / 850 L / 650 L

Code 02.28100

Version 29112024

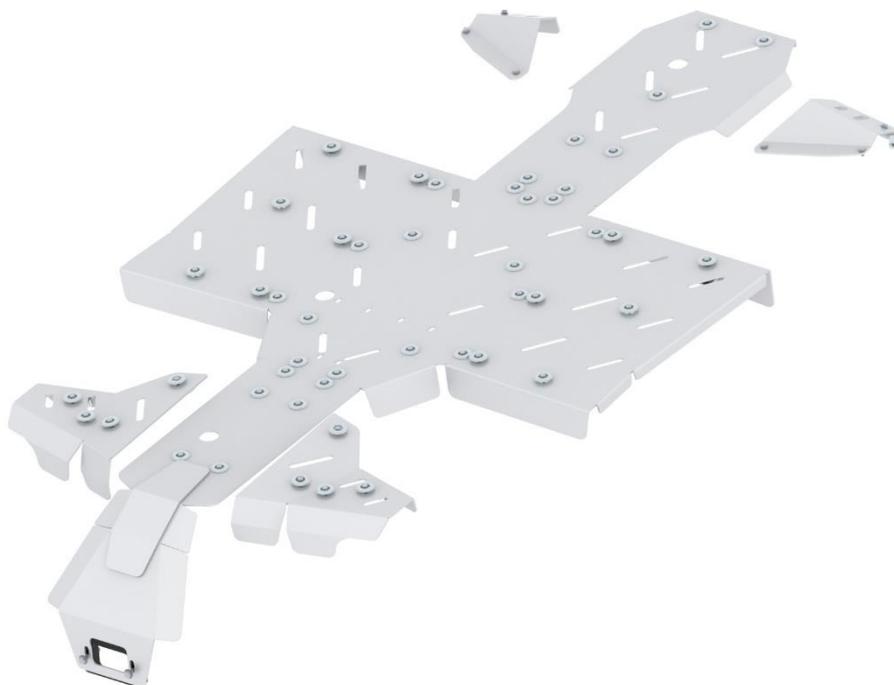

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.28101K	1
2	Middle protection	02.28102	1
3	Rear protection	02.28103K	1
4	Right sideprotection	02.28104K	1
5	Left sideprotection	02.28105K	1
6	Front right a-arm protection	02.28106K	1
7	Front left a-arm protection	02.28107K	1
8	Rear right a-arm protection	02.28108	1
9	Rear left a-arm protection	02.28109	1
10	Distance plate	02.28110	2
11	Front protection 2	02.28112K	1
12	Front protection 2 rear part	02.28114	1
13	Fron a-arm bracket	02.1018	2
14	Front a-arm bracket 2	02.4606	2
15	Connecting plate	02.5006	10
16	Rear a-arm bracket	02.7508	2
17	Front a-arm bracket	02.8210	2
18	Sideprotection bracket	02.16005	2
19	Conical washer 6	14.502	4
20	Dished washer	14.503	48
21	Bolt M6x12 DIN933	OT.02.02.030	2
22	Bolt M6x14 DIN933	OT.02.02.040	30
23	Bolt M6x20 DIN933	OT.02.02.060	11
24	Bolt M6x25 DIN933	OT.02.02.070	11
25	Bolt M6x40 DIN933	OT.02.02.100	6
26	Bolt M8x45 DIN933	OT.02.02.230	2
27	Bolt M6x20 DIN7991	OT.02.04.030	4
28	Washer Ø6/15 SFS3738	OT.04.03.020	62
29	Washer Ø6/18 DIN9021	OT.04.02.020	12
30	Washer Ø8/20 SFS3738	OT.04.03.030	4
31	Nyloc nut M6 DIN985	OT.03.02.030	14
32	Nyloc nut M8 DIN985	OT.03.02.040	2

## TOOLS REQUIRED FOR INSTALLATION:





- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Allen wrench 4mm
- Allen wrench 6mm
- Torx 30



## NB!



**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

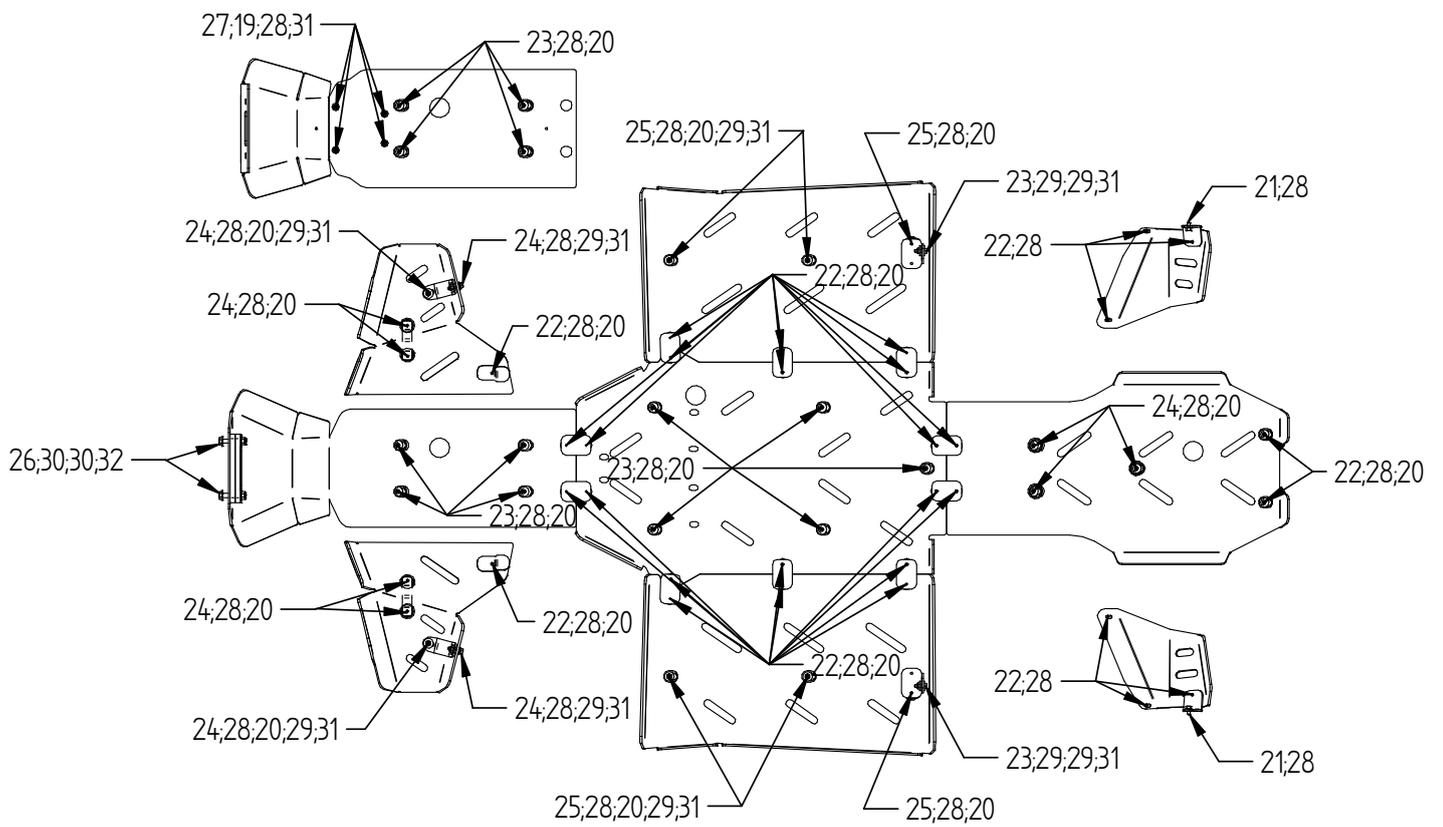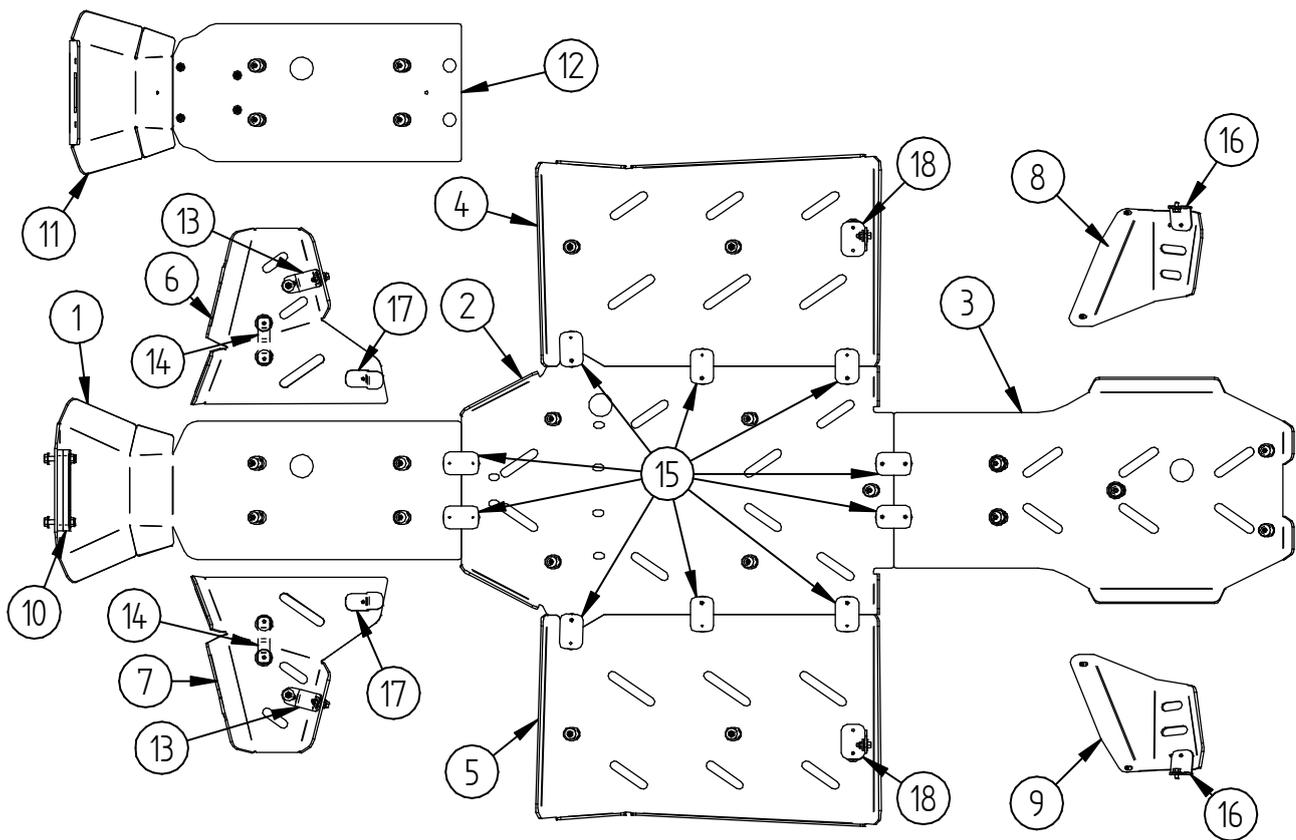

# FITTING INSTRUCTIONS


## Step 1

Remove standard skid plate and control arm protections. If your ATV is equipped with lower-mounted front bumper (see picture), remove it.

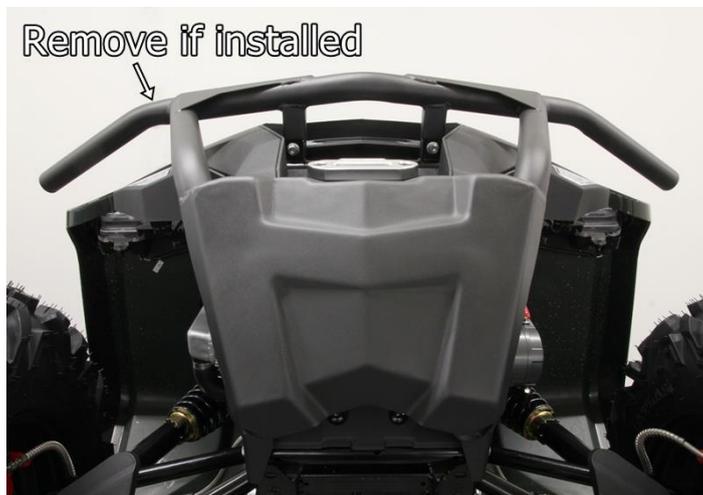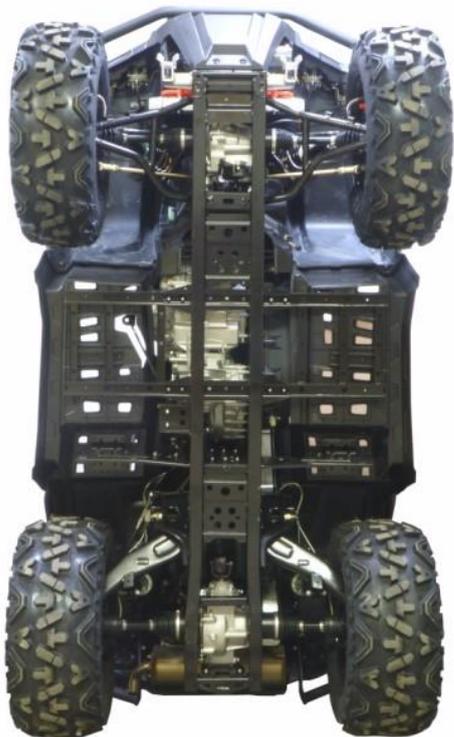


## Step 2

Install front control arm protections 02.28106K (Pos. 6) and 02.28107K (Pos. 7).

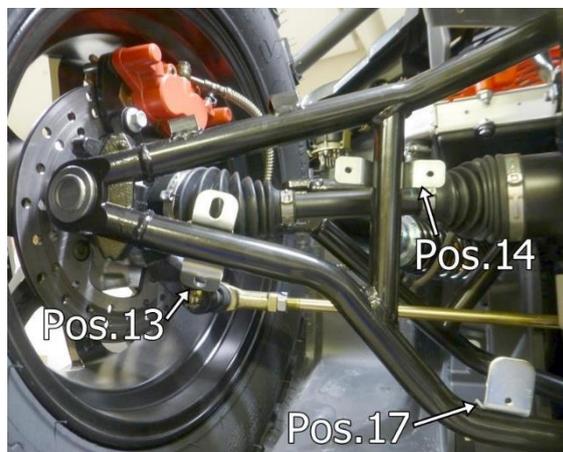


### Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).  
First install bracket 02.7508 (Pos. 16).

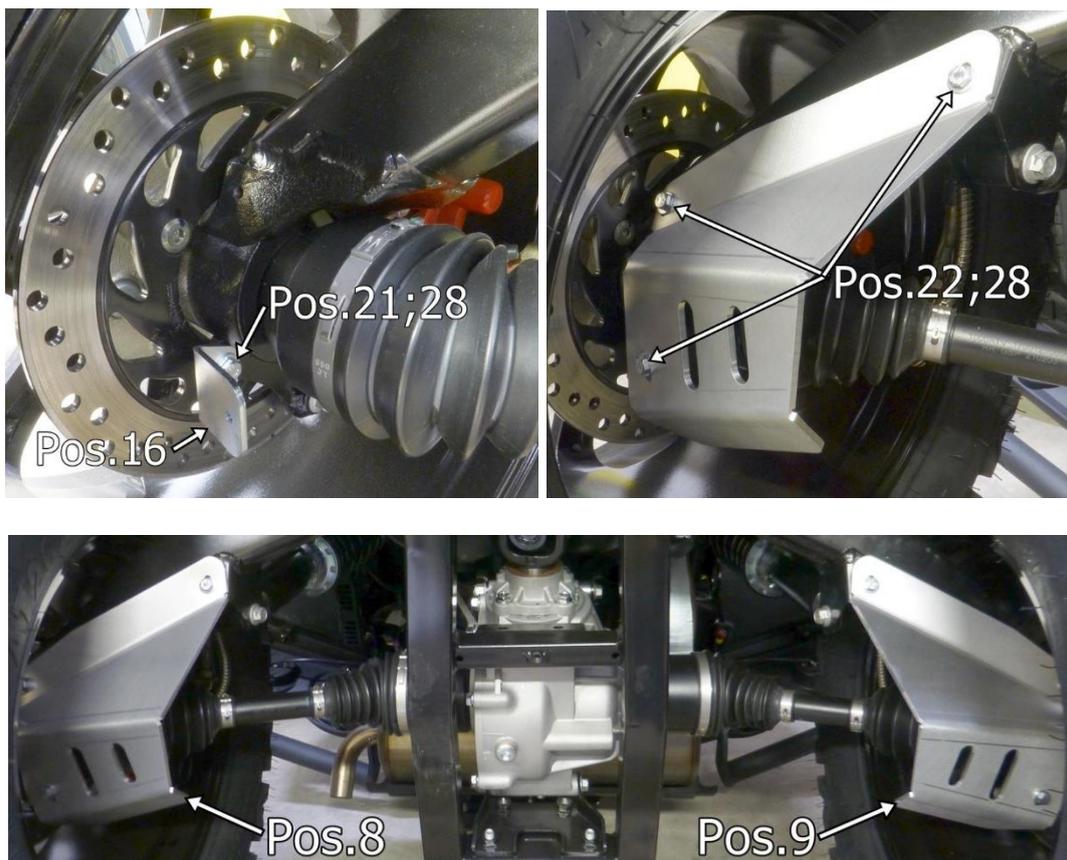


### Step 4

Install rear protection 02.28103K (Pos. 3) and  
connection plates 02.5006 (Pos.15).

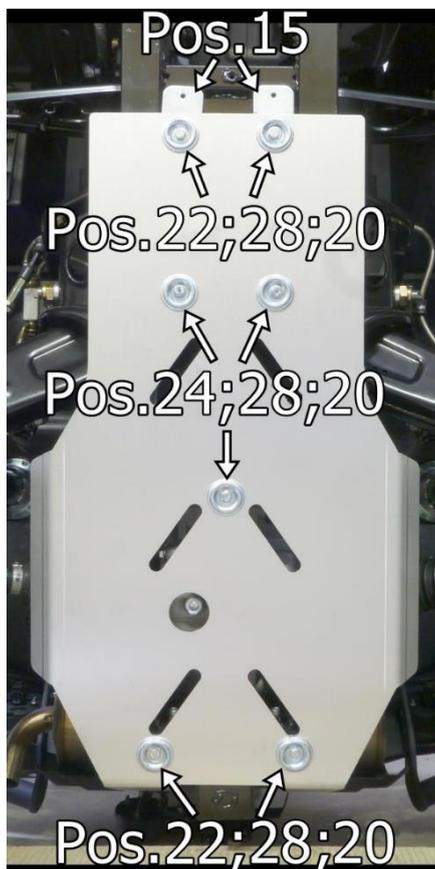



## Step 5


Install middle protection 02.28102 (Pos. 2) and connecting plates 02.5006 (Pos. 15).

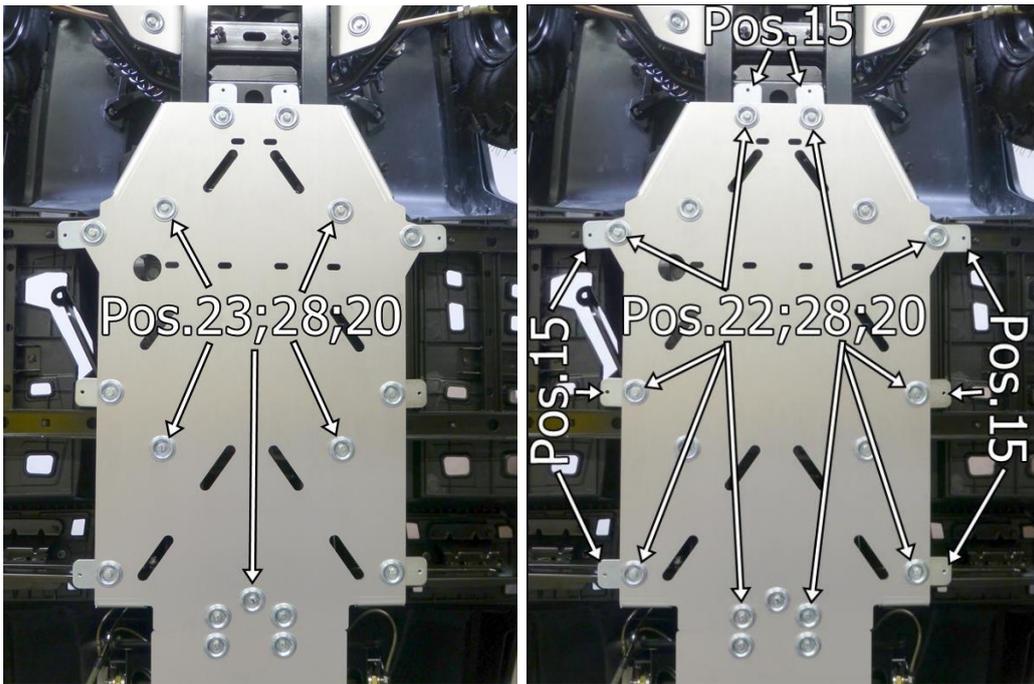

## Step 6

Install side protections 02.28104K (Pos. 4) and 02.28105K (Pos. 5). First remove bolts indicated with arrows and install bracket 02.16005 (Pos. 18).

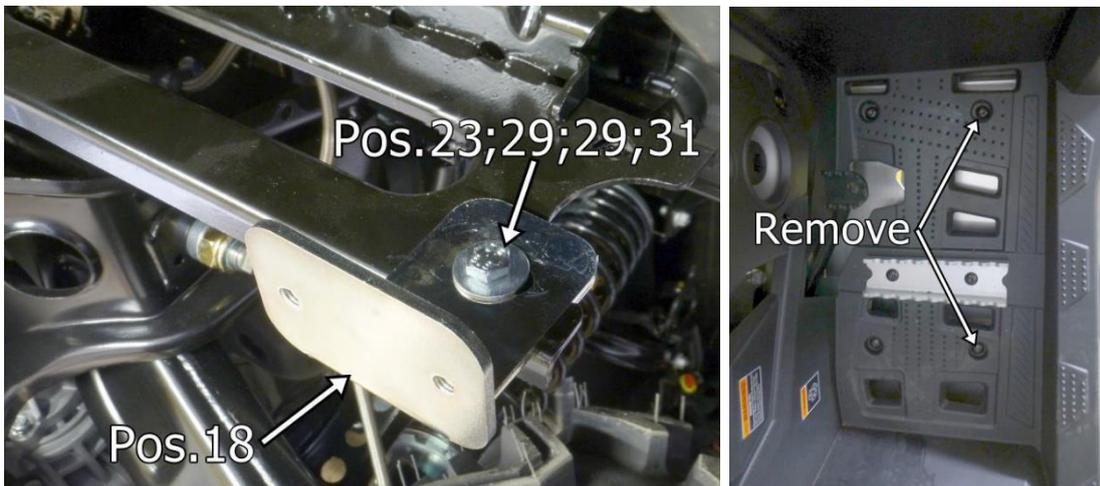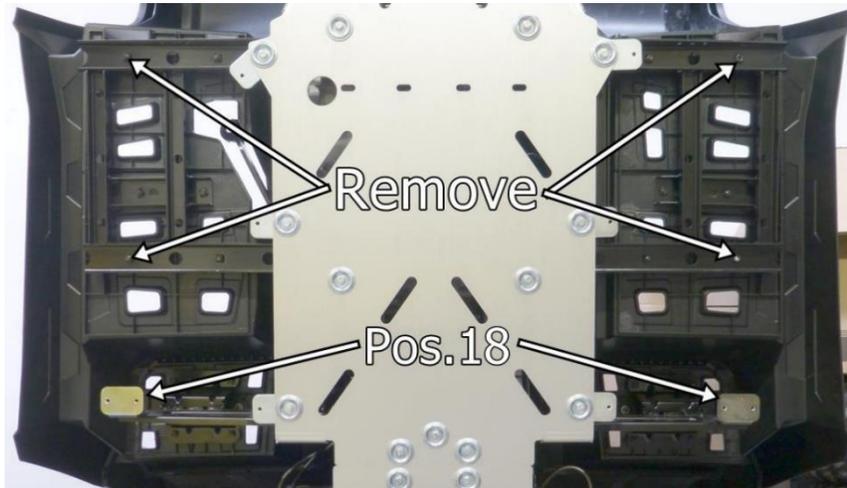


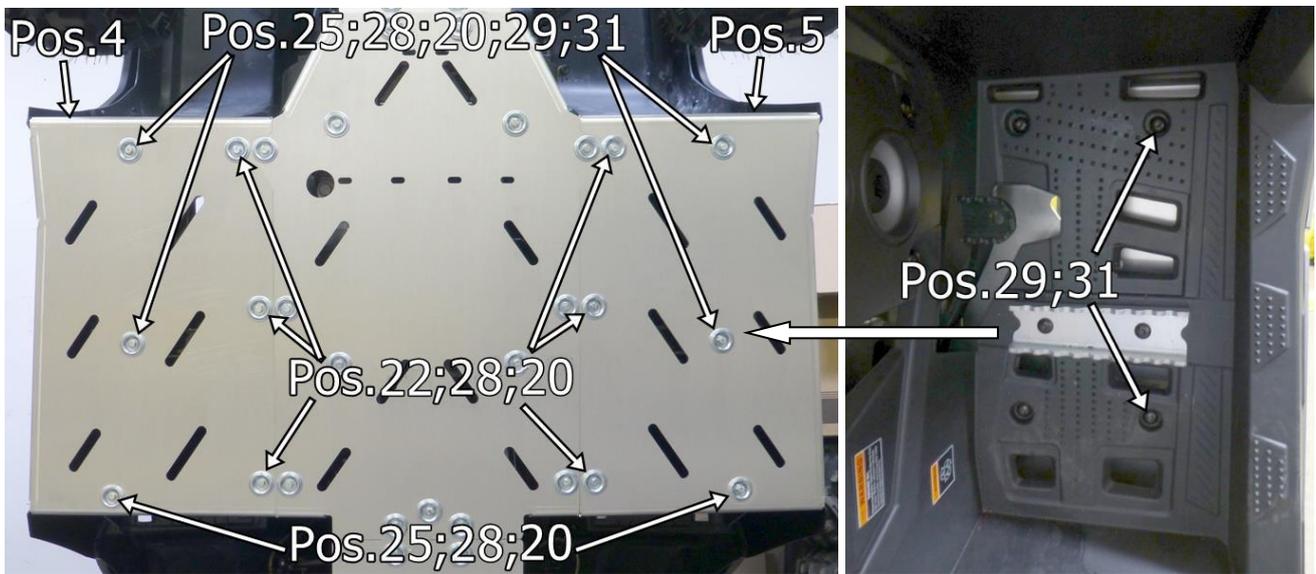


**Step 7**

Depending on the shape of the ATV's front plastic, install the corresponding front part.

**Version 1:** Install front protection 02.28101K (Pos. 1) and distance plates 02.28110 (Pos. 10).

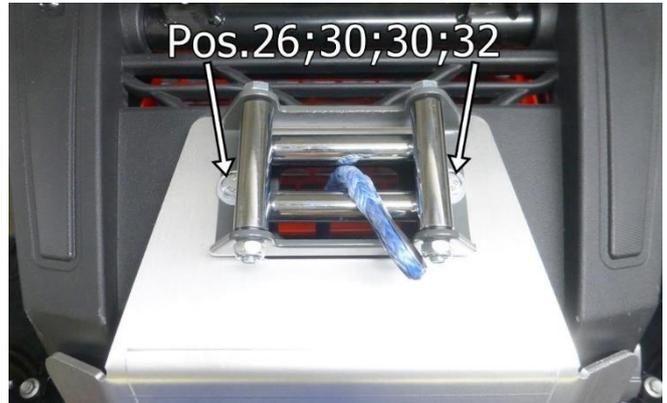

**Version 2:** First attach the front part 02.28112K (Pos. 11) to the rear part 02.28114 (Pos. 12). Then install the assembly to the ATV. If the lower-mounted bumper was installed to the ATV, reinstall it.

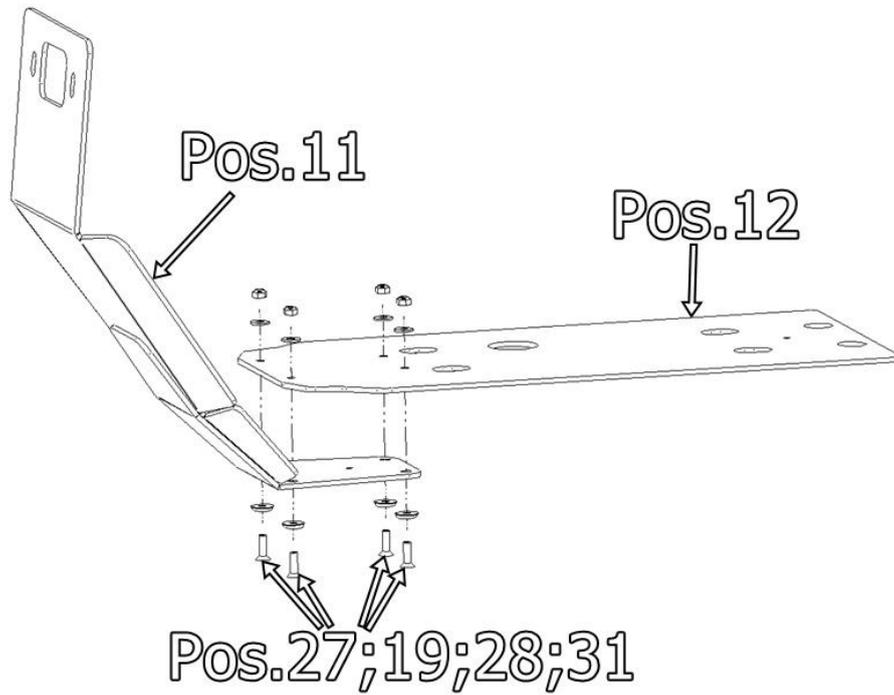







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

