

IRON BALTIC

RARE A-ARM GUARDS (ALUMINIUM)

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/IQvQBihK

AODES

Pathcross 1000 / 850 / 650

Code 02.28108VP

Version 13102023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right A-arm guard	02.28108	1
2	Rear left A-arm guard	02.28109	1
3	Rear a-arm bracket	02.7508	2
4	Bolt M6x12 DIN933	OT.02.02.030	2
5	Bolt M6x14 DIN933	OT.02.02.040	6
6	Washer Ø6/15 SFS3738	OT.04.03.020	8

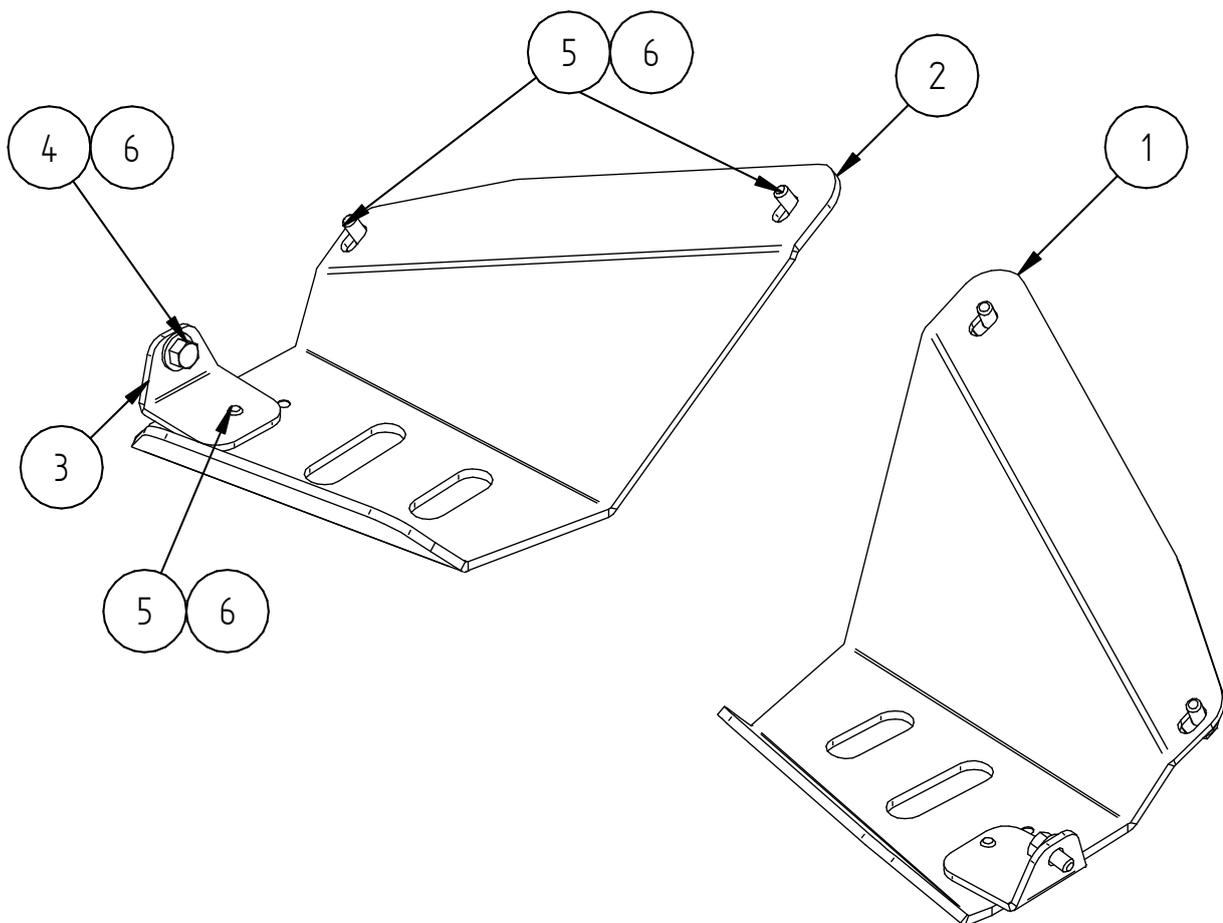

FITTING INSTRUCTIONS





NB!

We recommend using thread lock fluid on the bolts. Bolts tend to loosen with vibration from ATV.

Step 1

Install rear control arm protections 02.28108 (Pos. 1) and 02.28109 (Pos. 2). First install bracket 02.7508..

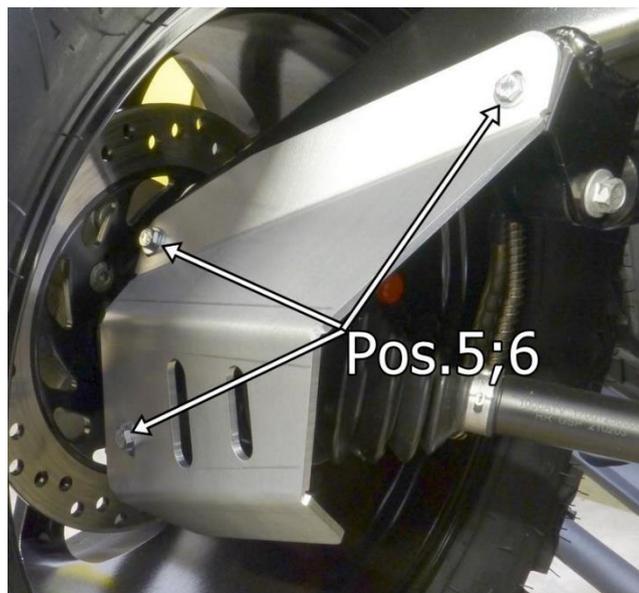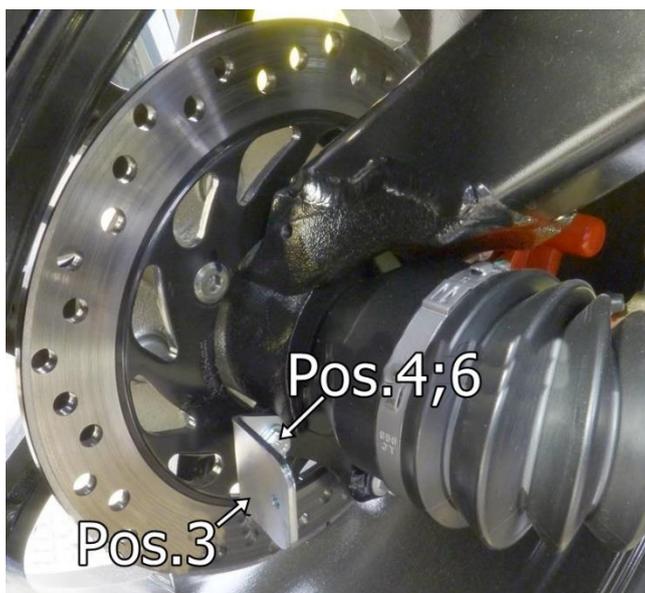

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

