



code.ironbaltic.com/u/OmquuBeG

PLASTIC SKID PLATE

AODES

Pathcross 1000 L / 850 L / 650 L

Code 02.28200

Version 04122024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.28201K	1
2	Middle protection	02.28202	1
3	Rear protection	02.28203K	1
4	Right sideprotection	02.28204K	1
5	Left sideprotection	02.28205K	1
6	Front right a-arm protection	02.28206K	1
7	Front left a-arm protection	02.28207K	1
8	Rear right a-arm protection (BLACK)	02.28108	1
9	Rear left a-arm protection (BLACK)	02.28109	1
10	Distance plate	02.28110	2
11	Front protection 2	02.28211K	1
12	Front protection 2 rear part	02.28213K	1
13	Fron a-arm bracket	02.1018	2
14	Front a-arm bracket 2	02.4606	2
15	Connecting plate	02.5006	10
16	Rear a-arm bracket	02.7508	2
17	Front a-arm bracket	02.8210	2
18	Sideprotection bracket	02.16005	2
19	Dished washer	14.503	48
20	Bolt M6x12 DIN933	OT.02.02.030	2
21	Bolt M6x16 DIN933	OT.02.02.050	32
22	Bolt M6x25 DIN933	OT.02.02.070	9
23	Bolt M6x30 DIN933	OT.02.02.080	11
24	Bolt M6x45 DIN933	OT.02.02.110	6
25	Bolt M8x50 DIN933	OT.02.02.240	2
26	Bolt M6x20 DIN7991	OT.02.04.030	4
27	Bolt M8x35 DIN 912	OT.02.06.052	2
28	Washer Ø6/15 SFS3738	OT.04.03.020	58
29	Washer Ø6/18 DIN9021	OT.04.02.020	12
30	Washer Ø8/20 SFS3738	OT.04.03.030	4
31	Nyloc nut M6 DIN985	OT.03.02.030	10
32	Nyloc nut M8 DIN985	OT.03.02.040	2

TOOLS REQUIRED FOR INSTALLATION:



- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Allen wrench 4mm
- Allen wrench 6mm
- Torx 30





NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

FITTING INSTRUCTIONS



Step 1

Remove standard skid plate and control arm protections. If your ATV is equipped with lower-mounted front bumper (see picture), remove it.

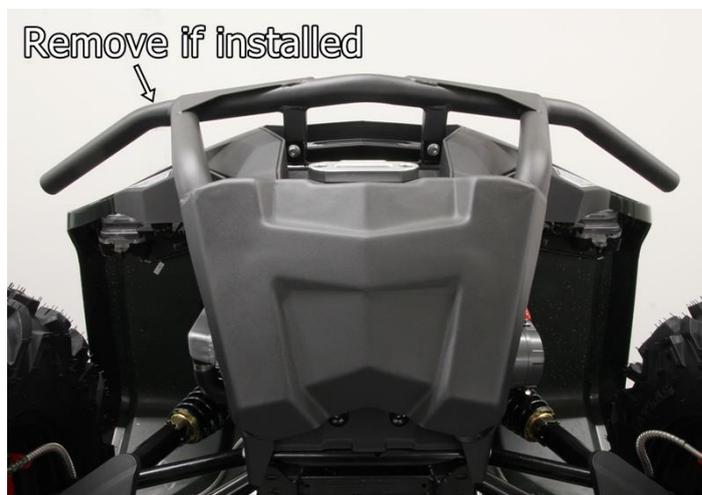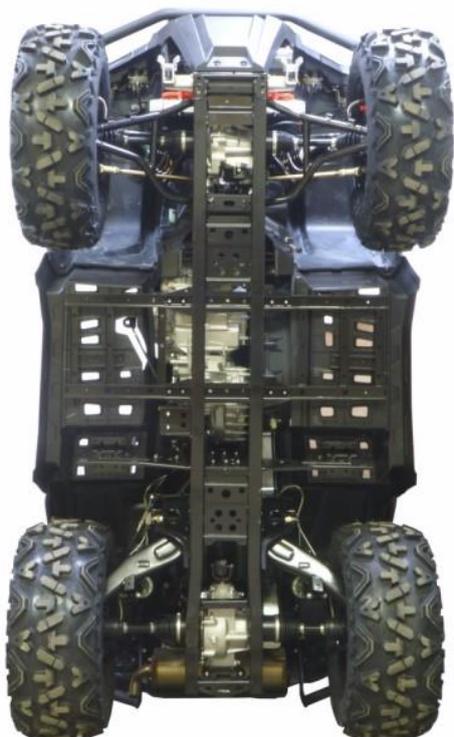


Step 2

Install front control arm protections 02.28206K (Pos. 6) and 02.28207K (Pos. 7).

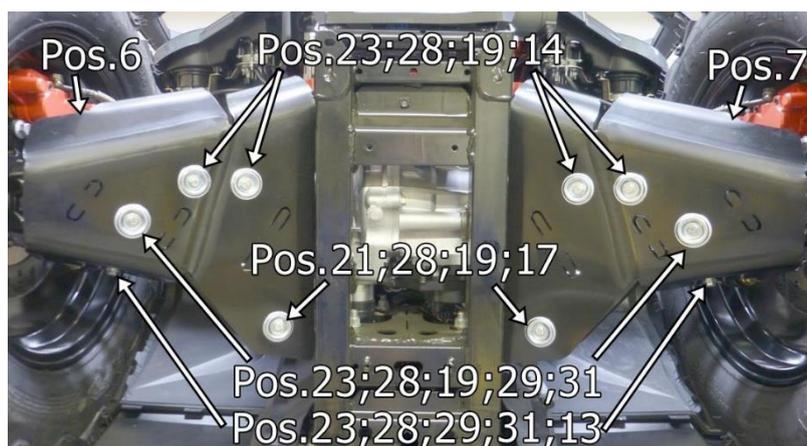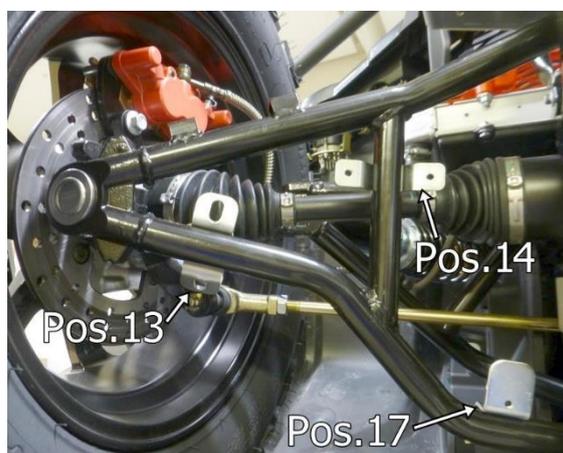


Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).
First install bracket 02.7508 (Pos. 16).

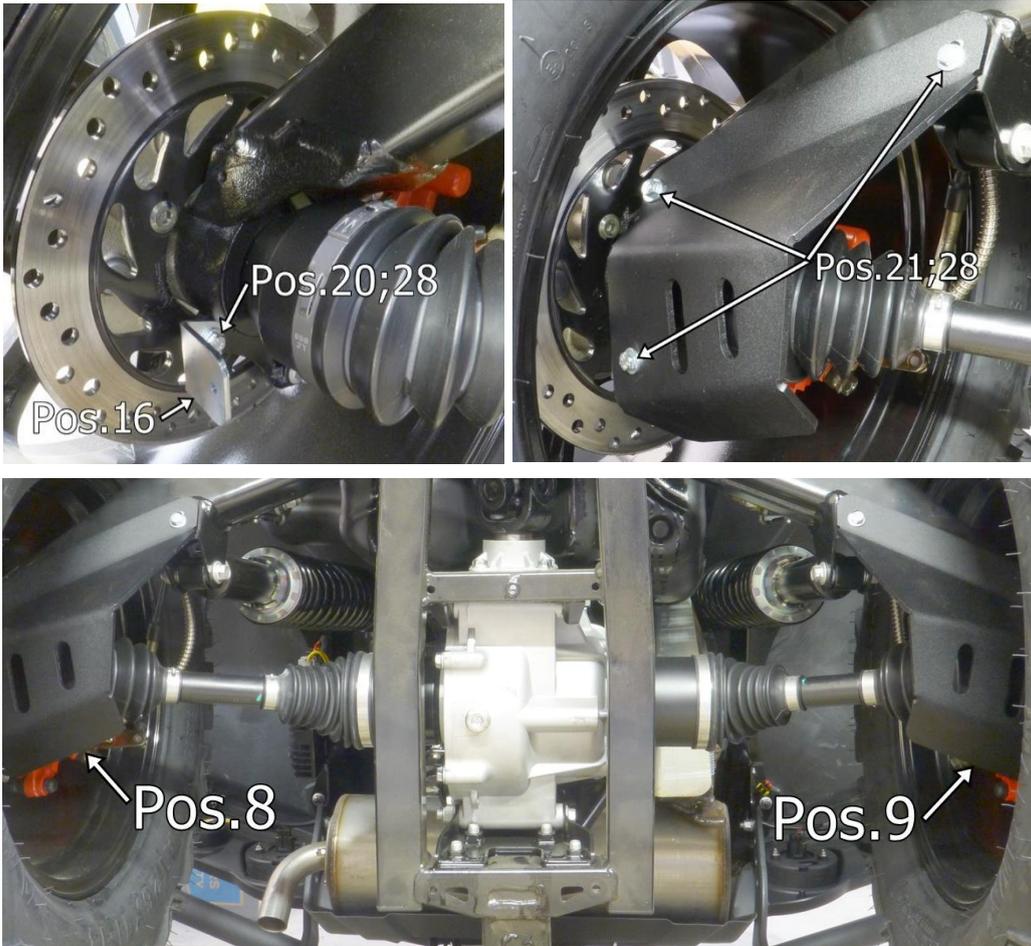


Step 4

Install rear protection 02.28203K (Pos. 3) and connection plates 02.5006 (Pos. 15).

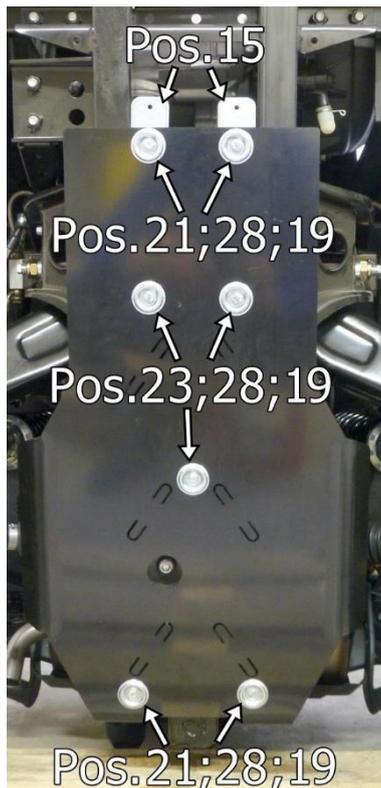



Step 5


Install middle protection 02.28202 (Pos. 2) and connecting plates 02.5006 (Pos.15).

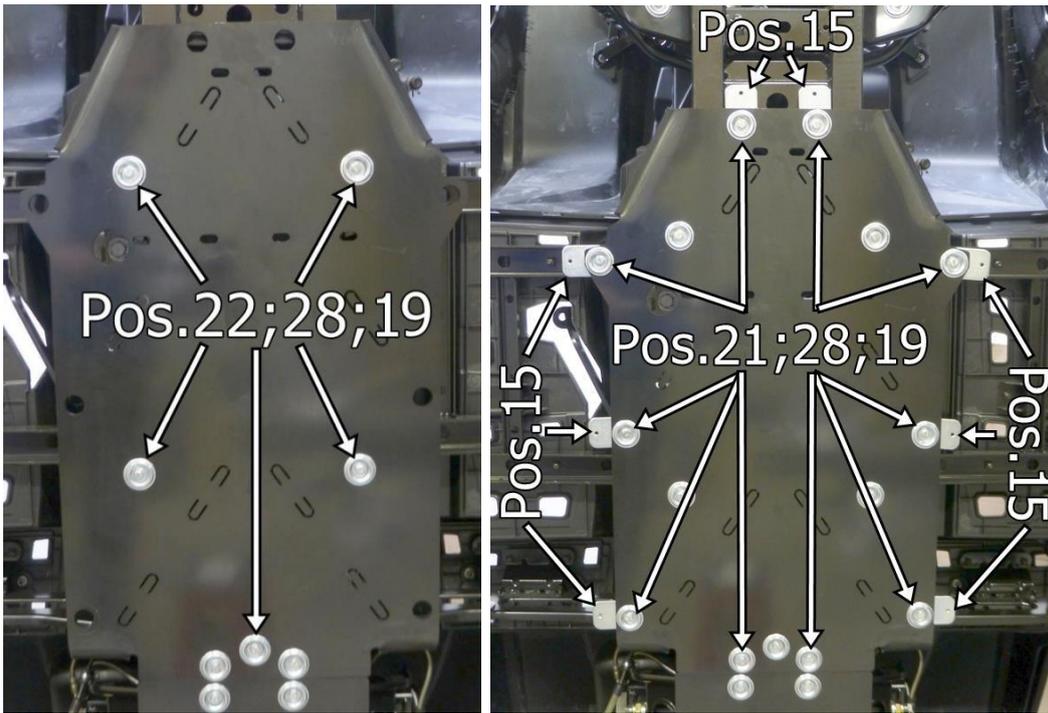

Step 6


Install side protections 02.28204K (Pos.4) and 02.28205K (Pos. 5). First remove bolts indicated with arrows and install bracket 02.16005 (Pos. 18).

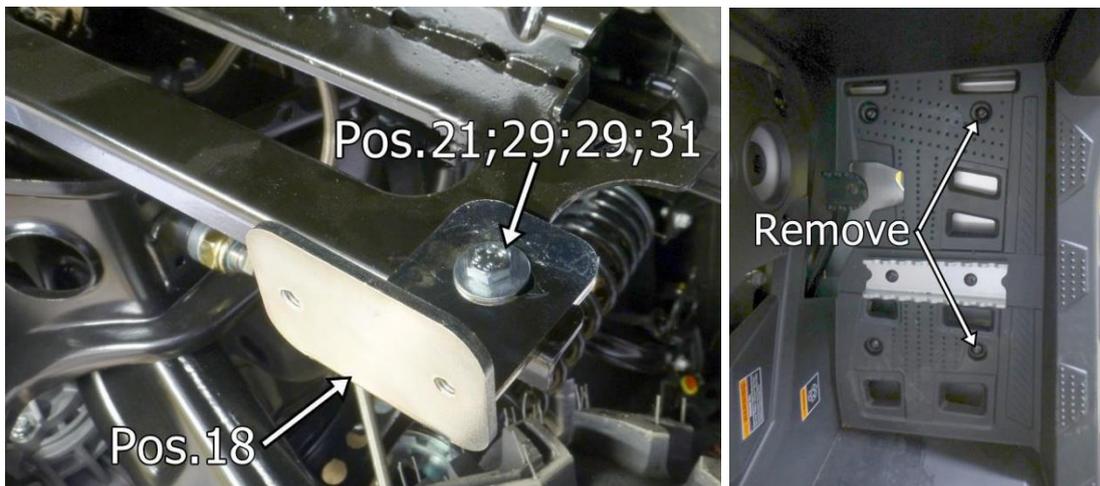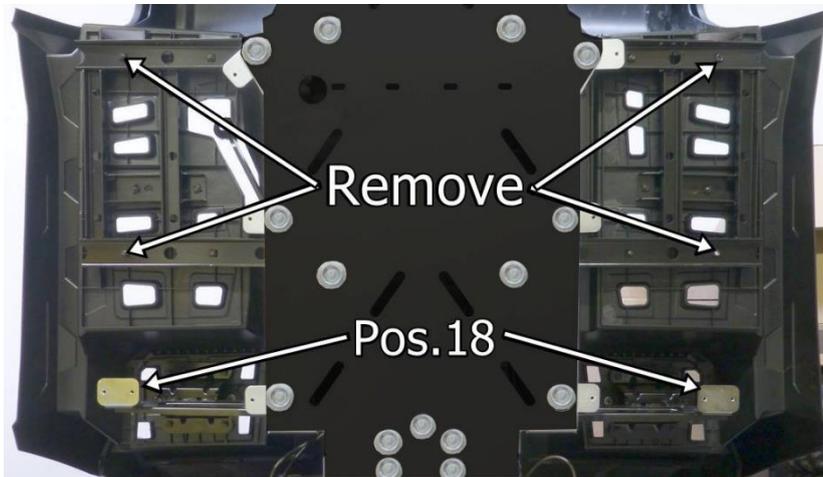


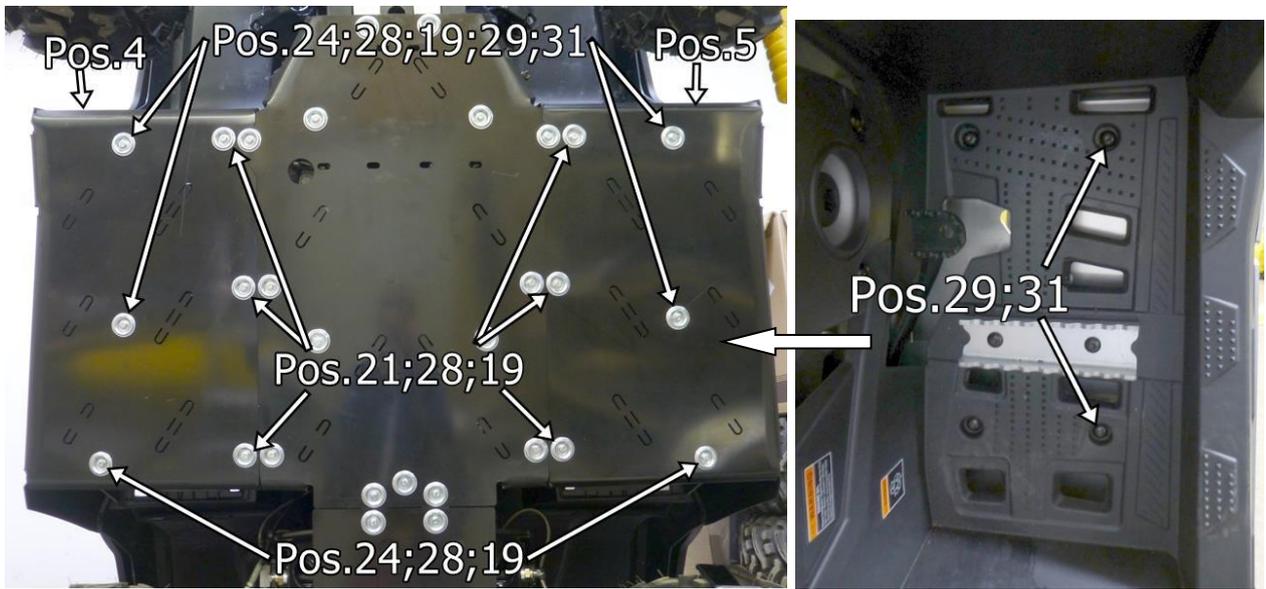


Step 7 Depending on the shape of the ATV's front plastic, install the corresponding front part.

Version 1: Install front protection 02.28201K (Pos. 1) and distance plates 02.28110 (Pos. 10).

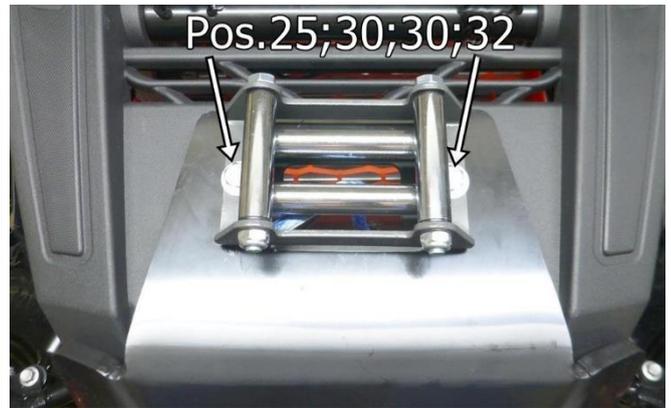

Version 2: First attach the front part 02.28211K (Pos. 11) to the rear part 02.28213K (Pos. 12). Then install the assembly to the ATV. If the lower-mounted bumper was installed to the ATV, reinstall it.

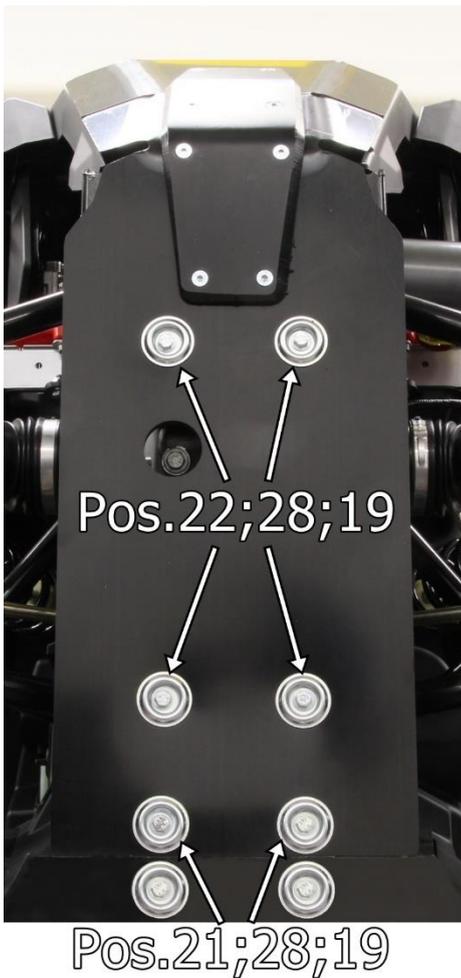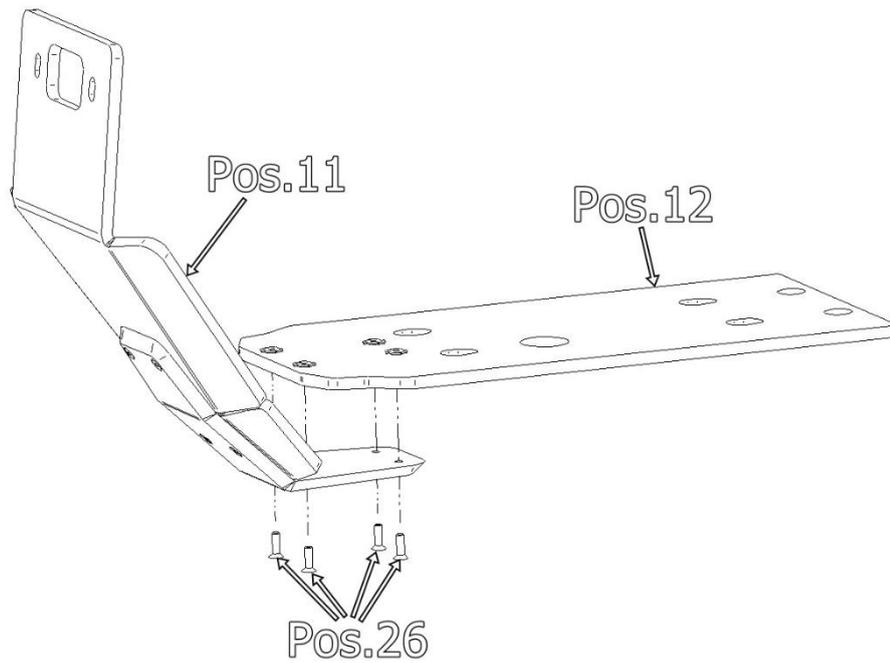

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

