

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/KVqAwWyH

ALUMINIUM SKID PLATE

AODES

Pathcross 1000 S / 850 S / 650 S

Code 02.28300

Version 11122024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|------------------------------|--------------|--------|
| 1 | Front protection | 02.28101K | 1 |
| 2 | Middle protection | 02.28302 | 1 |
| 3 | Rear protection | 02.28103K | 1 |
| 4 | Right sideprotection | 02.28304 | 1 |
| 5 | Left sideprotection | 02.28305 | 1 |
| 6 | Front right a-arm protection | 02.28106K | 1 |
| 7 | Front left a-arm protection | 02.28107K | 1 |
| 8 | Rear right a-arm protection | 02.28108 | 1 |
| 9 | Rear left a-arm protection | 02.28109 | 1 |
| 10 | Distance plate | 02.28110 | 2 |
| 11 | Front protection 2 | 02.28112K | 1 |
| 12 | Front protection 2 rear part | 02.28114 | 1 |
| 13 | Fron a-arm bracket | 02.1018 | 2 |
| 14 | Front a-arm bracket 2 | 02.4606 | 2 |
| 15 | Connecting plate | 02.5006 | 10 |
| 16 | Rear a-arm bracket | 02.7508 | 2 |
| 17 | Front a-arm bracket | 02.8210 | 2 |
| 18 | Conical washer | 14.502 | 4 |
| 19 | Dished washer | 14.503 | 45 |
| 20 | Bolt M6x12 DIN933 | OT.02.02.030 | 2 |
| 21 | Bolt M6x14 DIN933 | OT.02.02.040 | 30 |
| 22 | Bolt M6x20 DIN933 | OT.02.02.060 | 8 |
| 23 | Bolt M6x25 DIN933 | OT.02.02.070 | 11 |
| 24 | Bolt M6x40 DIN933 | OT.02.02.100 | 4 |
| 25 | Bolt M8x45 DIN933 | OT.02.02.230 | 2 |
| 26 | Bolt M6x20 DIN7991 | OT.02.04.030 | 4 |
| 27 | Washer Ø6/15 SFS3738 | OT.04.03.020 | 59 |
| 28 | Washer Ø6/18 DIN9021 | OT.04.02.020 | 8 |
| 29 | Washer Ø8/20 SFS3738 | OT.04.03.030 | 4 |
| 30 | Nyloc nut M6 DIN985 | OT.03.02.030 | 12 |
| 31 | Nyloc nut M8 DIN985 | OT.03.02.040 | 2 |

TOOLS REQUIRED FOR INSTALLATION:





- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Allen wrench 4mm
- Allen wrench 6mm
- Torx 30



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV**

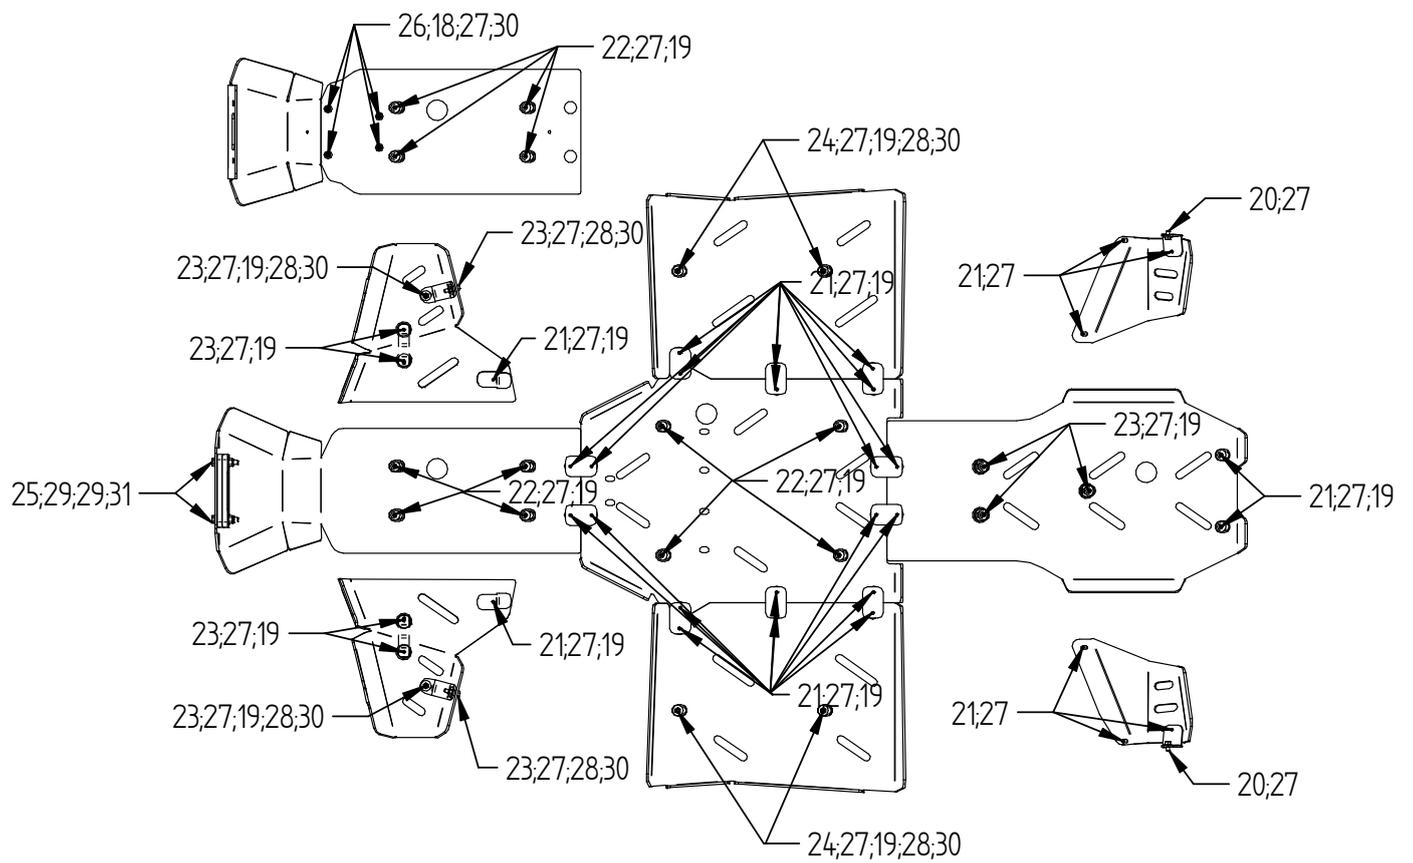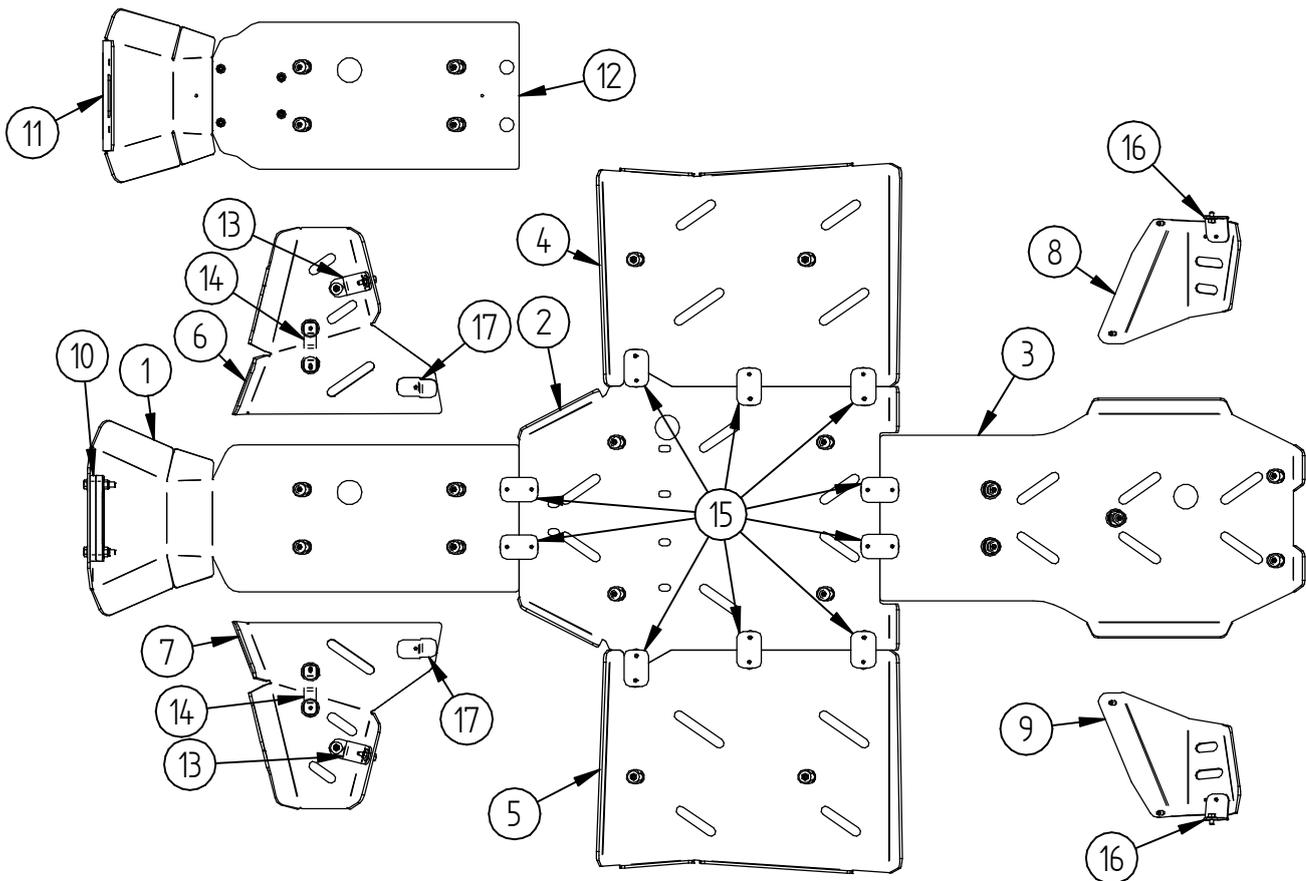

FITTING INSTRUCTIONS



Step 1

Remove standard skid plate and control arm protections. If your ATV is equipped with lower-mounted front bumper (see picture), remove it.




Step 2

Install front control arm protections 02.28106K (Pos. 6) and 02.28107K (Pos. 7).

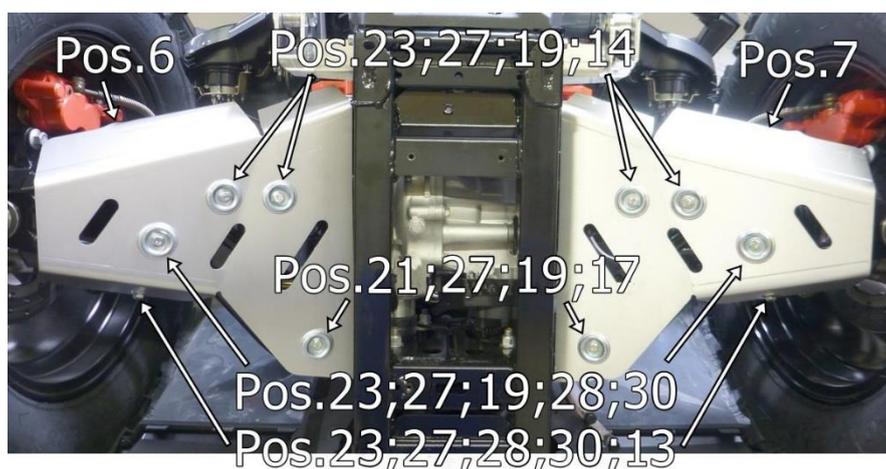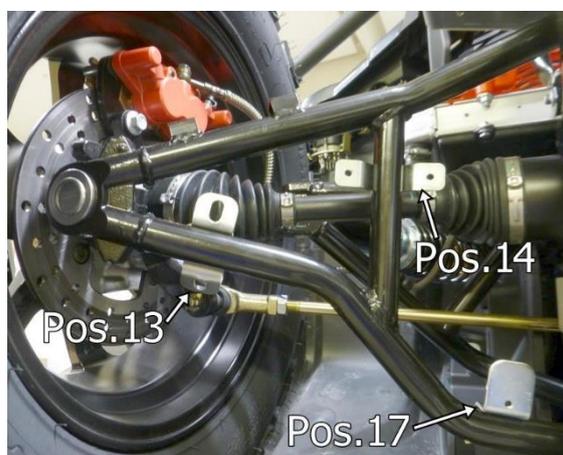

Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).
First install bracket 02.7508 (Pos. 16).

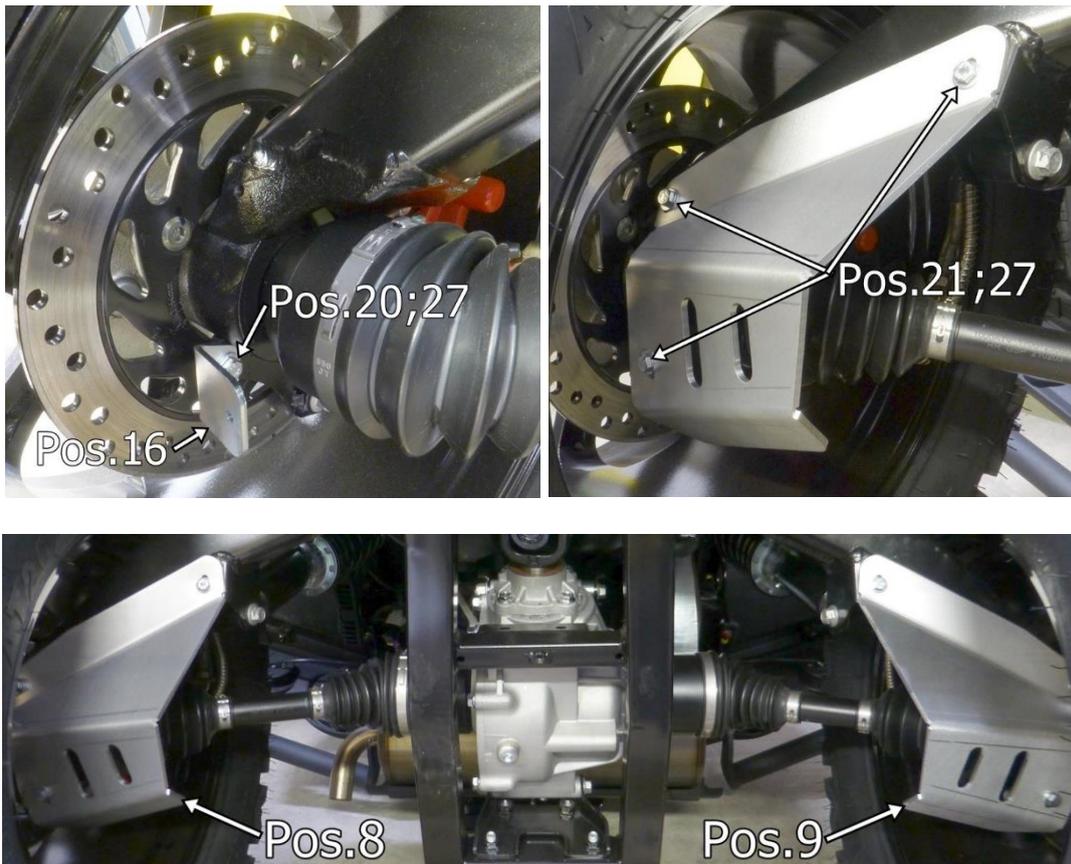


Step 4

Install rear protection 02.28103K (Pos. 3)
and connection plates 02.5006 (Pos. 15).




Step 5

Install middle protection 02.28302 (Pos. 2) and connecting plates 02.5006 (Pos. 15).

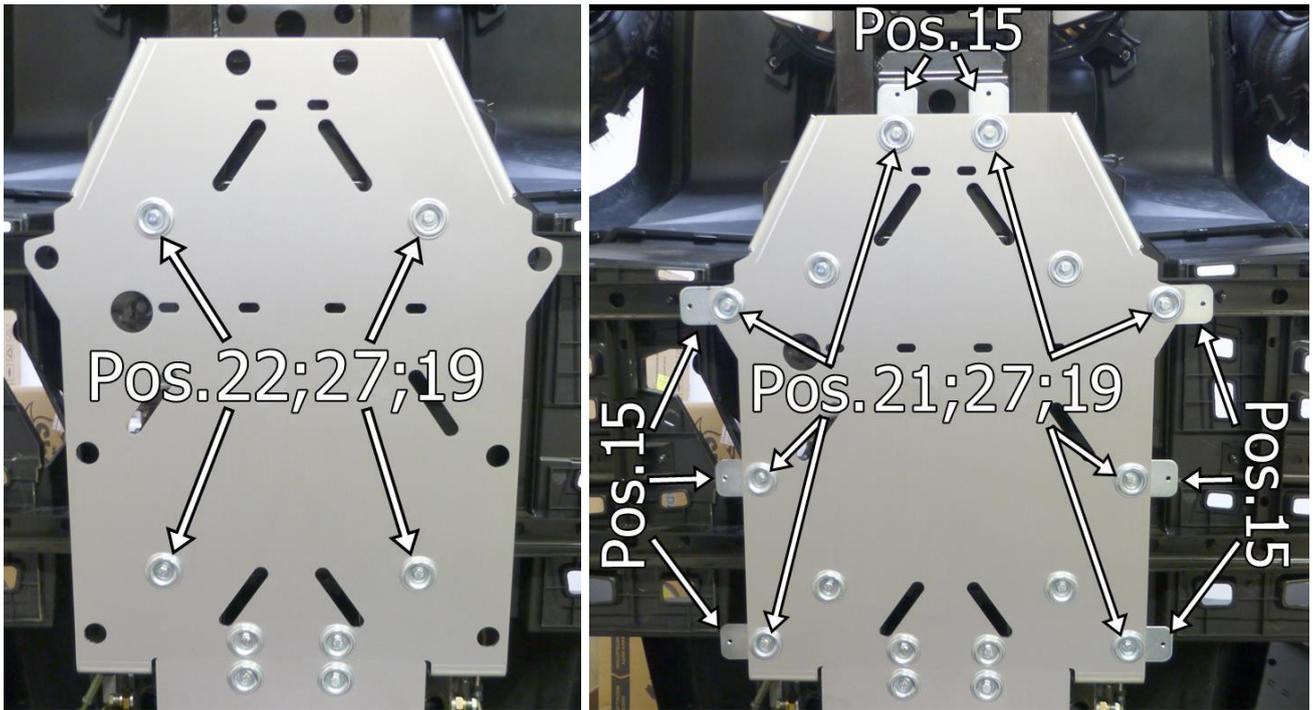

Step 6


Install side protections 02.28304 (Pos. 4) and 02.28305 (Pos. 5). First remove bolts indicated with arrows.

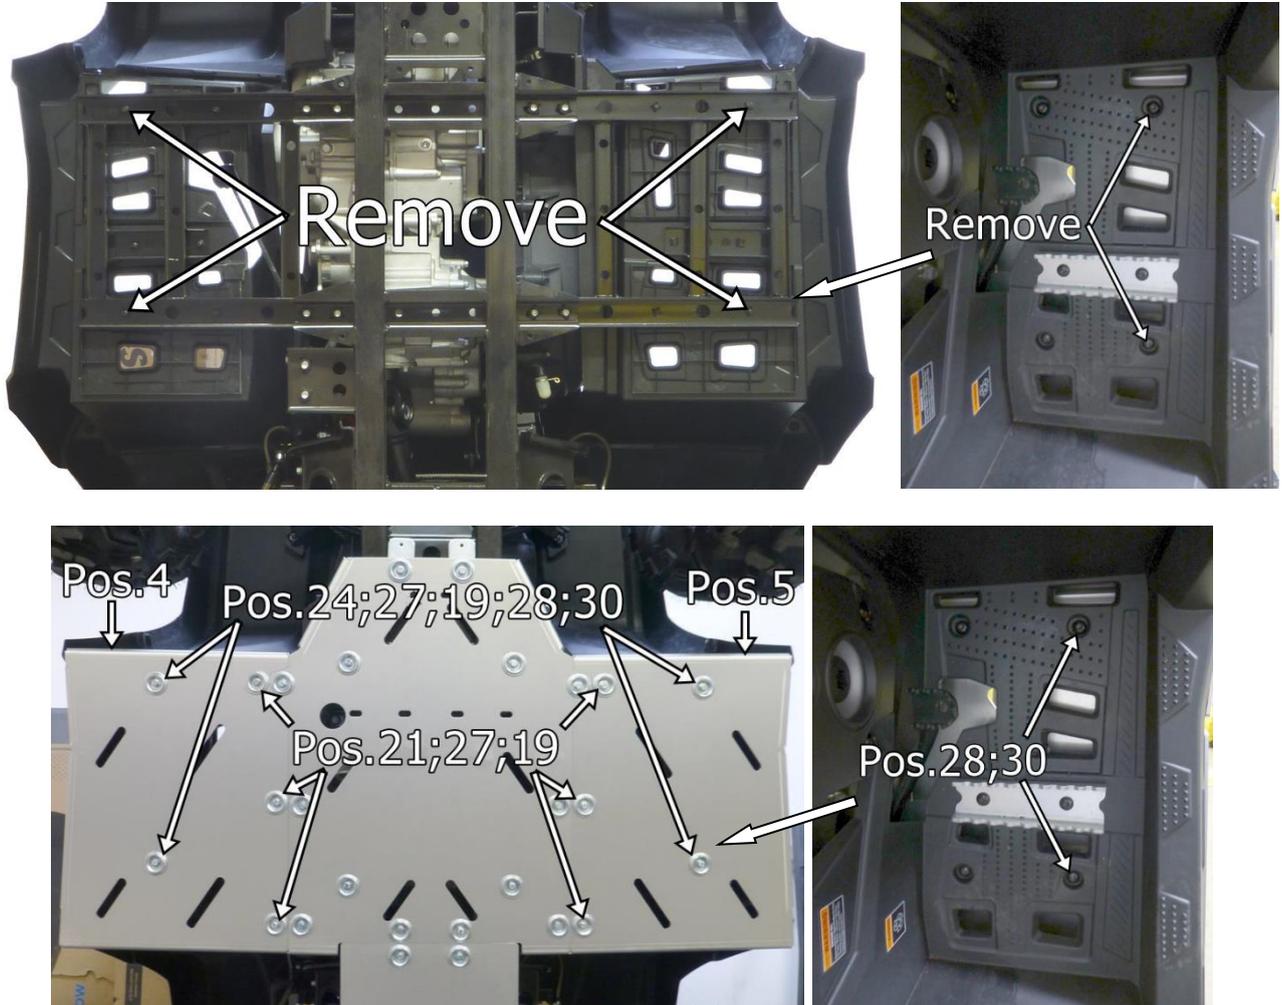



Step 7

Depending on the shape of the ATV's front plastic, install the corresponding front part.

Version 1: Install front protection 02.28101K (Pos. 1) and distance plates 02.28110 (Pos. 10).

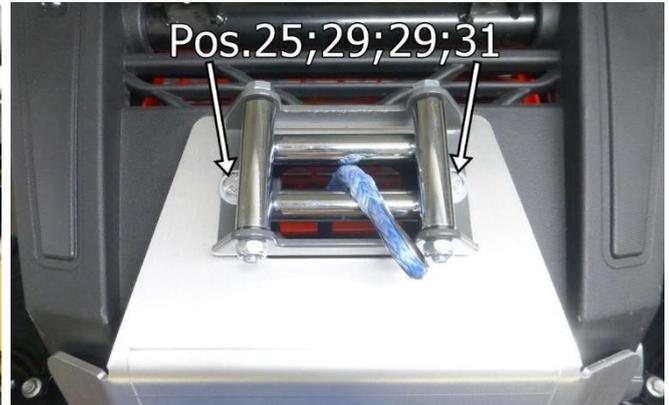

Version 2: First attach the front part 02.28112K (Pos. 11) to the rear part 02.28114 (Pos. 12). Then install the assembly to the ATV. If the lower-mounted bumper was installed to the ATV, reinstall it.

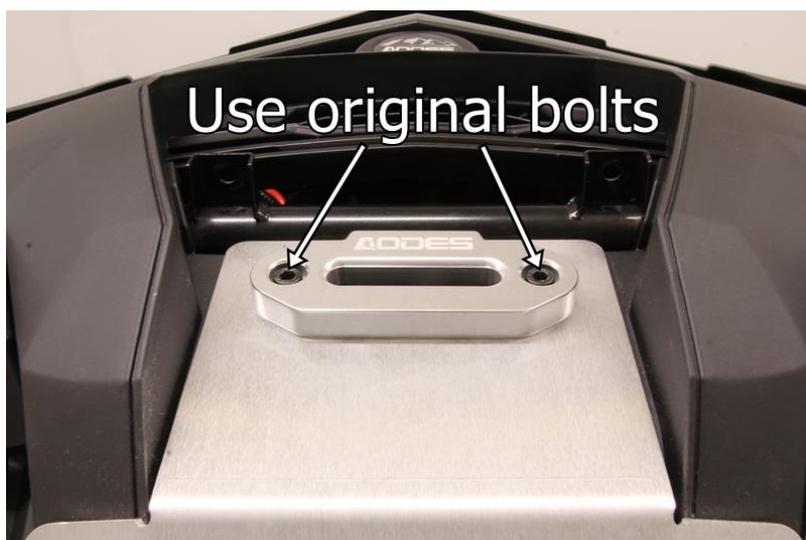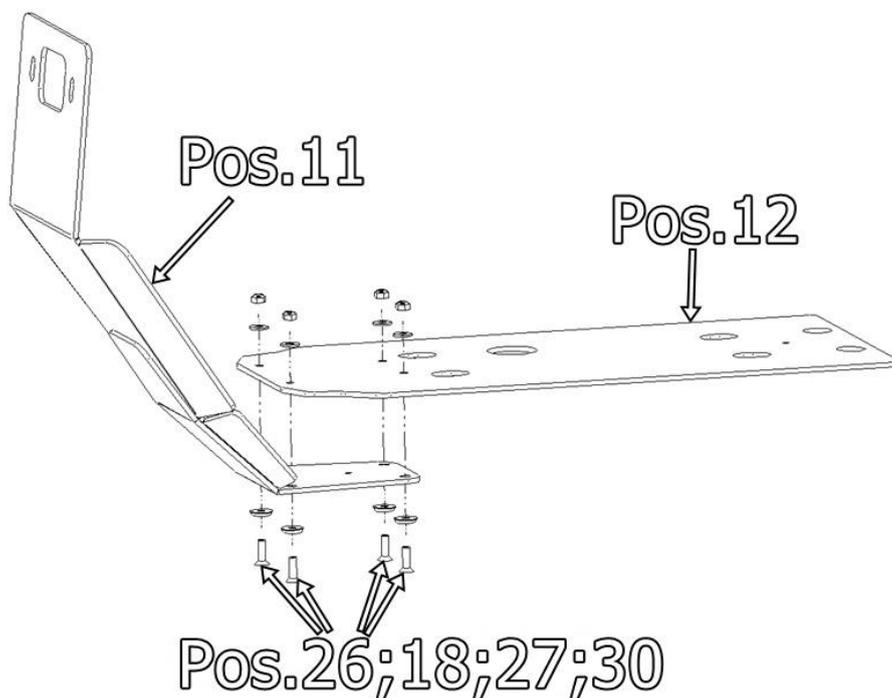

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

