

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/xbP4njxp

PLASTIC SKID PLATE

AODES

Pathcross 1000 S / 850 S / 650 S

Code 02.28400

Version 11122024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.28201K	1
2	Middle protection	02.28402	1
3	Rear protection	02.28203K	1
4	Right sideprotection	02.28404	1
5	sideprotection	02.28405	1
6	Front right a-arm protection	02.28206K	1
7	Front left a-arm protection	02.28207K	1
8	Rear right a-arm protection (BLACK)	02.28108	1
9	Rear left a-arm protection (BLACK)	02.28109	1
10	Distance plate	02.28110	2
11	Front protection 2	02.28211K	1
12	Front protection 2 rear part	02.28213K	1
13	Fron a-arm bracket	02.1018	2
14	Front a-arm bracket 2	02.4606	2
15	Connecting plate	02.5006	10
16	Rear a-arm bracket	02.7508	2
17	Front a-arm bracket	02.8210	2
18	Dished washer	14.503	45
19	Bolt M6x12 DIN933	OT.02.02.030	2
20	Bolt M6x16 DIN933	OT.02.02.050	30
21	Bolt M6x25 DIN933	OT.02.02.070	8
22	Bolt M6x30 DIN933	OT.02.02.080	11
23	Bolt M6x45 DIN933	OT.02.02.110	4
24	Bolt M8x50 DIN933	OT.02.02.240	2
25	Bolt M6x20 DIN7991	OT.02.04.030	4
26	Bolt M8x35 DIN 912	OT.02.06.052	2
27	Washer Ø6/15 SFS3738	OT.04.03.020	55
28	Washer Ø6/18 DIN9021	OT.04.02.020	8
29	Washer Ø8/20 SFS3738	OT.04.03.030	4
30	Nyloc nut M6 DIN985	OT.03.02.030	8
31	Nyloc nut M8 DIN985	OT.03.02.040	2

TOOLS REQUIRED FOR INSTALLATION:





- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Allen wrench 4mm
- Allen wrench 6mm
- Torx 30



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

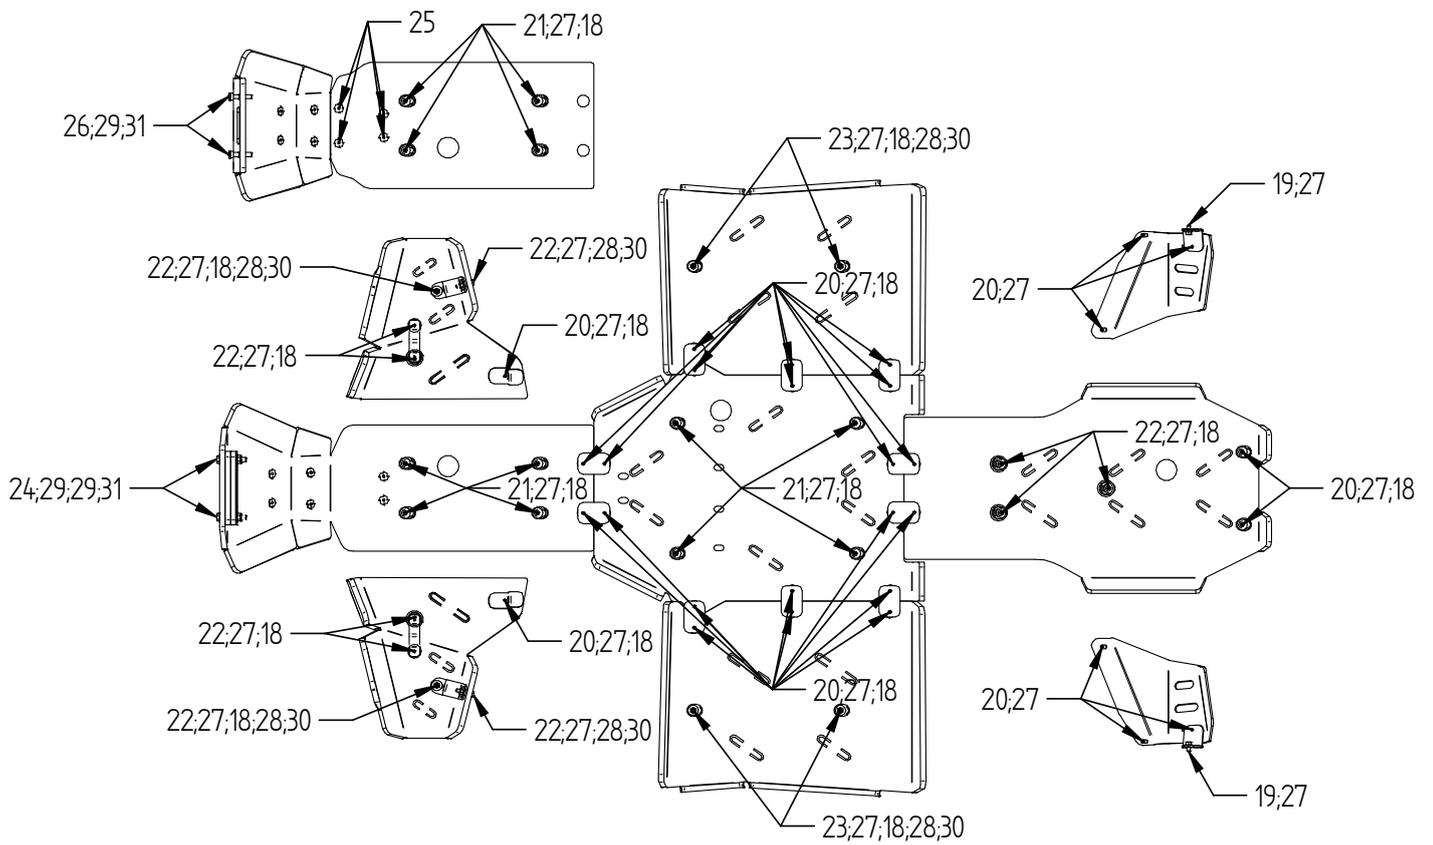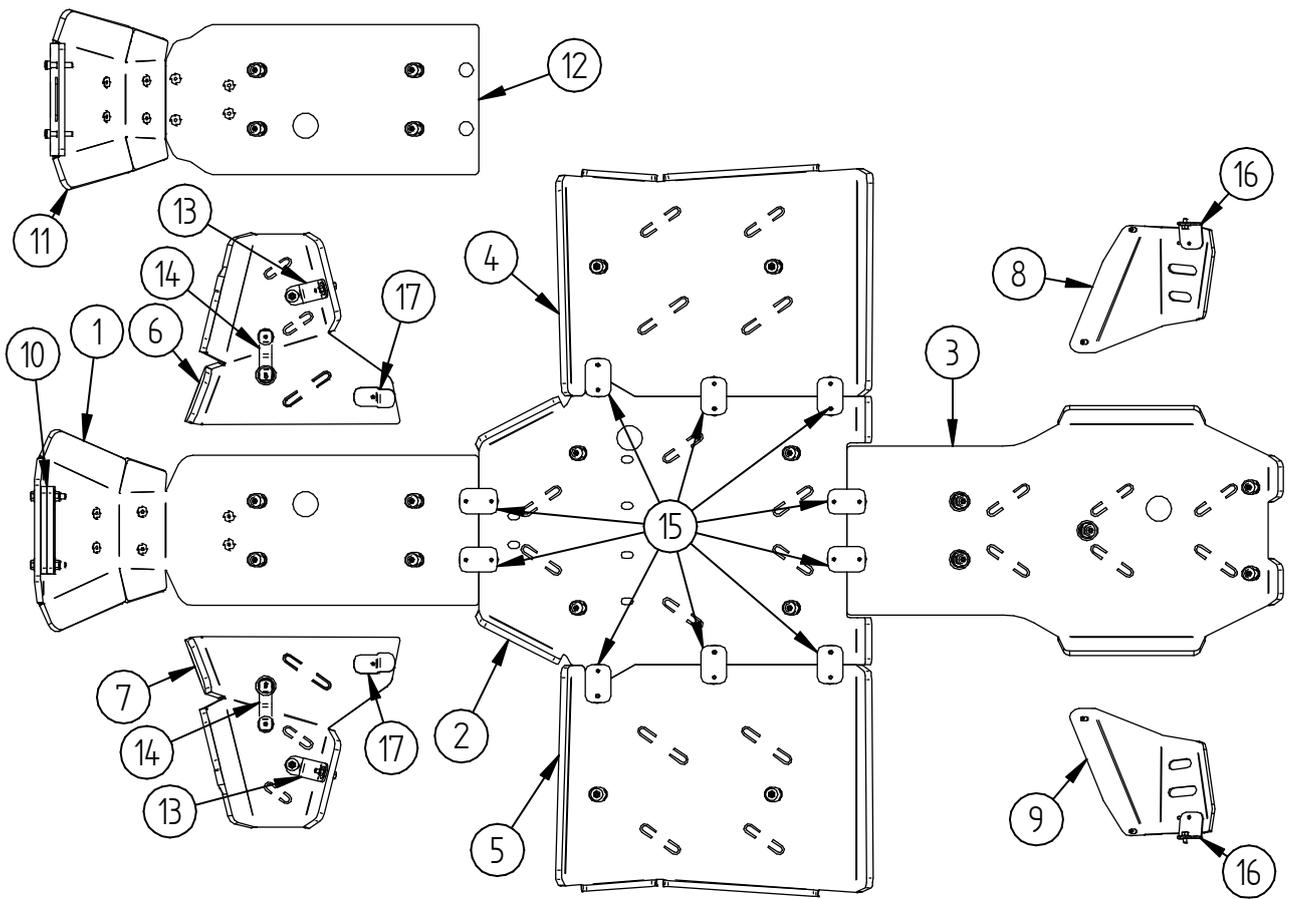

FITTING INSTRUCTIONS



Step 1

Remove standard skid plate and control arm protections. If your ATV is equipped with lower-mounted front bumper (see picture), remove it.




Step 2

Install front control arm protections 02.28206K (Pos. 6) and 02.28207K (Pos. 7).

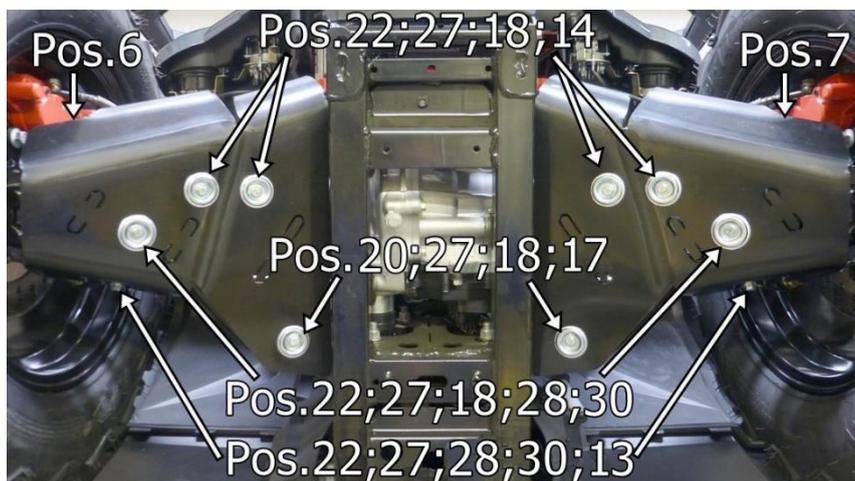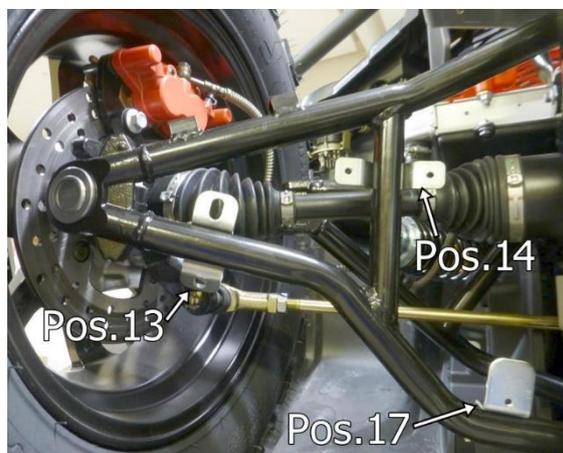


Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).
First install bracket 02.7508 (Pos. 16).

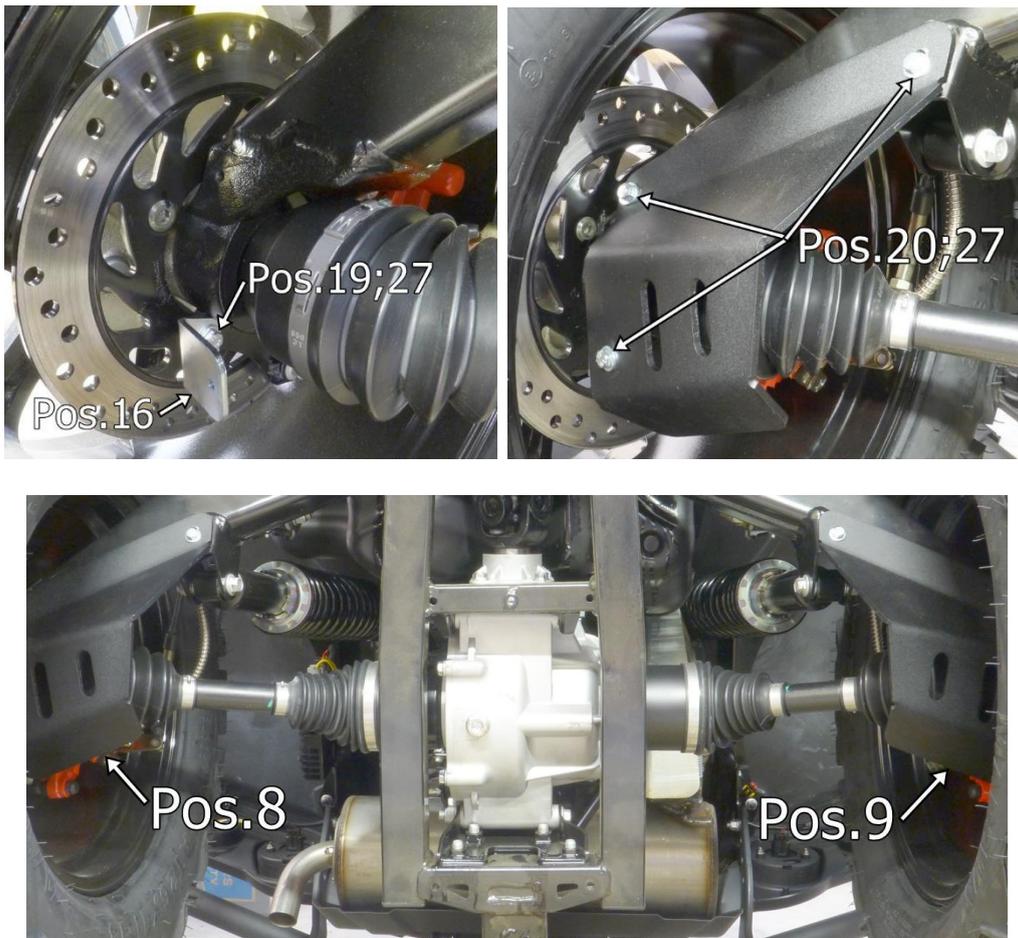


Step 4

Install rear protection 02.28203K (Pos. 3) and connection plates 02.5006 (Pos. 15).

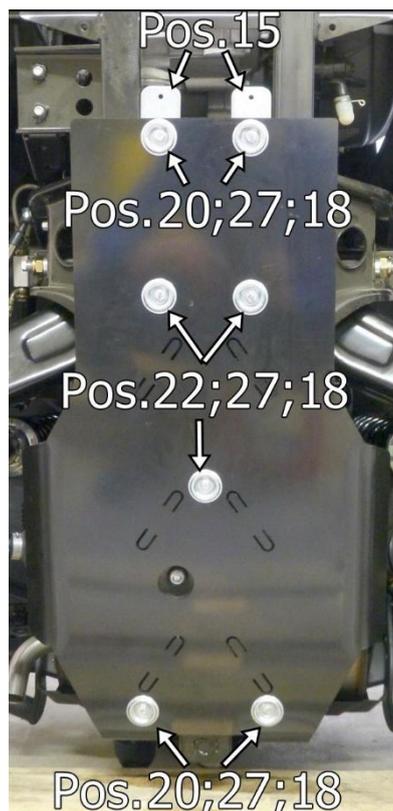



Step 5

Install middle protection 02.28402 (Pos. 2) and connecting plates 02.5006 (Pos. 15).

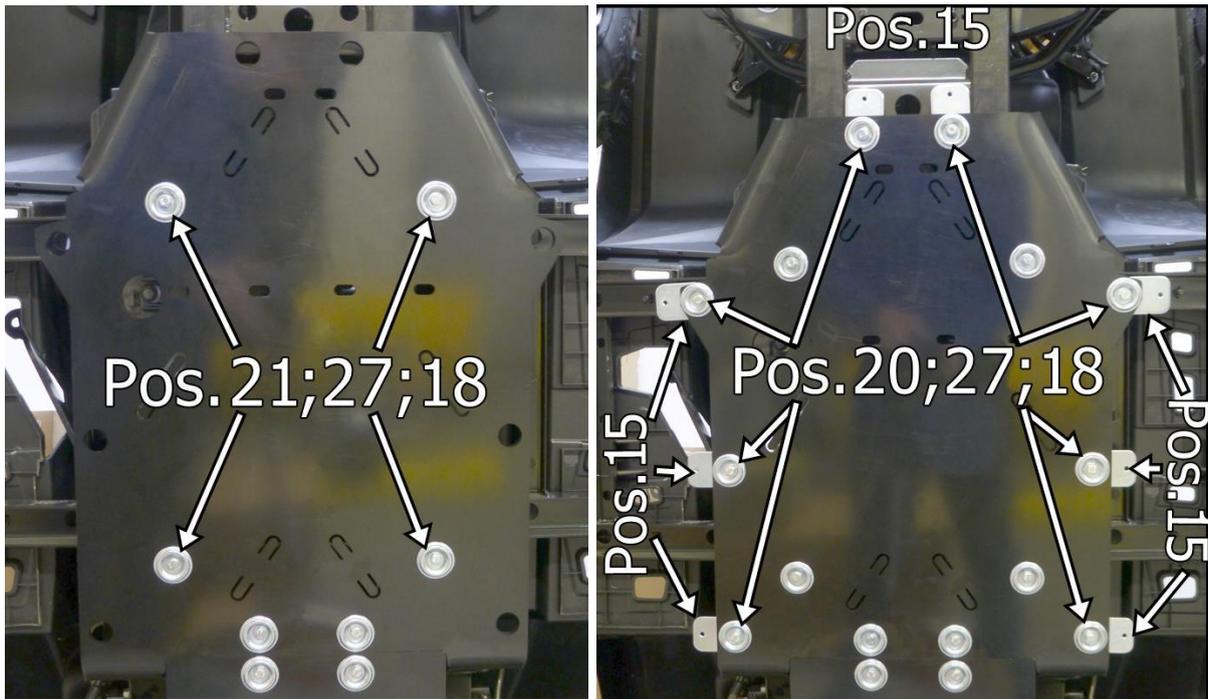

Step 6


Install side protections 02.28404 (Pos. 4) and 02.28405 (Pos. 5). First remove bolts indicated with arrows.

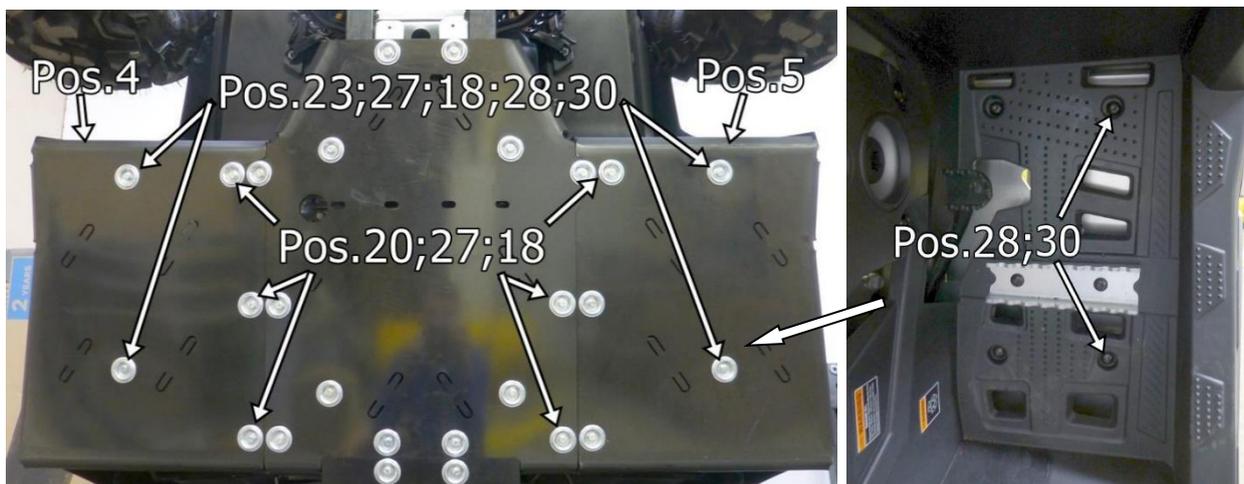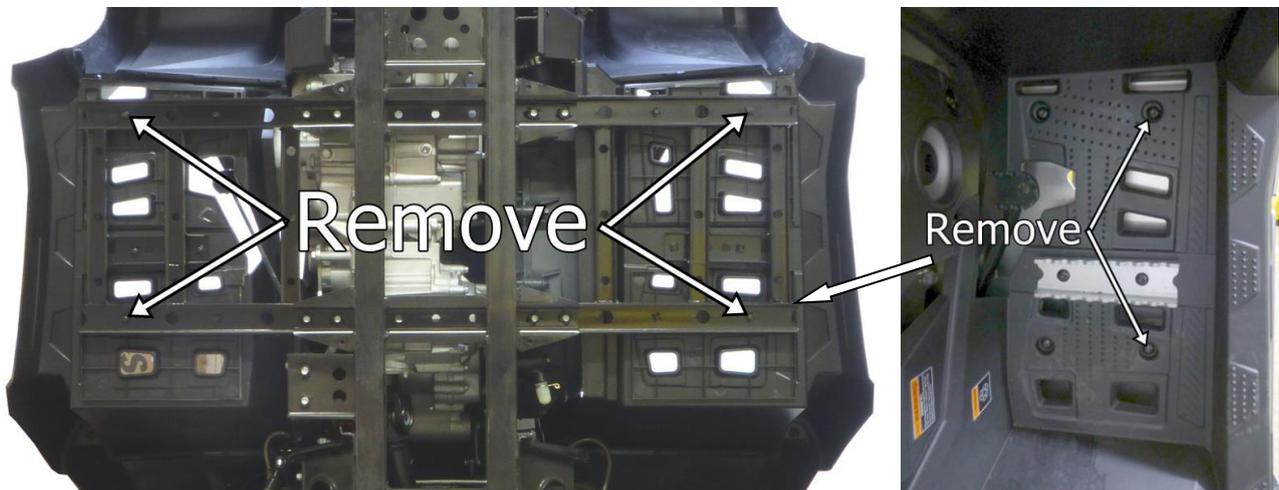



Step 7

Depending on the shape of the ATV's front plastic, install the corresponding front part.

Version 1: Install front protection 02.28201K (Pos. 1) and distance plates 02.28110 (Pos. 10).

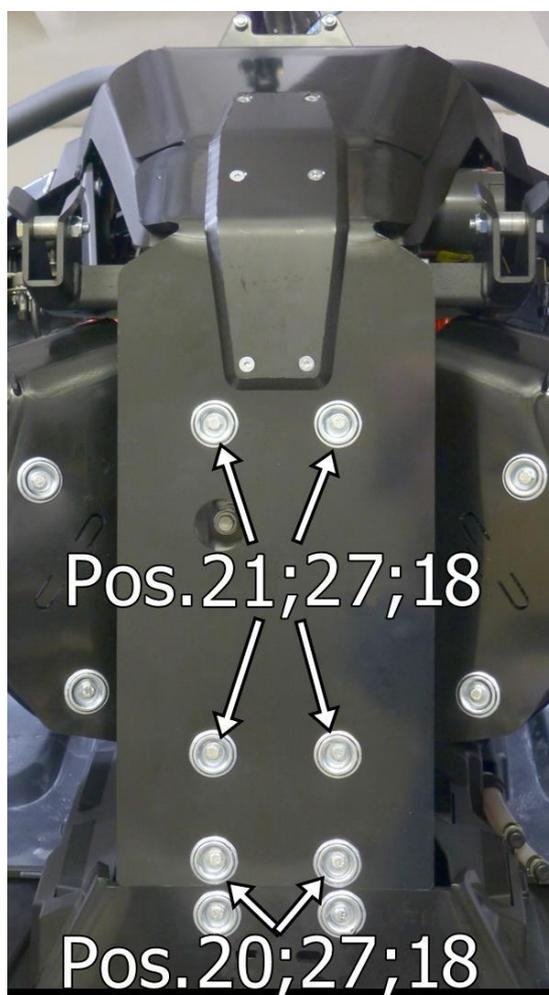

Version 2: First attach the front part 02.28211K (Pos. 11) to the rear part 02.28213K (Pos. 12). Then install the assembly to the ATV. If the lower-mounted bumper was installed to the ATV, reinstall it.

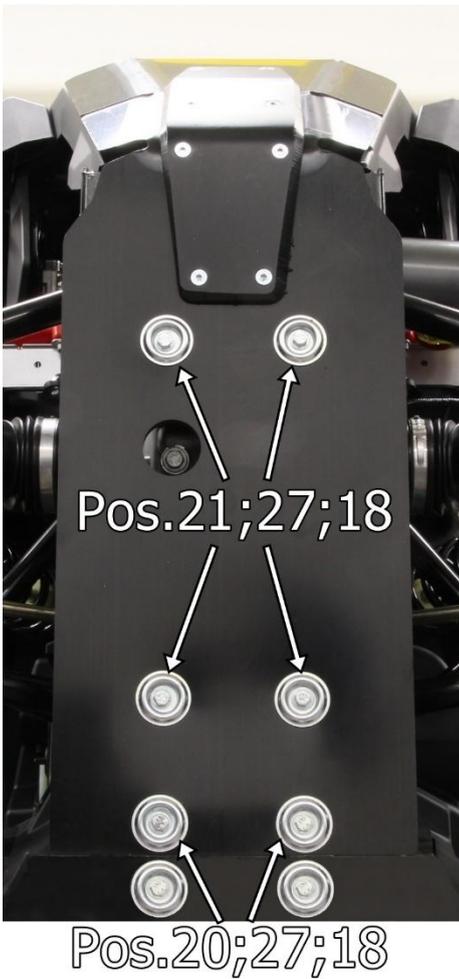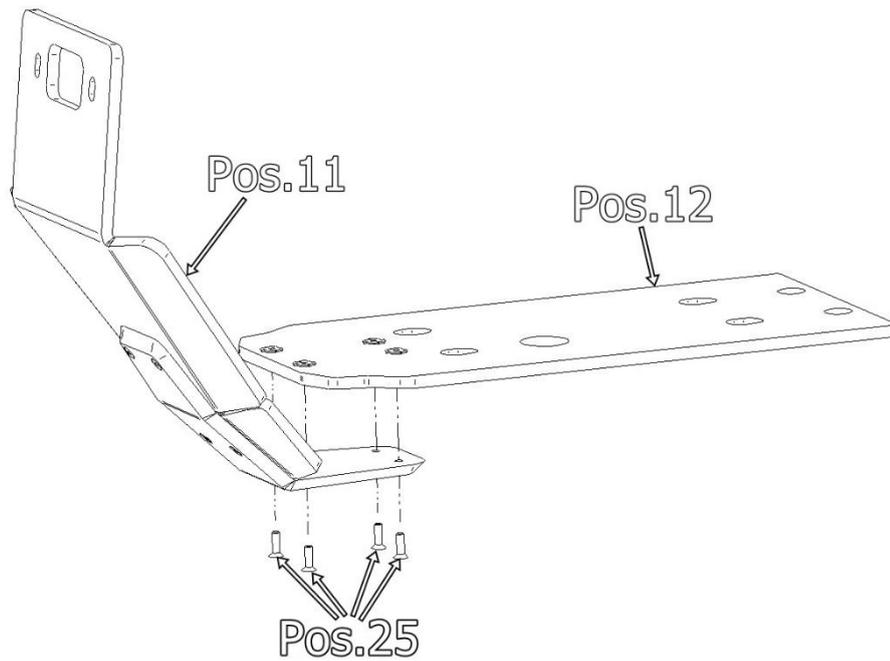

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

