

IRON BALTIC


SKID PLATE

SEGWAY

Villain SX10

Code 02.29100

Version 13102023

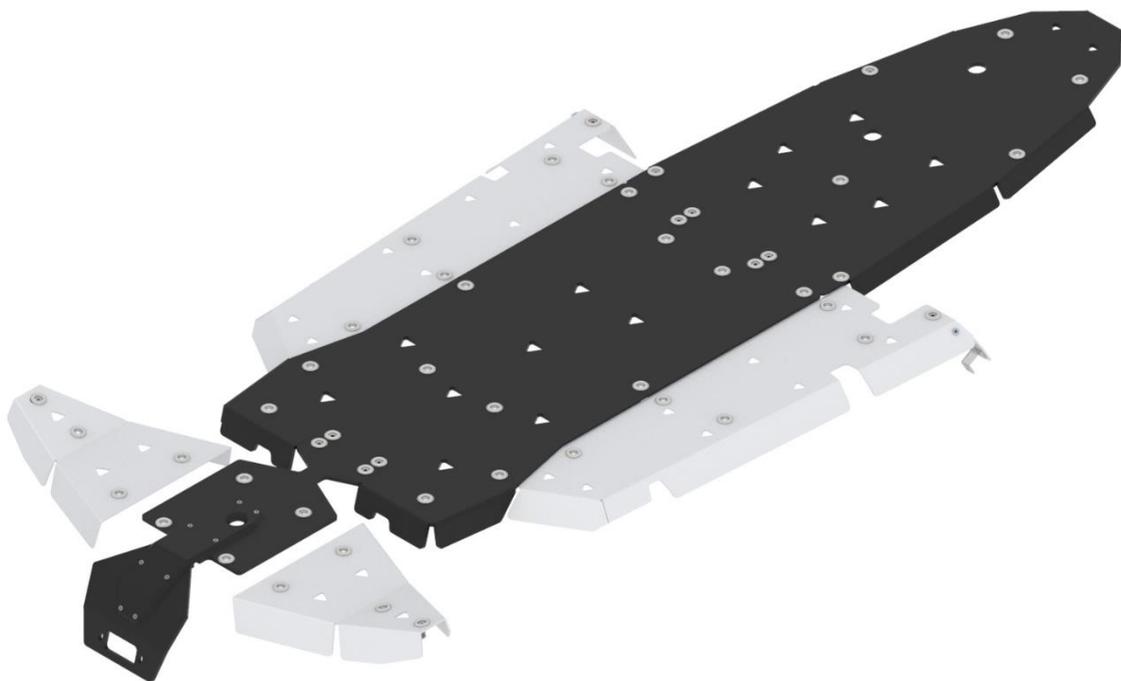

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ob4hvMcg

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.29101K	1
2	Middle protection	02.29102	1
3	Rear protection	02.29103	1
4	Right side protection	02.29104	1
5	Left side protection	02.29105	1
6	Right side protection rear part	02.29106K	1
7	Left side protection rear part	02.29107K	1
8	Front right arm protection	02.29108	1
9	Front left arm protection	02.29109	1
10	Installation plate 1	02.4011	2
11	Installation plate 2	02.5006	4
12	Installation bracket 1	02.6408	1
13	Installation bracket 2	02.8210	2
14	Conic washer Ø6	14.502	3
15	Dished washer	14.503	51
16	Bolt M6x14 DIN933	OT.02.02.040	16
17	Bolt M6x20 DIN933	OT.02.02.060	12
18	Bolt M6x25 DIN933	OT.02.02.070	15
19	Bolt M6x40 DIN933	OT.02.02.100	4
20	Bolt M8x25 DIN933	OT.02.02.190	2
21	Bolt M8x40 DIN933	OT.02.02.220	2
22	Bolt M10x30 DIN933	OT.02.02.320	2
23	Bolt M6x20 DIN7991	OT.02.04.030	3
24	Washer Ø6/15 SFS3738	OT.04.03.020	48
25	Washer M10 DIN125	OT.04.01.040	4
26	Nyloc nut M10 DIN985	OT.03.02.050	2

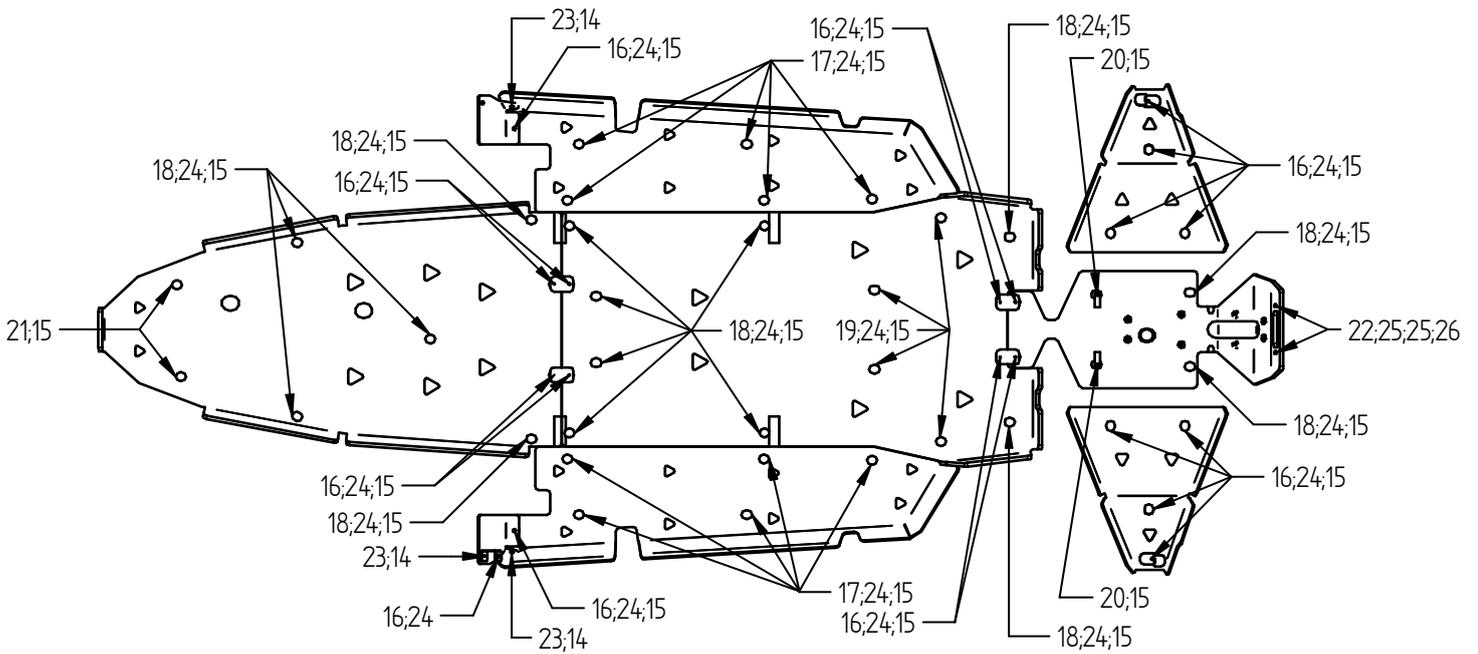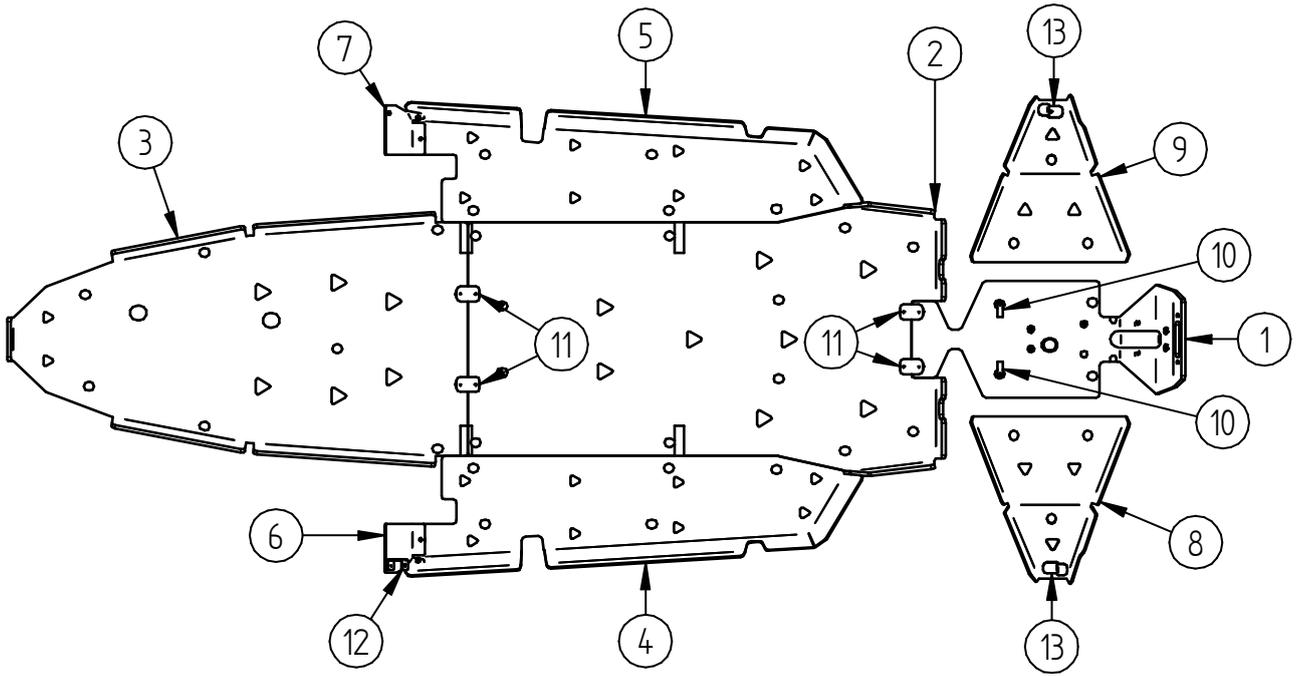

FITTING INSTRUCTIONS


Step 1

Remove winch fairlead, original skid plate parts and bolts shown in the picture.




Step 2

Install middle protection (Pos.2). For fastening use M6x25 bolts (Pos.18), M6x40 bolts (Pos.19), Ø6 mm washers (Pos.24) and dished washers (Pos.15). Do not tighten the bolts completely!

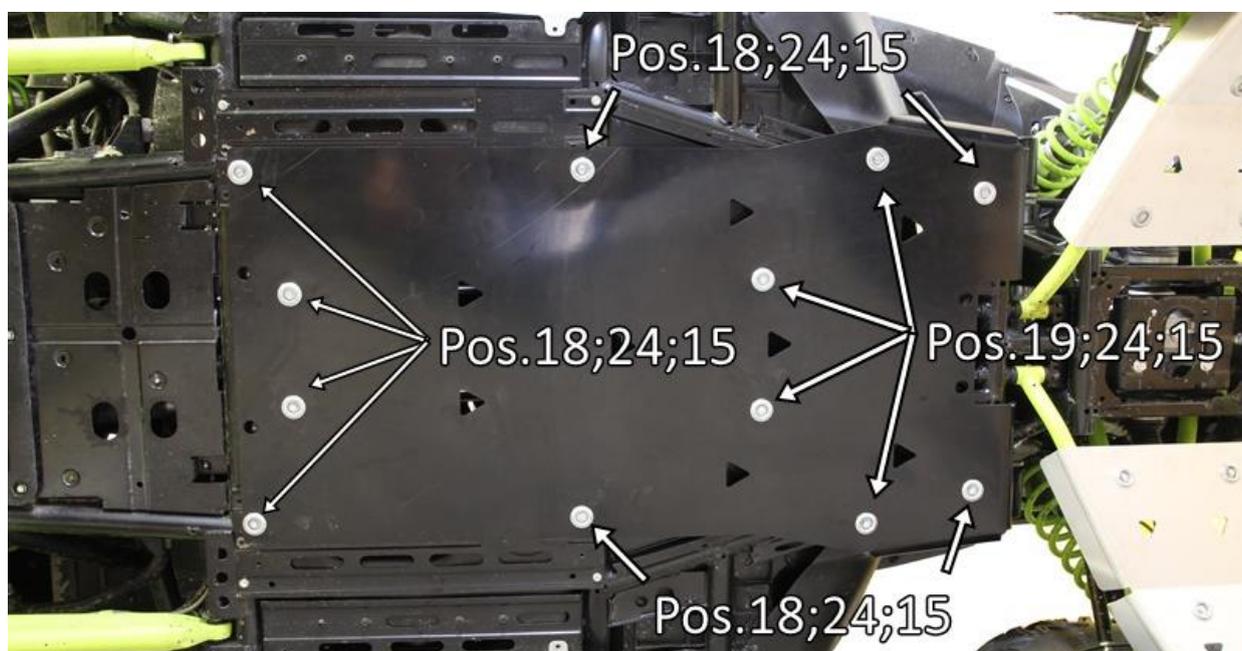

Step 3



Install installation plates (Pos.11). For fastening use M6x14 bolts (Pos.16), Ø6 mm washers (Pos.24) and dished washers (Pos.15).

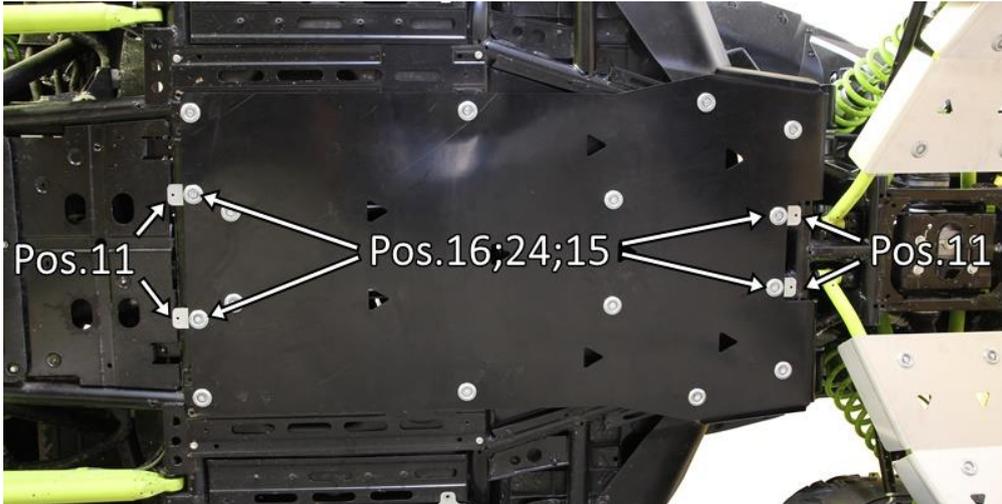

Step 4

Install front protection (Pos.1). For fastening use installation plates (Pos.10), M6x14 bolts (Pos.16) M6x25 bolts (Pos.18), M8x25 bolts (Pos.20), M10x30 bolts (Pos.22), Ø6 mm washers (Pos.24), Ø10 mm washers (pos.25), dished washers (Pos.15) and M10 nyloc nuts (Pos.26). Installation plates (Pos.10) place on the inside of the frame.


Do not tighten the bolts completely!

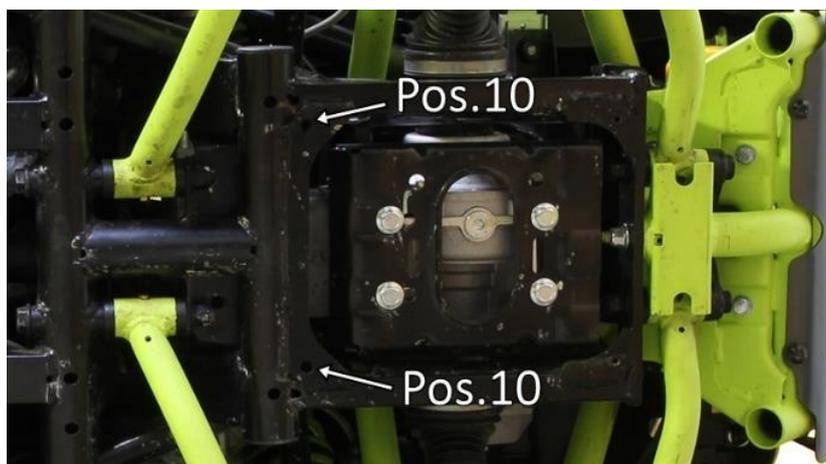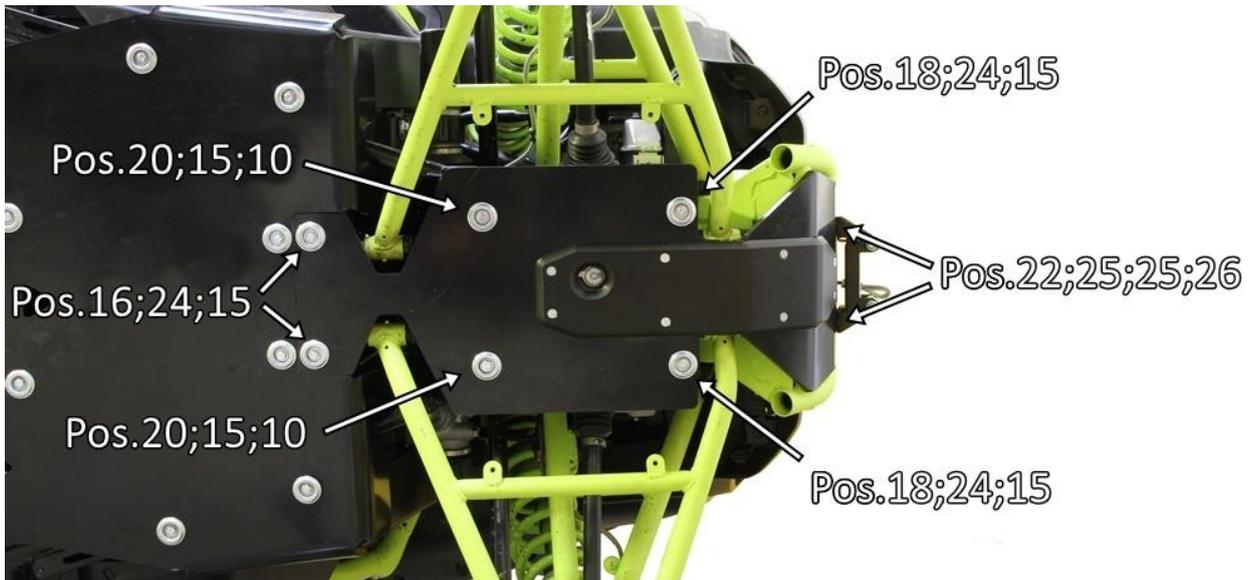

Step 5

Install rear protection (Pos.3). For fastening use M6x14 bolts (Pos.16), M6x25 bolts (Pos.18), M8x40 bolts (Pos.21), Ø6 mm washers (Pos.24) and dished washers (Pos.15).



Do not tighten the bolts completely!

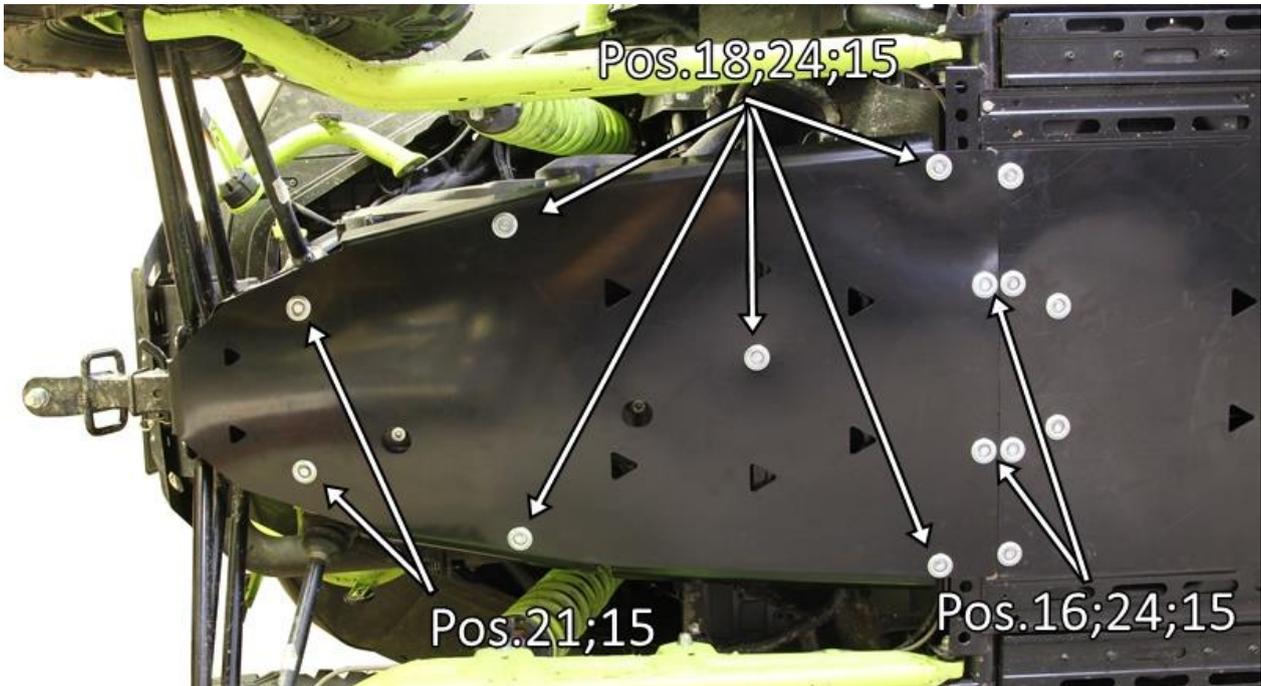

Step 6



Install right side protection (Pos.4) and left side protection (Pos.5). For fastening use M6x20 bolts (Pos.17), Ø6 mm washers (Pos.24) and dished washers (Pos.15).

Tighten all bolts described in previous steps!

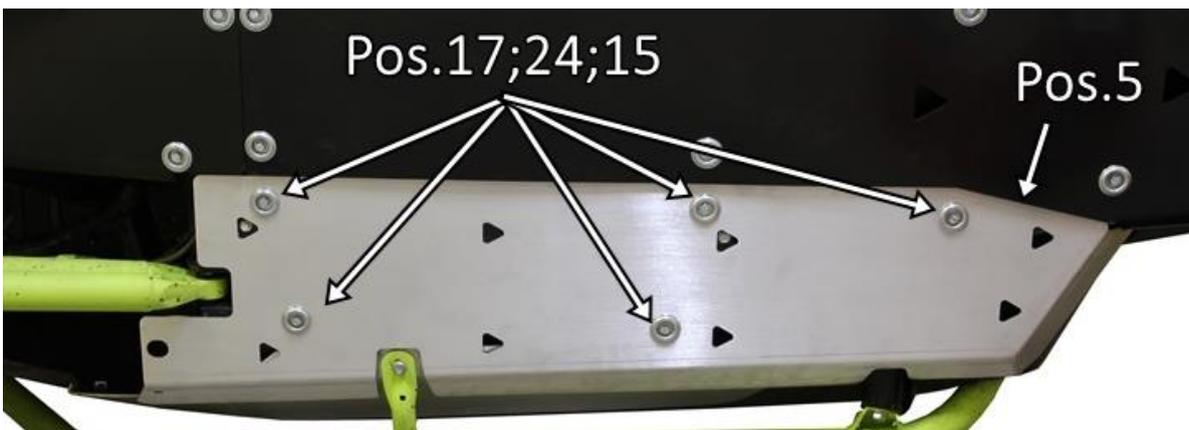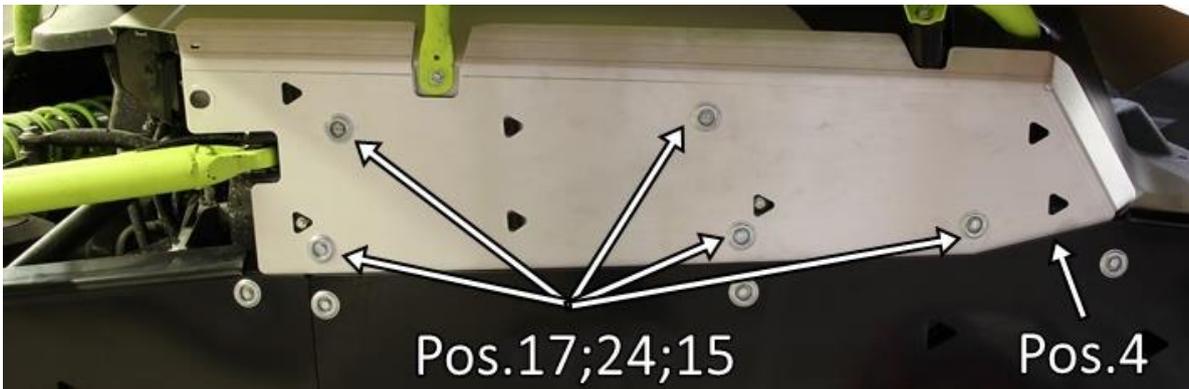


Step 7

Install right side protection rear part (Pos.6). For fastening use installation bracket (Pos.12), M6x14 bolt (Pos.16), M6x20 bolts (Pos.23), Ø6 mm washers (Pos.24), Ø6 mm conic washers (Pos.14) and dished washer (Pos.15).

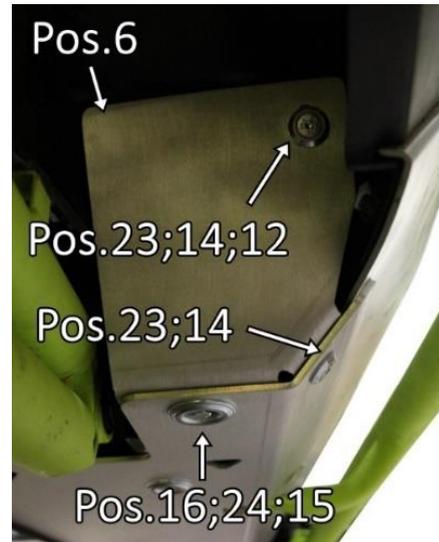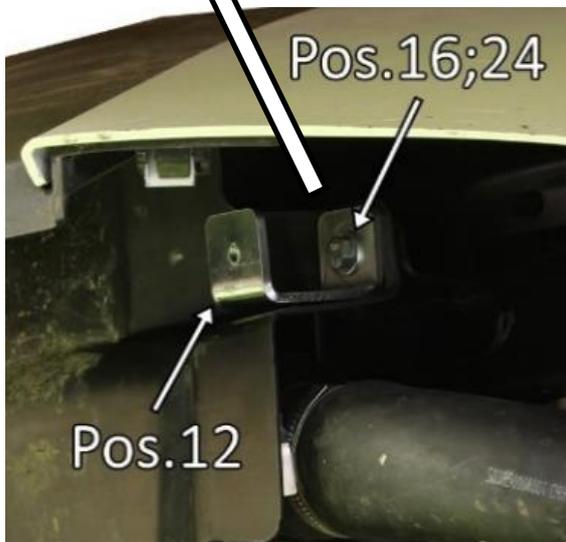



Step 8

Install left side protection rear part (Pos.7). For fastening use M6x14 bolt (Pos.16), M6x20 bolt (Pos.23), Ø6 mm washer (Pos.24), Ø6 mm conic washer (Pos.14) and dished washer (Pos.15).

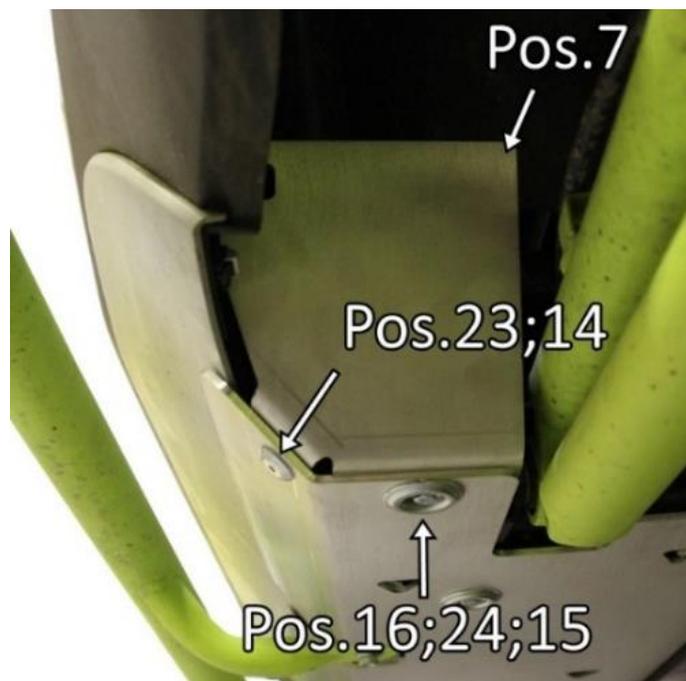

Step 9

Install front right control arm protection (Pos.8) and front left control arm protection (Pos.9). For fastening use installation brackets (Pos.13), M6x14 bolts (Pos.16), Ø6 mm washers (Pos.24) and dished washers (Pos.15).

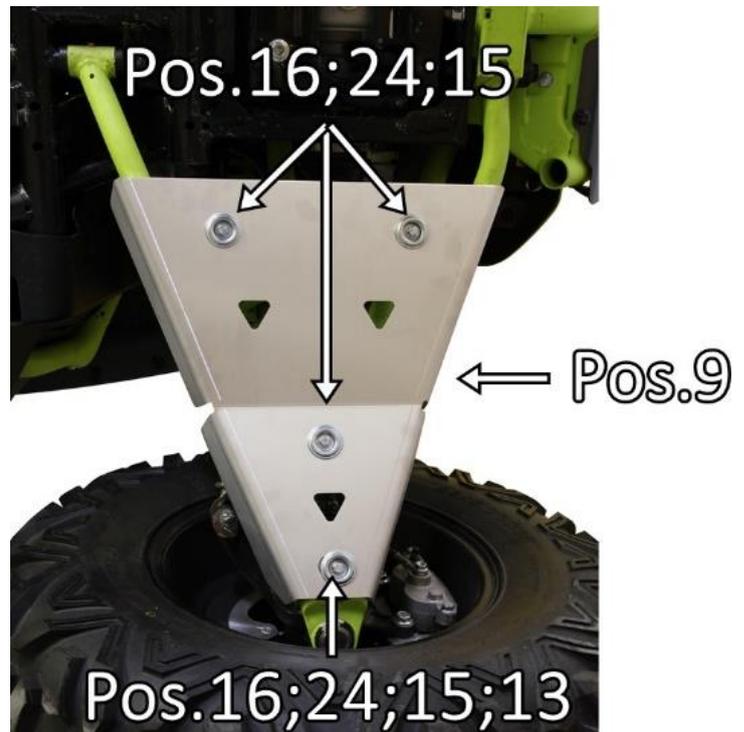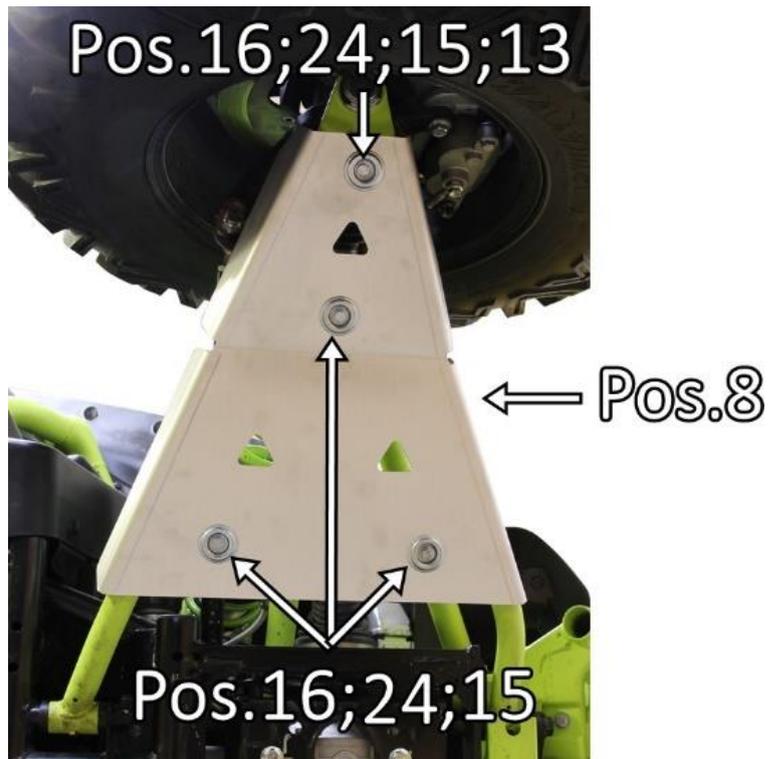

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

