

IRON BALTIC


PLASTIC SKID PLATE

UFORCE

1000 (2022-...)

Code 02.29600

Version 14102023

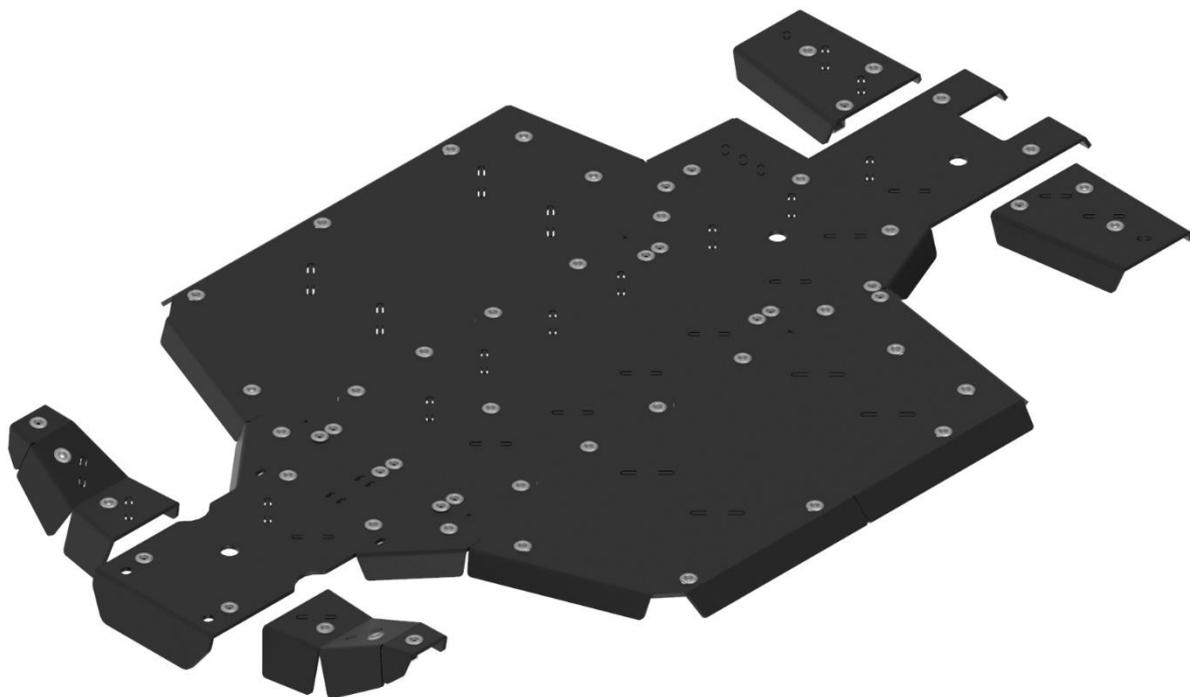

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/3n32C94H

SPECIFICATION


Pos.	Description	Code	Amount
1	Front protection	02.29601	1
2	Middle protection	02.24502	1
3	Rear protection	02.29603	1
4	Left sideprotection	02.24504	1
5	Right sideprotection	02.29605	1
6	Front left arm protection	02.24506K	1
7	Front right arm protection	02.24507K	1
8	Rear right arm protection	02.29608	1
9	Rear left arm protection	02.29609	1
10	Installation plate	02.5006	6
11	Installation bracket	02.5709	2
12	Bracket (longer)	02.6610	1
13	Installation bracket 3	02.8210	2
14	Dished washer	14.503	61
15	Bolt M6x16 DIN933	OT.02.02.050	12
16	Bolt M6x20 DIN933	OT.02.02.060	31
17	Bolt M6x25 DIN933	OT.02.02.070	4
18	Bolt M6x35 DIN933	OT.02.02.090	4
19	Bolt M6x55 DIN933	OT.02.02.130	2
20	Bolt M8x30 DIN933	OT.02.02.200	6
21	Washer Ø6/15 SFS3738	OT.04.03.020	55
22	Nyloc nut M6 DIN985	OT.03.02.030	2

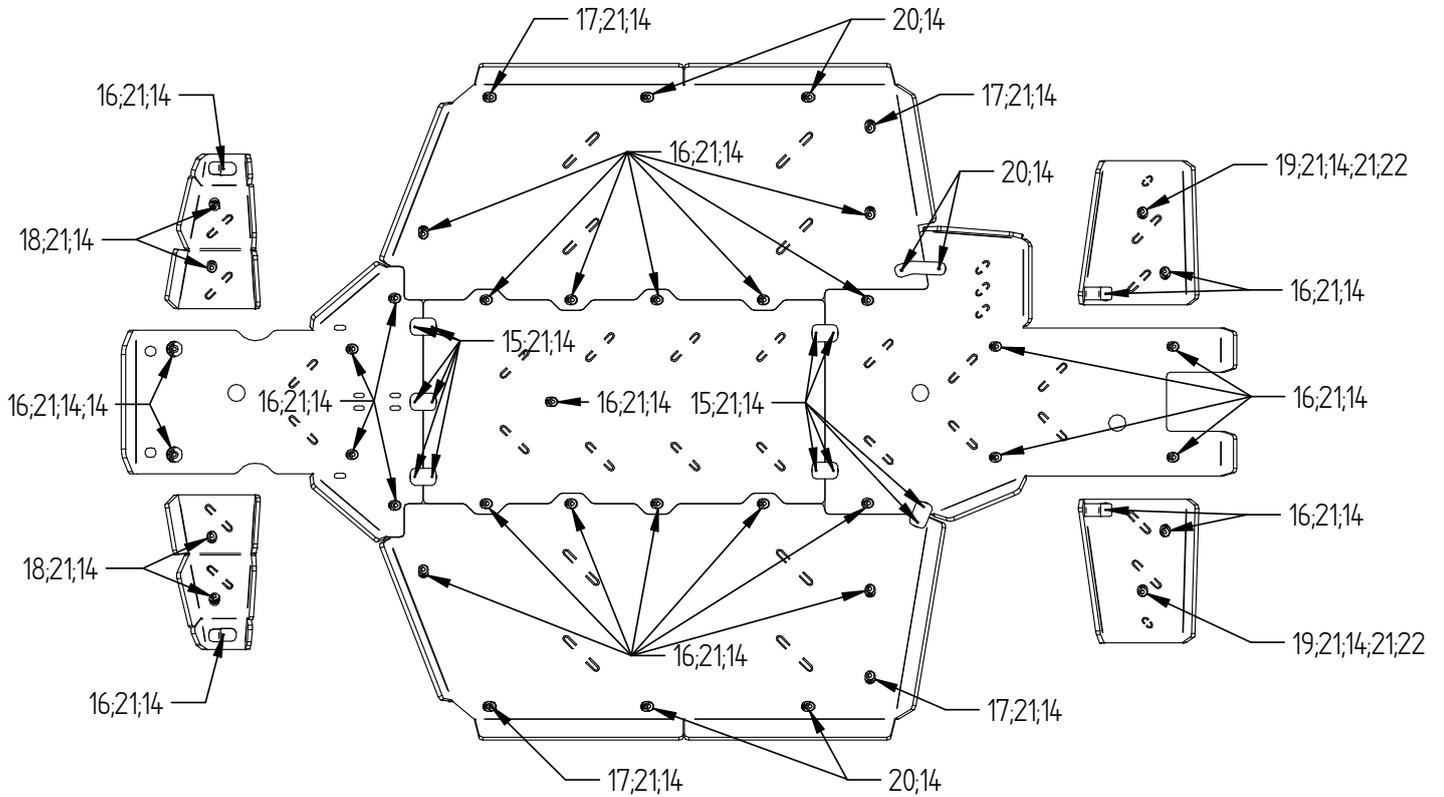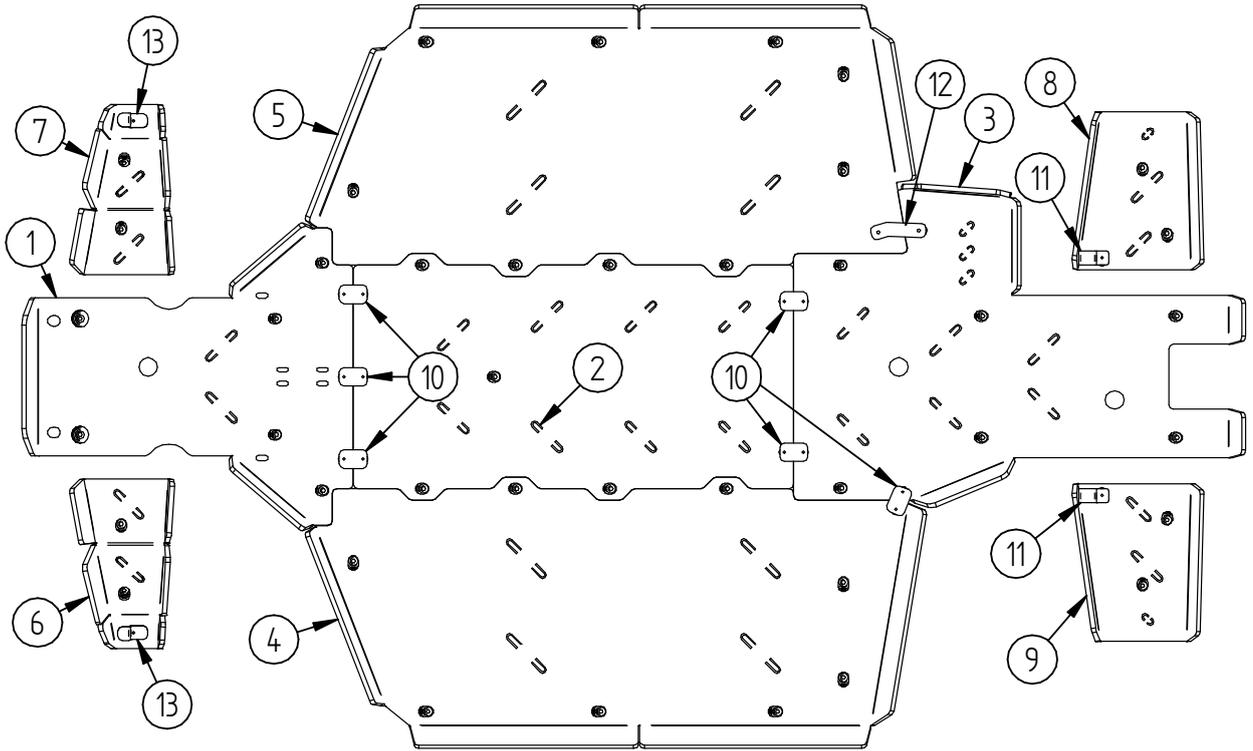

FITTING INSTRUCTIONS



Step 1

Remove all standard plastic covers and bolts indicated with arrows. Remove also front brake caliper protection plastics.

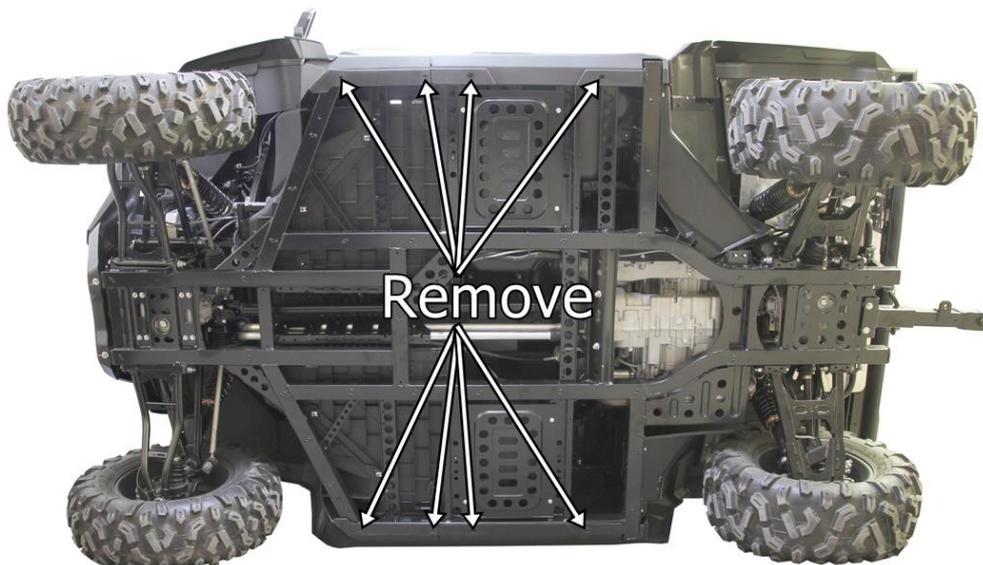


Step 2

Install front arm protections 02.24506K and 02.24507K.

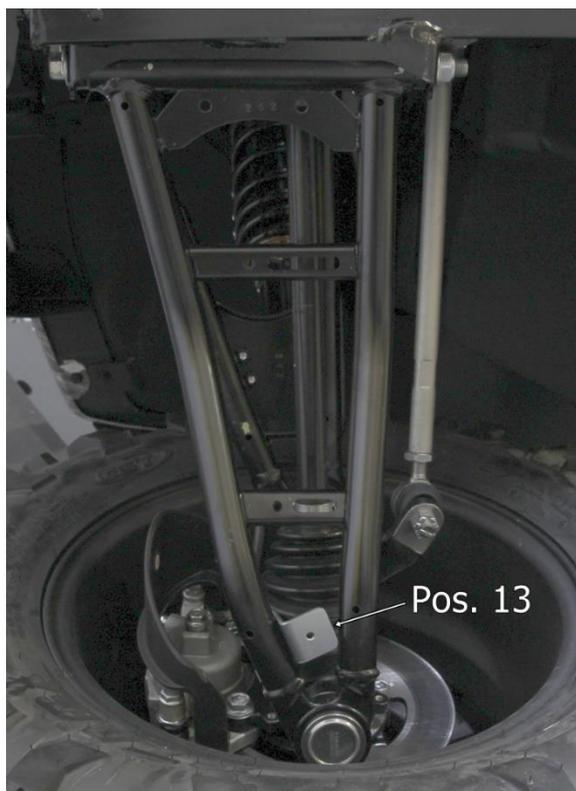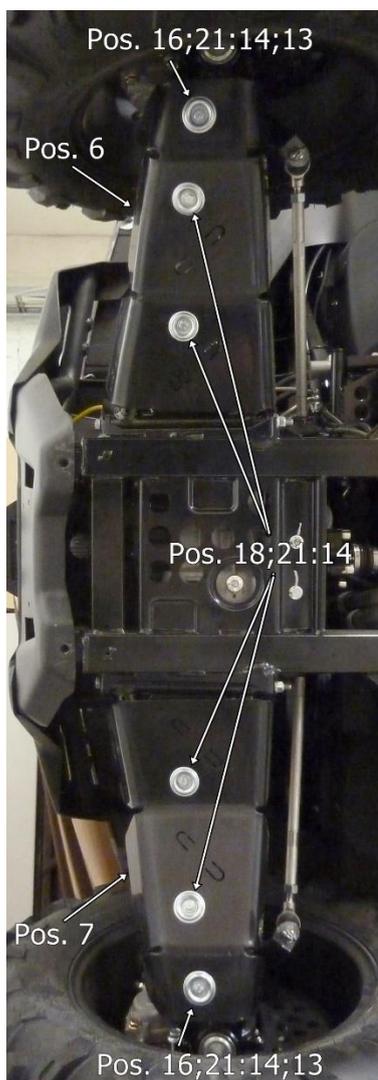



Step 3

Before installing rear arm protections, remove the bolt holding the brake hose clamp. Also insert installation bracket 02.5709 (Pos. 11)

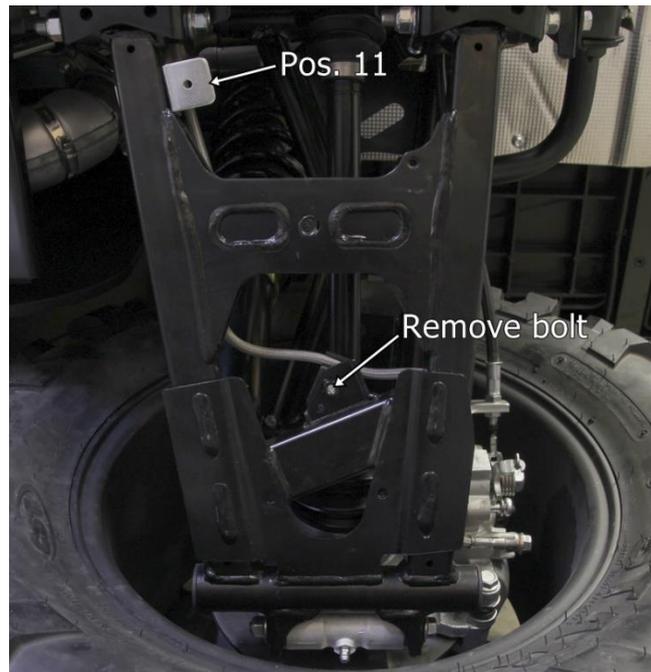



Step 4

Install rear arm protections 02.29608 and 02.29609. Reinstall the brake hose clamp using Nyloc nut (Pos. 22) with washer (Pos. 21).

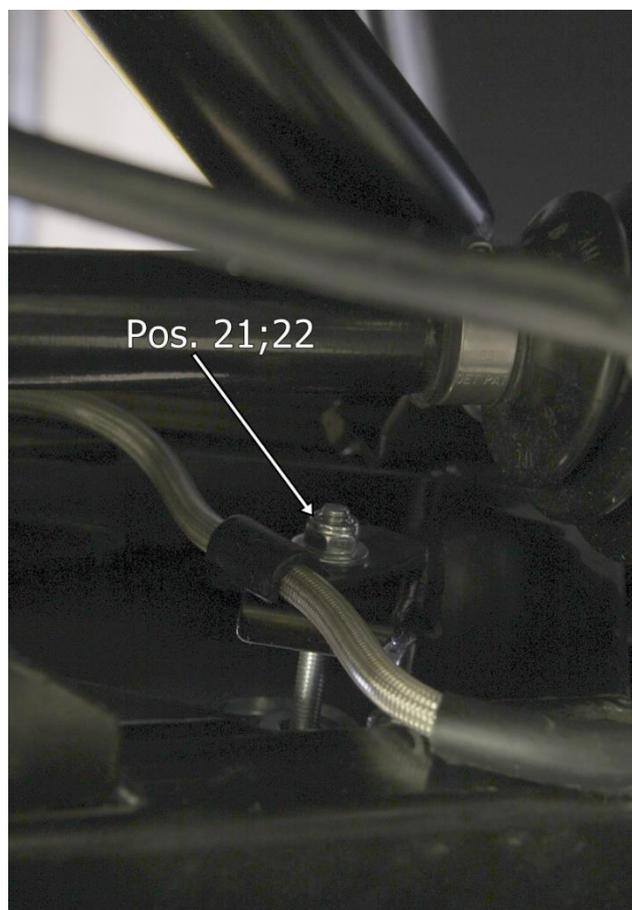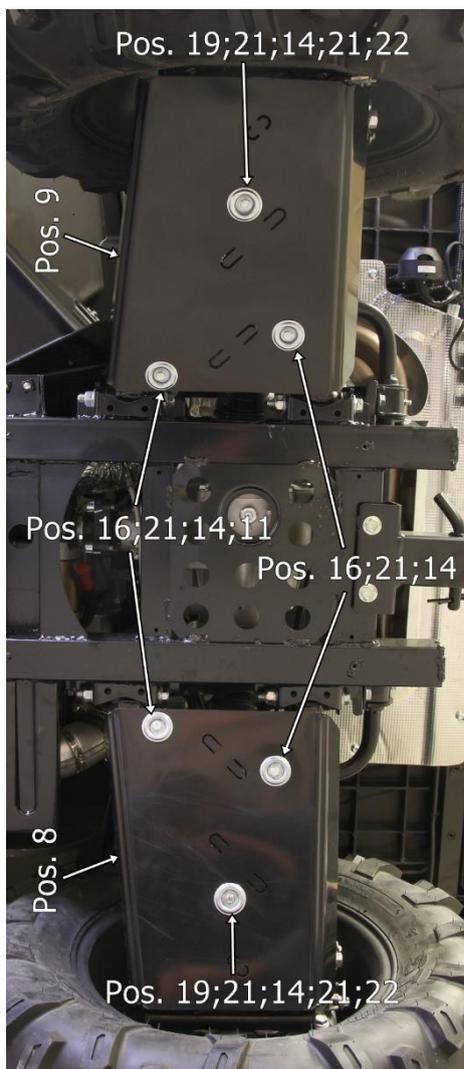


Step 5

Install front protection 02.29601 and plates 02.5006. At the front mounting points, a dished washer must also be installed between the frame and plastic protection.

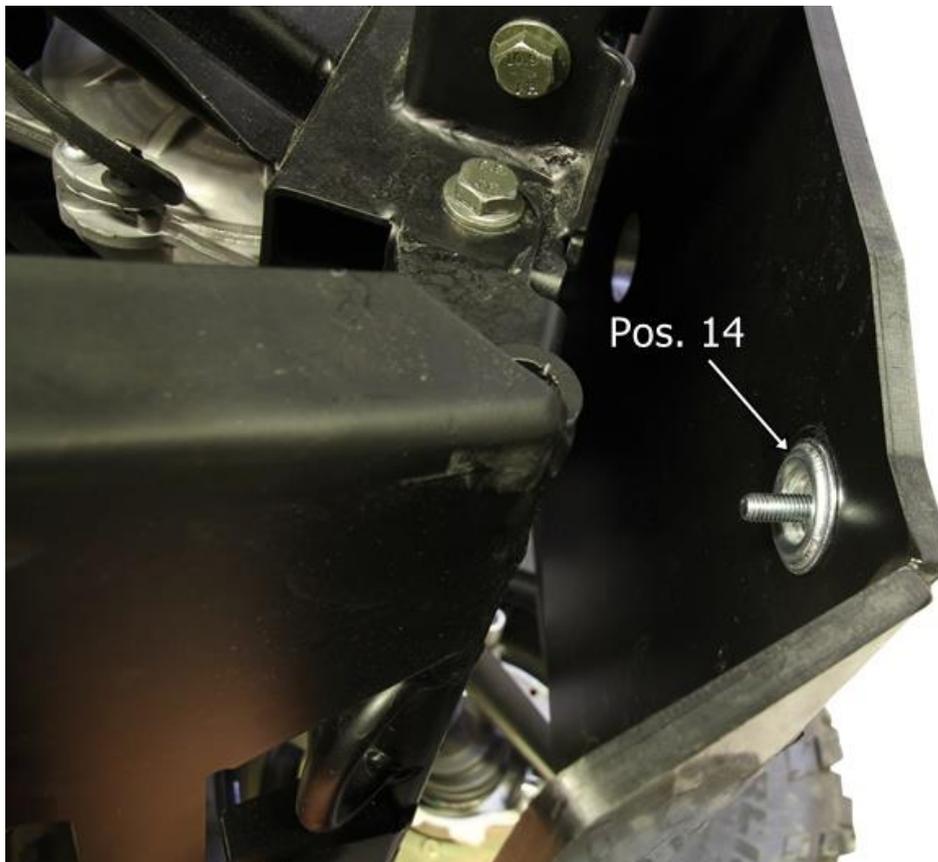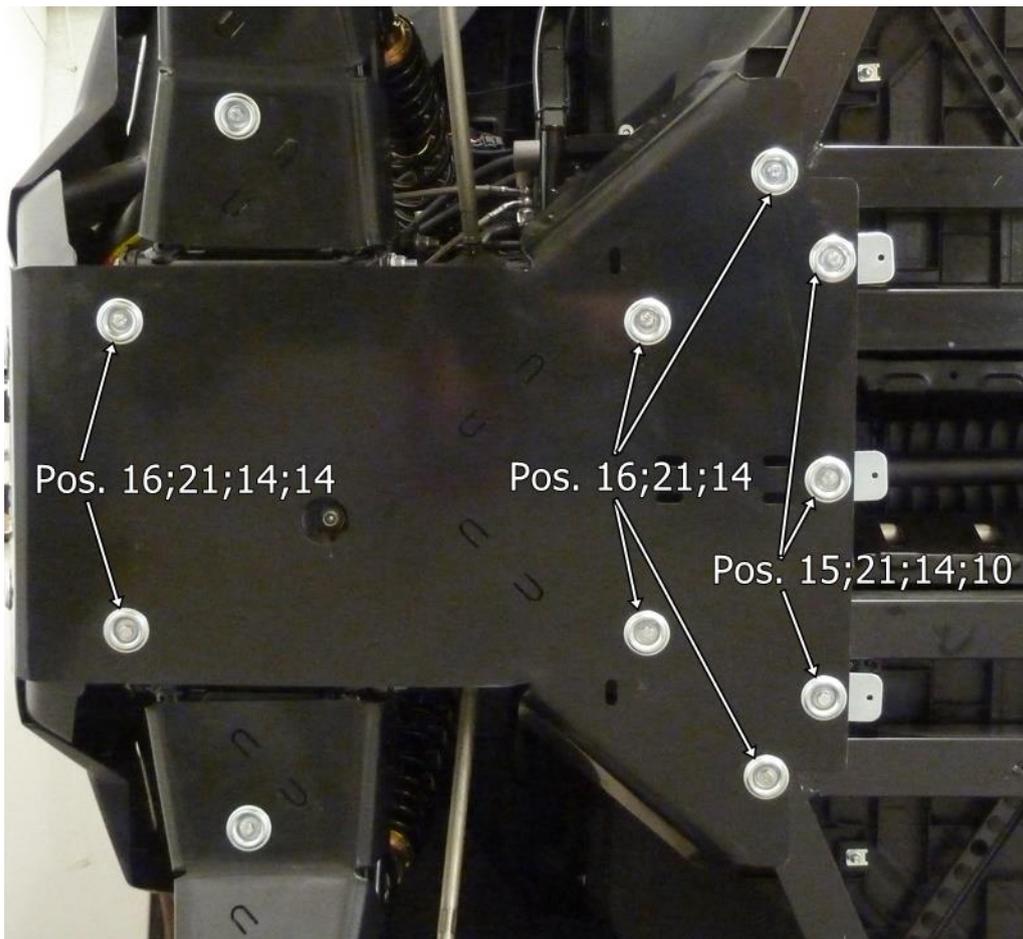


Step 6

Install middle part 02.24502 and plates 02.5006.

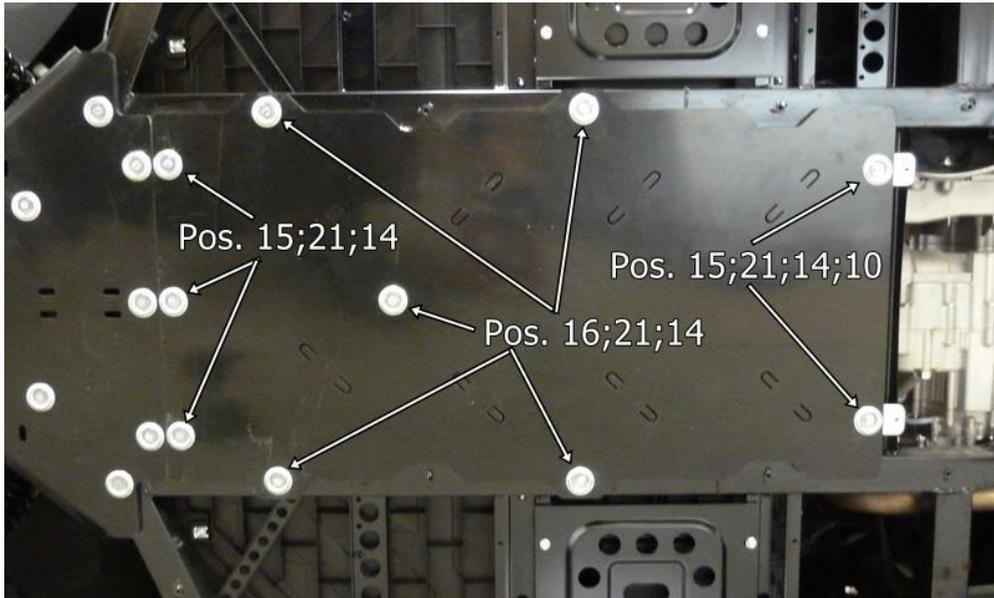


Step 7

Install rear part 02.29603 and plate 02.5006 and bracket 02.6610.

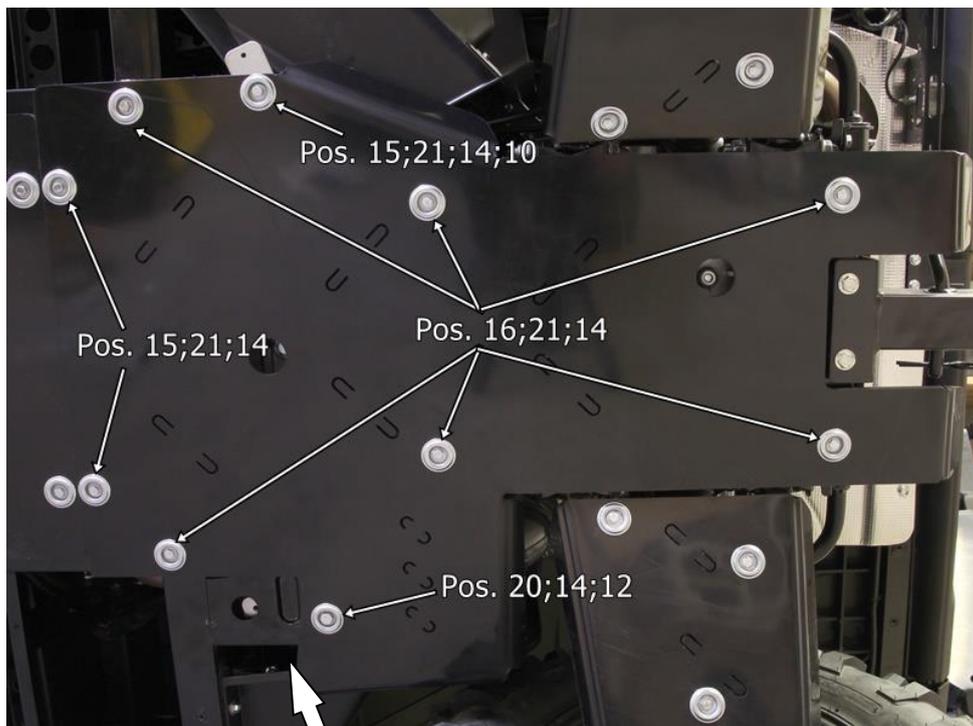

Step 8

Install sideprotections 02.24504 and 02.29605.

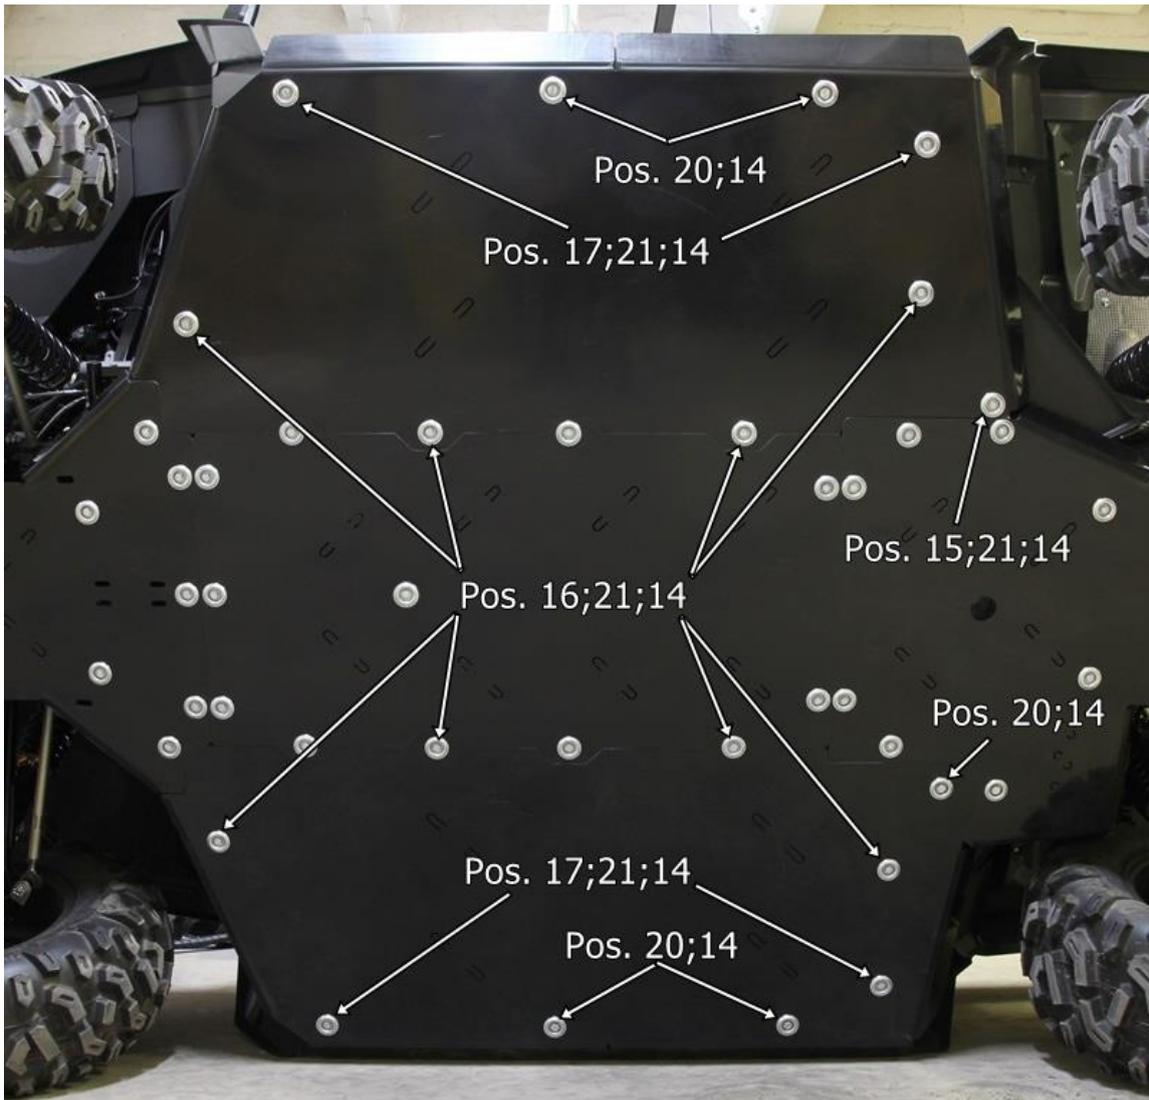

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

