

IRON BALTIC

ALUMINIUM SKID PLATE

CFORCE

625 Touring (2023-...)

Code 02.29900

Version 05032025



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/pDyXe4b6

SPECIFICATION



Pos.	Description	Code	Amount
1	Front protection	02.25701K	1
2	Middle protection	02.25702K	1
3	Rear protection	02.25703K	1
4	Right sideprotection	02.25704	1
5	Left sideprotection	02.25705	1
6	Front right arm protection	02.27104	1
7	Front left arm protection	02.27105	1
8	Rear right arm protection	02.28608	1
9	Rear left arm protection	02.28609	1
10	Installation plate	02.718	3
11	Connecting plate	02.5006	9
12	Installation bracket	02.5709	5
13	Rear arm bracket	02.8210	2
14	Oil hole plate	02.15006K	1
15	Distance plate	05.3902	3
16	Conical washer 6	14.502	6
17	Dished washer	14.503	41
18	Bolt M6x20 DIN7991	OT.02.04.030	6
19	Bolt M6x14 DIN933	OT.02.02.040	25
20	Bolt M6x20 DIN933	OT.02.02.060	7
21	Bolt M6x30 DIN933	OT.02.02.080	4
22	Bolt M6x35 DIN933	OT.02.02.090	6
23	Bolt M6x45 DIN933	OT.02.02.110	2
24	Bolt M10x1,25-50 DIN912	OT.02.06.058	2
25	Washer Ø6/15 SFS3738	OT.04.03.020	54
26	Washer Ø10 DIN125	OT.04.01.040	2
27	Nyloc nut M6 DIN985	OT.03.02.030	10

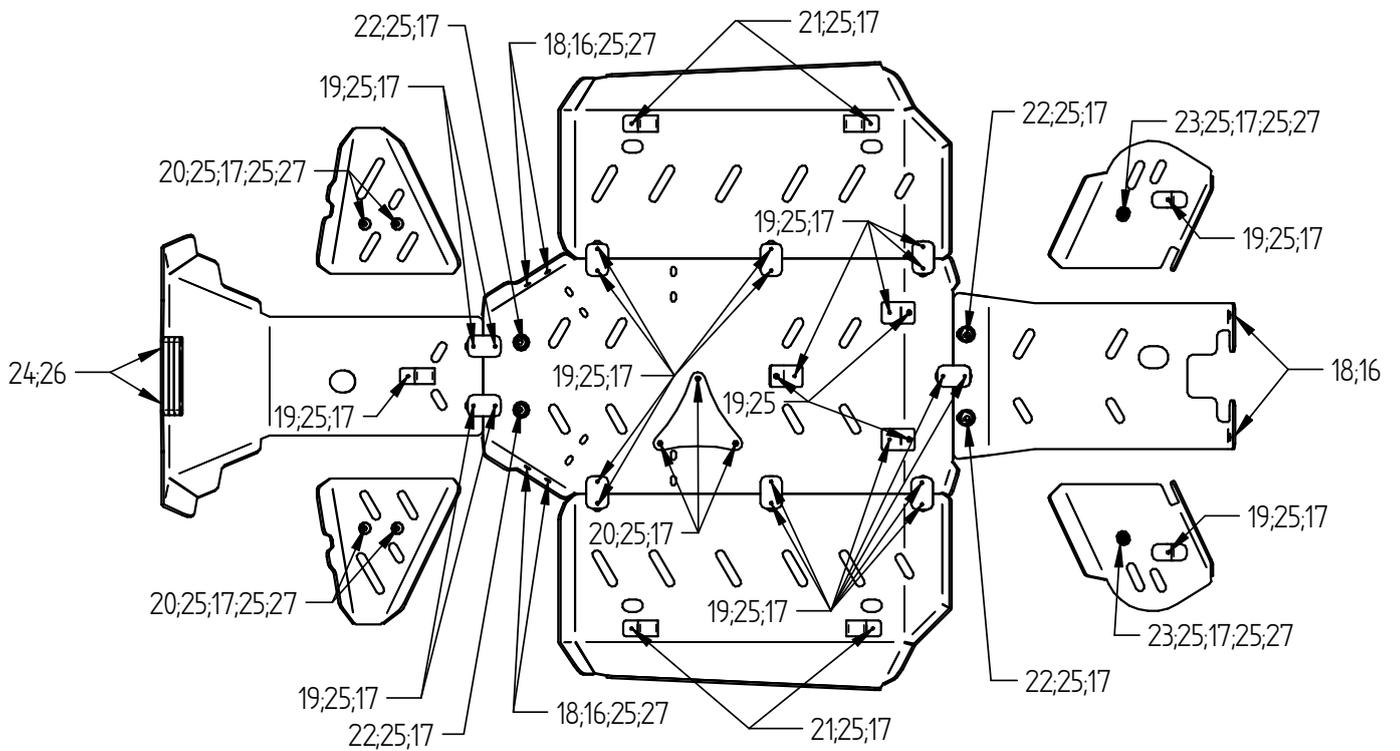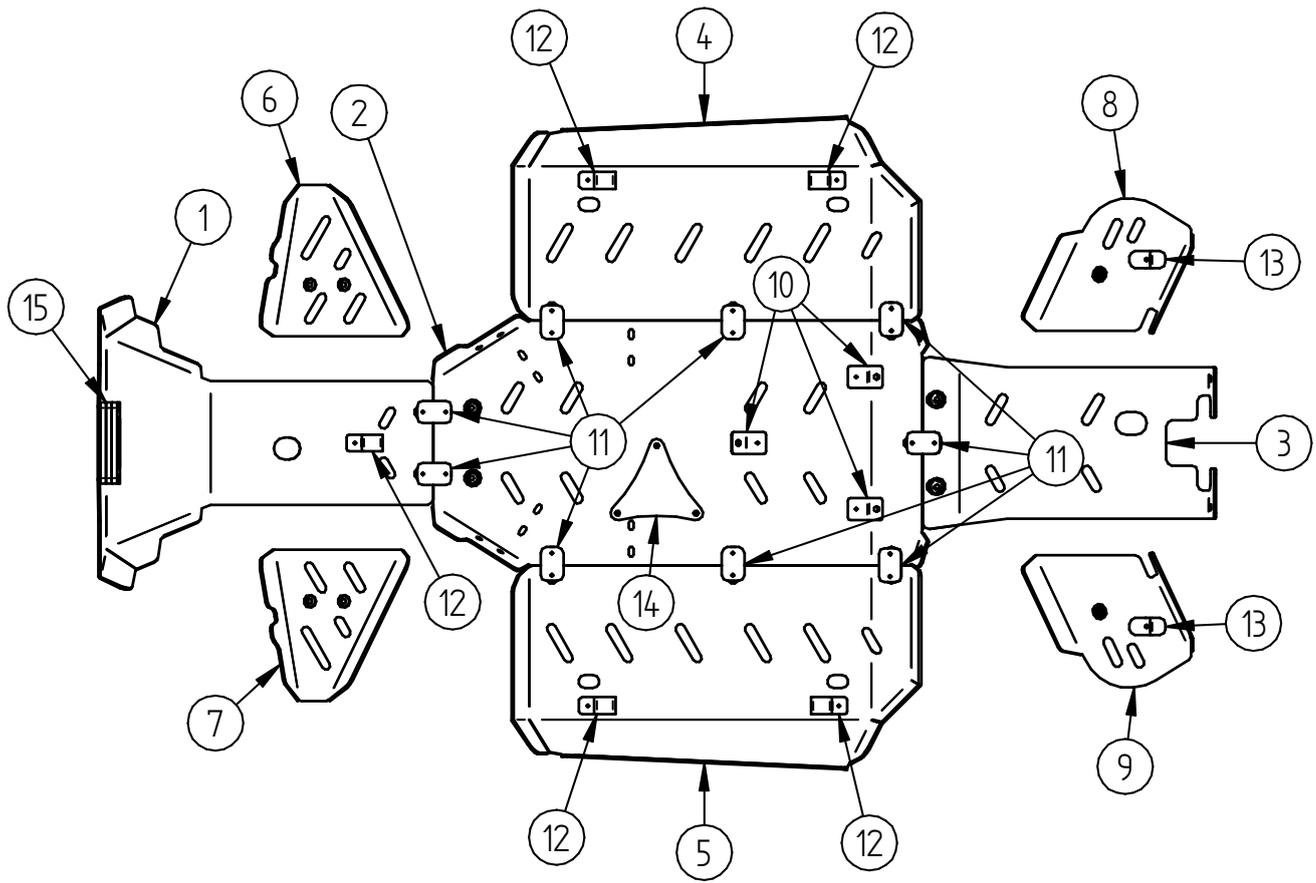

FITTING INSTRUCTIONS


Step 1

Remove standard skid plate, plastic mud deflectors and winch fairlead

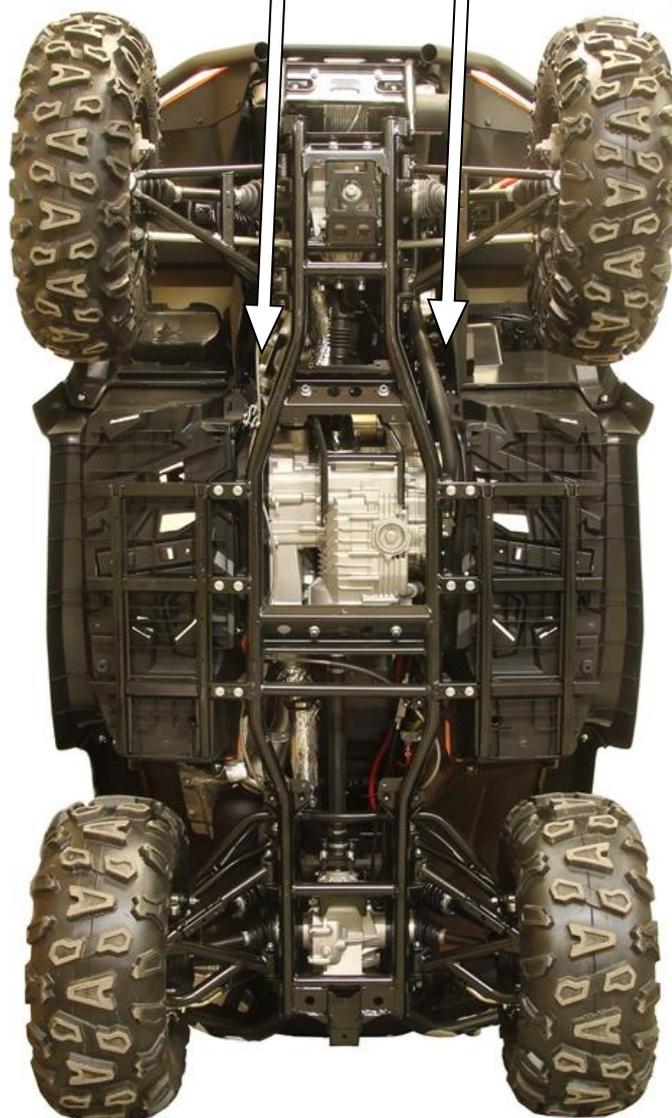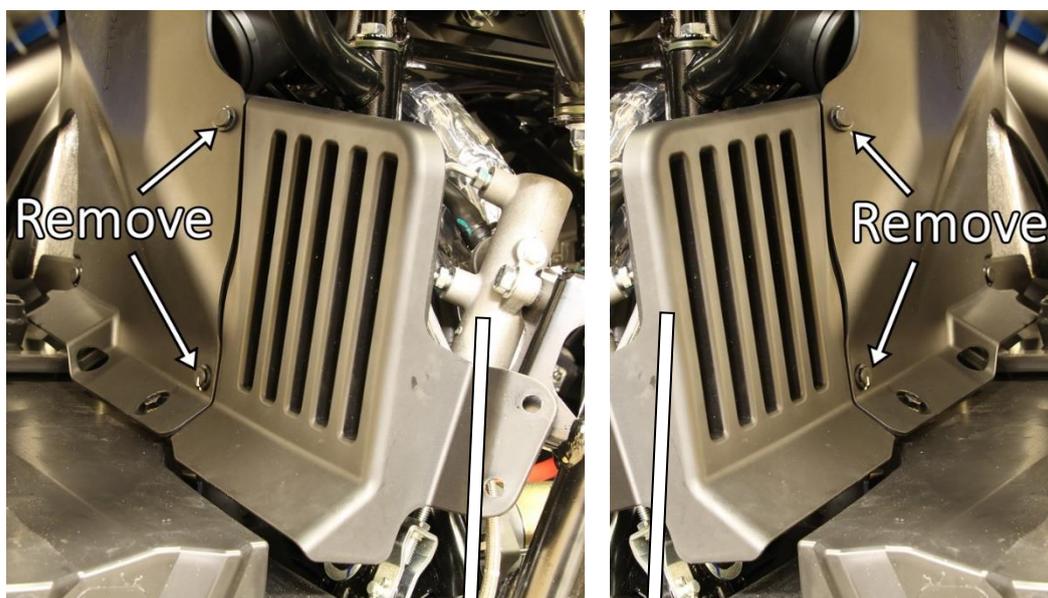


Step 2

Install installation plates 02.718 (Pos. 10) and brackets 02.5709 (Pos. 12) to the ATV frame.

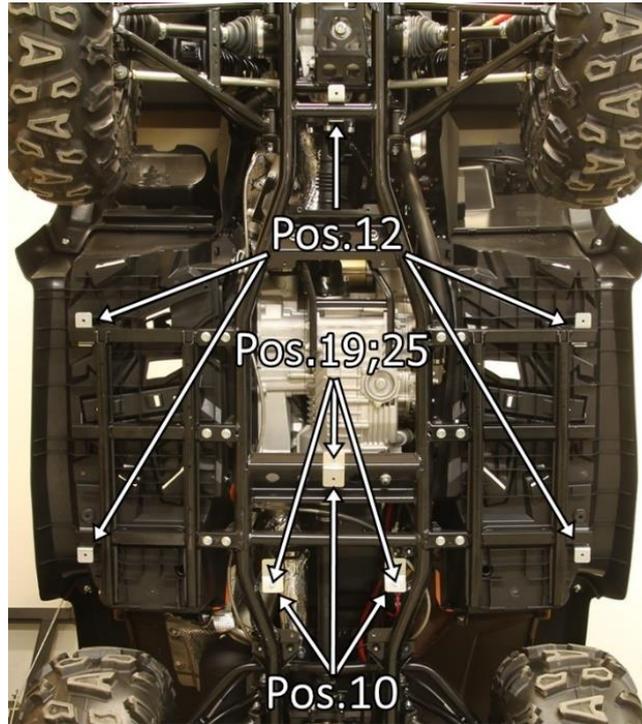


Step 3

Install oil hole plate 02.15006K (Pos. 14) and original mud deflectors, removed at Step 1, to the middle part.

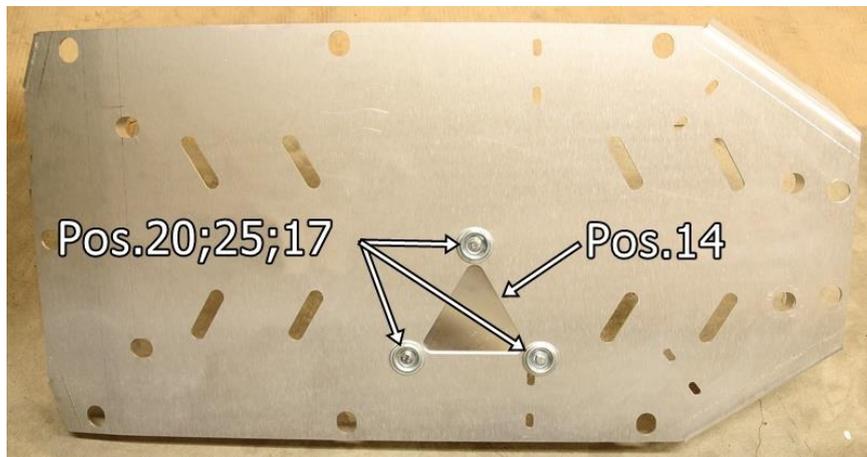


Step 4

Install middle protection 02.25702K (Pos. 2).
Use original plastic clips to fasten mud deflectors.

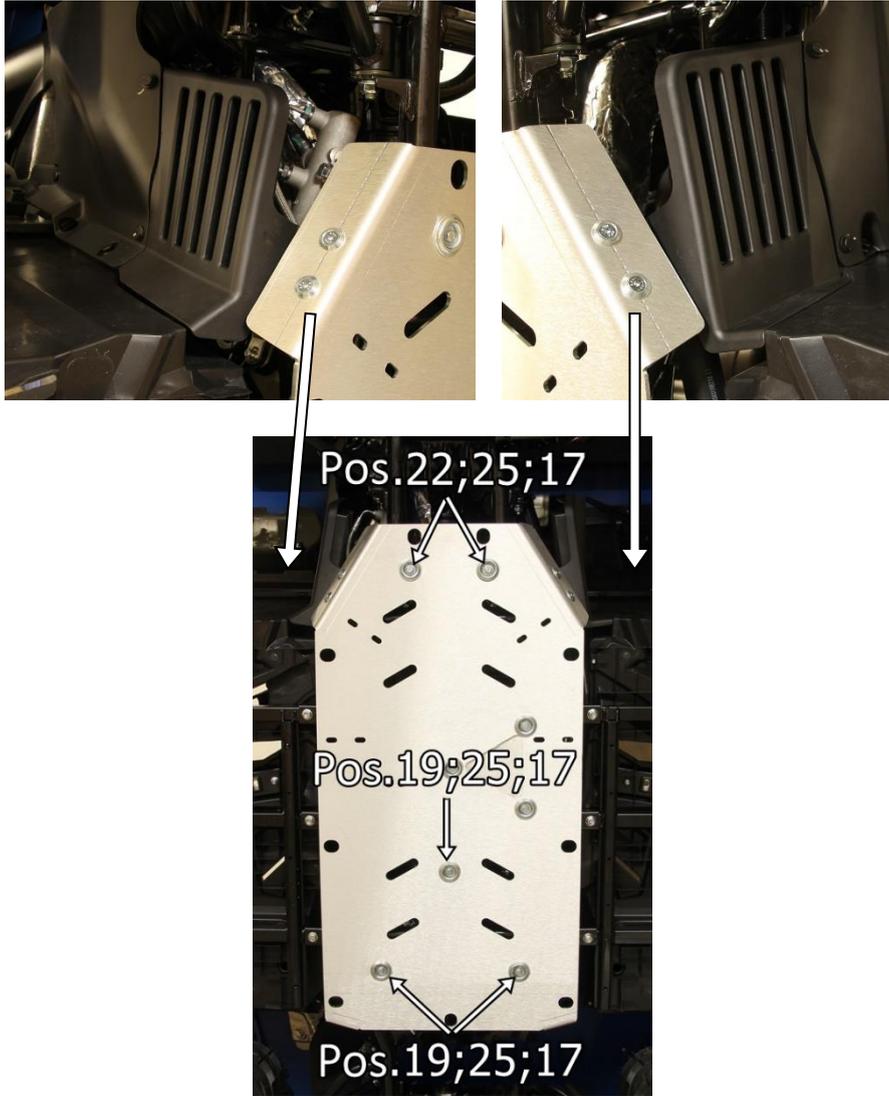

Step 5


Install connecting plates 02.5006 (Pos. 11) to middle part.

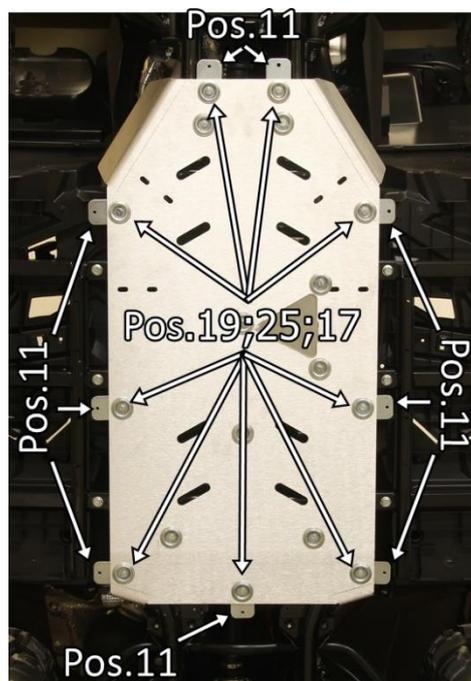

Step 6


Install skid plate front part 02.25701K (Pos. 1). Depending on the ATV model, install 2 or 3 distance plates 05.3902 between the skid plate front part and original winch fairlead holder.

Pos.26 washers not needed when installing with rope fairlead.

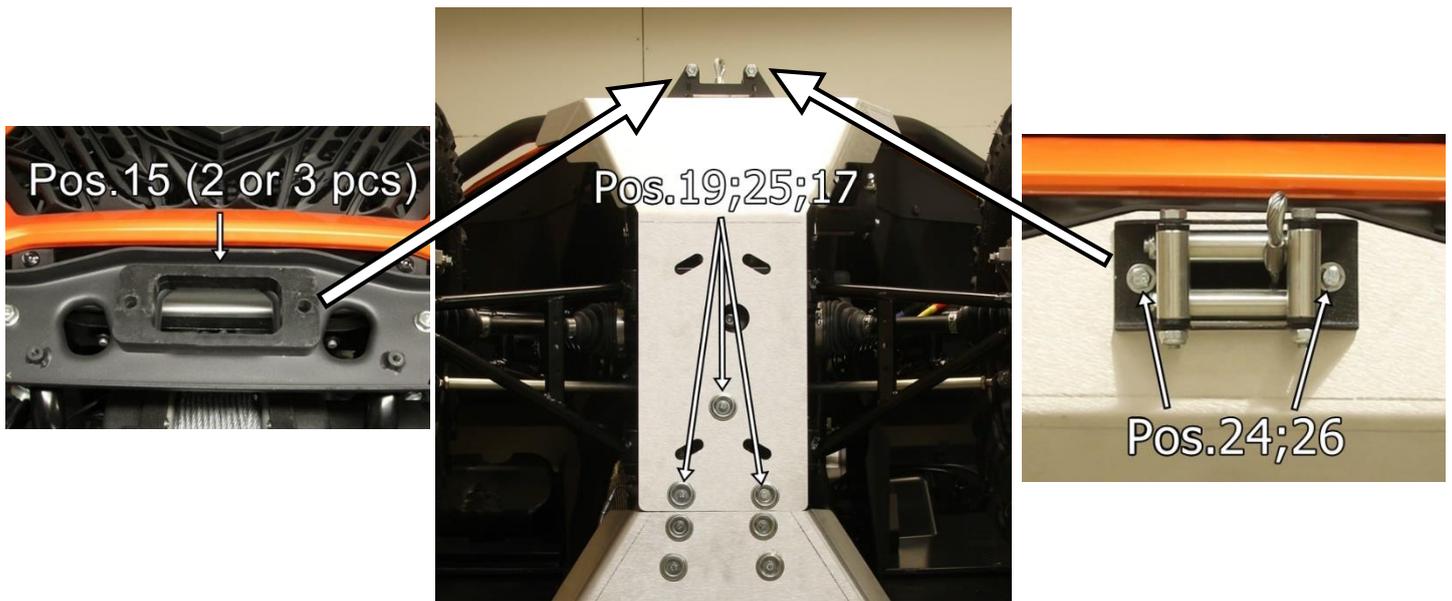


Step 7

Install skid plate rear part 02.25703K (Pos. 3).

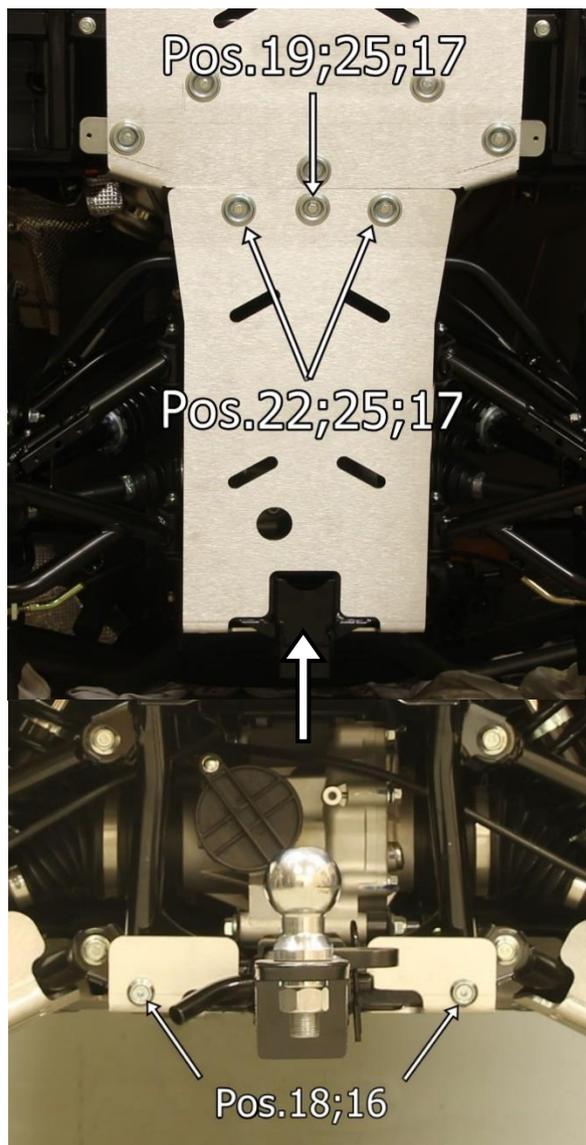

Step 8

Install sideprotections 02.25704 (Pos.4) and 02.25705 (Pos.5).

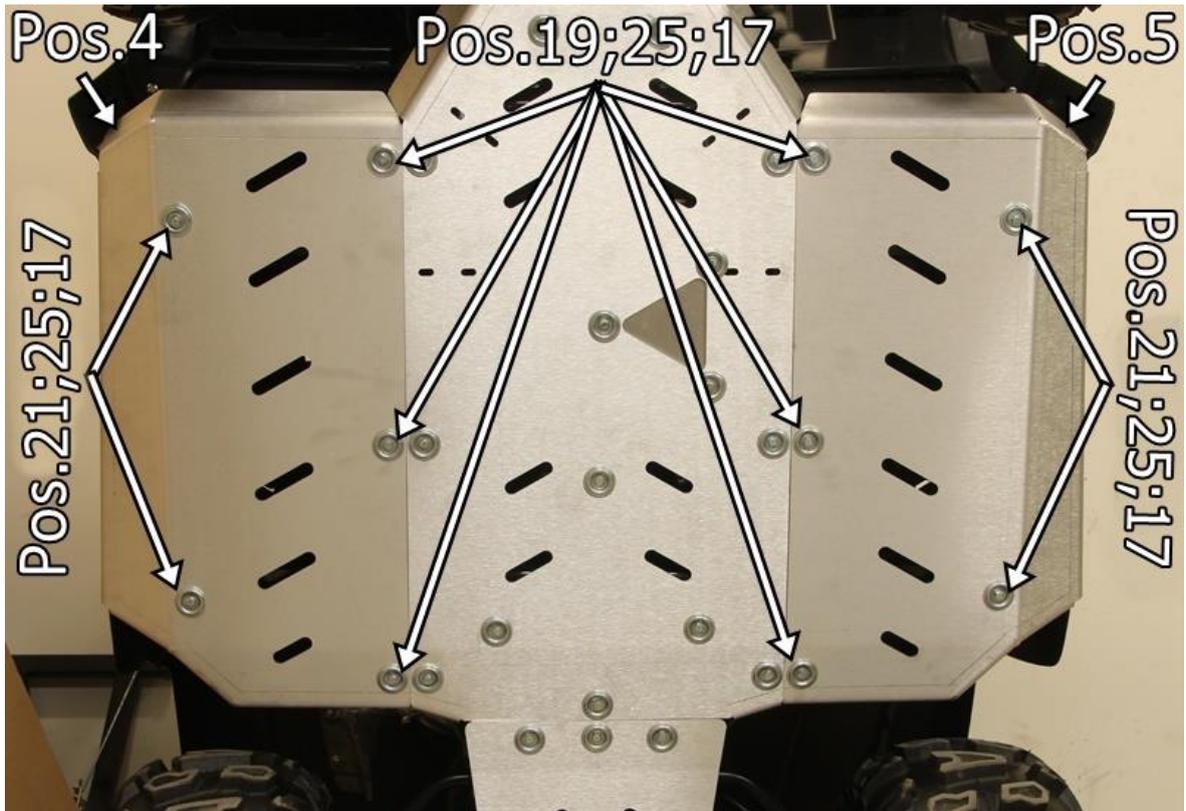

Step 9

Install front A-arms protections 02.27104 (Pos.6) and 02.27105 (Pos.7).




Step 10

Install rear A-arms protections 02.28608 (Pos.8) and 02.28609 (Pos.9).



Step 11

To remove the oil cover plate, remove two bolts indicated with arrows and loosen the third bolt. Slide the plate away.

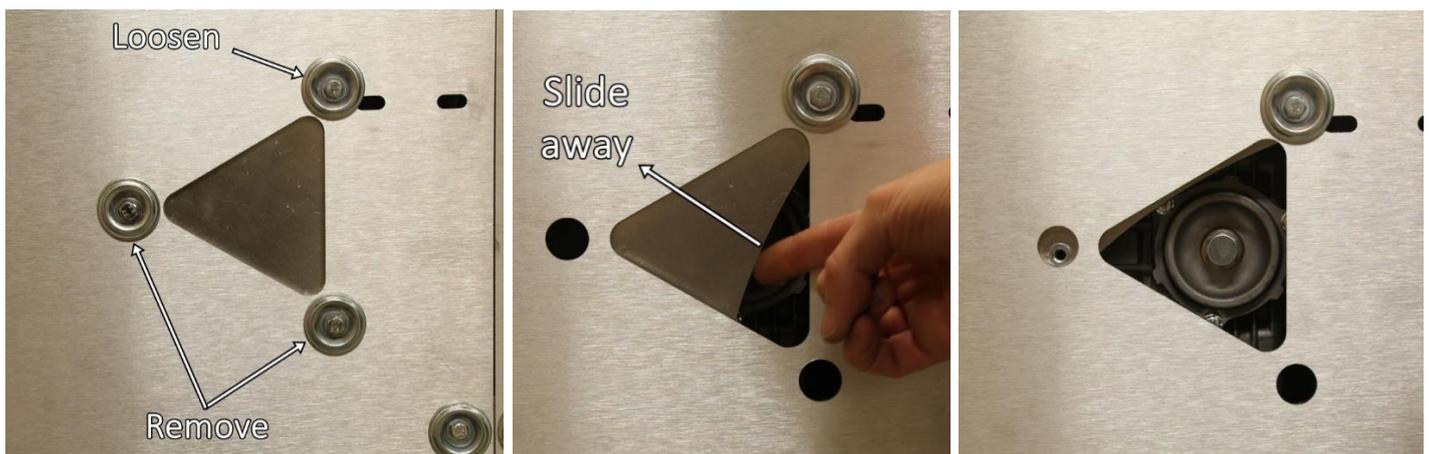

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

