



[code.ironbaltic.com/u/5jSn0GmT](https://code.ironbaltic.com/u/5jSn0GmT)

## ALUMINIUM SKID PLATE

# LONCIN / GOES

## XWOLF 700

Code 02.30100

Version 15102023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.30101K	1
2	Middle protection	02.30102	1
3	Rear protection	02.30103K	1
4	Front right arm protection	02.30104	1
5	Front left arm protection	02.30105	1
6	Rear right arm protection	02.30106	1
7	Rear left arm protection	02.30107	1
8	Installation plate	02.5006	6
9	Installation bracket	02.5710	2
10	Dished washer	14.503	42
11	Bolt M6x12 DIN933	OT.02.02.030	14
12	Bolt M6x16 DIN933	OT.02.02.050	20
13	Bolt M6x30 DIN933	OT.02.02.080	2
14	Bolt M6x40 DIN933	OT.02.02.100	2
15	Bolt M6x45 DIN933	OT.02.02.110	4
16	Washer Ø6/15 SFS3738	OT.04.03.020	46
17	Nyloc nut M6 DIN985	OT.03.02.030	4

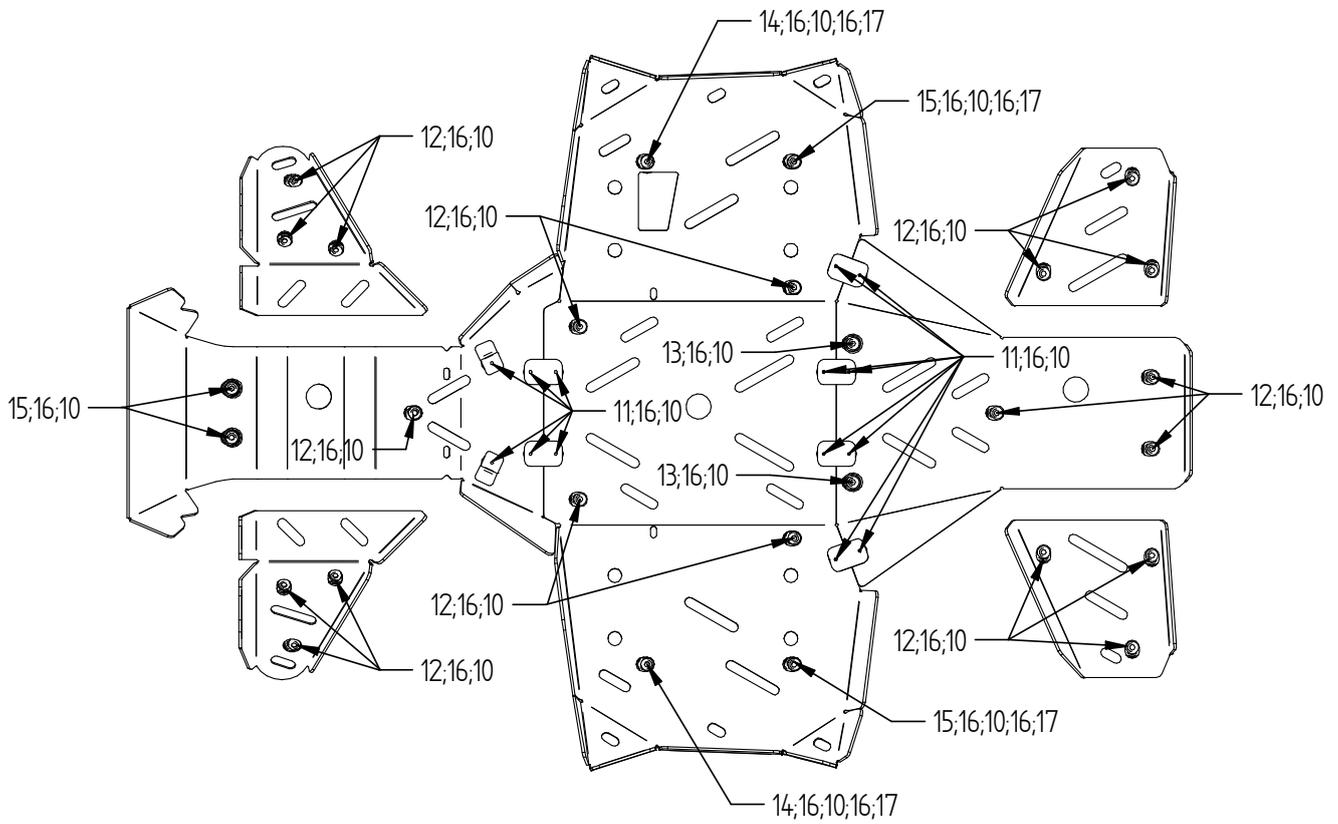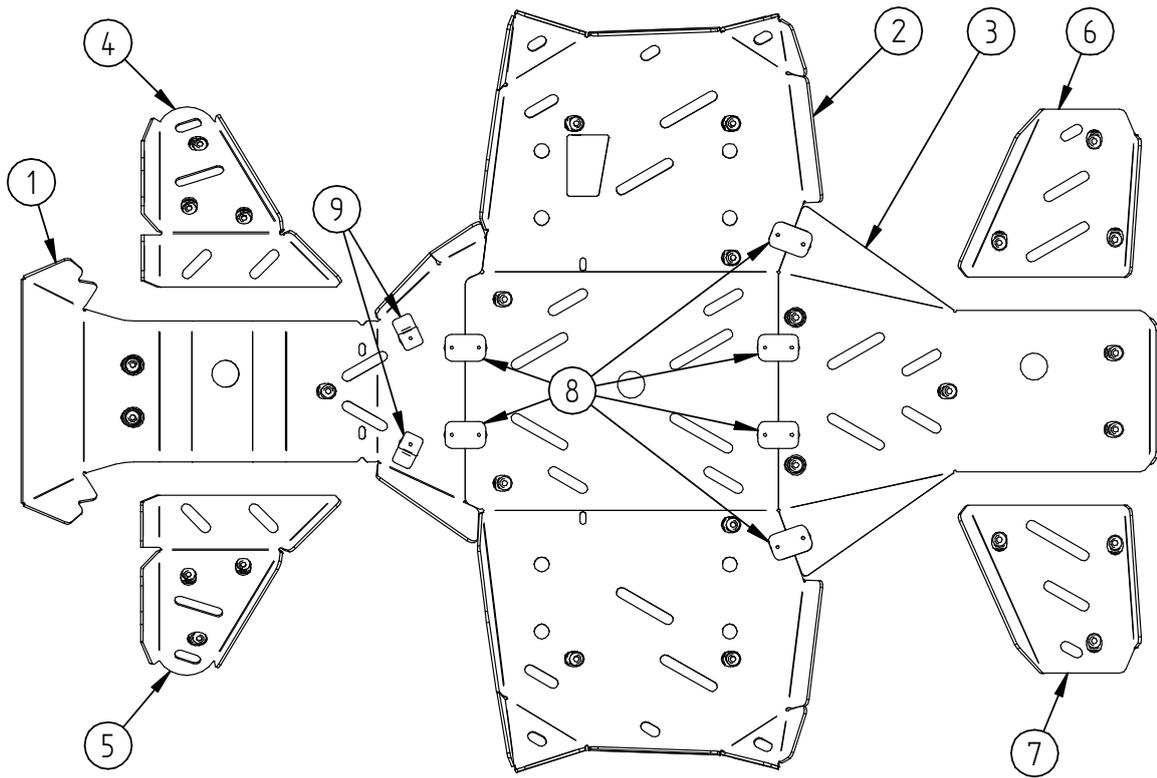


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers and remove bolts shown in the picture.




**Step 2** Install front arm protections 02.30104 and 02.30105.

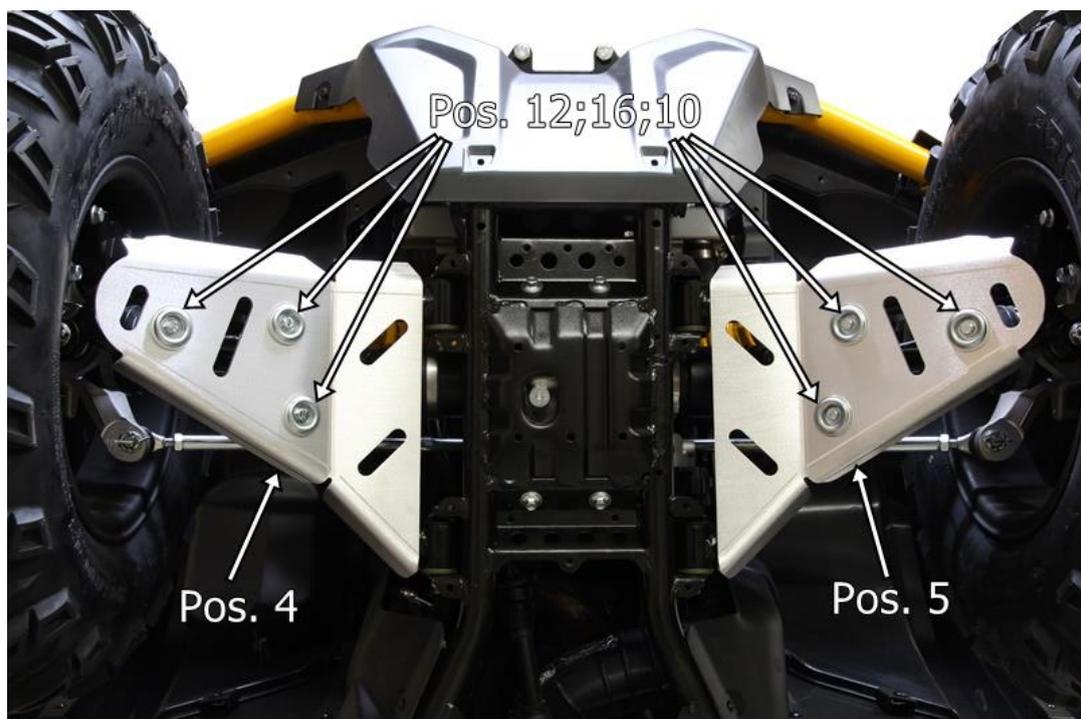

**Step 3**

Install rear arm protections 02.30106 and 02.30107.

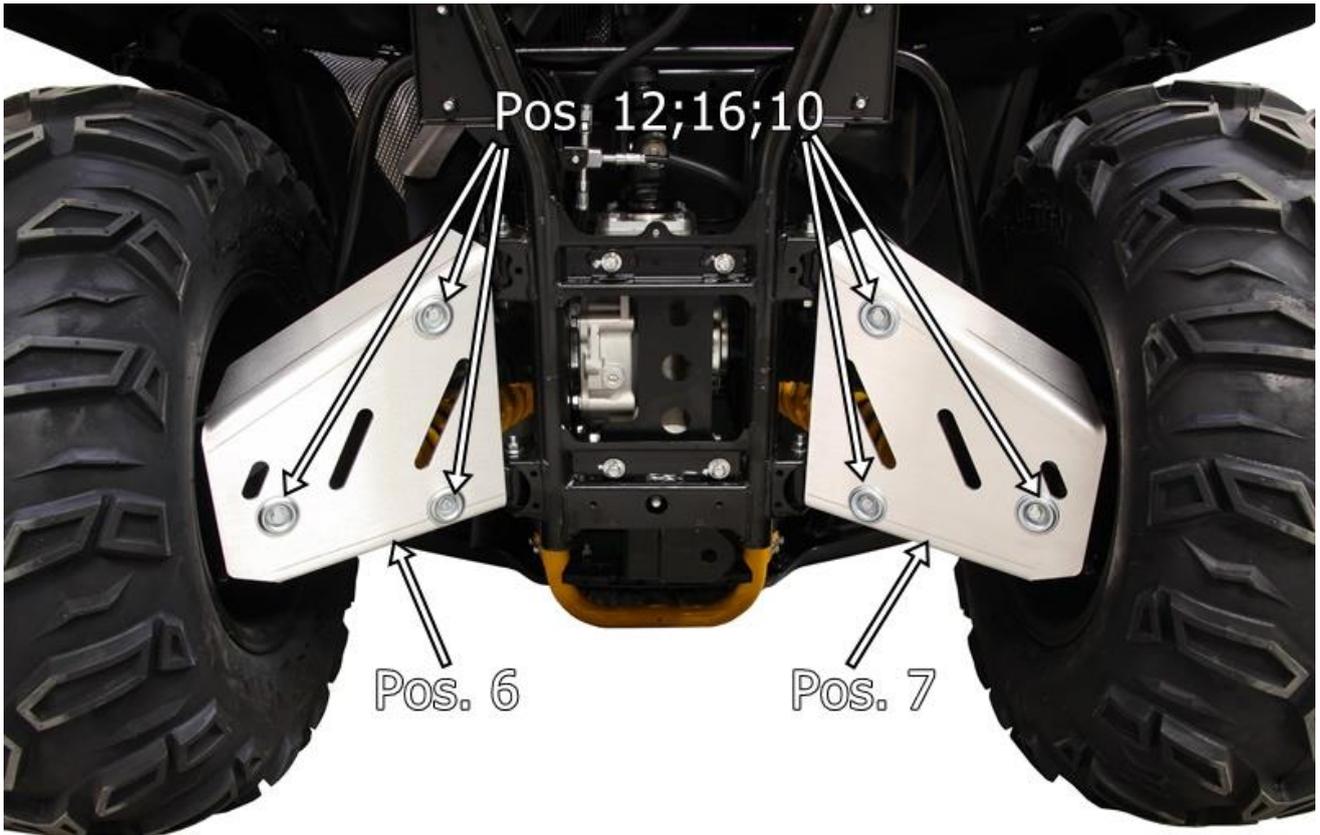


**Step 4**

Install rear part 02.30103K and plates 02.5006.





**Step 5**

Install middle part 02.30102 and plates 02.5006.

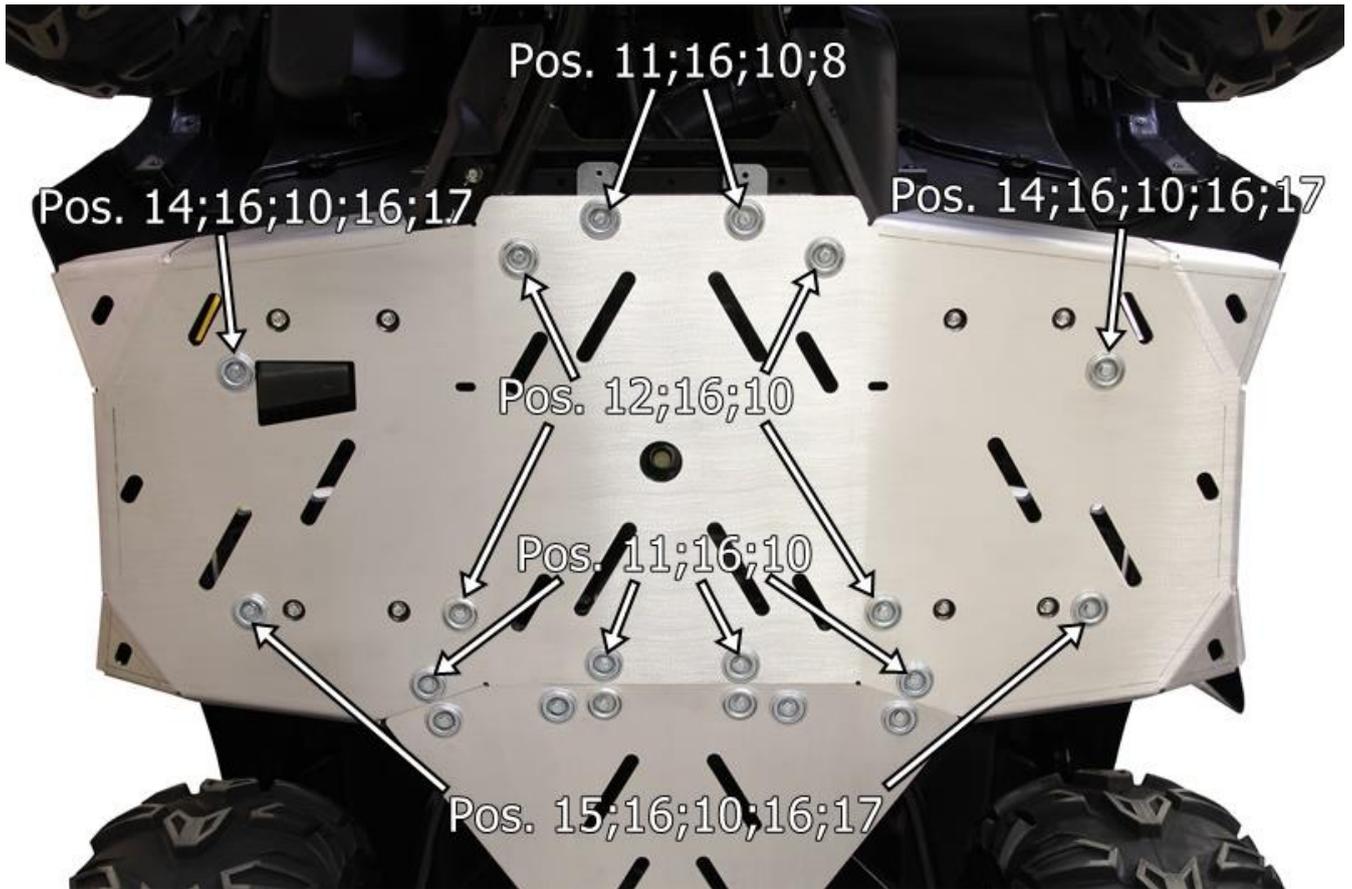

**Step 6**

Install front protection 02.30101K and brackets 02.5710.

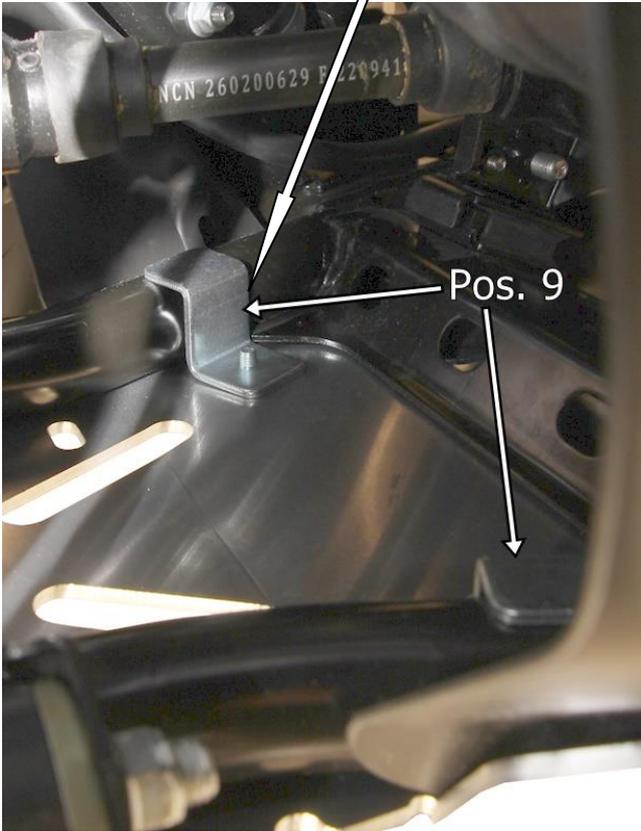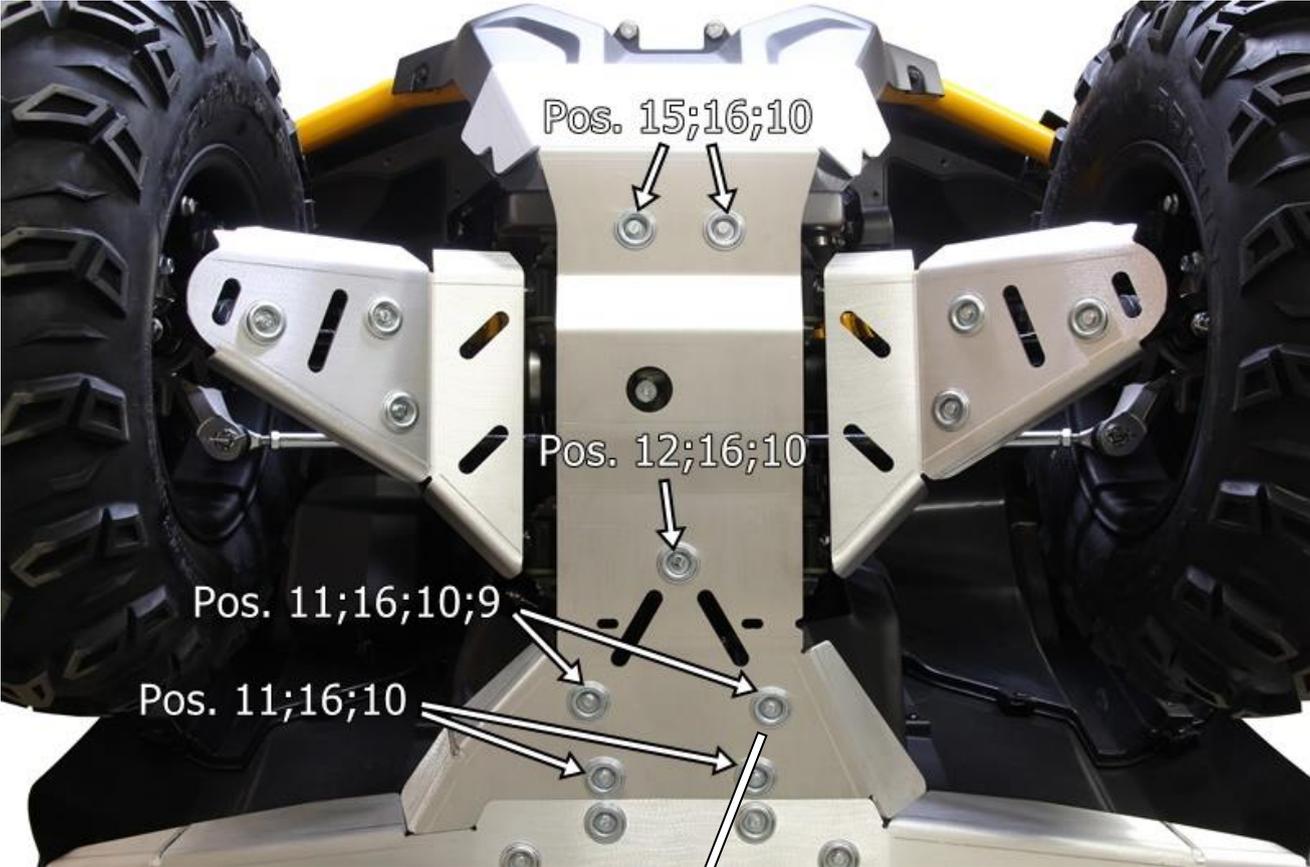

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

