

IRON BALTIC


PLASTIC SKID PLATE

LONCIN / GOES

XWOLF 700

Code 02.30200

Version 15102023

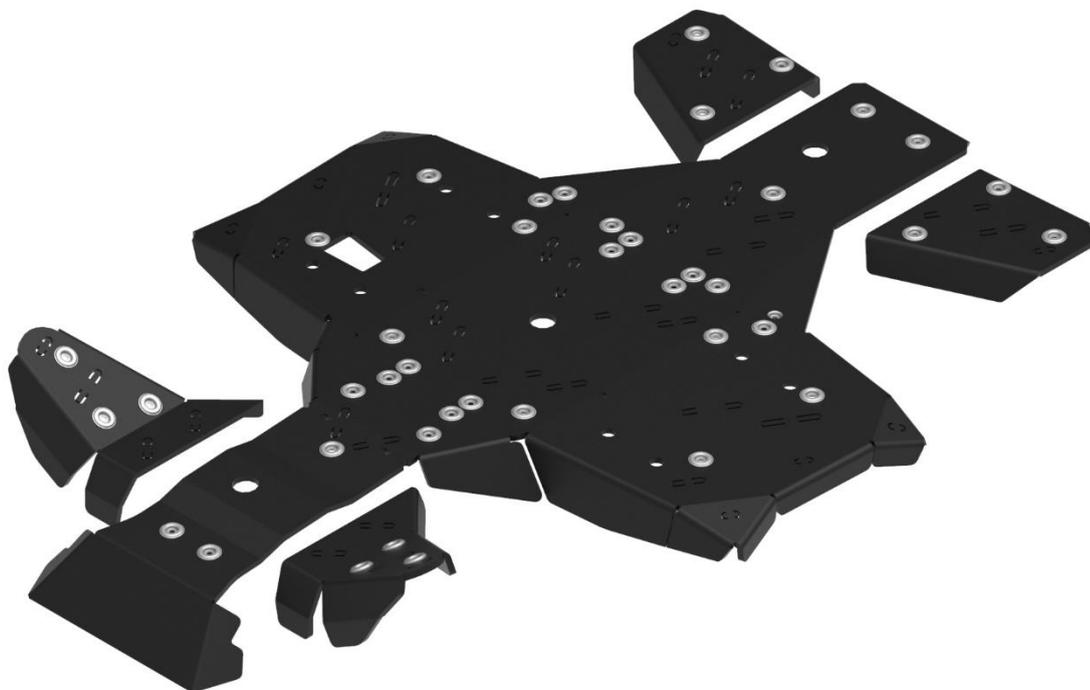

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/udWbpq3a

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.30201K	1
2	Middle protection	02.30202	1
3	Rear protection	02.30203K	1
4	Front right arm protection	02.30204	1
5	Front left arm protection	02.30205	1
6	Rear right arm protection	02.30206	1
7	Rear left arm protection	02.30207	1
8	Installation plate	02.5006	6
9	Installation bracket	02.5710	2
10	Dished washer	14.503	42
11	Bolt M6x16 DIN933	OT.02.02.050	14
12	Bolt M6x20 DIN933	OT.02.02.060	16
13	Bolt M6x30 DIN933	OT.02.02.080	6
14	Bolt M6x45 DIN933	OT.02.02.110	2
15	Bolt M6x50 DIN933	OT.02.02.120	4
16	Washer Ø6/15 SFS3738	OT.04.03.020	46
17	Nyloc nut M6 DIN985	OT.03.02.030	4

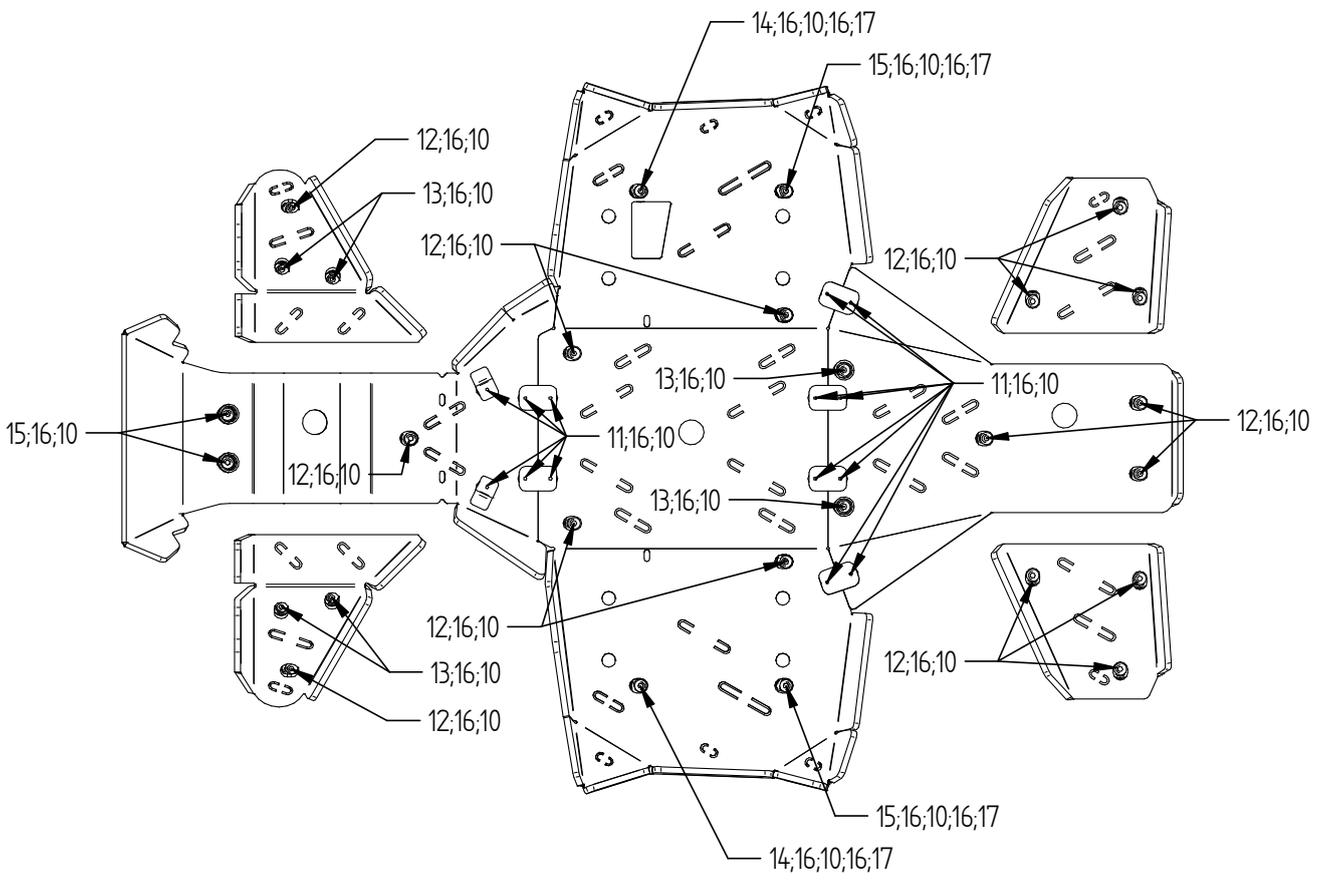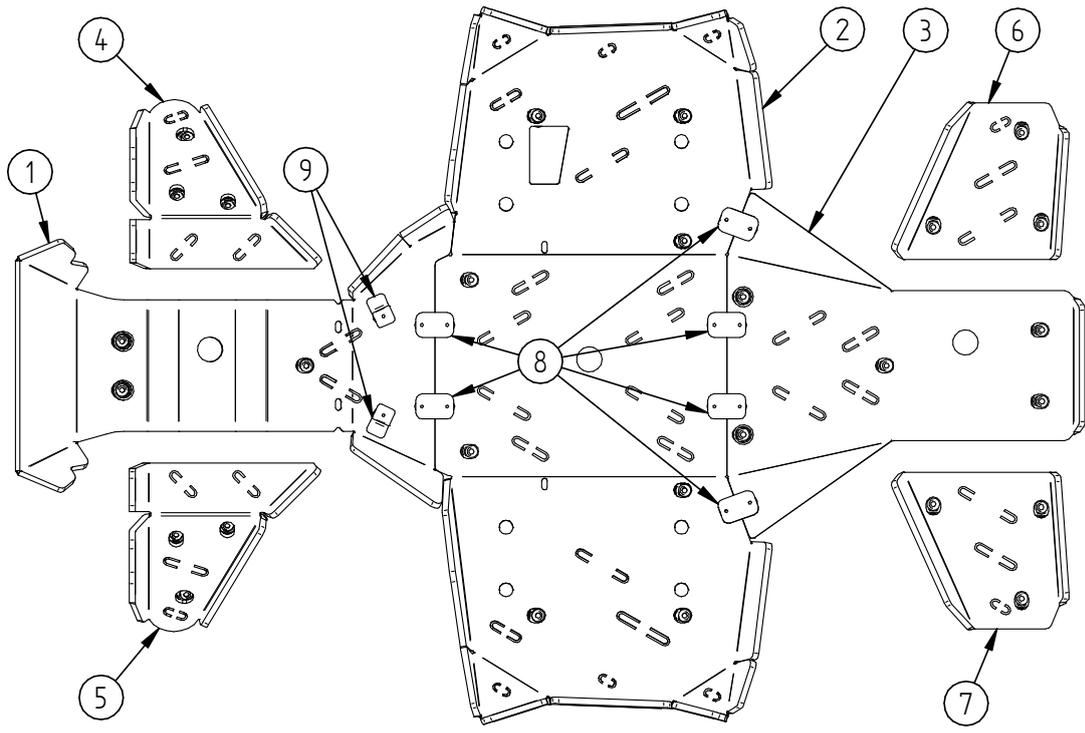


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and remove bolts shown in the picture.




Step 2 Install front arm protections 02.30204 and 02.30205.

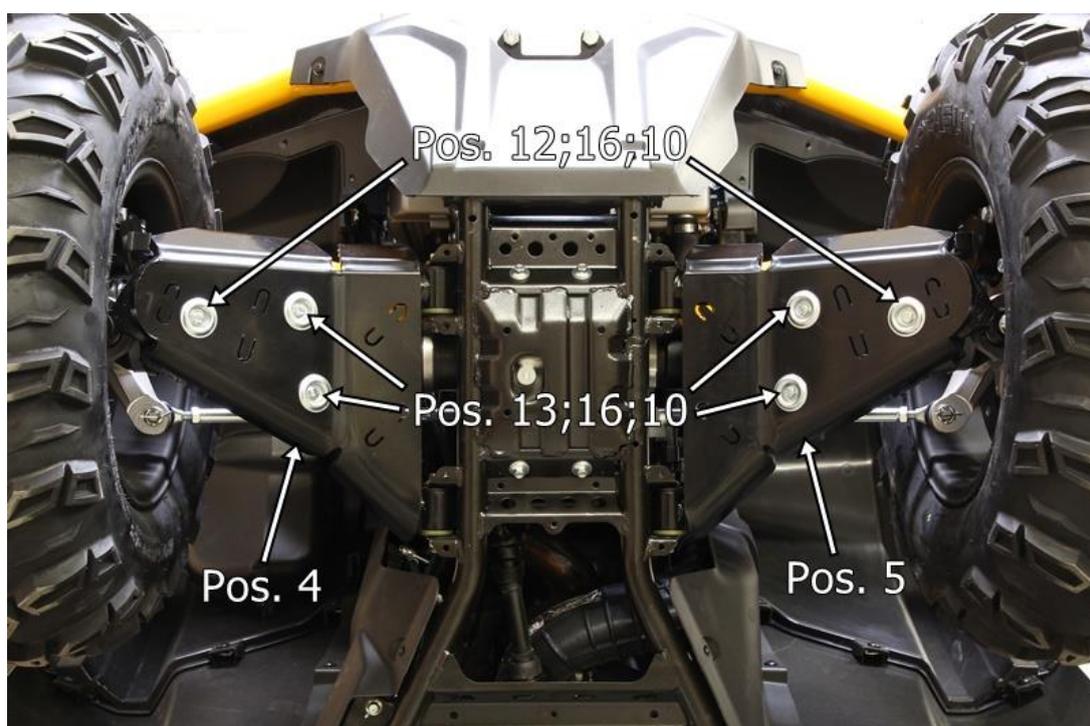


Step 3

Install rear arm protections 02.30206 and 02.30207.

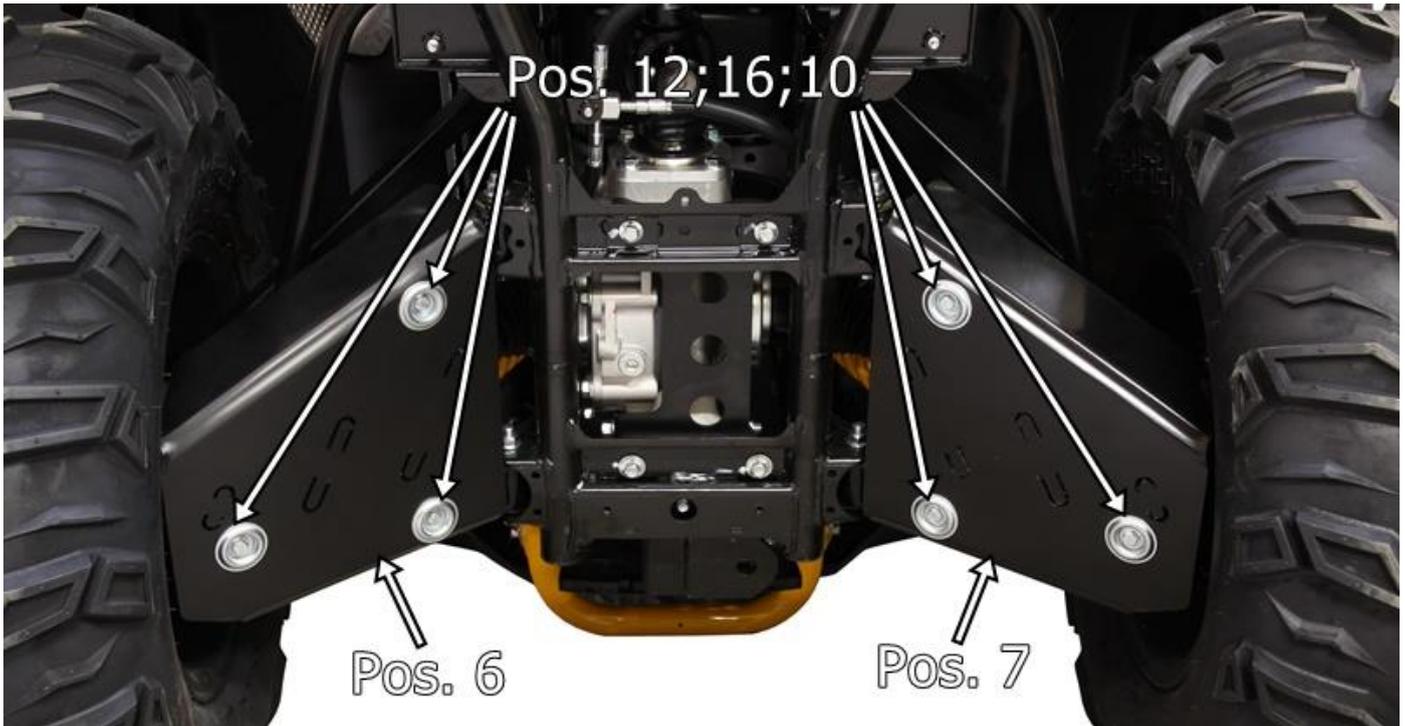


Step 4

Install rear part 02.30203K and plates 02.5006.

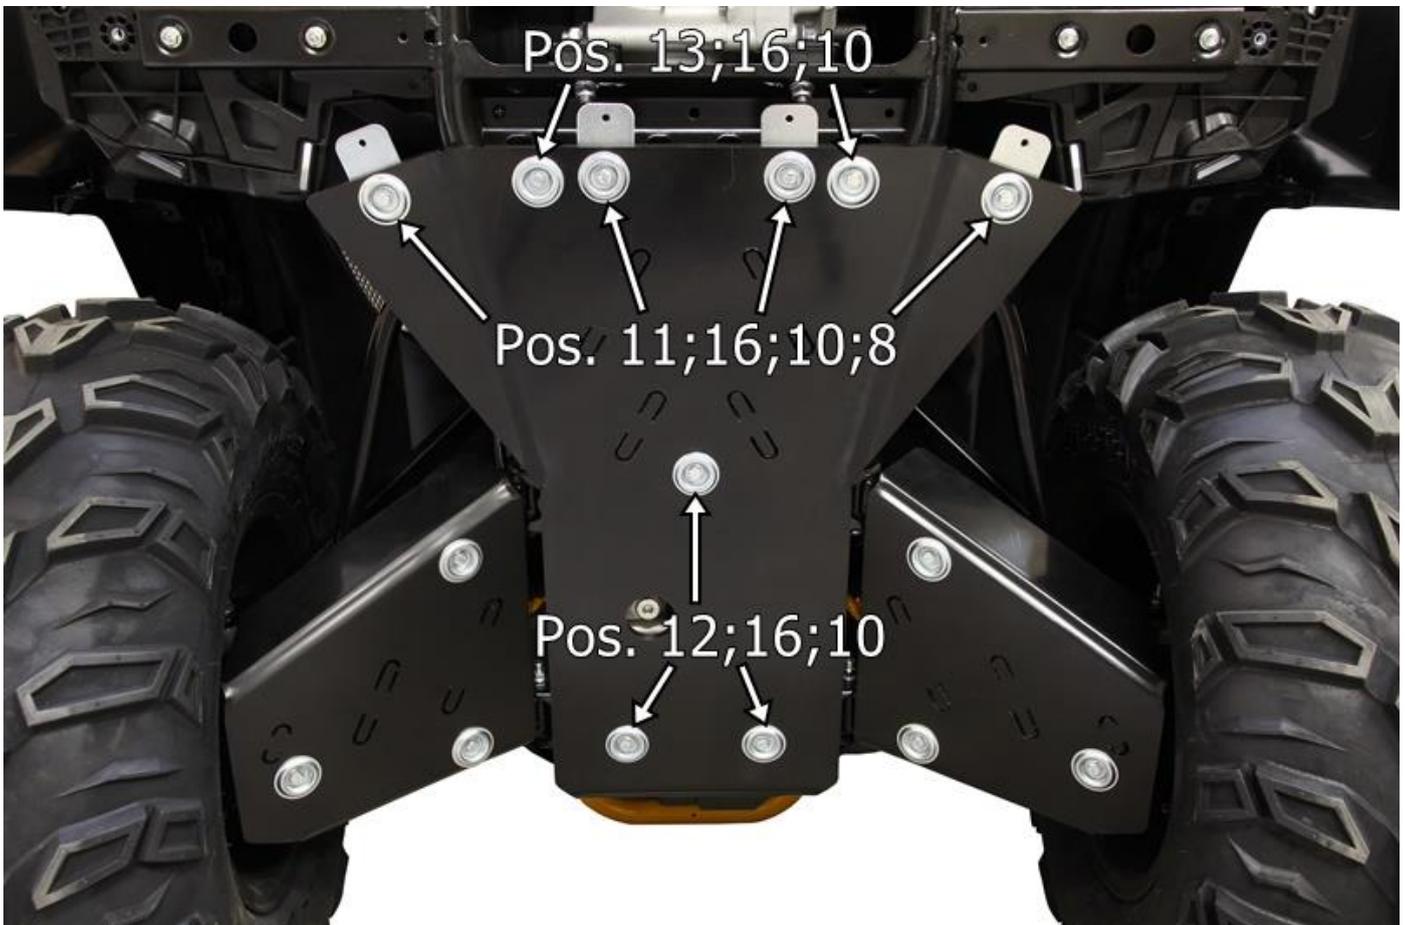



Step 5

Install middle part 02.30202 and plates 02.5006.

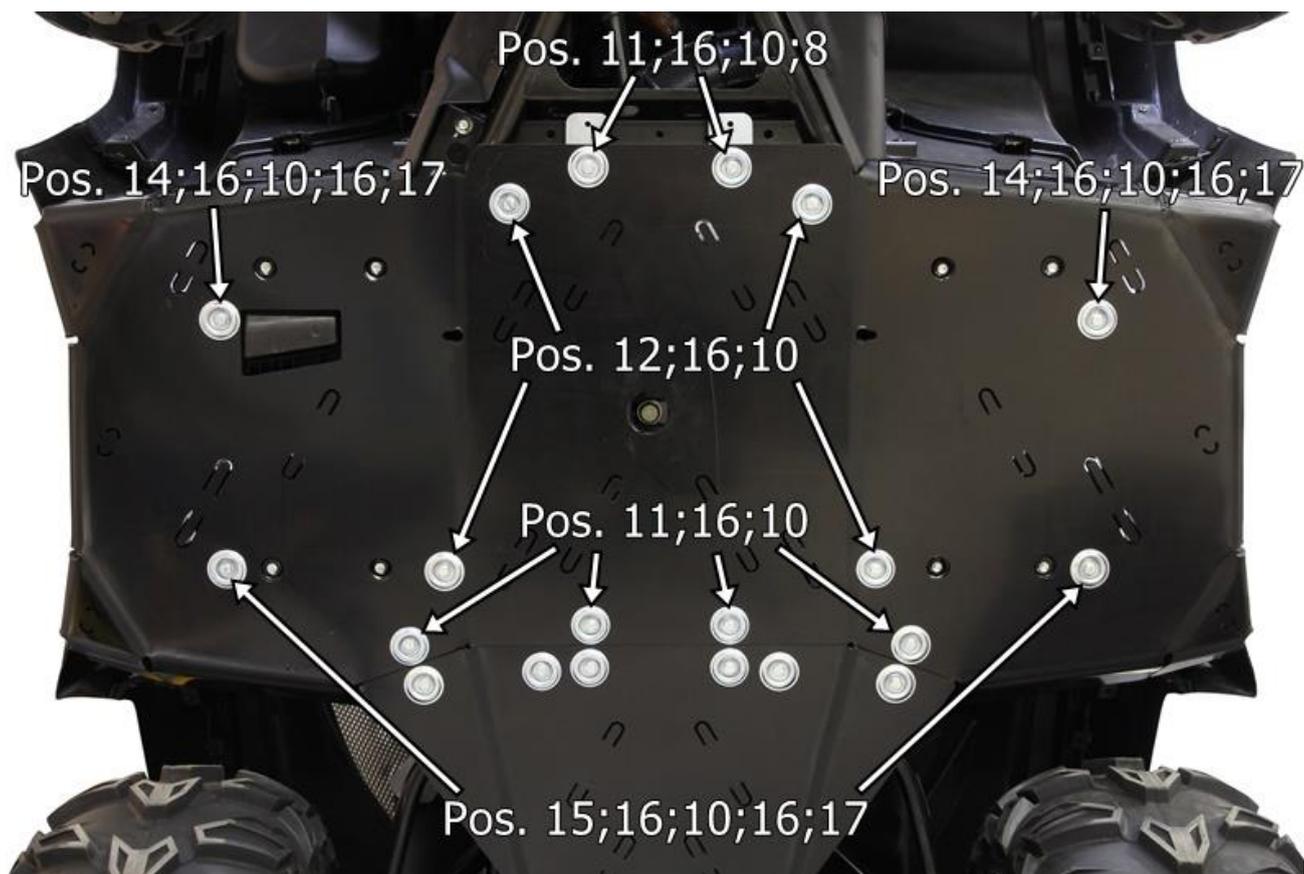

Step 6

Install front protection 02.30201K and brackets 02.5710.

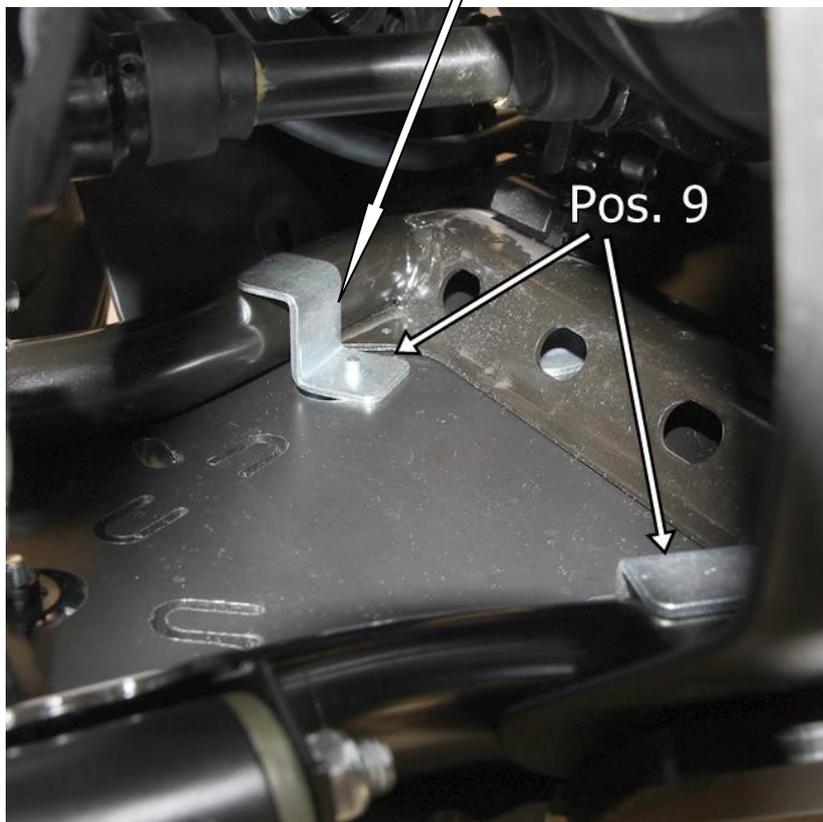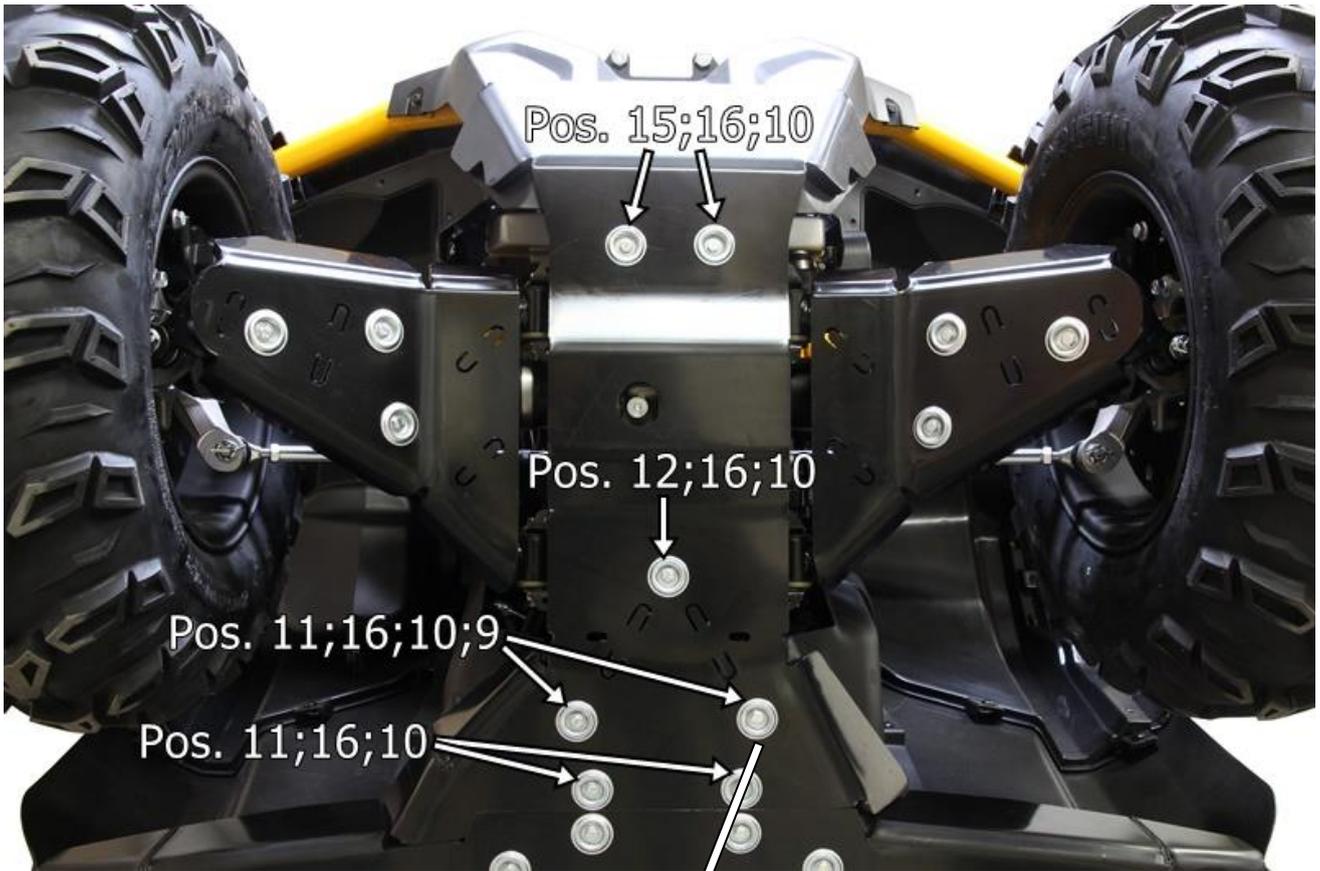

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

