

# IRON BALTIC

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/MGmlmFd5](https://code.ironbaltic.com/u/MGmlmFd5)

## ALUMINIUM SKID PLATE

# LONCIN XWOLF 700L/550L GOES XWOLF 700 MAX

Code 02.30300

Version 10102024



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.30101K	1
2	Middle protection	02.30301K	1
3	Right protection	02.30302	1
4	Left protection	02.30303	1
5	Rear protection	02.30304K	1
6	Front right arm protection	02.30104	1
7	Front left arm protection	02.30105	1
8	Rear right arm protection	02.30106	1
9	Rear left arm protection	02.30107	1
10	Installation plate	02.5006	12
11	Installation bracket 1	02.5710	2
12	Installation bracket 2	02.30305K	2
13	Dished washer	14.503	56
14	Bolt M6x12 DIN933	OT.02.02.030	26
15	Bolt M6x16 DIN933	OT.02.02.050	20
16	Bolt M6x30 DIN933	OT.02.02.080	8
17	Bolt M6x40 DIN933	OT.02.02.100	2
18	Bolt M6x45 DIN933	OT.02.02.110	4
19	Washer Ø6/15 SFS3738	OT.04.03.020	64
20	Nyloc nut M6 DIN985	OT.03.02.030	6





## TOOLS REQUIRED FOR INSTALLATION:

- Spanner 10mm
- Socket wrench 10mm
- Allen wrench 5mm




## NB!

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

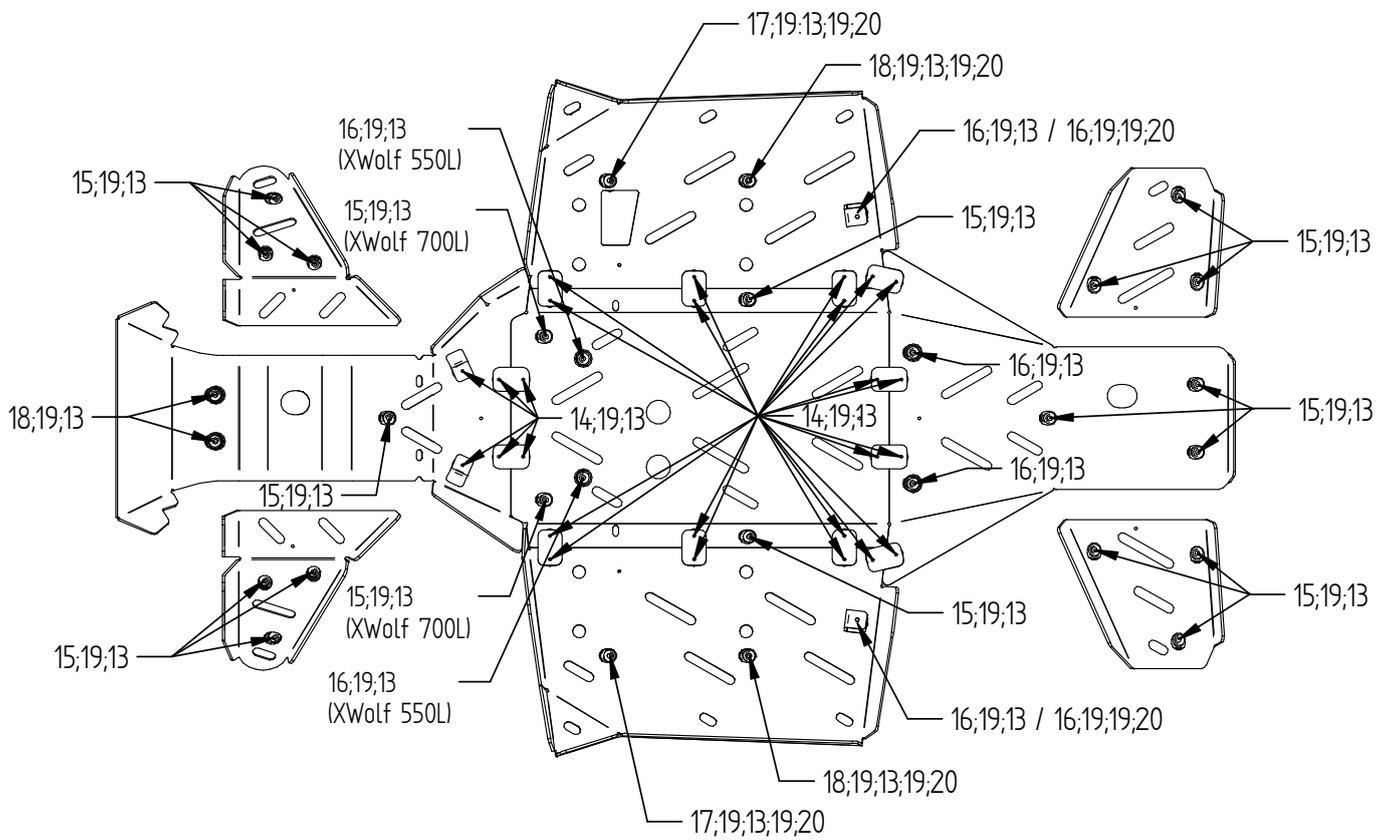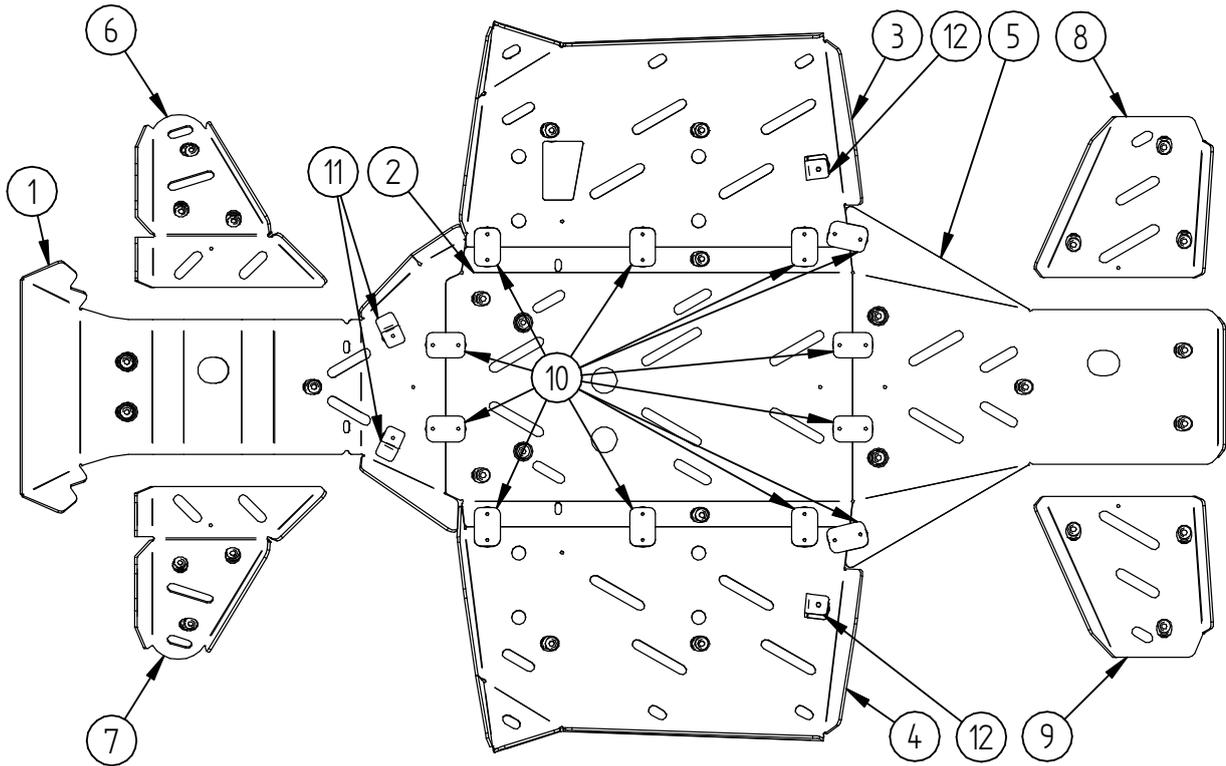


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers and remove bolts shown in the picture.

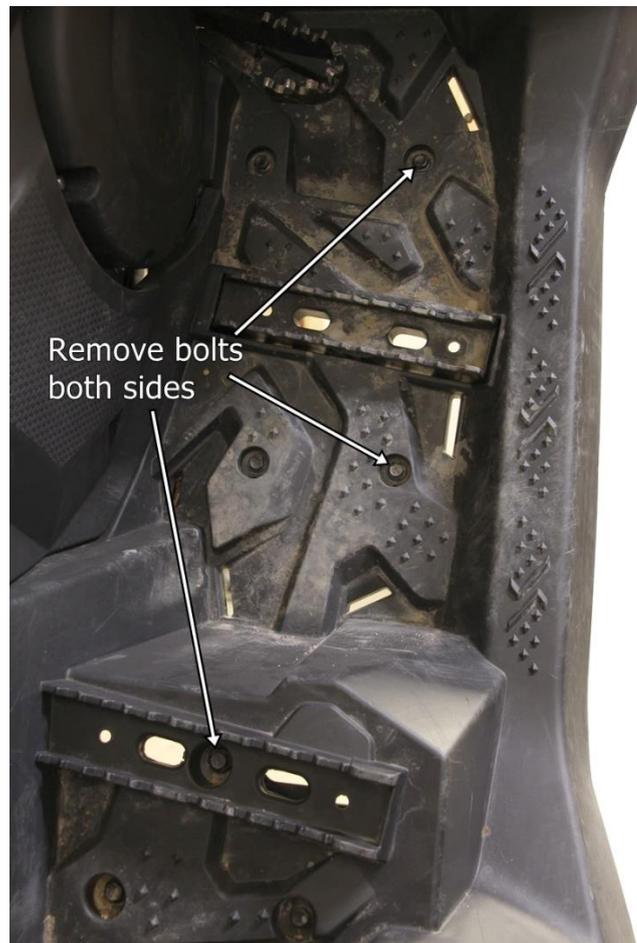


**Step 2** Install front arm protections 02.30104 and 02.30105.

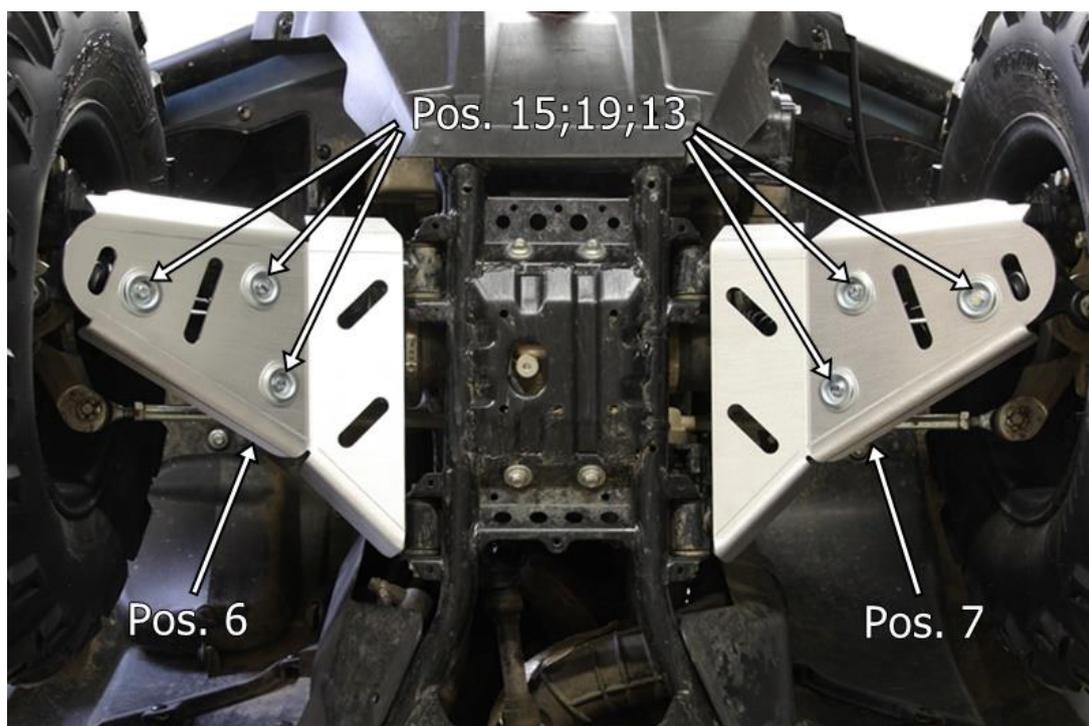


**Step 3**

Install rear arm protections 02.30106 and 02.30107.

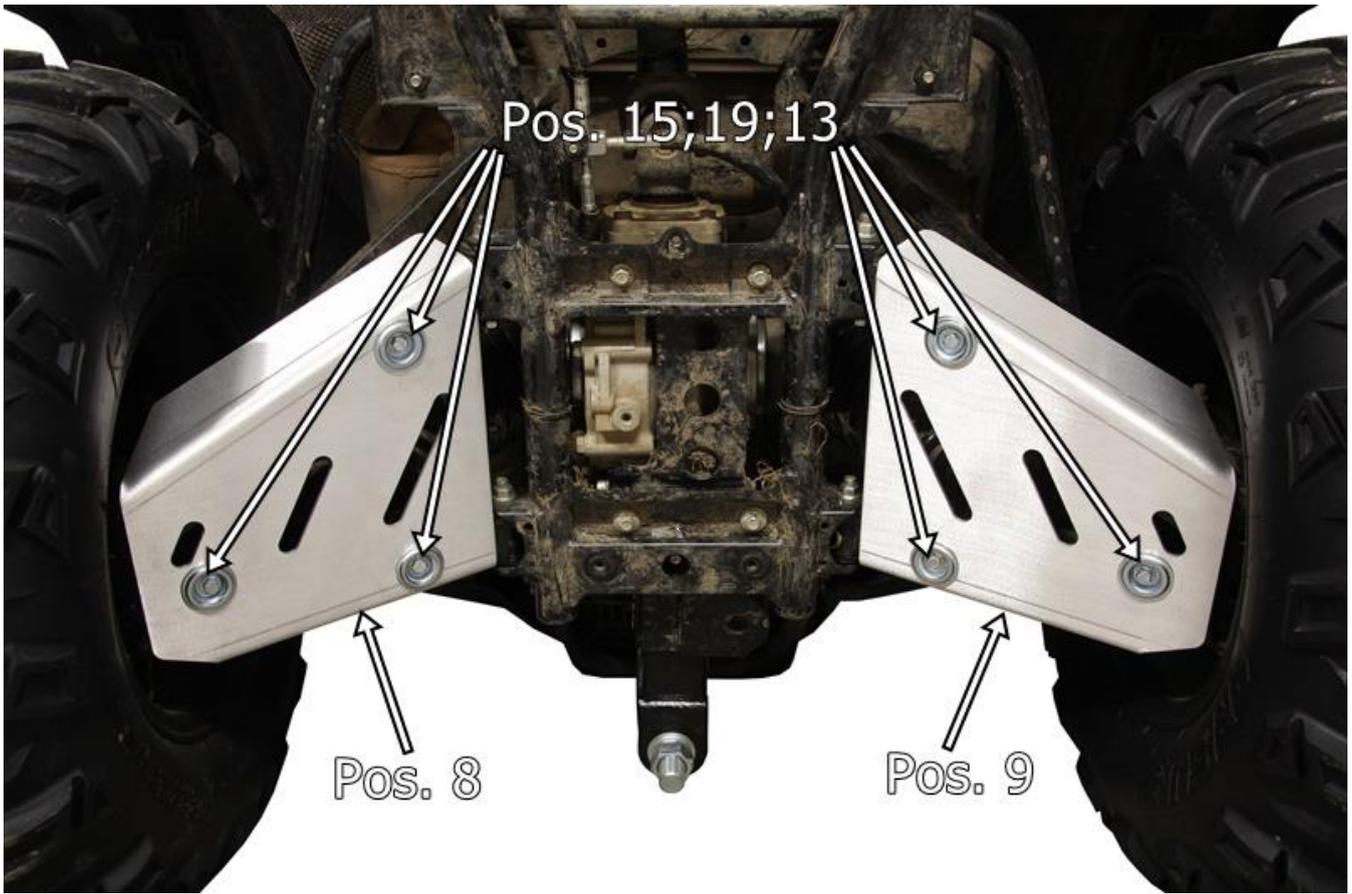

**Step 4**



Install rear part 02.30304K and plates 02.5006.

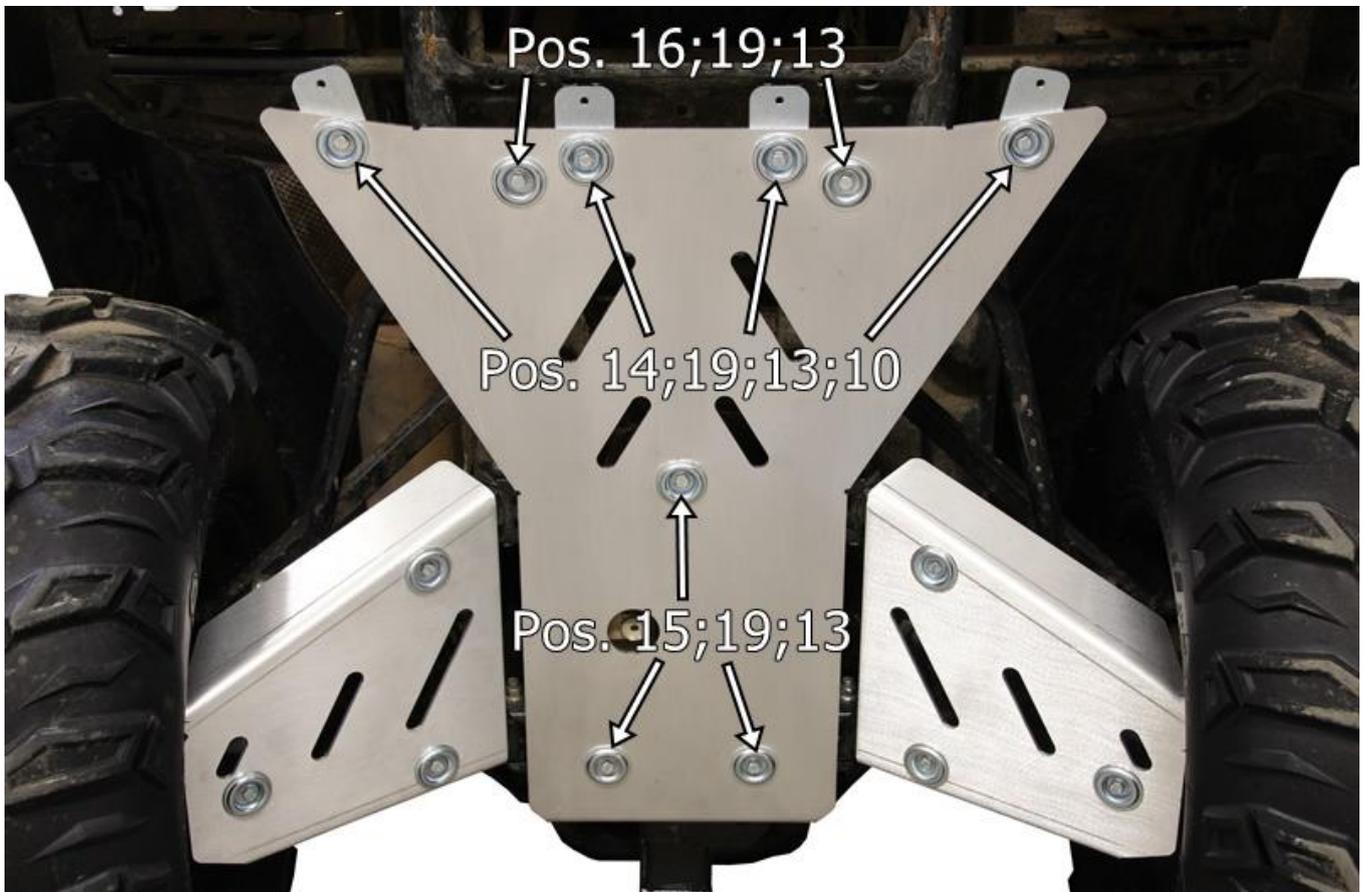


## Step 5

Install middle part 02.30301K, plates 02.5006 and brackets 02.30305K.  
NB! The XWolf 550L has upper mounting points in a different location than the XWolf 700L.

### XWolf 700L:

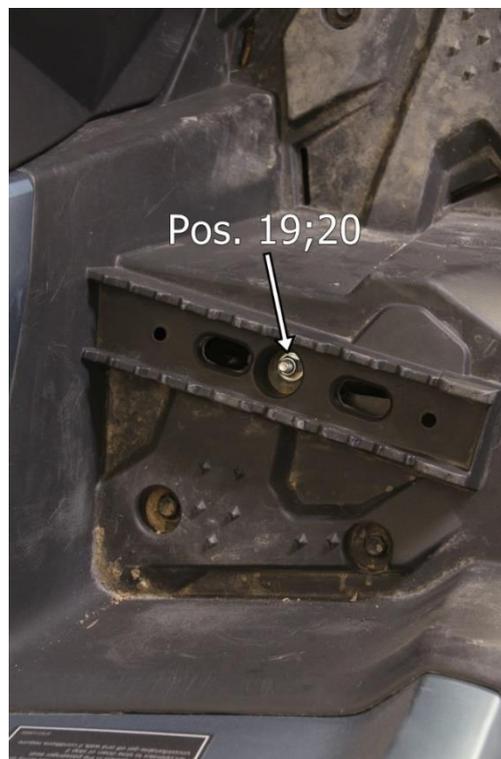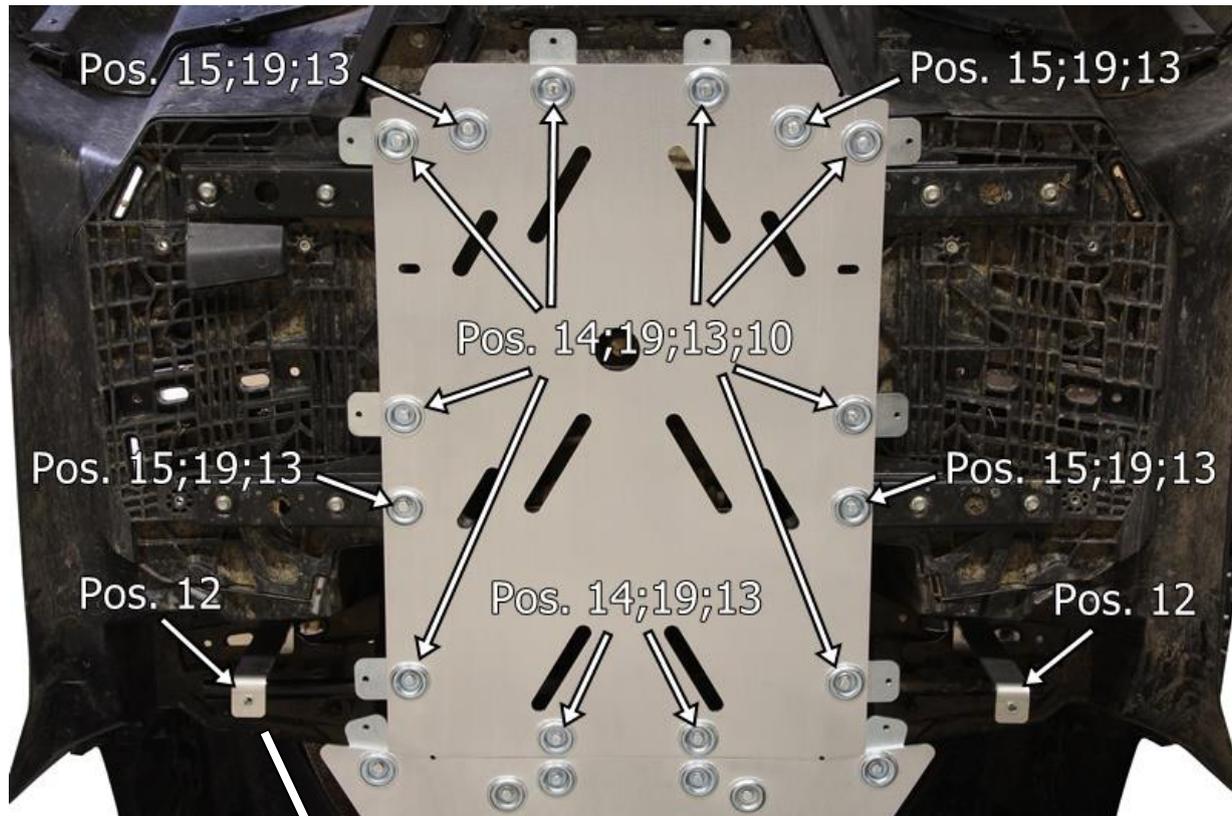


XWolf 550L:

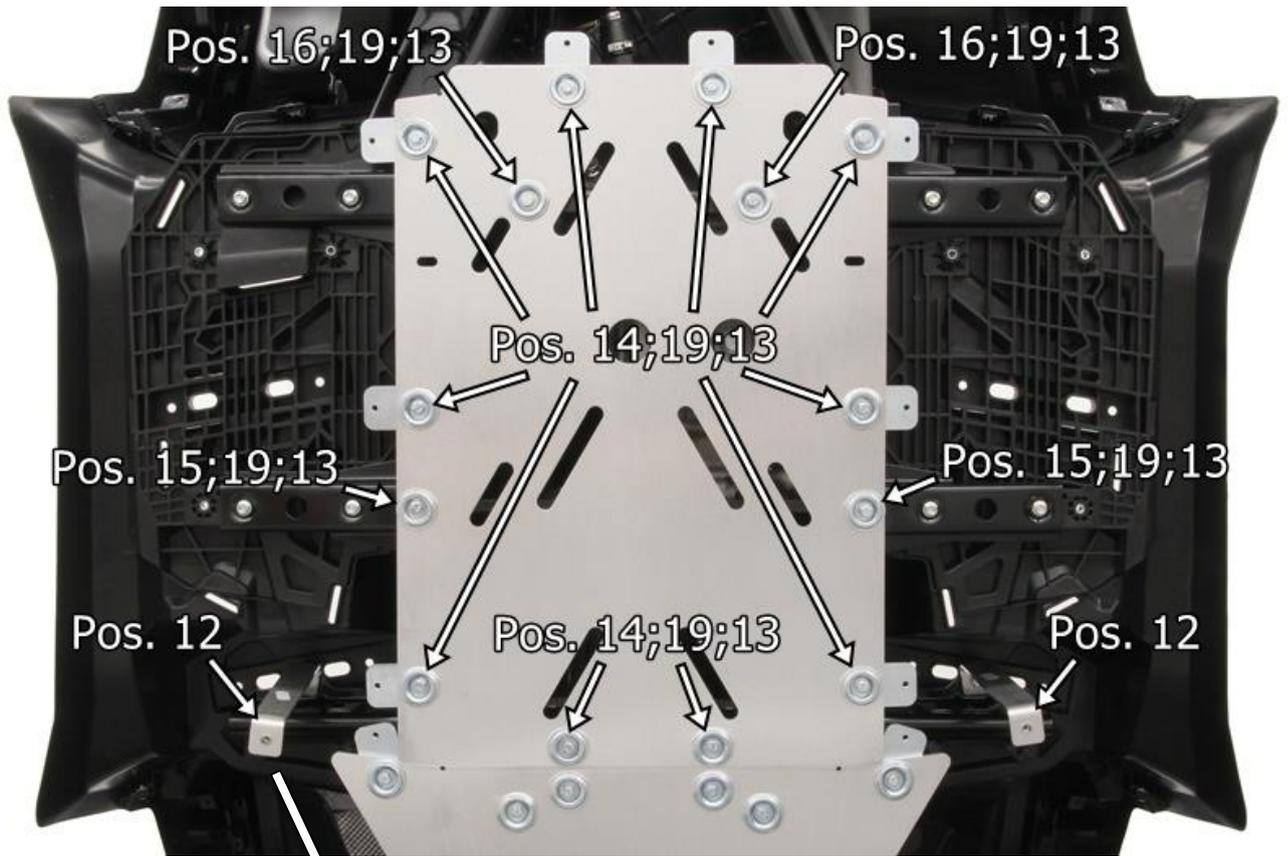



## Step 6

Install side protections 02.30302 and 02.30303.

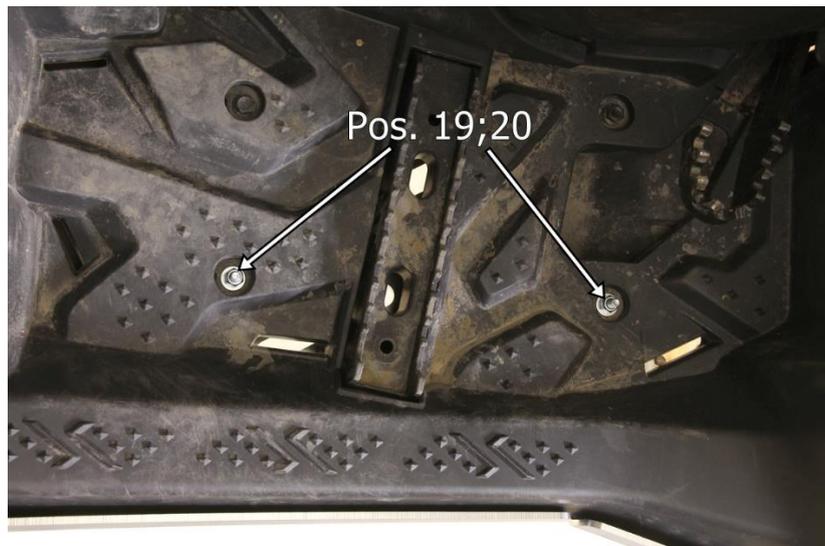

## Step 7

Install front protection 02.30101K and brackets 02.5710.

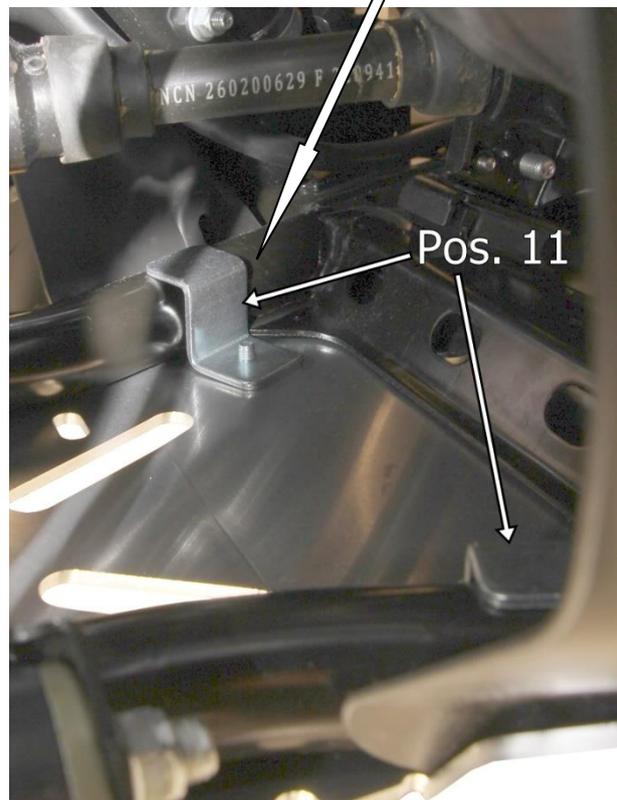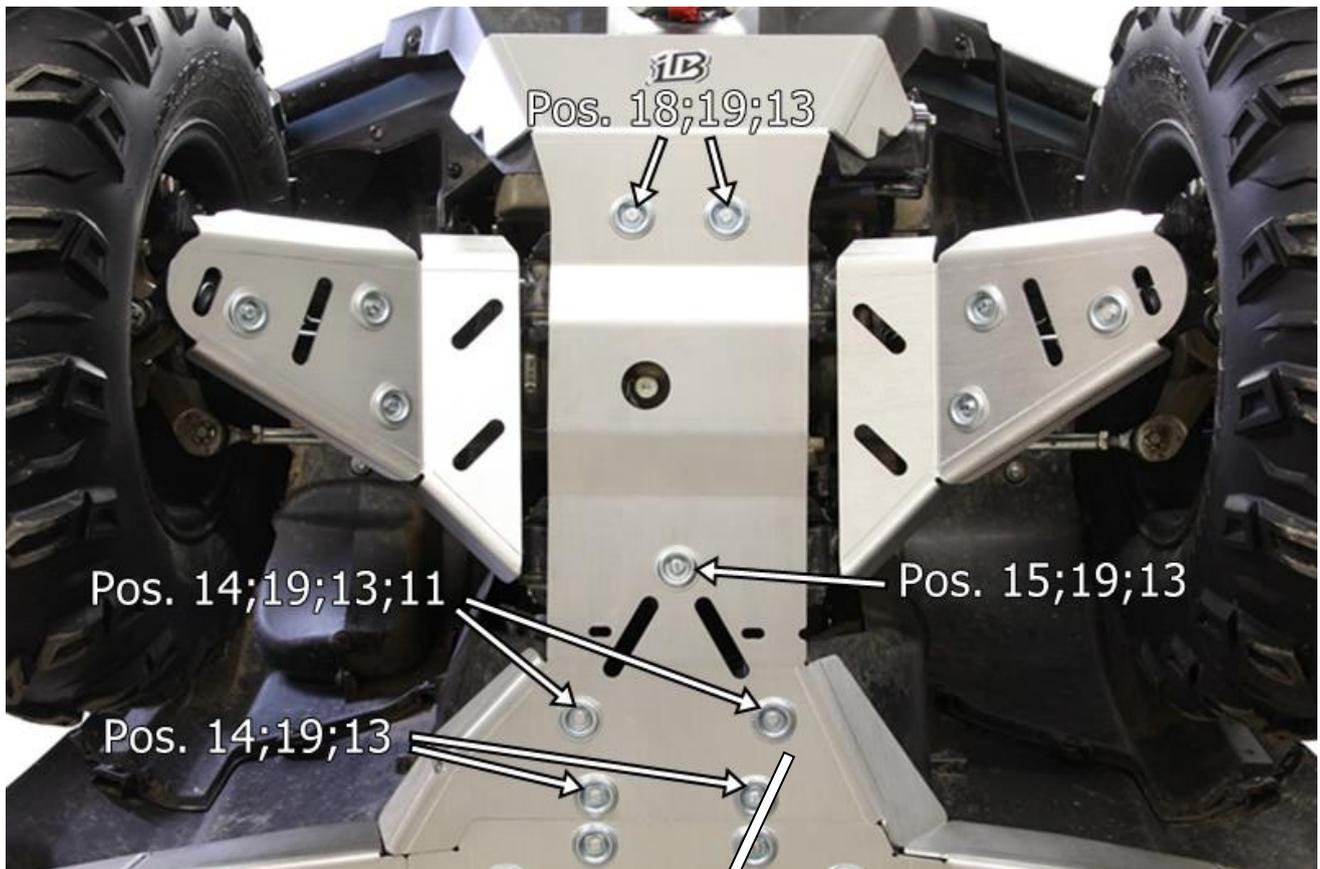





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

