

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/MGmlmFd5

ALUMINIUM SKID PLATE

LONCIN XWOLF 700L GOES XWOLF 700 MAX

Code 02.30300

Version 15102023


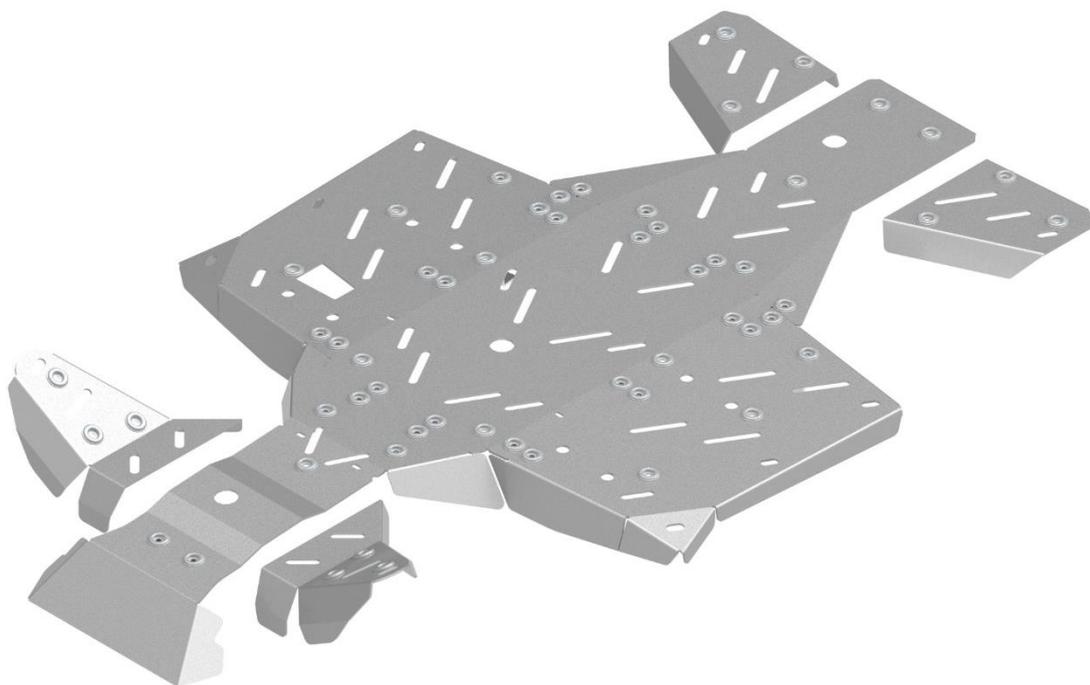


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.30101K	1
2	Middle protection	02.30301	1
3	Right protection	02.30302	1
4	Left protection	02.30303	1
5	Rear protection	02.30304K	1
6	Front right arm protection	02.30104	1
7	Front left arm protection	02.30105	1
8	Rear right arm protection	02.30106	1
9	Rear left arm protection	02.30107	1
10	Installation plate	02.5006	12
11	Installation bracket 1	02.5710	2
12	Installation bracket 2	02.30305K	2
13	Dished washer	14.503	56
14	Bolt M6x12 DIN933	OT.02.02.030	26
15	Bolt M6x16 DIN933	OT.02.02.050	20
16	Bolt M6x30 DIN933	OT.02.02.080	6
17	Bolt M6x40 DIN933	OT.02.02.100	2
18	Bolt M6x45 DIN933	OT.02.02.110	4
19	Washer Ø6/15 SFS3738	OT.04.03.020	64
20	Nyloc nut M6 DIN985	OT.03.02.030	6

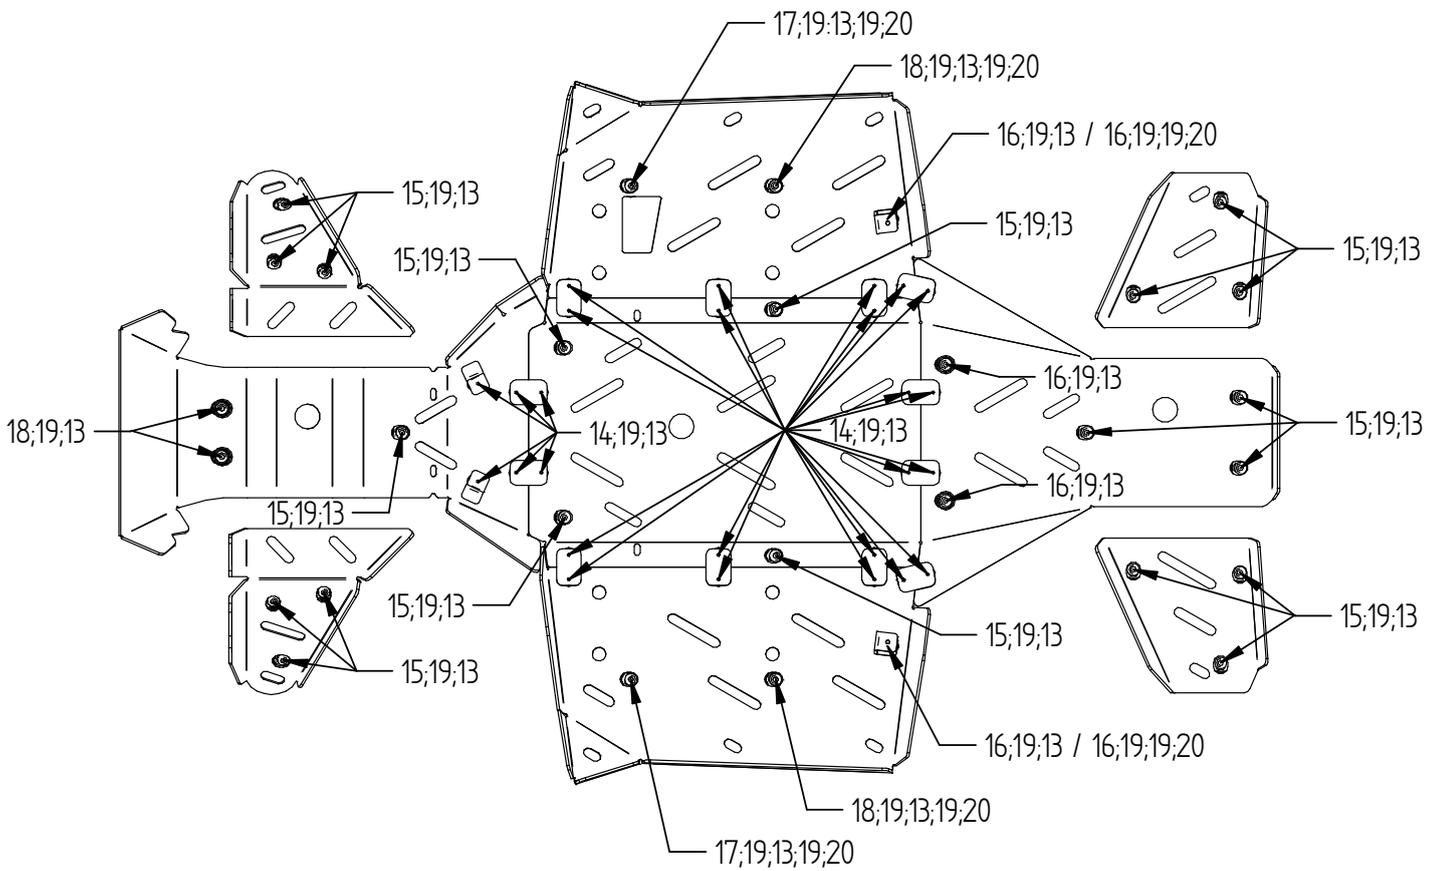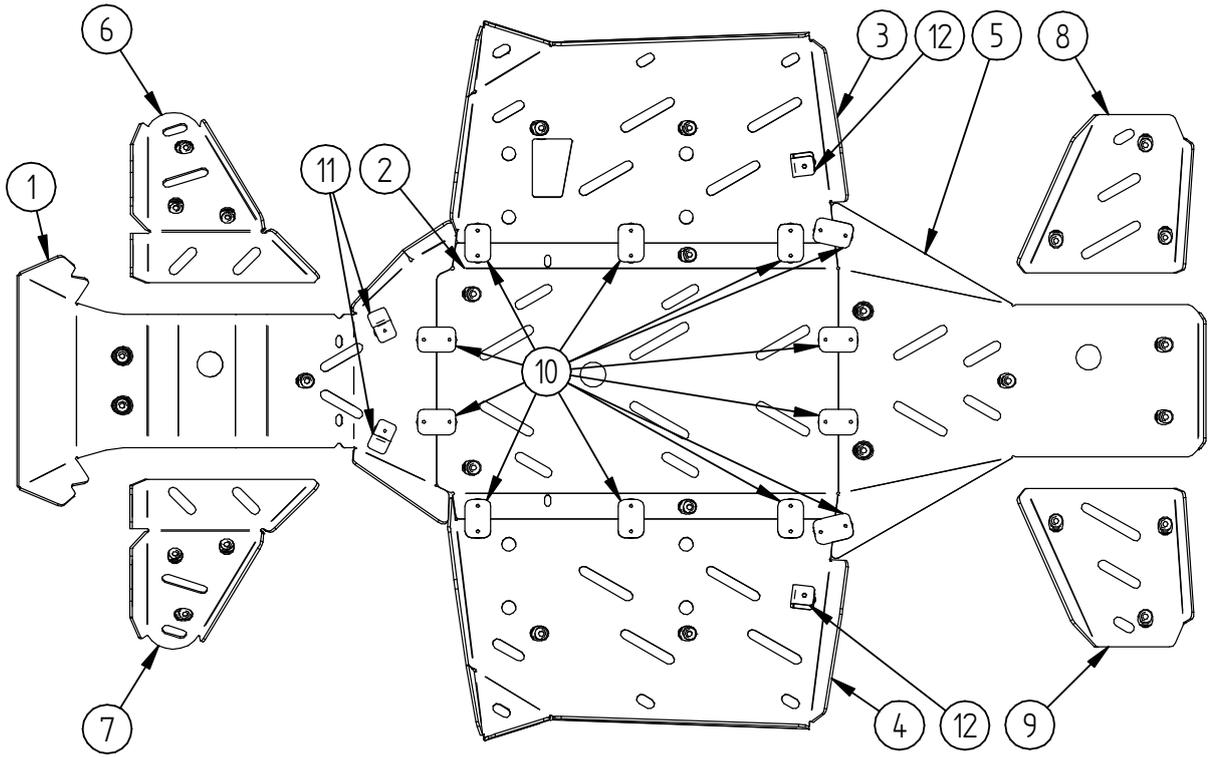


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and remove bolts shown in the picture..

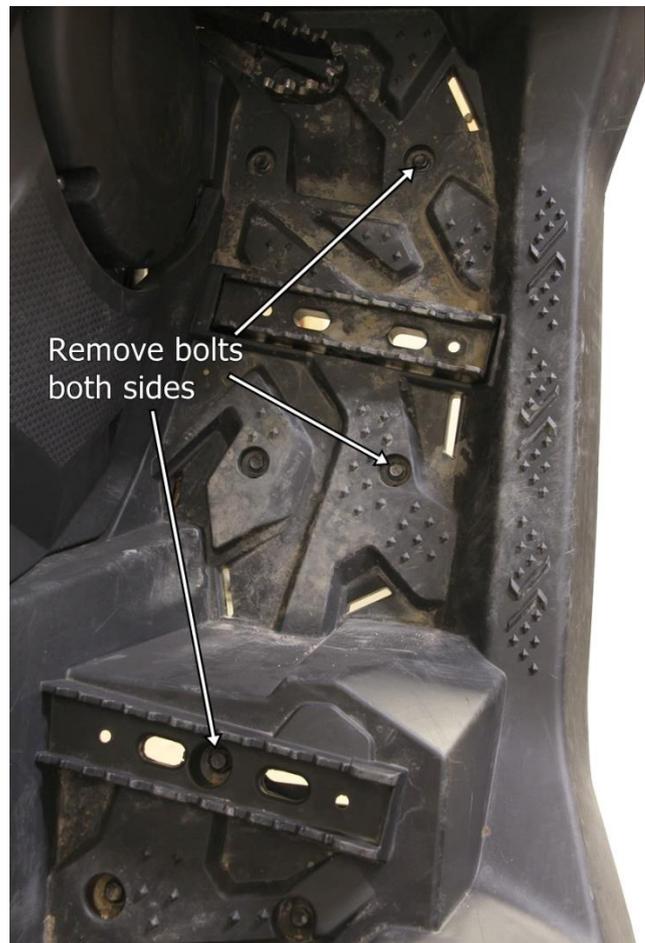


Step 2 Install front arm protections 02.30104 and 02.30105.

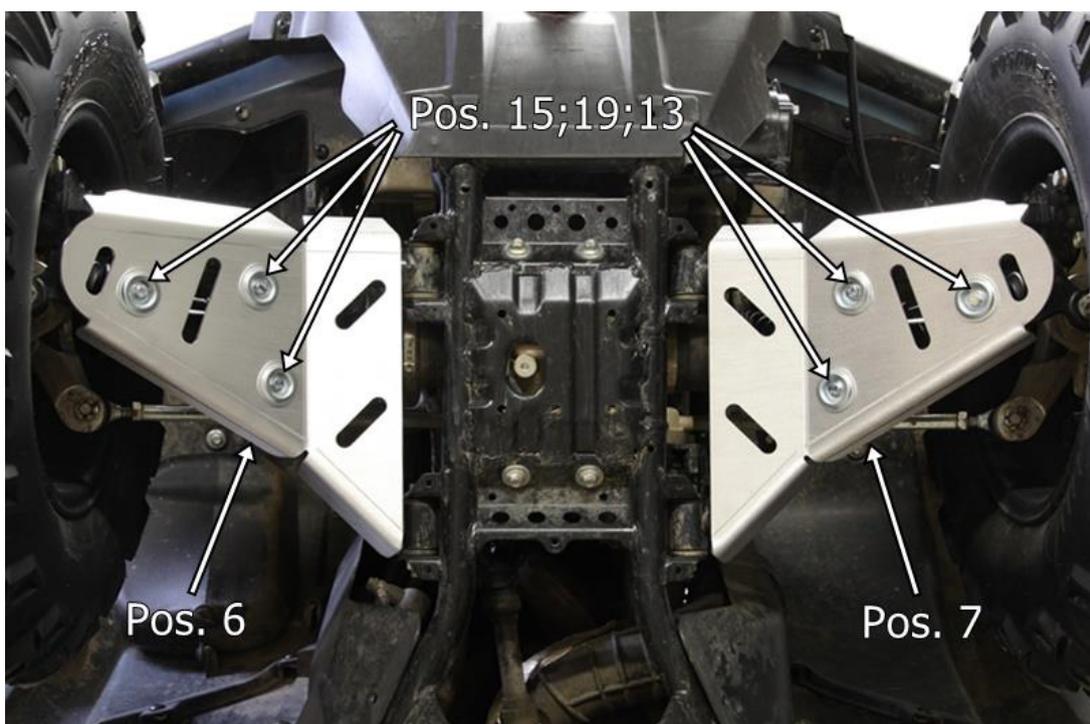


Step 3

Install rear arm protections 02.30106 and 02.30107.

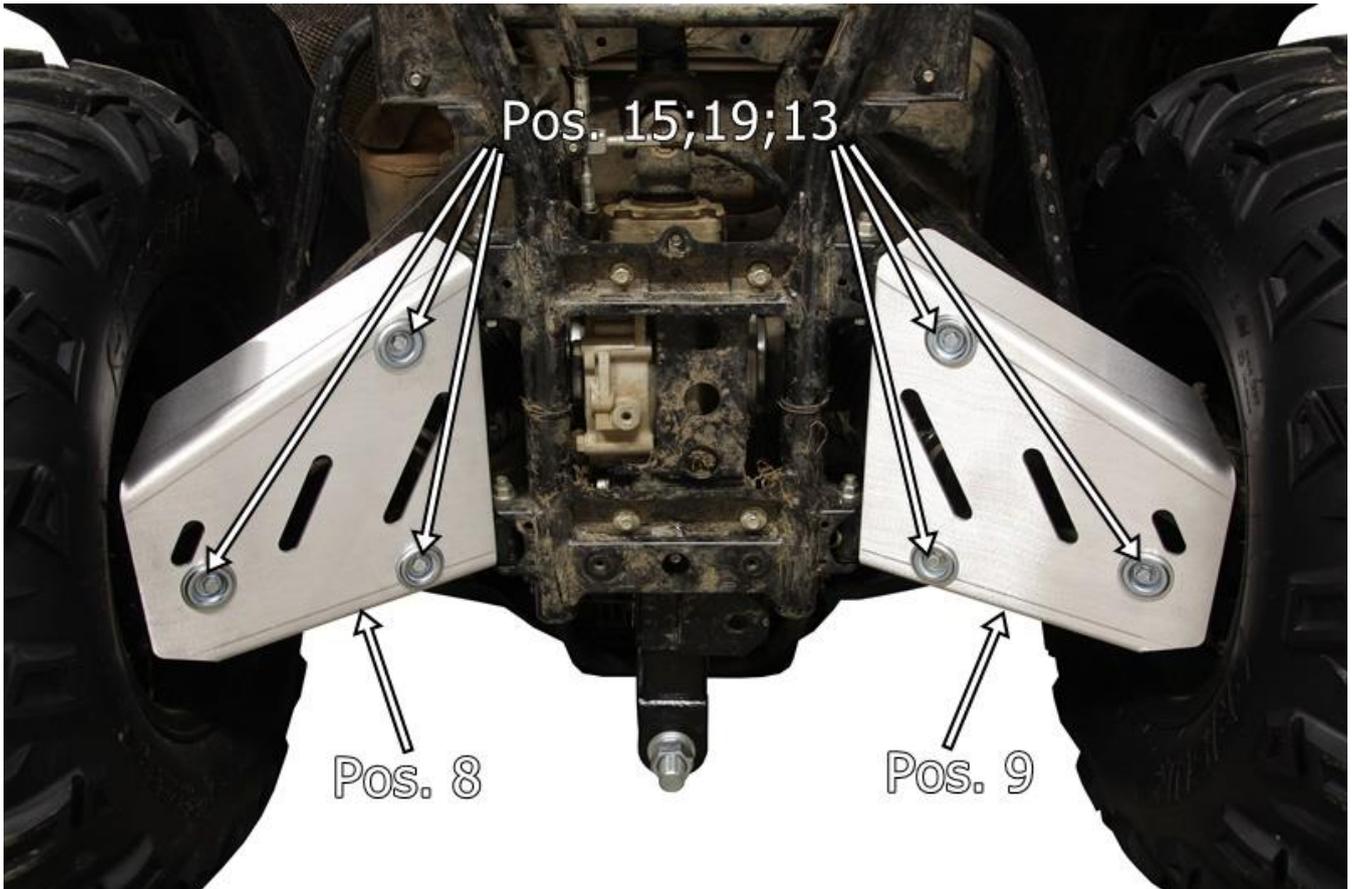



Step 4

Install rear part 02.30304K and plates 02.5006.

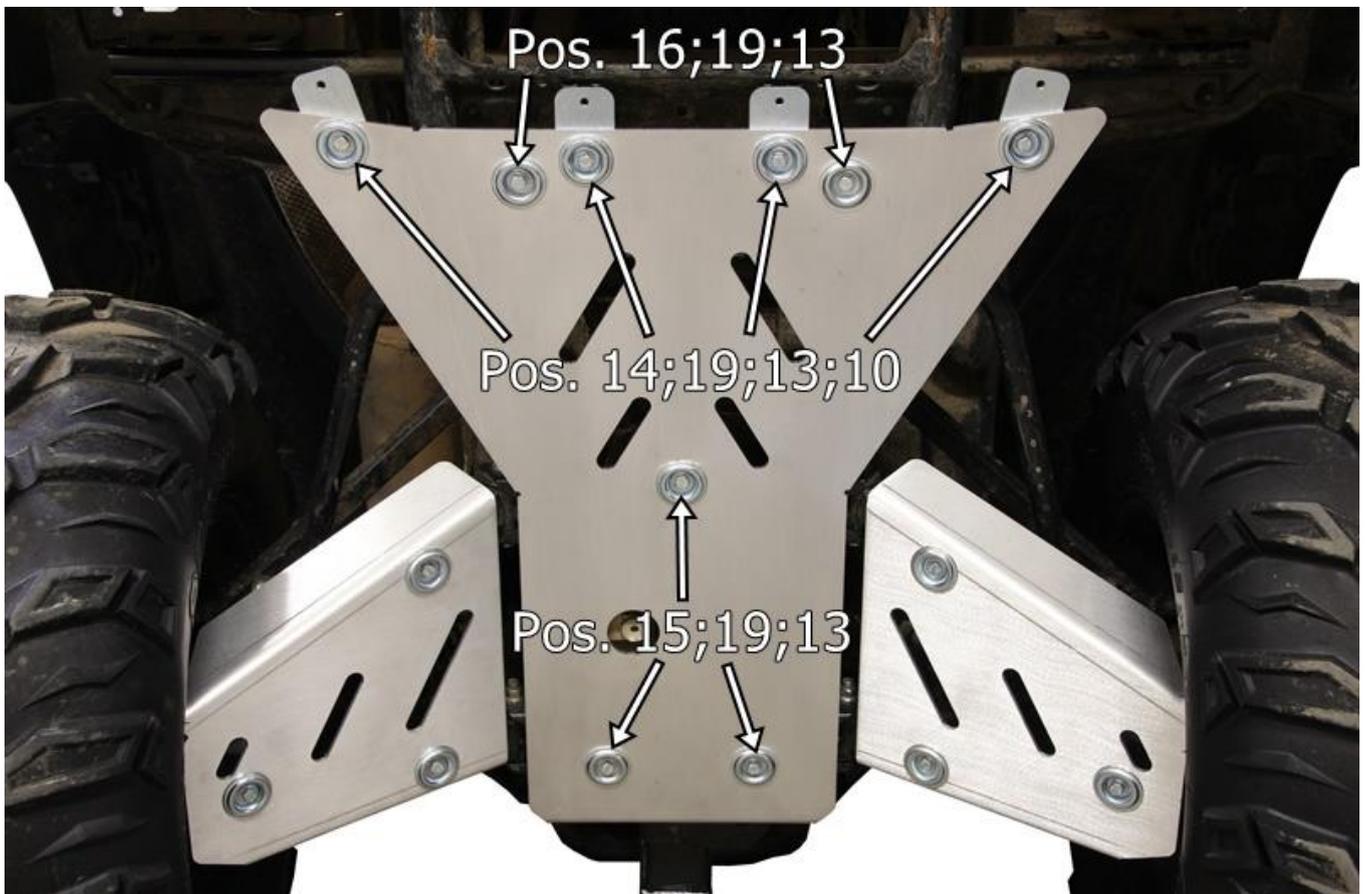


Step 5

Install middle part 02.30301, plates 02.5006 and brackets 02.30305K.

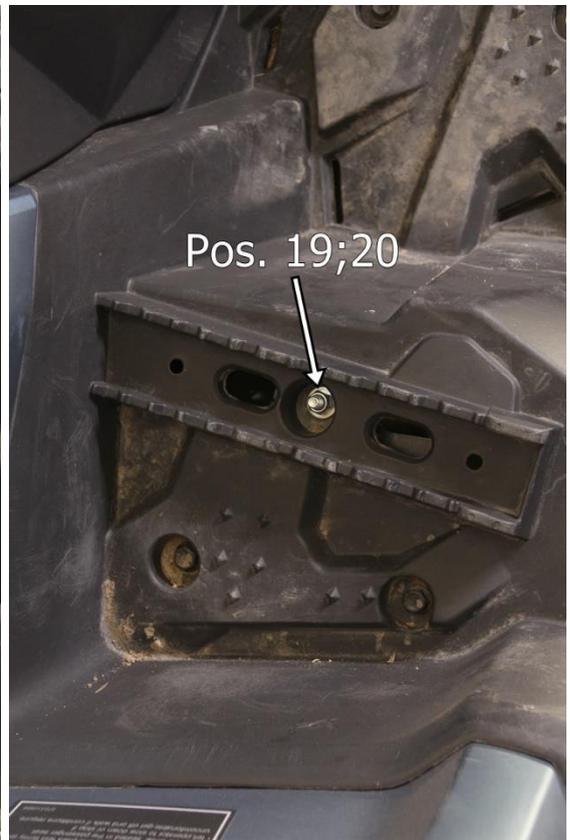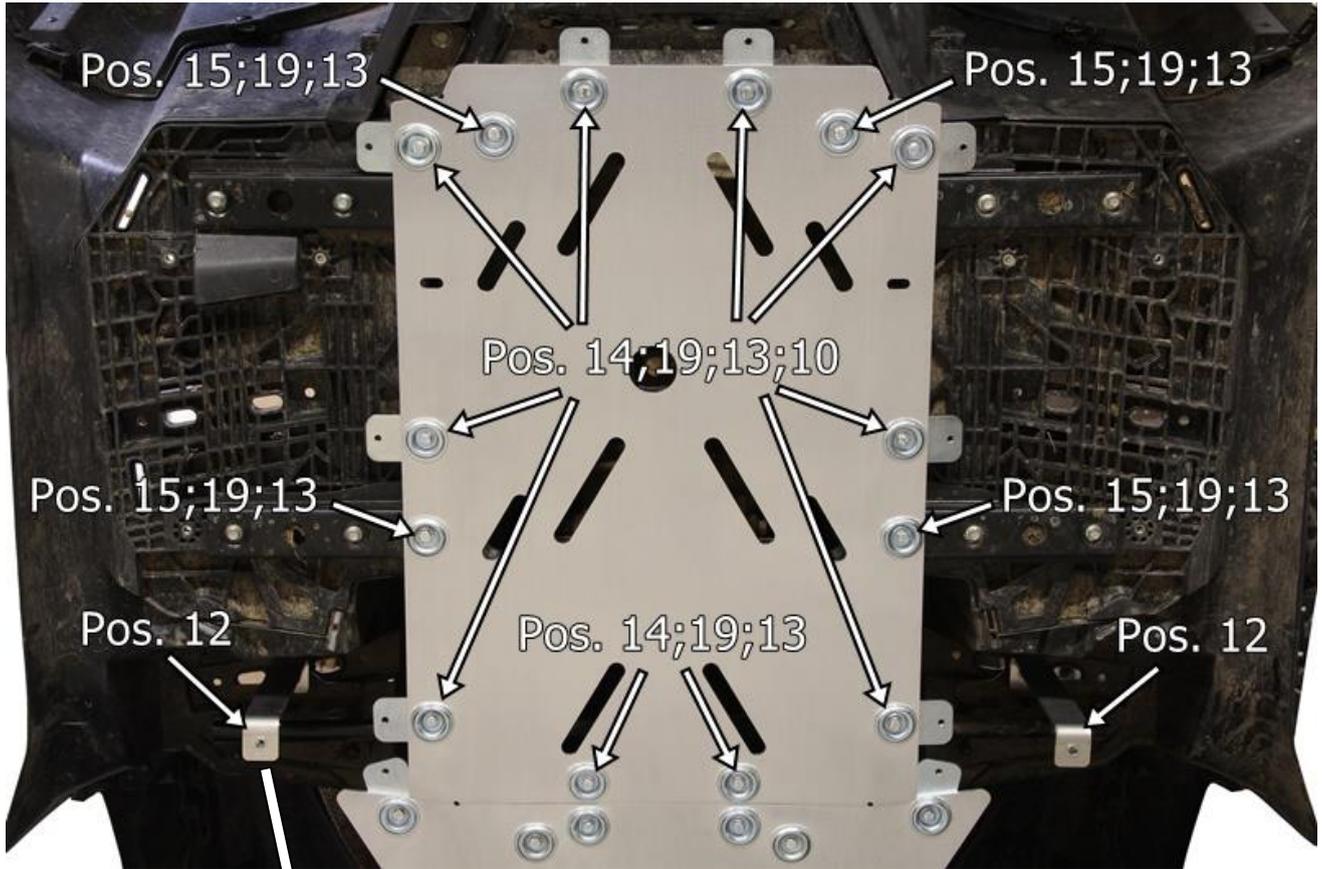



Step 6

Install side protections 02.30302 and 02.30303.

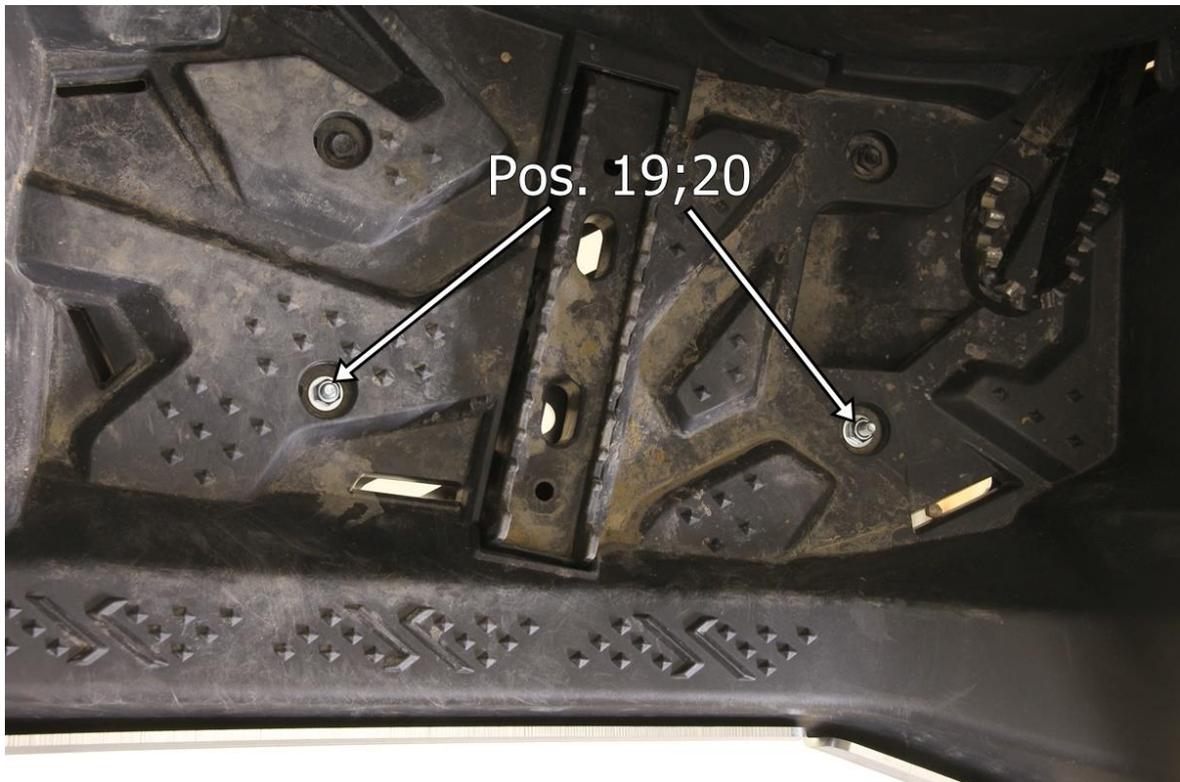

Step 7

Install front protection 02.30101K and brackets 02.5710.

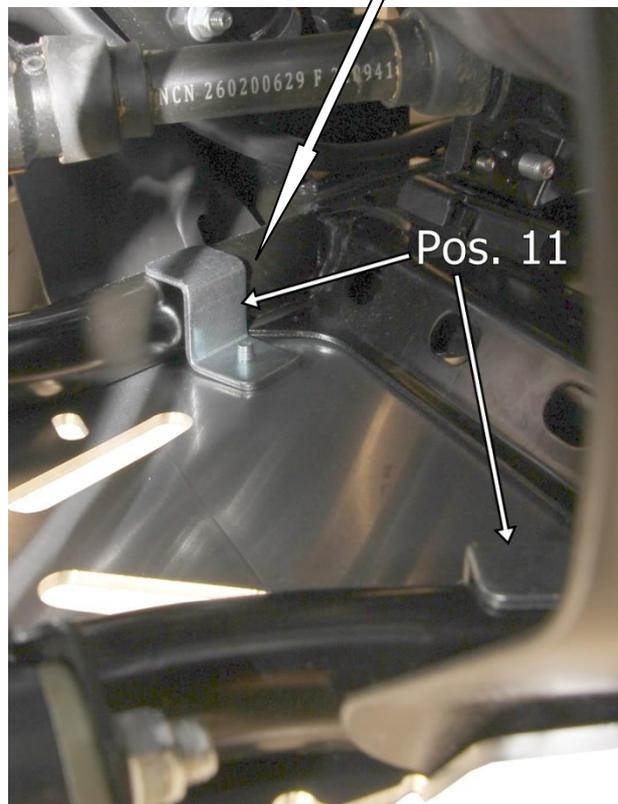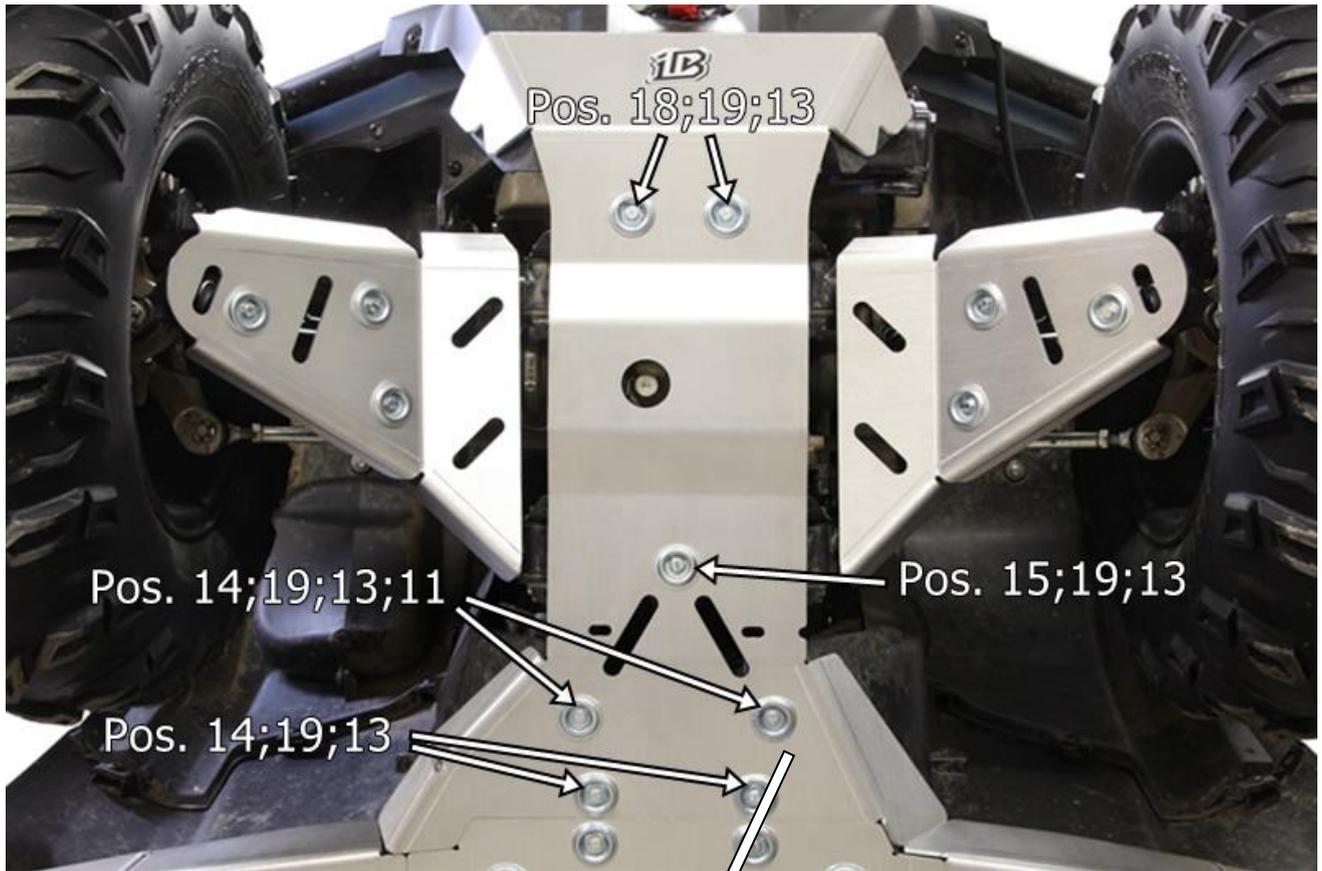

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

