

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/kS3SVAIR

PLASTIC SKID PLATE

LONCIN XWOLF 700L/550L GOES XWOLF 700 MAX

Code 02.30400

Version 14102024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPETSIFIKATSIOON

| Pos. | Description | Code | Amount |
|------|----------------------------|--------------|--------|
| 1 | Front protection | 02.30201K | 1 |
| 2 | Middle protection | 02.30401K | 1 |
| 3 | Right protection | 02.30402 | 1 |
| 4 | Left protection | 02.30403 | 1 |
| 5 | Rear protection | 02.30404K | 1 |
| 6 | Front right arm protection | 02.30204 | 1 |
| 7 | Front left arm protection | 02.30205 | 1 |
| 8 | Rear right arm protection | 02.30206 | 1 |
| 9 | Rear left arm protection | 02.30207 | 1 |
| 10 | Installation plate | 02.5006 | 12 |
| 11 | Installation bracket 1 | 02.5710 | 2 |
| 12 | Installation bracket 2 | 02.30305K | 2 |
| 13 | Dished washer | 14.503 | 56 |
| 14 | Bolt M6x16 DIN933 | OT.02.02.050 | 26 |
| 15 | Bolt M6x20 DIN933 | OT.02.02.060 | 16 |
| 16 | Bolt M6x30 DIN933 | OT.02.02.080 | 12 |
| 17 | Bolt M6x45 DIN933 | OT.02.02.110 | 2 |
| 18 | Bolt M6x50 DIN933 | OT.02.02.120 | 4 |
| 19 | Washer Ø6/15 SFS3738 | OT.04.03.020 | 64 |
| 20 | Nyloc nut M6 DIN985 | OT.03.02.030 | 6 |



TOOLS REQUIRED FOR INSTALLATION:

- Spanner 10mm
- Socket wrench 10mm
- Allen wrench 5mm




NB!


**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and remove bolts shown in the picture..

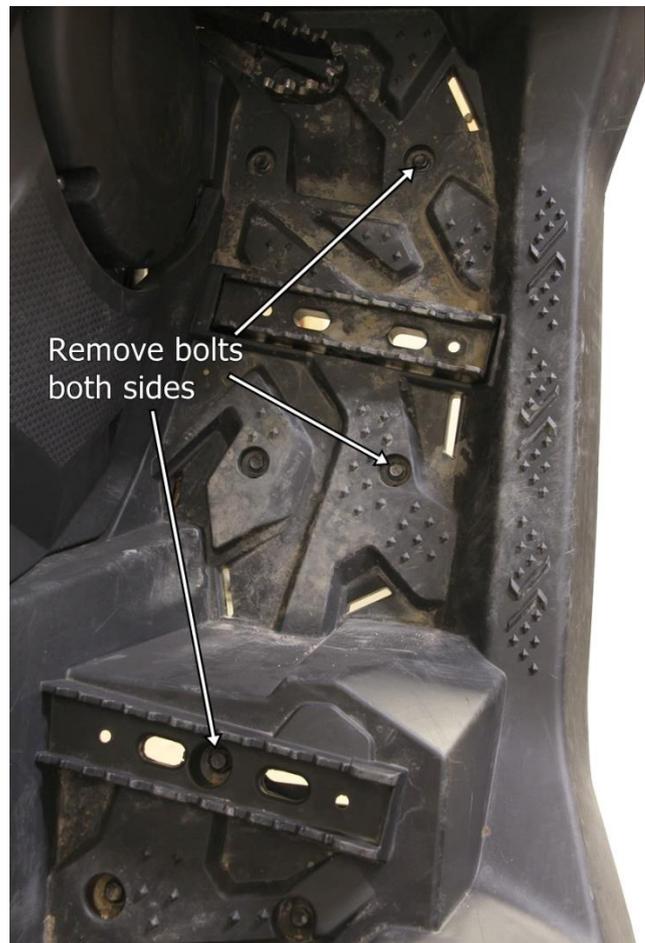


Step 2 Install front arm protections 02.30204 and 02.30205.

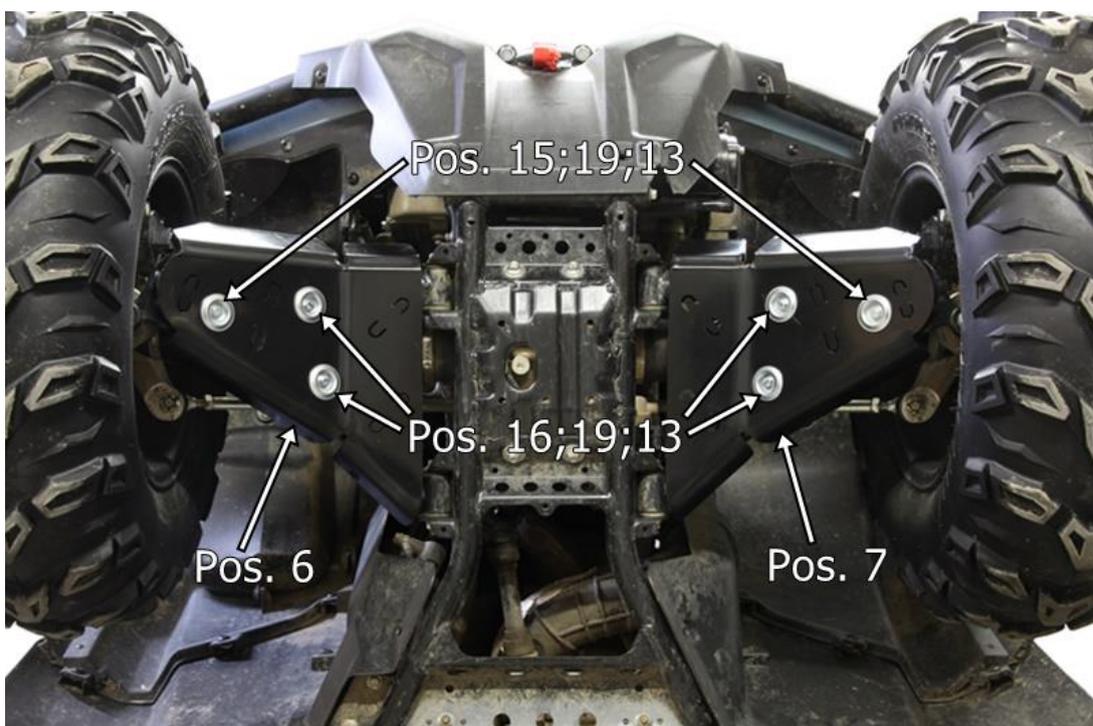


Step 3

Install rear arm protections 02.30206 and 02.30207.

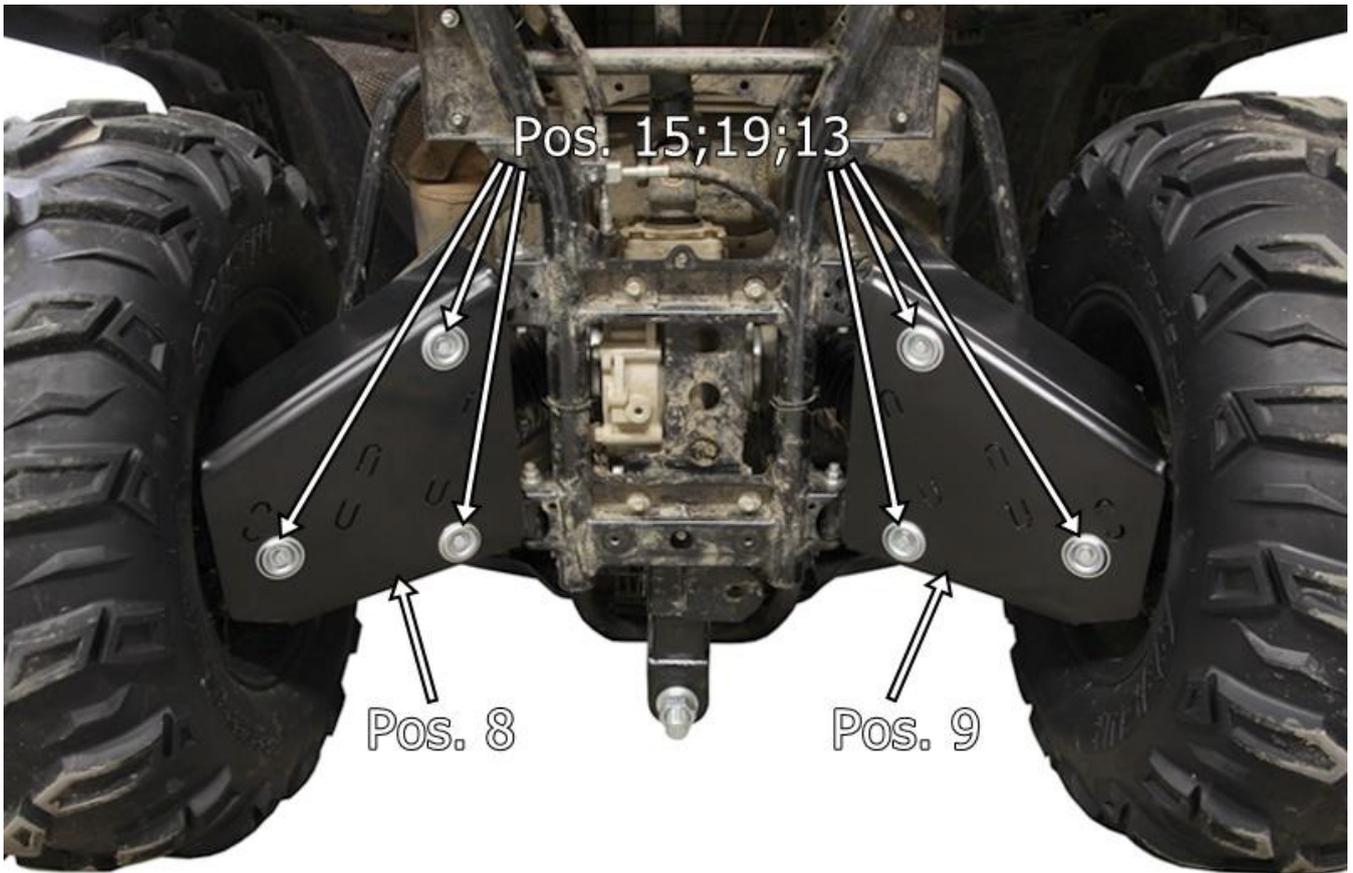

Step 4



Install rear part 02.30404K and plates 02.5006.

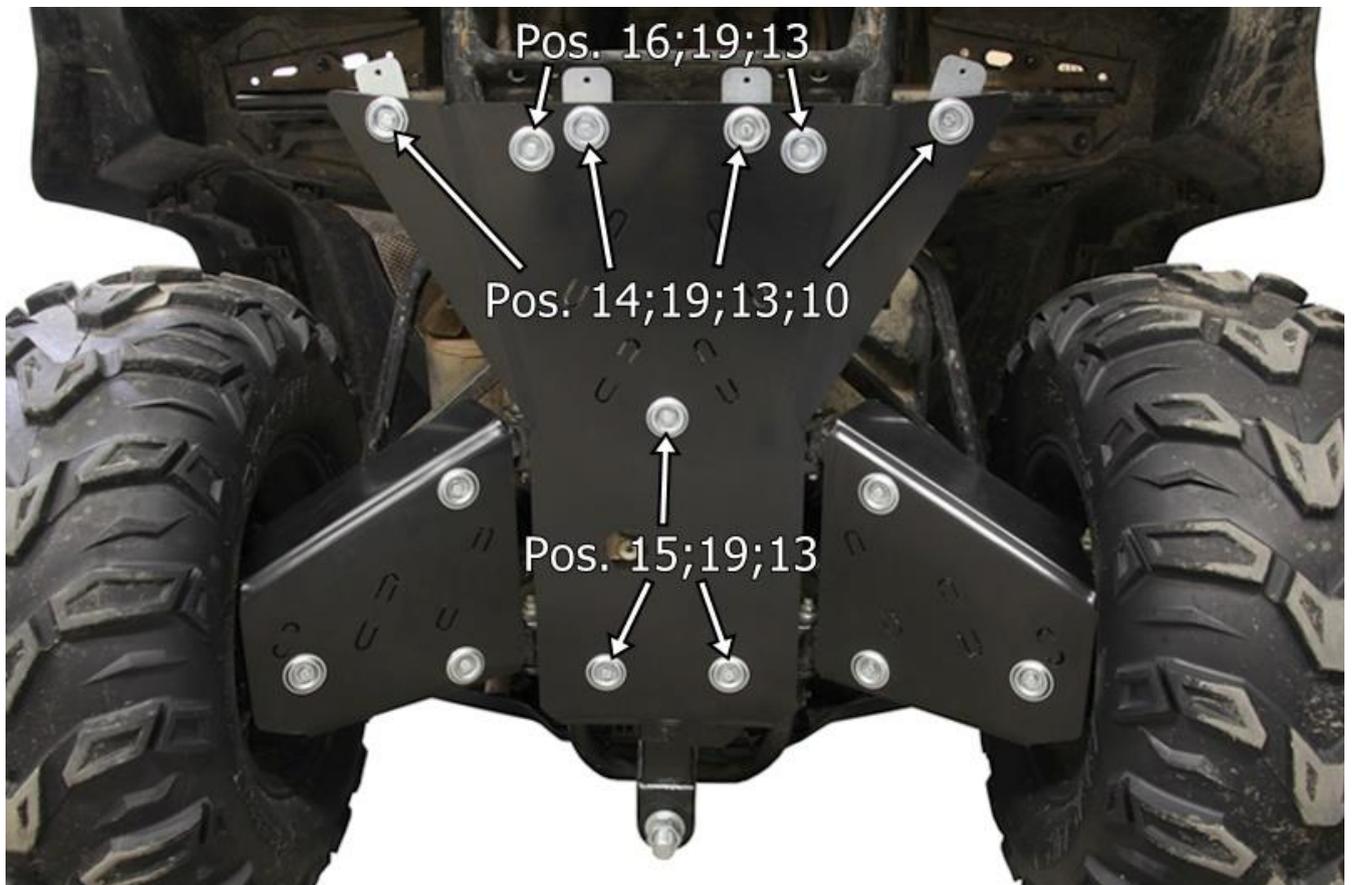



Step 5

Install middle part 02.30401K, plates 02.5006 and brackets 02.30305K.
NB! The XWolf 550L has upper mounting points in a different location than the XWolf 700L.

XWolf 700L:

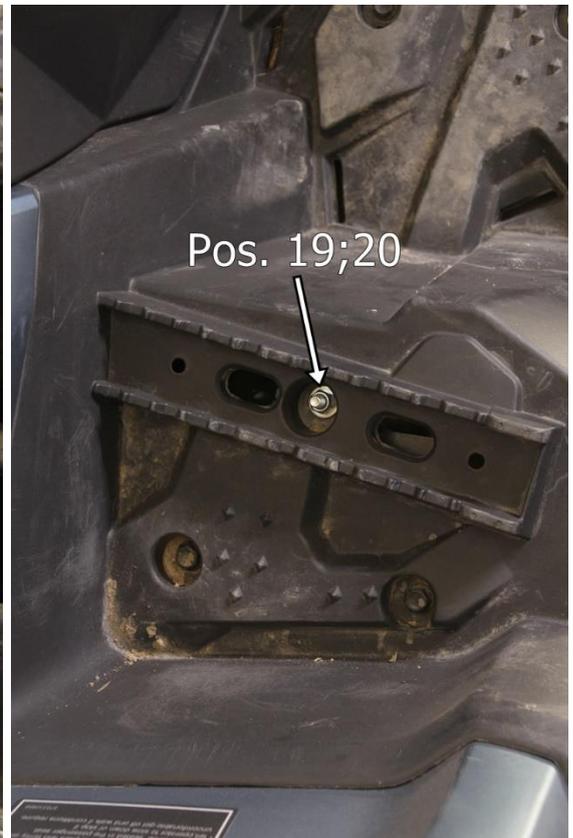
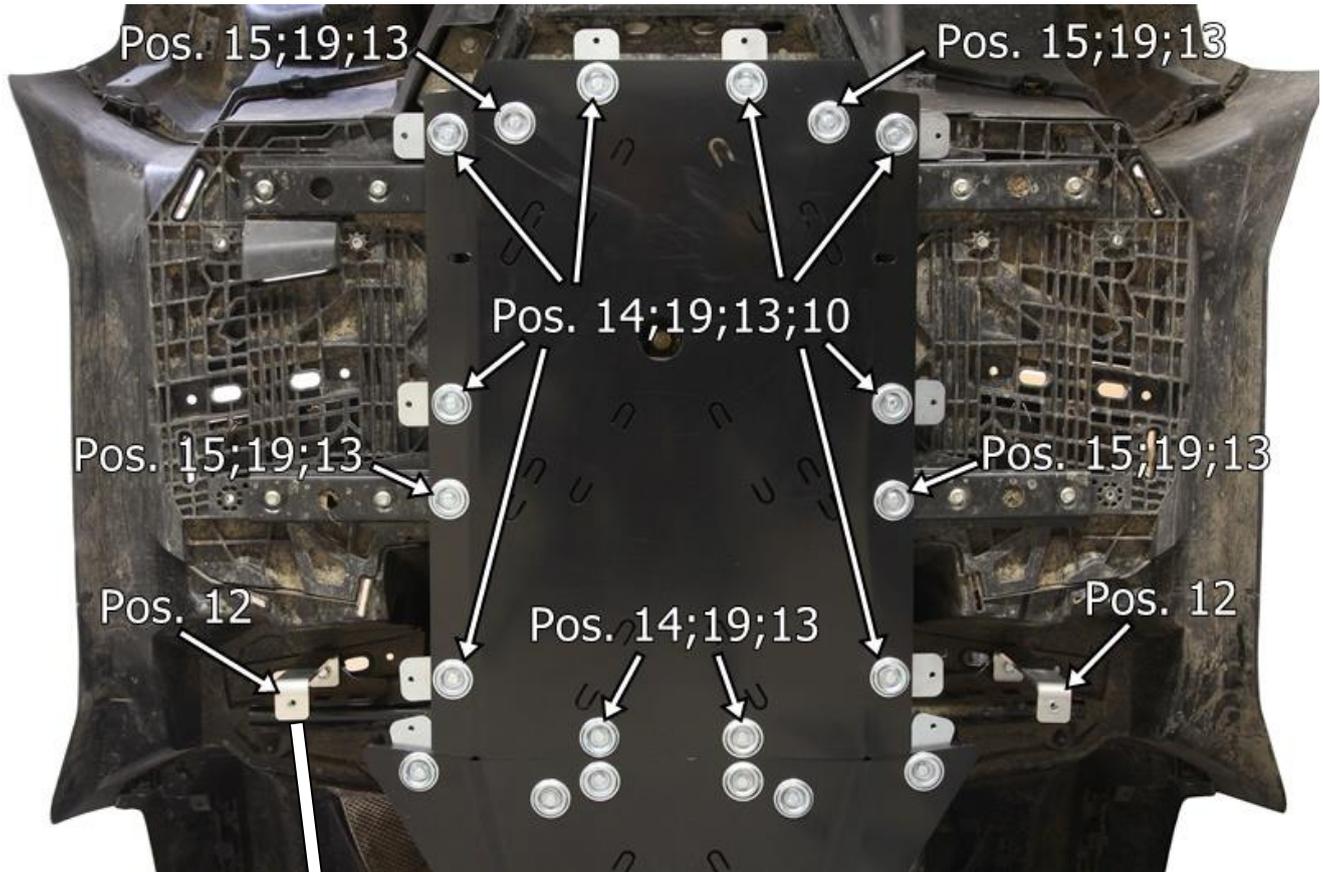


XWolf 550L:

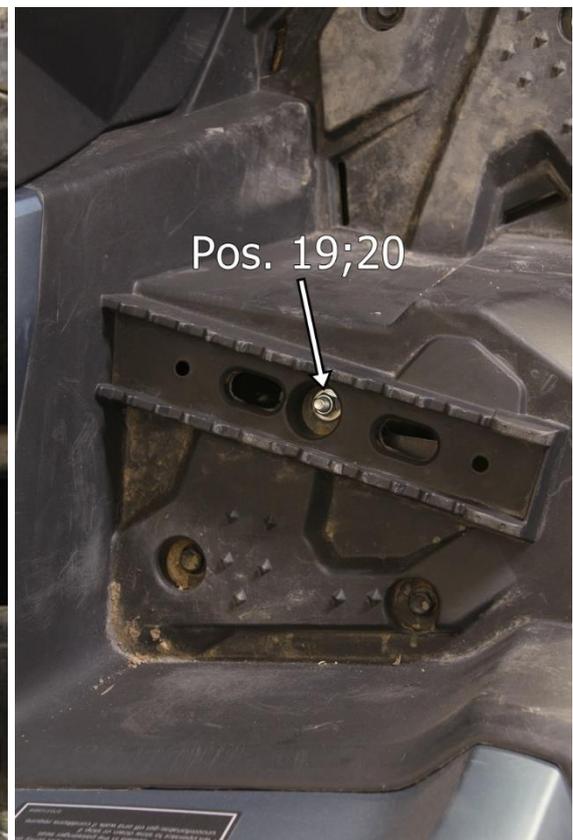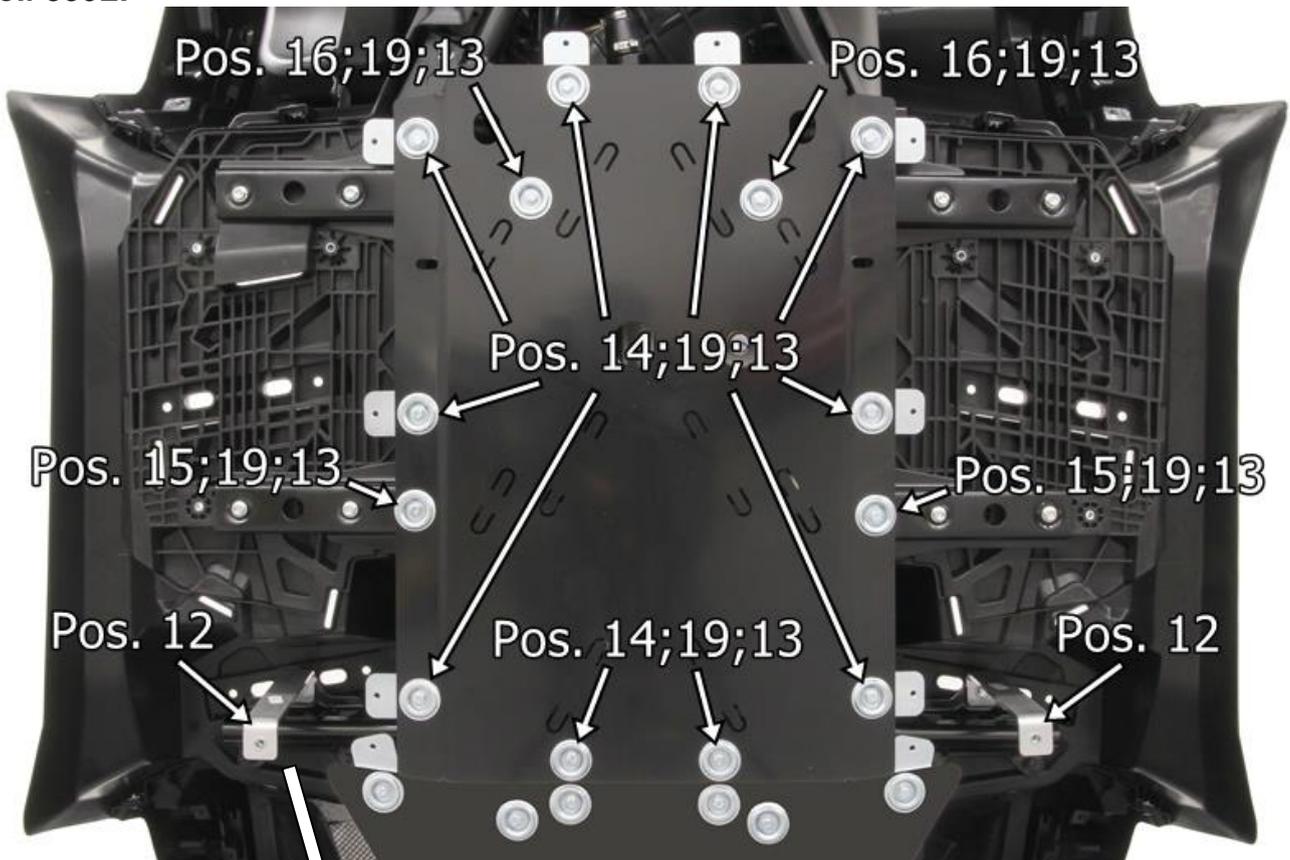



Step 6

Install side protections 02.30402 and 02.30403.

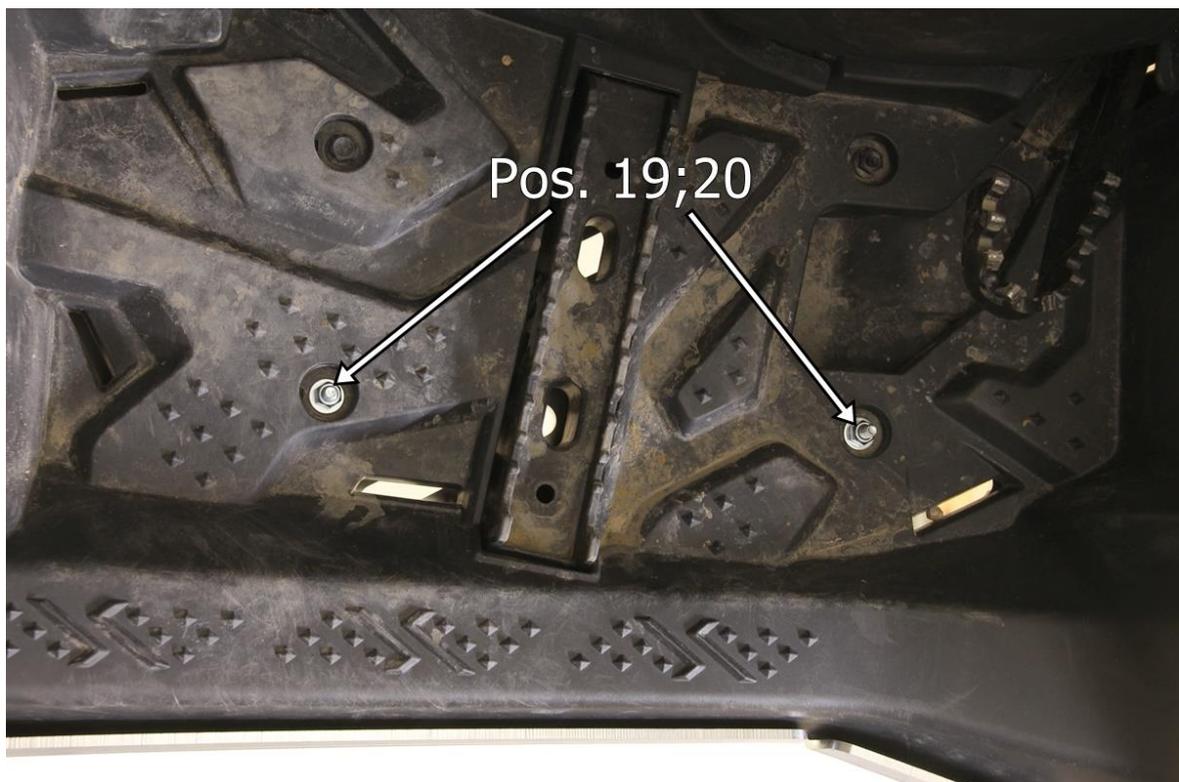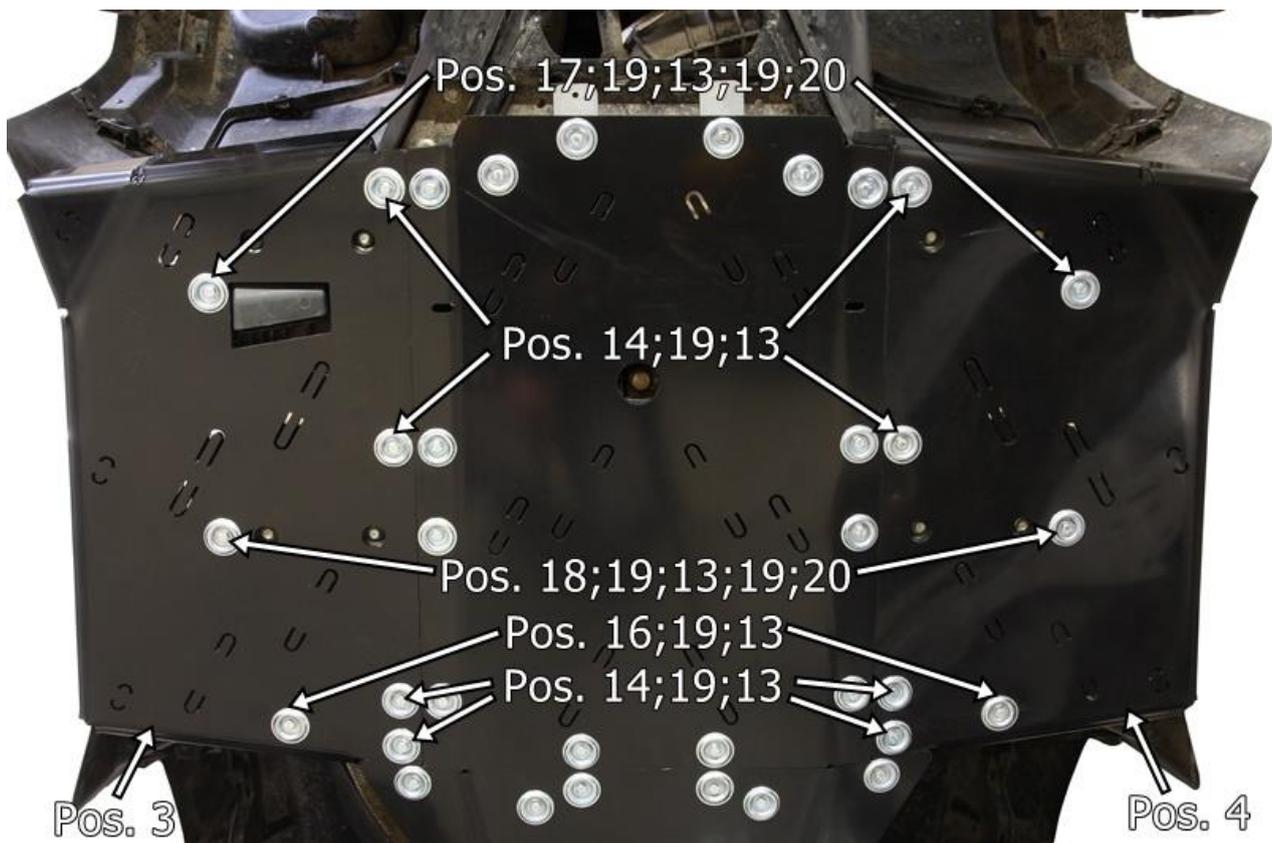

Step 7

Install front protection 02.30201K and brackets 02.5710.

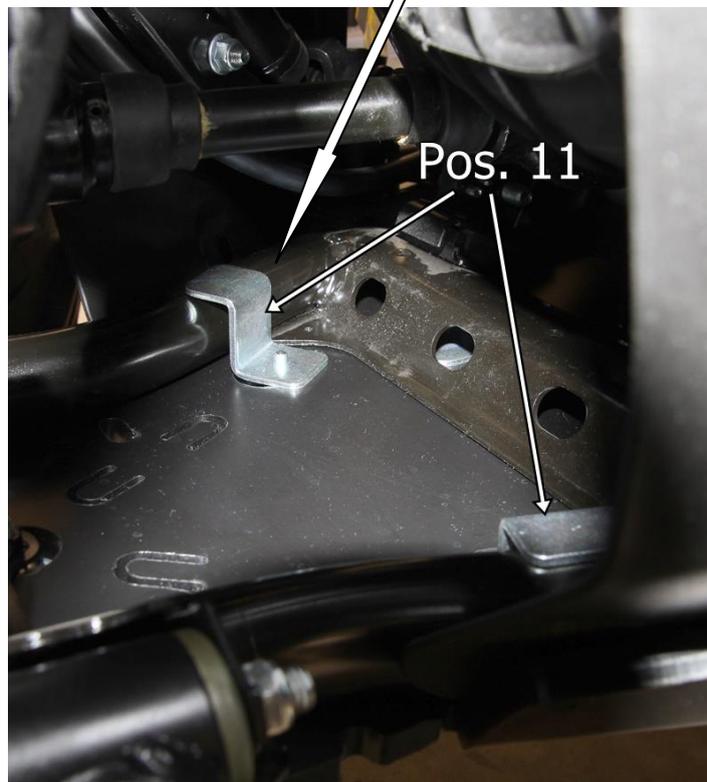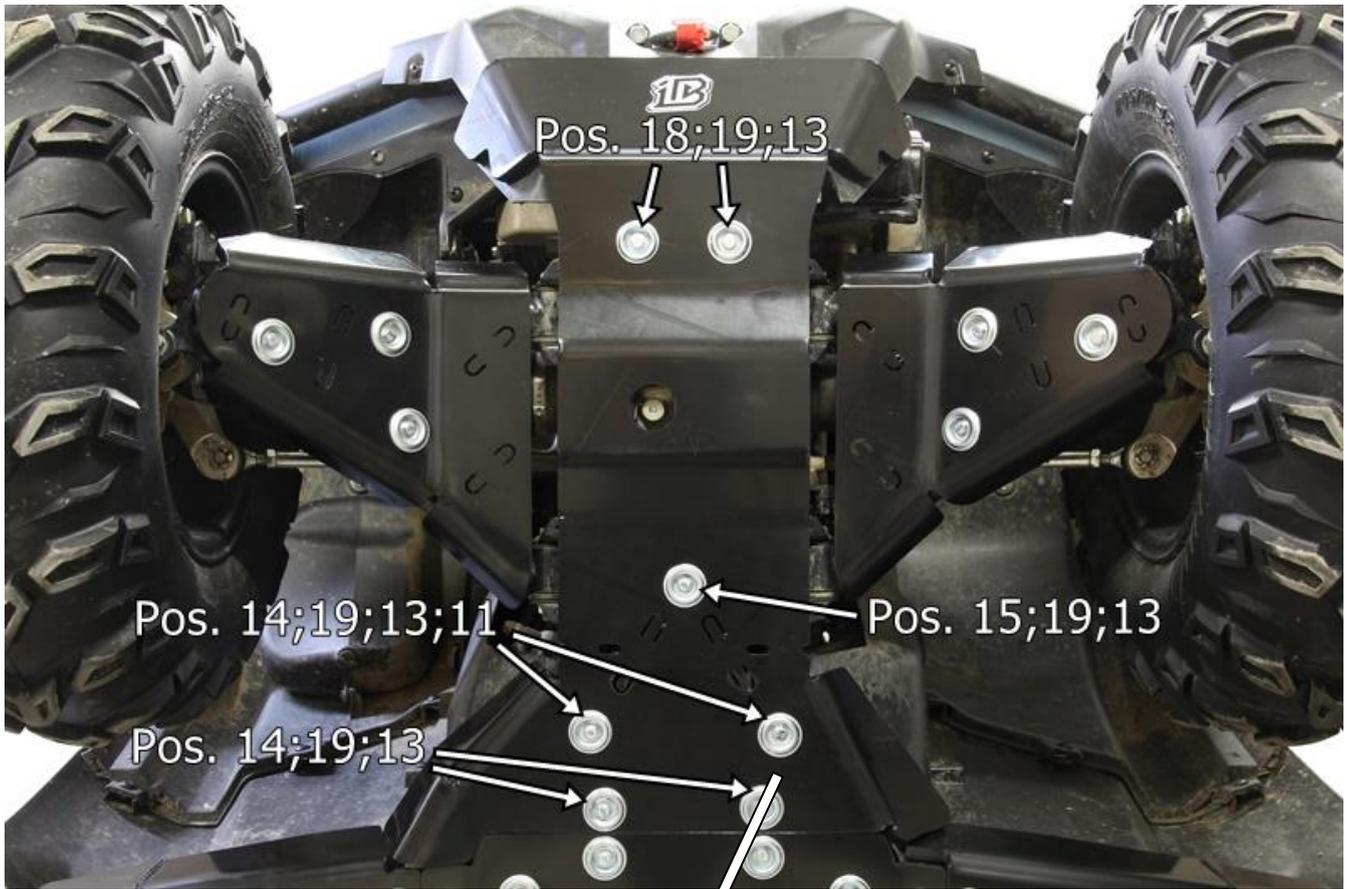

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

