



## ALUMINIUM SKID PLATE

# CANAM

## G2 Renegade X XC (2023-...)

Code 02.30600

Version 15102023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Front left arm protection	02.23101S	1
2	Front right arm protection	02.23102S	1
3	Rear right arm protection	02.23103	1
4	Rear left arm protection	02.23104	1
5	Middle part	02.8201K	1
6	Front part	02.30602K	1
7	Rear part	02.8203K	1
8	Angle (80 degrees)	02.18805	2
9	Rear protection angle	02.18804	2
10	Installation bracket	02.6408	4
11	Connecting plate	02.5006	4
12	Threaded plate	02.2305	1
13	Dished washer	14.503	31
14	Bolt M6x12 DIN 933	OT.02.02.030	10
15	Bolt M6x16 DIN 933	OT.02.02.050	6
16	Bolt M6x20 DIN 933	OT.02.02.060	4
17	Bolt M6x25 DIN 933	OT.02.02.070	4
18	Bolt M6x35 DIN 933	OT.02.02.090	2
19	Bolt M6x80 DIN 933	OT.02.02.160	2
20	Bolt M8x16 DIN 933	OT.02.02.170	4
21	Bolt M8x30 DIN 933	OT.02.02.200	3
22	Bolt M10x30 DIN 933	OT.02.02.320	4
23	Bolt M6x25 DIN 7991	OT.02.04.040	2
24	Washer Ø6/15 SFS 3738	OT.04.03.020	36
25	Washer Ø6/18 DIN 9021	OT.04.02.020	2
26	Washer Ø8/20 SFS 3738	OT.04.03.030	4
27	Washer Ø10/20 DIN 125	OT.04.01.040	10
28	Conical washer Ø6	14.502	2
29	Nyloc nut M6 DIN 985	OT.03.02.030	10
30	Nyloc nut M8 DIN 985	OT.03.02.040	2
31	Nyloc nut M10 DIN 985	OT.03.02.050	2

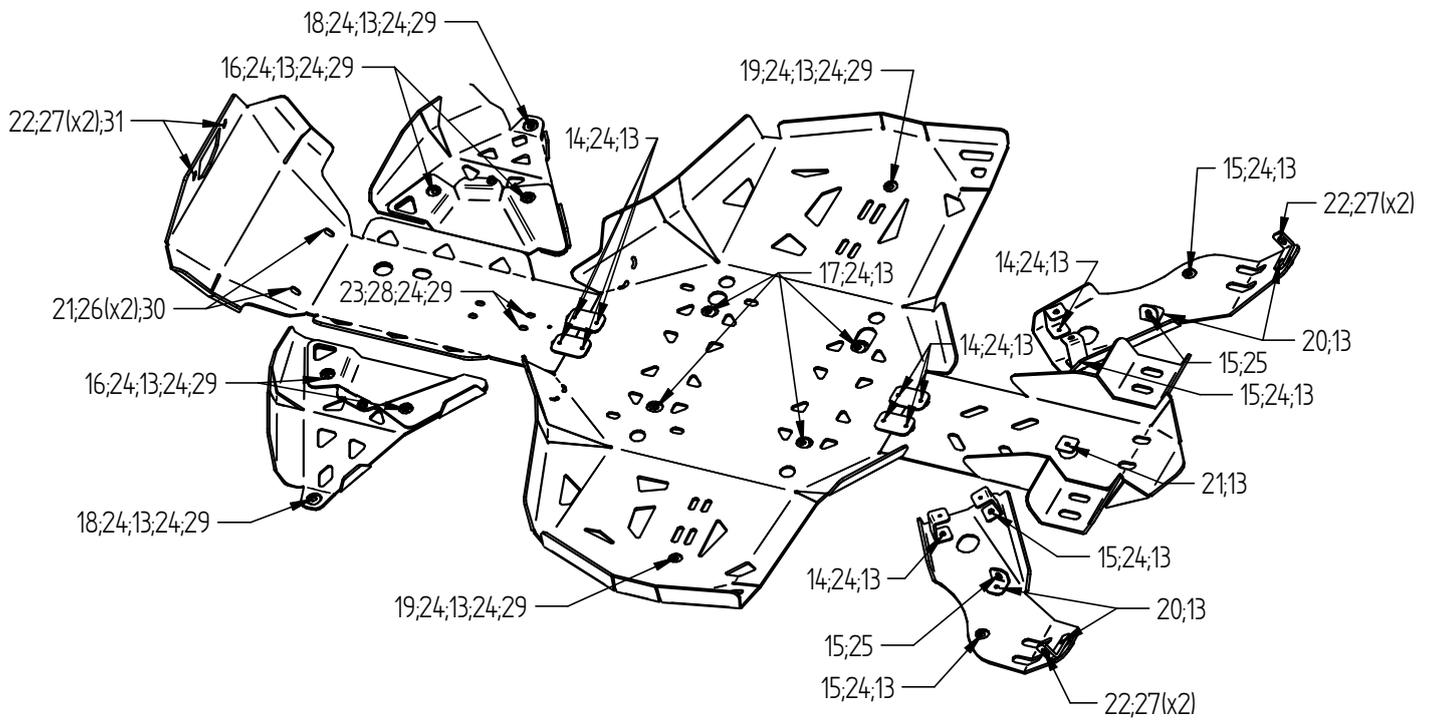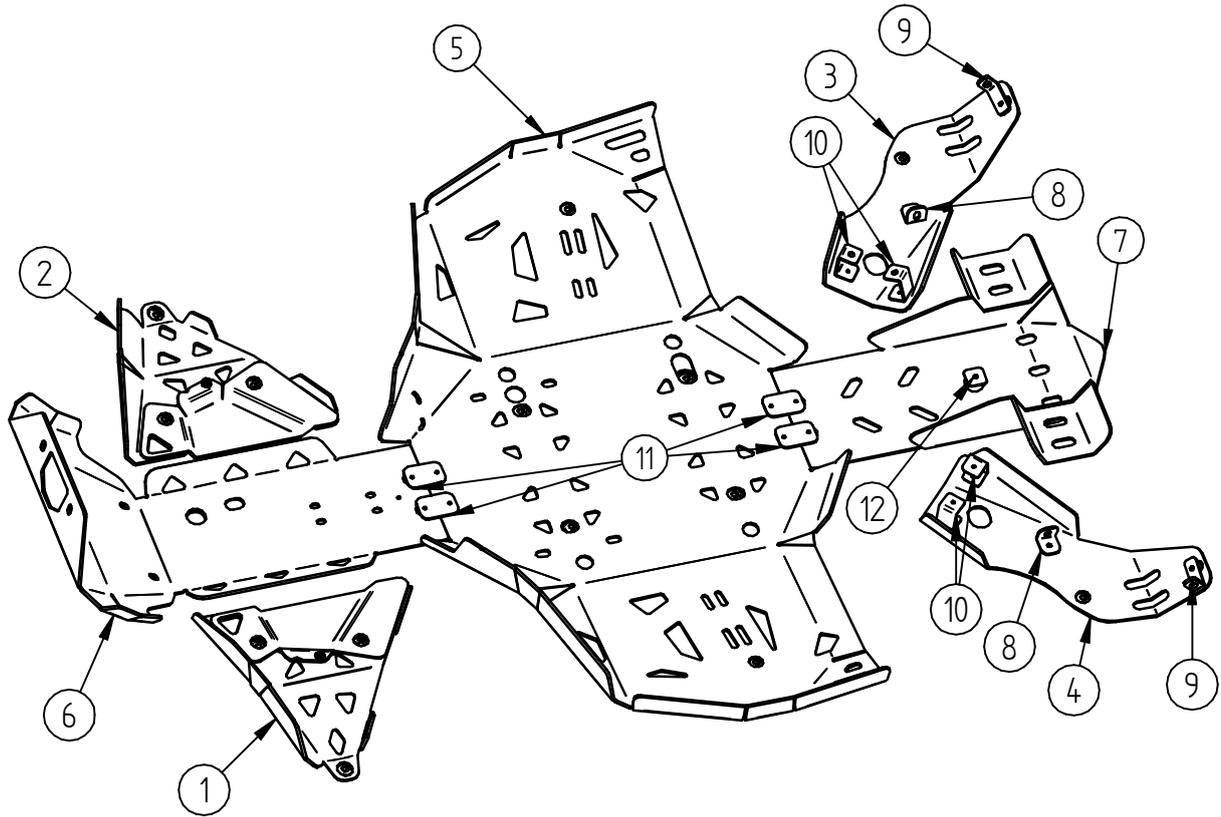


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.

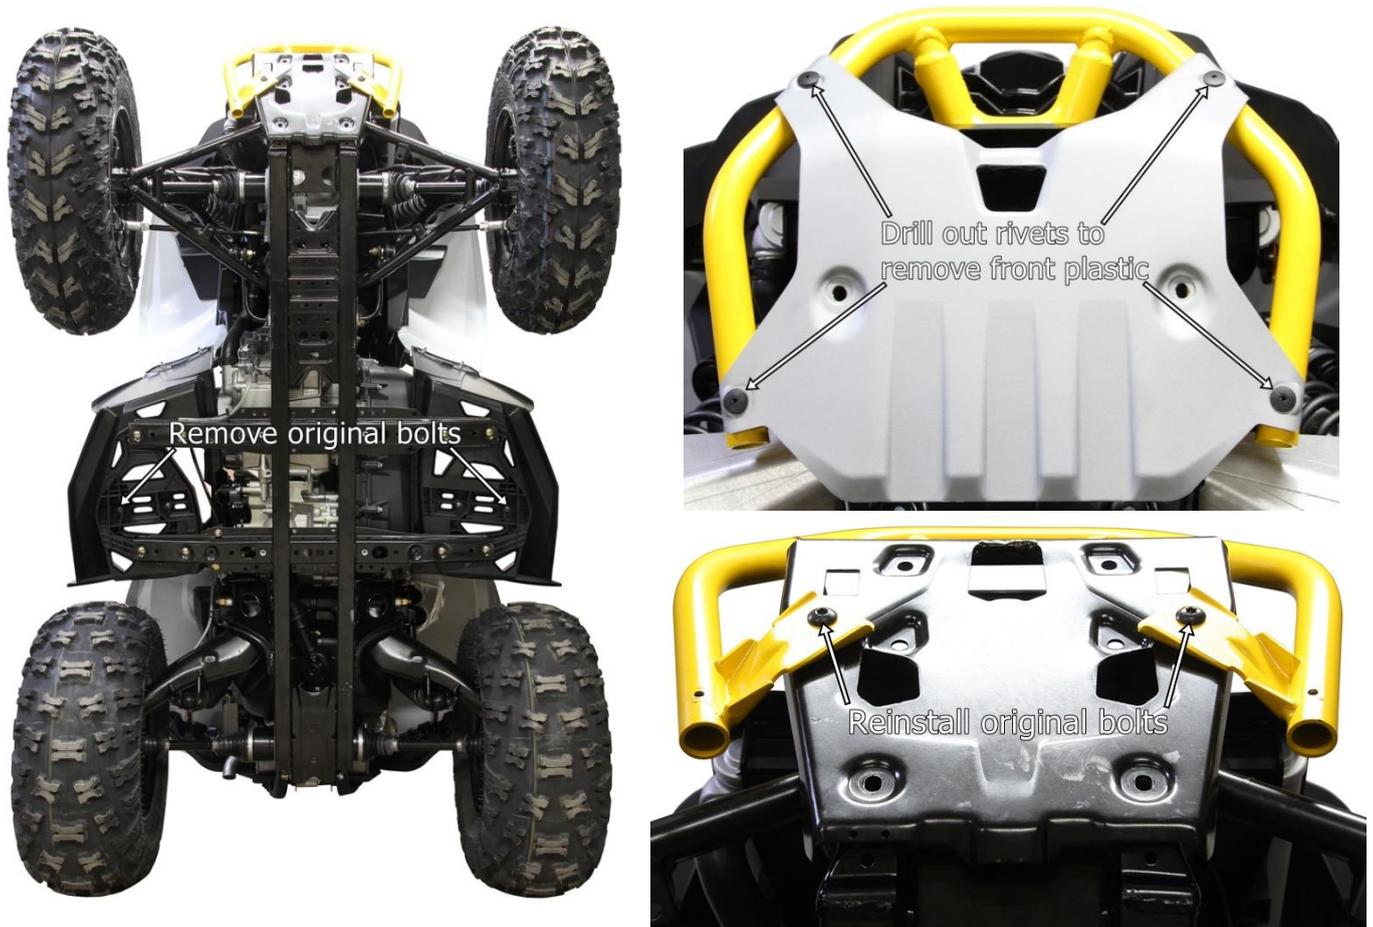


**Step 2** Install middle part 02.8201K.

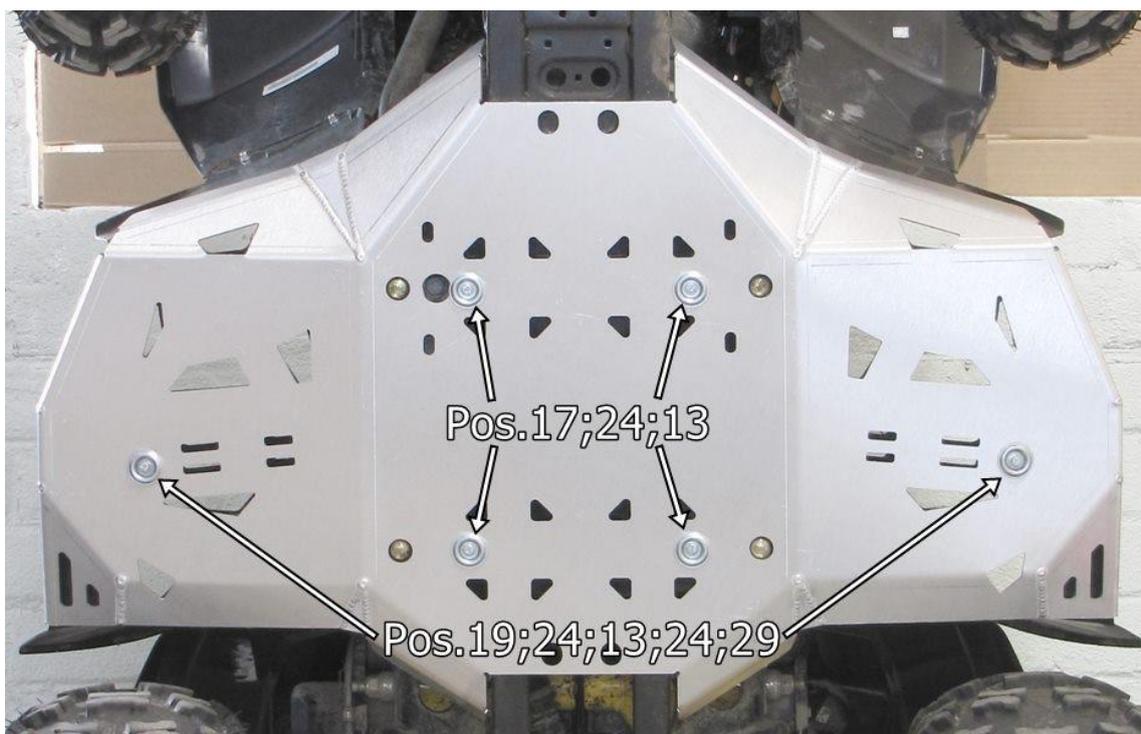

### Step 3

Install plates 02.5006.

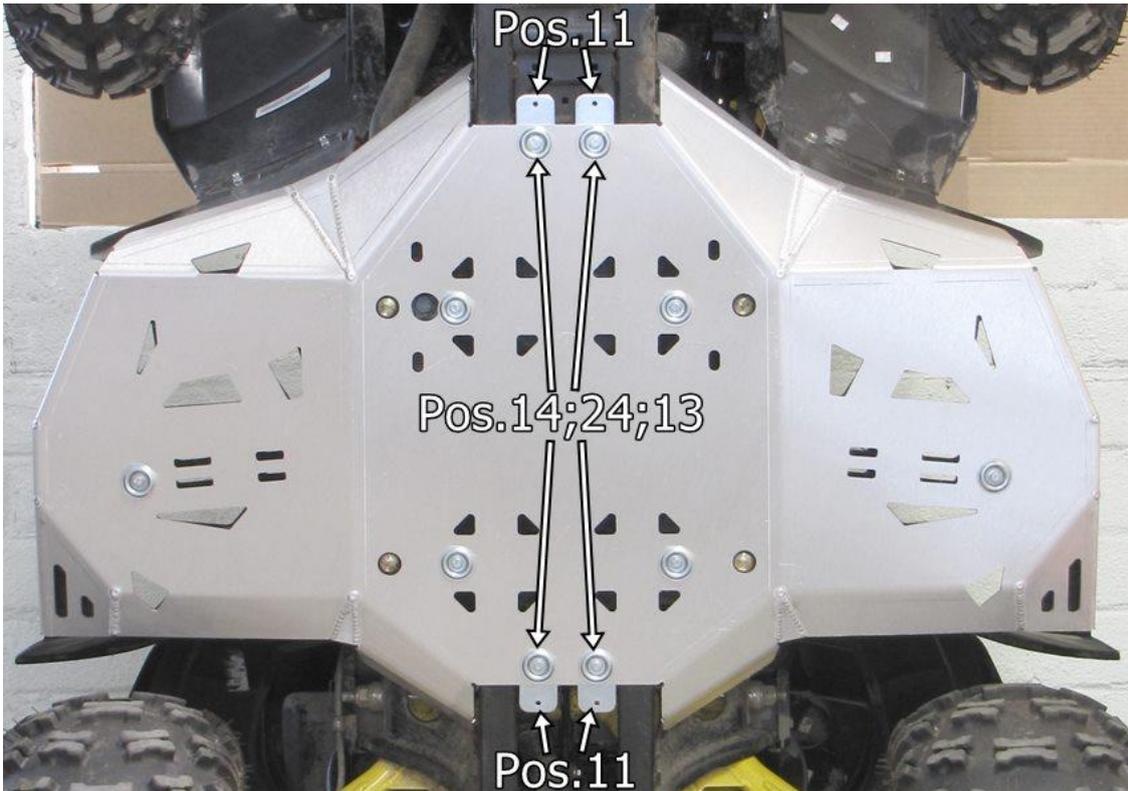


### Step 4

Install front part 02.30602K. If you are using CanAm OE mounting plate (P/N 715004338 cut front protection side bends (see Picture)! Also when installing with OE mounting plate, use plow OE bolts (see Picture).



*Installation with OE plow mount*

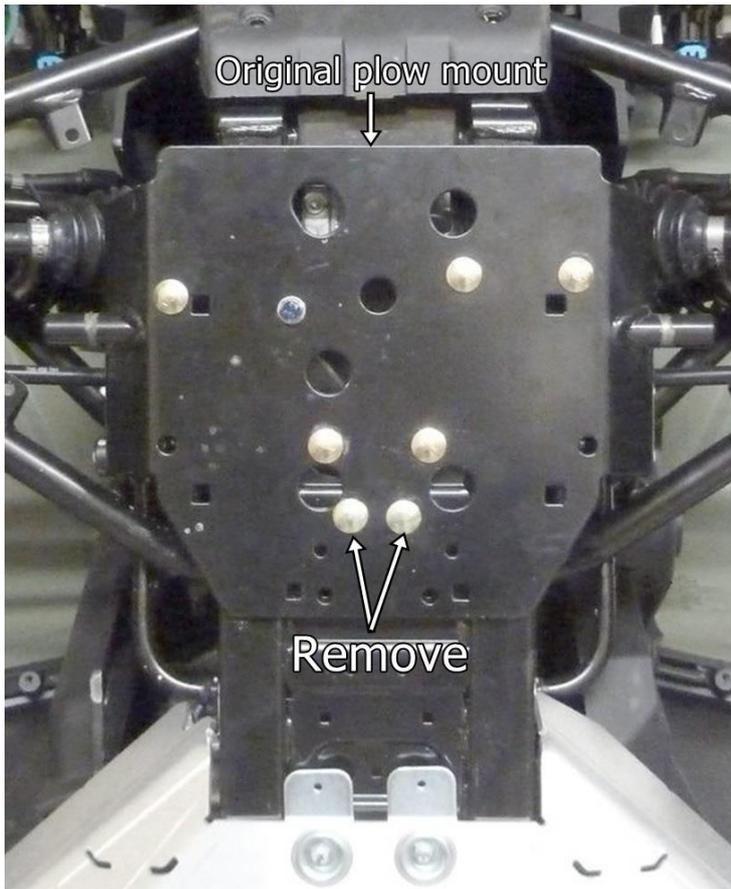


**Step 5**

Install rear part 02.8203K.




**Step 6**

Install front arms protections 02.23101S and 02.23102S.

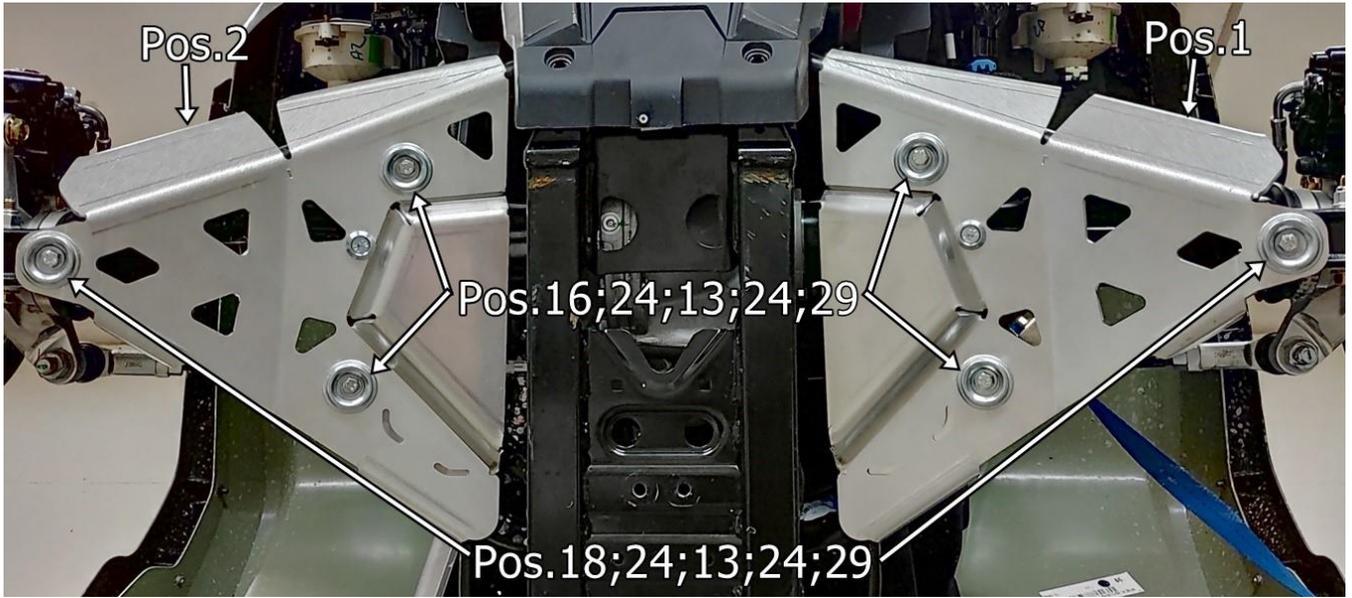

**NB!**

If you are using CanAm original snow plow adapter, then remove cover and cut section indicated with arrows.

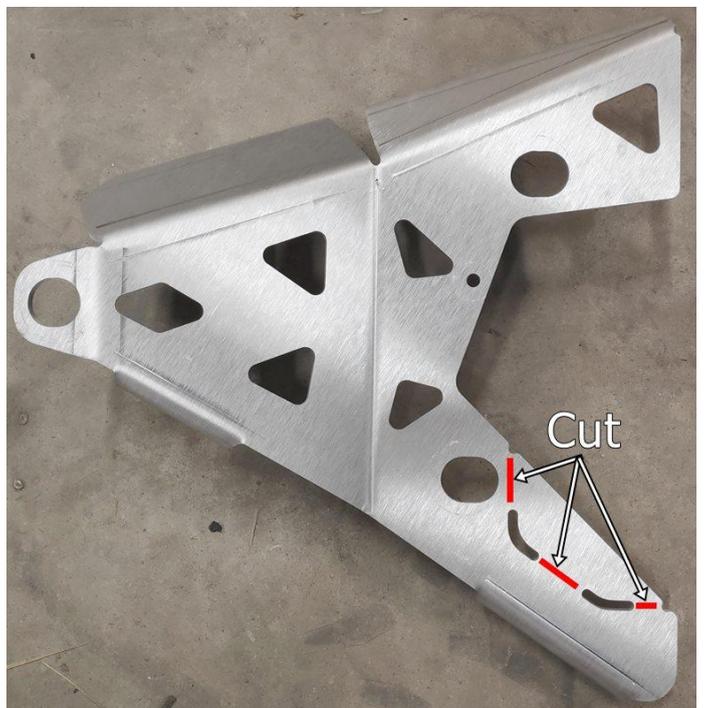

## Step 7

Install brackets 02.18804 and 02.18805.




### NB!

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.32 and brake disc.  
If needed add a third Ø10 washer for distance!**

## Step 8

Install rear trailing arms protections 02.23103 and 02.23104.  
Use installation brackets 02.6408.

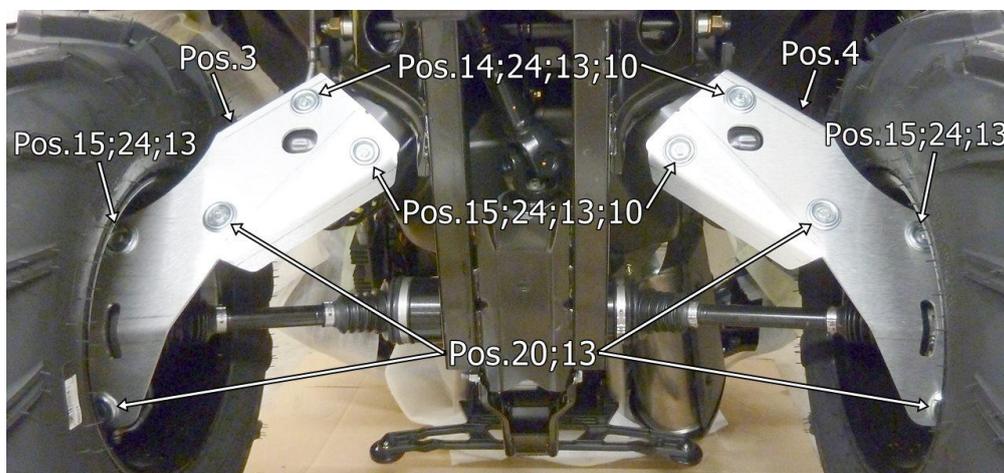







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

