

# IRON BALTIC

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/FsXvHZ1e](https://code.ironbaltic.com/u/FsXvHZ1e)

## PLASTIC SKID PLATE

# CANAM

## G2 Renegade X XC (2023-...)

Code 02.30700

Version 15102023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front left arm protection	02.23201K	1
2	Front right arm protection	02.23202K	1
3	Rear right trailing arm protection	02.23203	1
4	Rear left trailing arm protection	02.23204	1
5	Rear part	02.20202	1
6	Middle part	02.8301	1
7	Front part	02.30702K	1
8	Right side protection	02.8308	1
9	Left side protection	02.8309	1
10	Installation bracket	02.20201	1
11	Angle (80 degrees)	02.18805	2
12	Rear protection angle	02.18804	2
13	Connecting plate (10)	02.8312	2
14	Connecting plate (20)	02.8311	2
15	Installation bracket	02.6408	4
16	Connecting plate	02.5006	11
17	Threaded plate	02.2305	5
18	Bush D30h14	02.707	1
19	Dished washer	14.503	34
20	Bolt M6x16 DIN 933	OT.02.02.050	18
21	Bolt M6x20 DIN 933	OT.02.02.060	2
22	Bolt M6x25 DIN 933	OT.02.02.070	4
23	Bolt M6x30 DIN 933	OT.02.02.080	4
24	Bolt M6x40 DIN 933	OT.02.02.100	2
25	Bolt M6x90 DIN 933	OT.02.02.162	2
26	Bolt M8x20 DIN 933	OT.02.02.180	4
27	Bolt M8x40 DIN 933	OT.02.02.220	3
28	Bolt M10x30 DIN 933	OT.02.02.320	4
29	Bolt M6x20 DIN 7991	OT.02.04.030	20
30	Bolt M6x30 DIN 7991	OT.02.04.050	2
31	Washer Ø6/15 SFS 3738	OT.04.03.020	40
32	Washer Ø6/18 DIN 9021	OT.04.02.020	2
33	Washer Ø8/20 SFS 3738	OT.04.03.030	5
34	Washer Ø10/20 DIN 125	OT.04.01.040	10
35	Conical washer Ø6	14.502	22
36	Nyloc nut M6 DIN 985	OT.03.02.030	8
37	Nyloc nut M8 DIN 985	OT.03.02.040	2
38	Nyloc nut M10 DIN 985	OT.03.02.050	2




# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.




**Step 2** Install middle part 02.8301

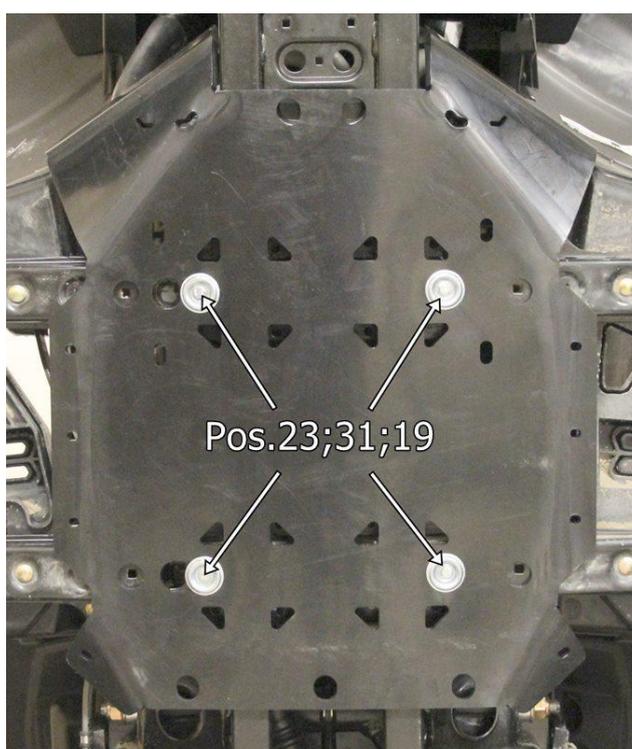


**Step 3**

Install plates.

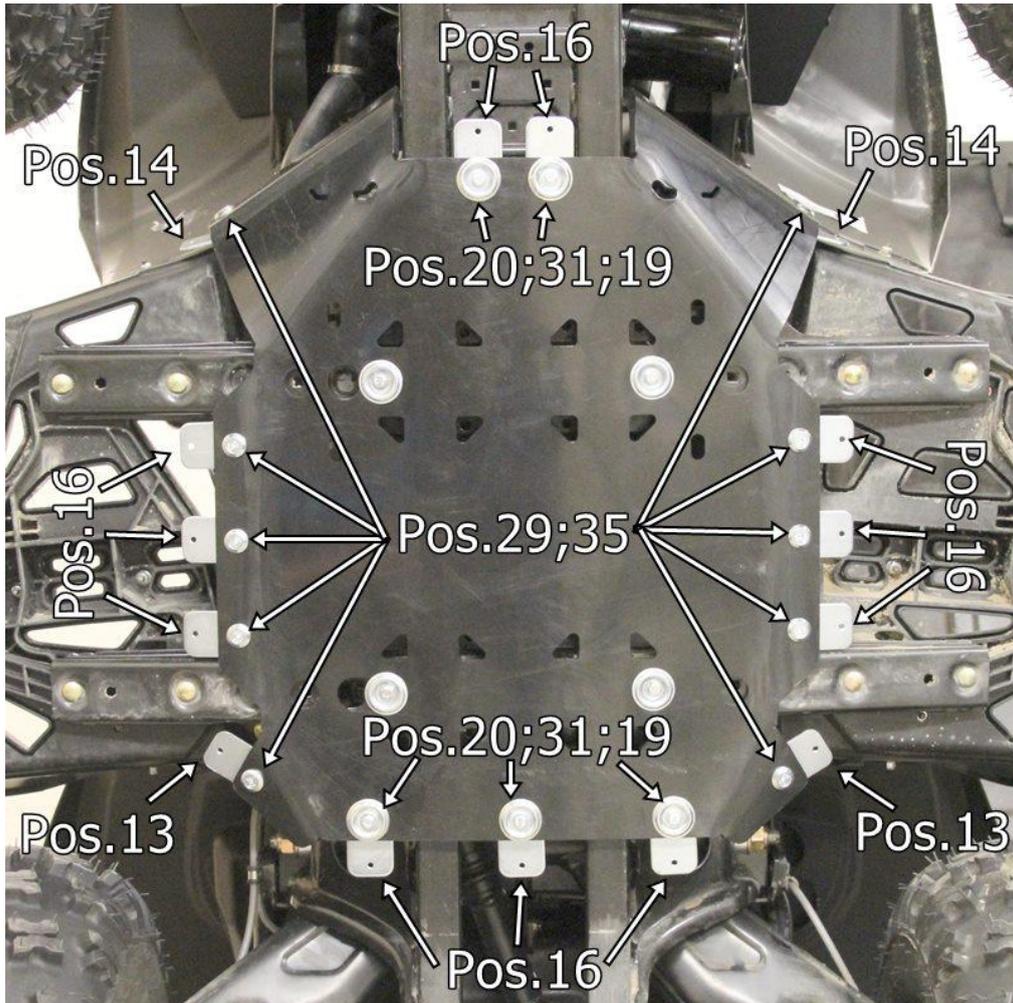

**Step 4**

Install right (02.8308) and left (02.8309) arm protections.

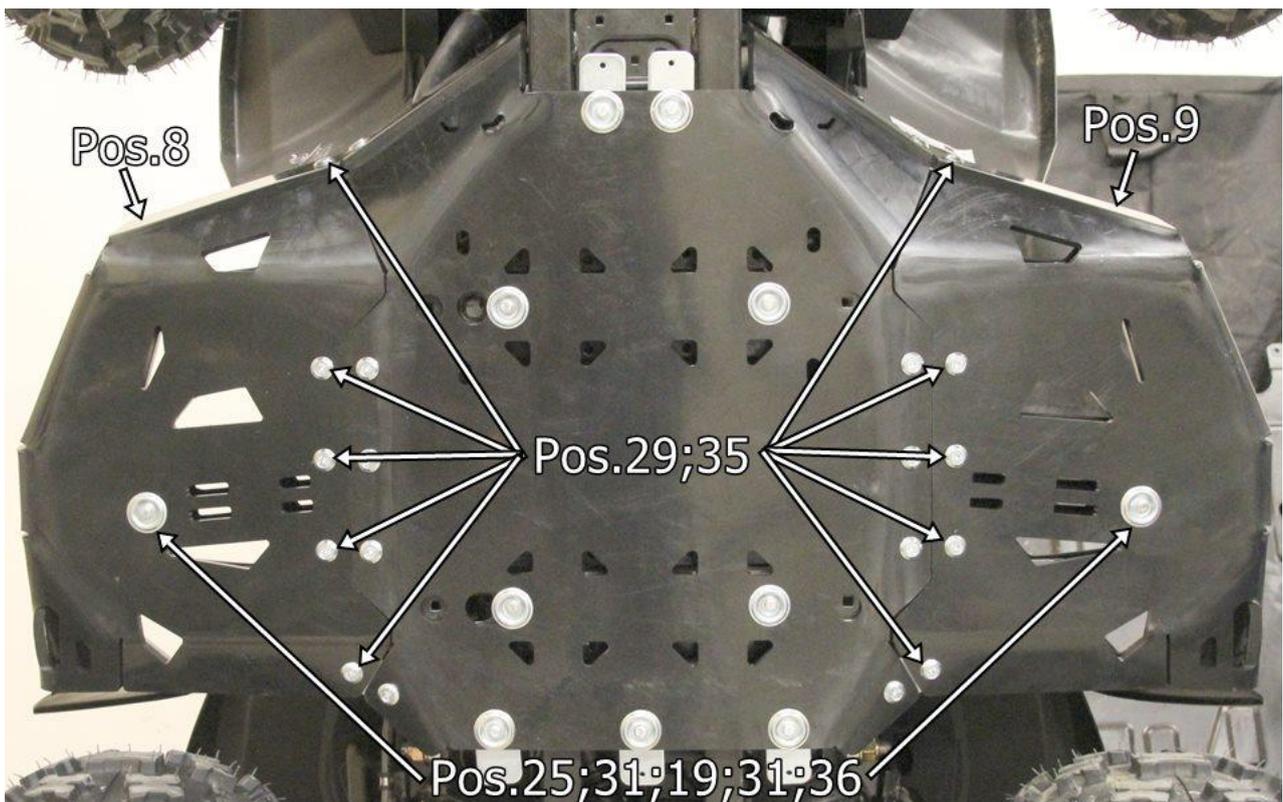


## Step 5

Install front part 02.30702K. If you are using CanAm original plow mounting plate (P/N 715004338) cut front protection side bends (see Picture)!




*Installation with OE plow mount*

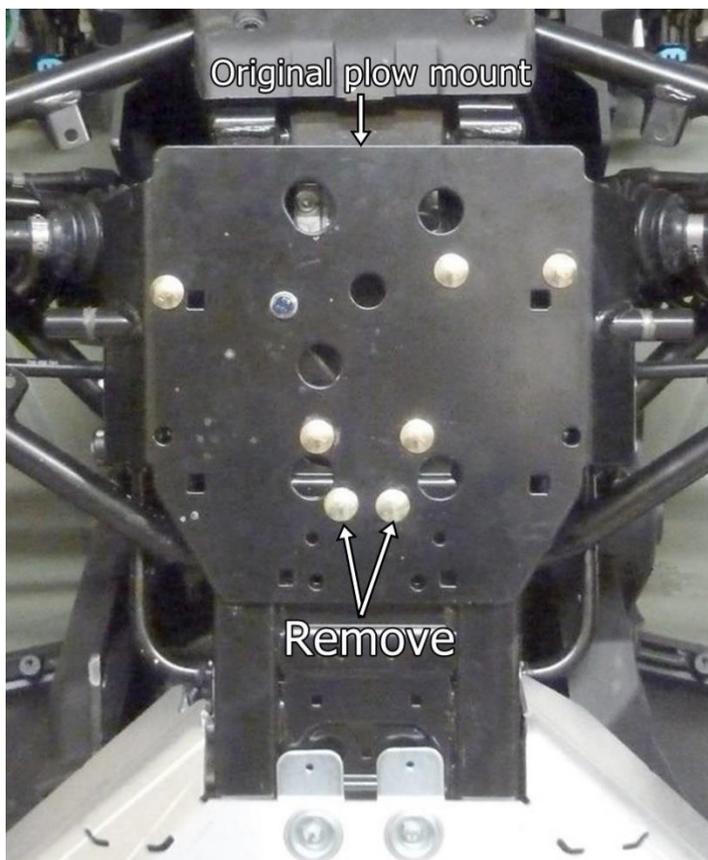


**Step 6**

Install bush (Pos.18) between plate (Pos.10) and frame.

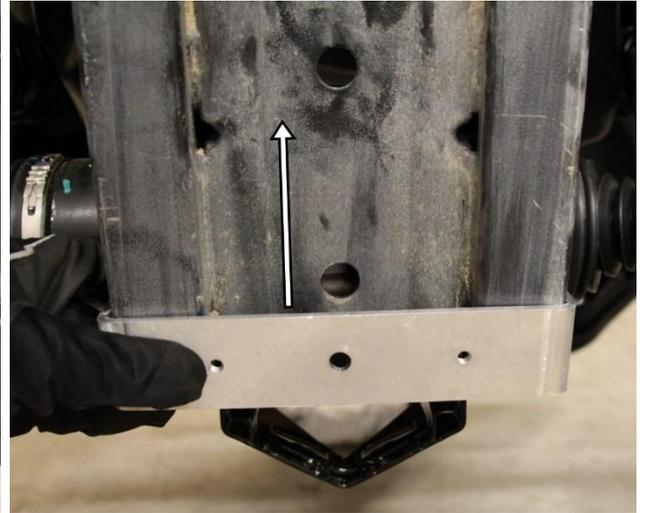


**Step 7**

Install rear part 02.20202.

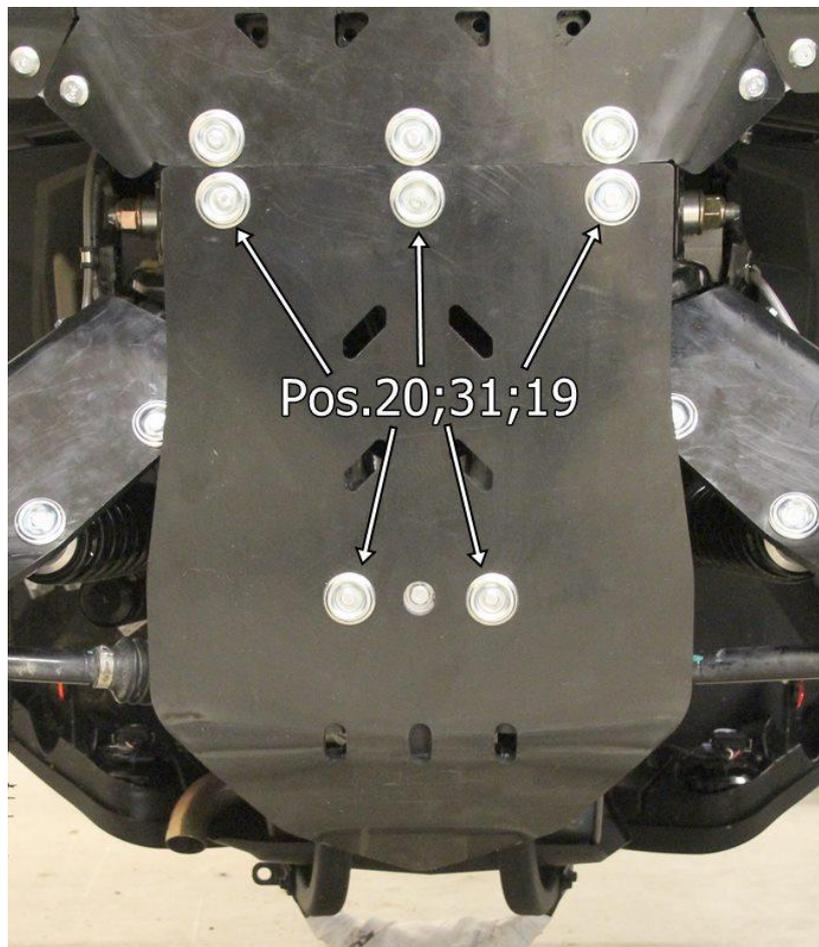

## Step 8

Install front A-arms protections 02.23201K and 02.23202K.  
Place the plate 02.2305 between a-arm protection and ATV a-arm frame.

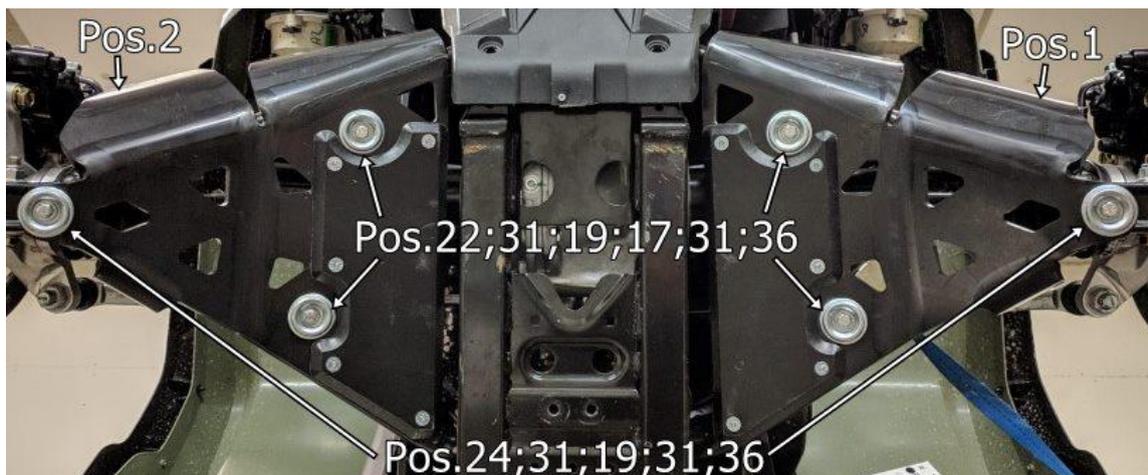

### NB!

If you are using CanAm original snow plow adapter, then remove cover, indicated with arrow.



## Step 9

Install brackets 02.18804 and 02.18805.





### NB!

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.32 and brake disc.**

**If needed add a third Ø10 washer for distance!**

## Step 10

Install rear trailing arms protections 02.23203 and 02.23204.  
Use installation brackets 02.6408.

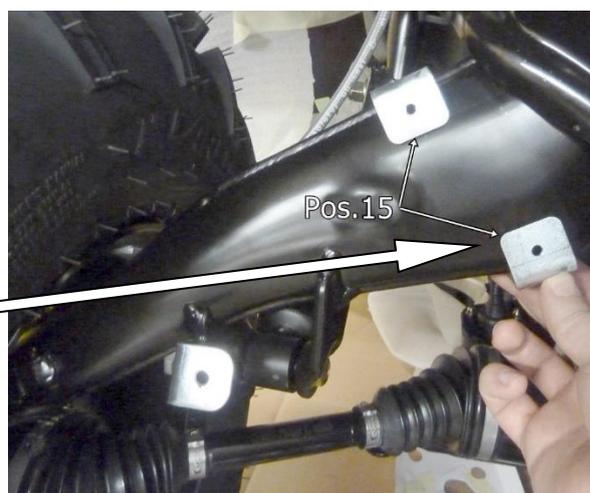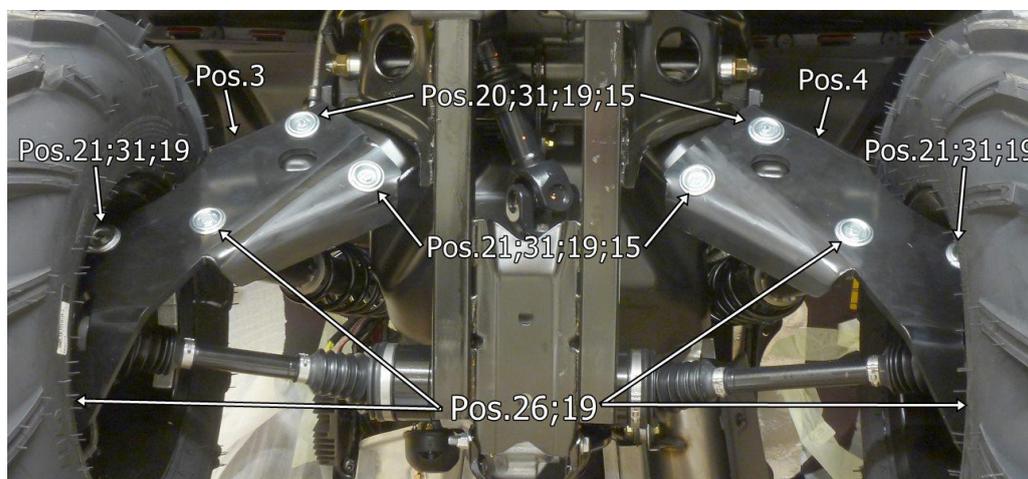





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

