




## FRONT A-ARM GUARDS (ALUMINIUM)

### CAN AM

### Outlander 500/700 (2023+)

Code 02.30906VP

Version 14082023

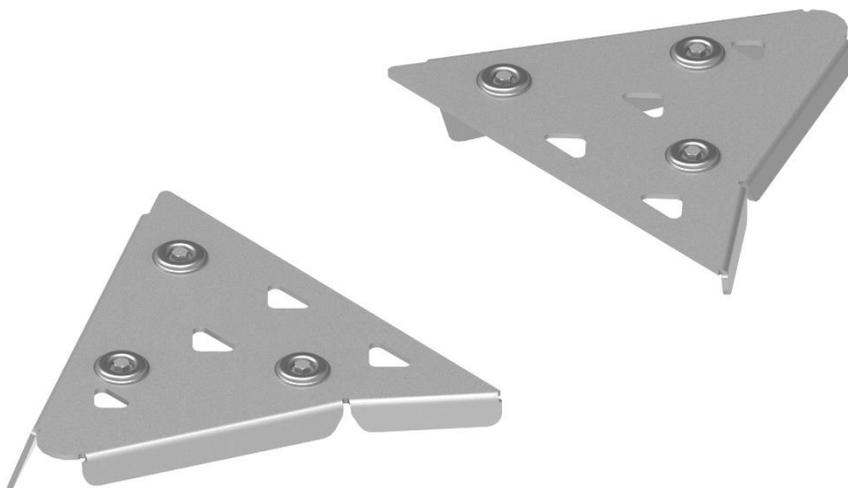


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front right arm guard	02.30906	1
2	Front left arm guard	02.30907	1
3	Installation bracket	02.8210	4
4	Dished washer	14.503	6
5	Bolt M6x12 DIN 933	OT.02.02.030	4
6	Bolt M6x20 DIN 933	OT.02.02.060	2
7	Washer Ø6/15 SFS 3738	OT.04.03.020	8
8	Nyloc nut M6 DIN985	OT.03.02.030	2

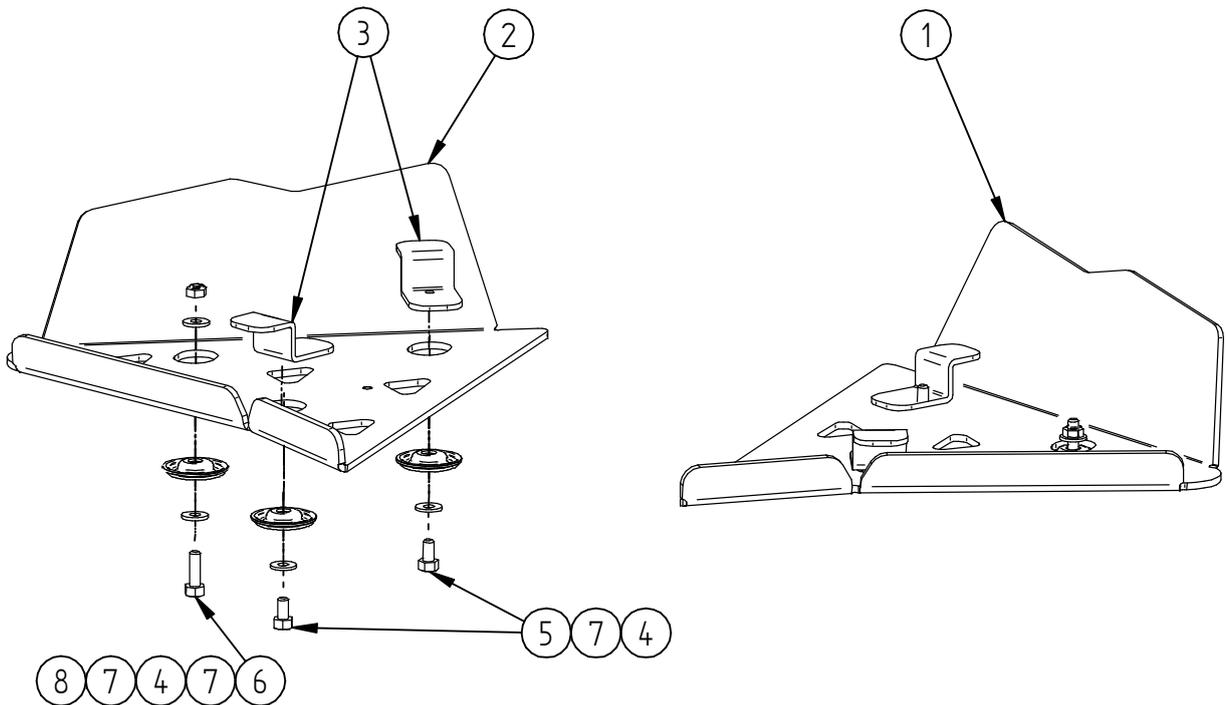

## TOOLS REQUIRED FOR INSTALLATION:

- Spanner 10mm
- Socket wrench 10mm

# FITTING INSTRUCTIONS





**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

## Step 1

Install front arm protections 02.30906 and 02.30907. For installing use brackets 02.8210.

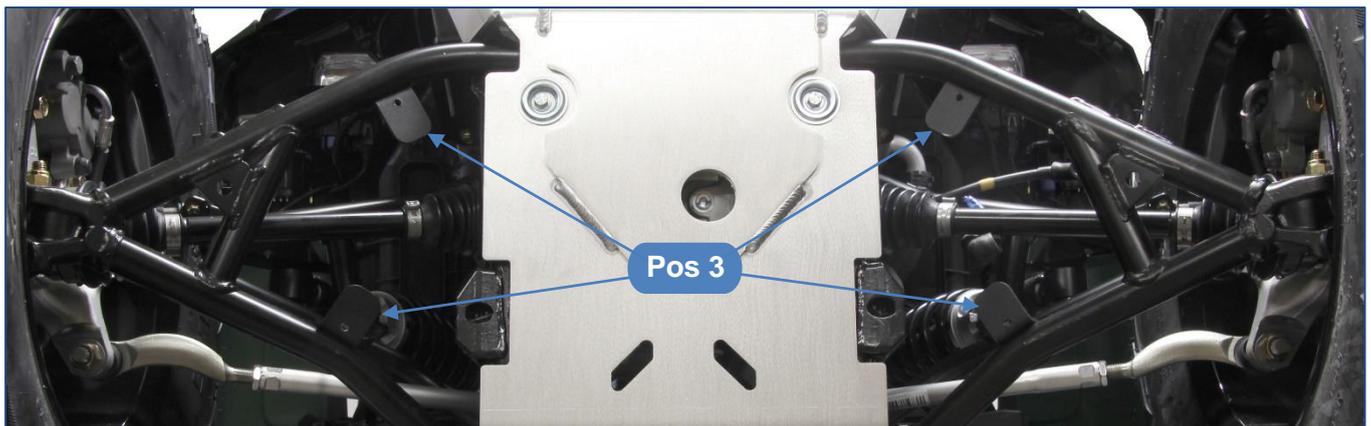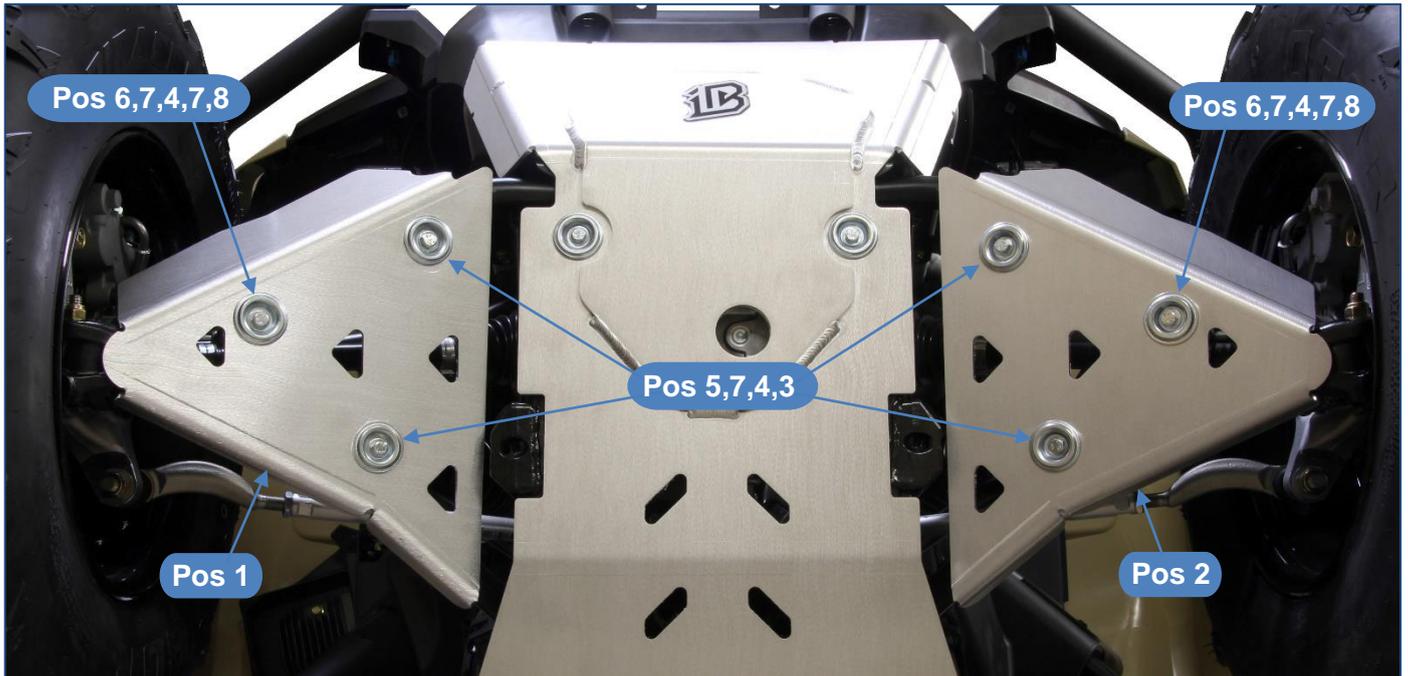

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

